

Micro Hi-Fi Component System

CB Operating Instructions

CMT-FX300i



© 2010 Sony Corporation

Printed in China

<http://www.sony.net/>

WARNING

To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

To reduce the risk of fire, do not cover the ventilation opening of the apparatus with newspapers, tablecloths, curtains, etc. Do not place the naked flame sources such as lighted candles on the apparatus.

To reduce the risk of fire or electric shock, do not expose this apparatus to dripping or splashing, and do not place objects filled with liquids, such as vases, on the apparatus. Do not install the appliance in a confined space, such as a bookcase or built-in cabinet.

As the main plug is used to disconnect the unit from the mains, connect the unit to an easily accessible AC outlet. Should you notice an abnormality in the unit, disconnect the main plug from the AC outlet immediately.

Do not expose batteries or apparatus with battery-installed to excessive heat such as sunshine, fire or the like.

The unit is not disconnected from the mains as long as it is connected to the AC outlet, even if the unit itself has been turned off.

CAUTION

The use of optical instruments with this product will increase eye hazard.

Except for customers in the U.S.A. and Canada



This appliance is classified as a CLASS 1 LASER product. This marking is located on the rear exterior.

Notice for the customers in the U.S.A. and Canada



This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

Owner's Record

The model and serial numbers are located on the rear of the unit. Record these numbers in the space provided below. Refer to them whenever you call upon your Sony dealer regarding this product.

Model No. _____
Serial No. _____

Note on DualDiscs

A DualDisc is a two sided disc product which mates DVD recorded material on one side with digital audio material on the other side. However, since the audio material side does not conform to the Compact Disc (CD) standard, playback on this product is not guaranteed.


Music discs encoded with copyright protection technologies

This product is designed to playback discs that conform to the Compact Disc (CD) standard. Recently, various music discs encoded with copyright protection technologies are marketed by some record companies. Please be aware that among those discs, there are some that do not conform to the CD standard and may not be playable by this product.


License and Trademark Notice

- iPod is a trademark of Apple Inc., registered in the U.S. and other countries.
- MPEG Layer-3 audio coding technology and patents licensed from Fraunhofer IIS and Thomson.
- All other trademarks and registered trademarks are of their respective holders. In this manual, TM and [®] marks are not specified.

Unit

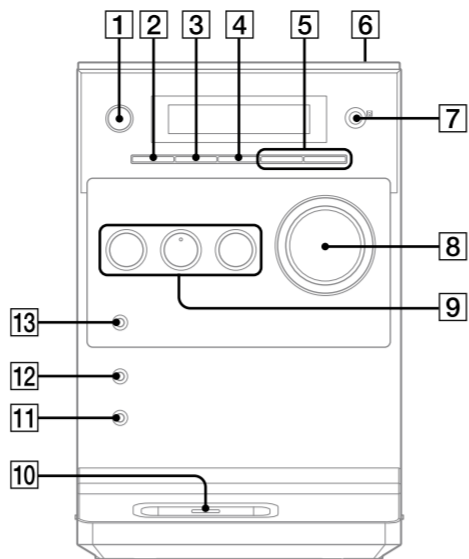


Remote

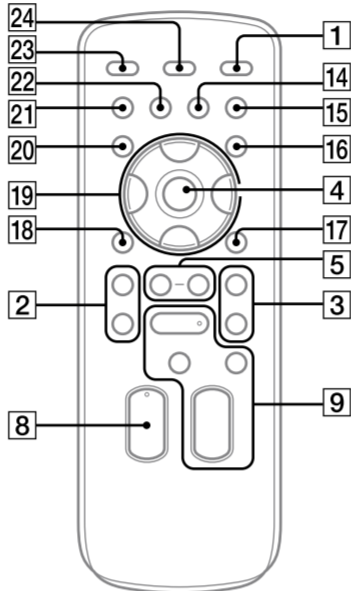

This manual mainly explains operations using the remote, but the same operations can also be performed using the buttons on the unit having the same or similar names.

To use the remote

Slide and remove the battery compartment lid, and insert the two R6 (size AA) batteries, side first, matching the polarities shown below.

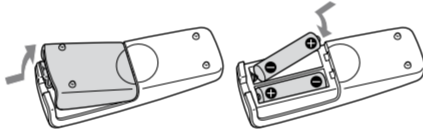

Notes on using the remote

- With normal use, the batteries should last for about six months.
- Do not mix an old battery with a new one or mix different types of batteries.
- If you do not use the remote for a long period of time, remove the batteries to avoid damage from battery leakage and corrosion.

When carrying this system

- 1 Remove a disc to protect the CD mechanism.
- 2 Press I/⏻ (power) **1** on the unit to turn off the system and confirm that "STANDBY" stops flashing.
- 3 Unplug the power cord.

To set the clock


- 1 Press I/⏻ **1** to turn on the system.
- 2 Press TIMER MENU **16** to select the clock set mode. If "PLAY SET" flashes, press **19** repeatedly to select "CLOCK," and then press **4** (enter) **4**.
- 3 Press **19** repeatedly to set the hour, then press **4**.
- 4 Use the same procedure to set the minutes.

Note
The clock settings are lost when you disconnect the power cord or if a power failure occurs.

To display the clock when the system is off

Press DISPLAY **24**. The clock is displayed for about 8 seconds.

Getting Started

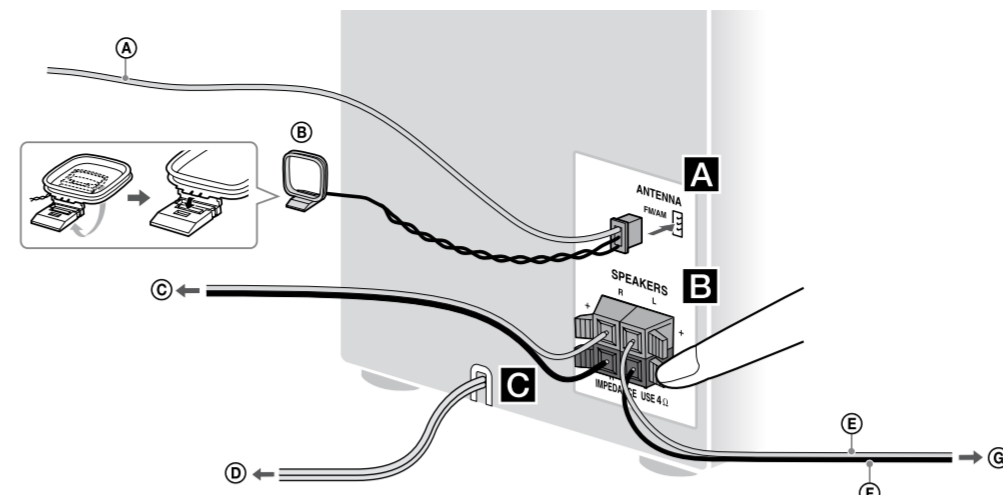

- A FM lead antenna (Extend it horizontally.)
- B AM loop antenna
- C To right speaker
- D To wall outlet

Antennas

Find a location and an orientation that provide good reception, and then set up the antenna. Keep the antennas away from the speaker cords and the power cord to avoid picking up noise.

Speakers

Insert only the stripped portion of the cord.


Power

Connect the power cord to a wall outlet. If the plug does not fit the wall outlet, detach the supplied plug adaptor (only for models equipped with an adaptor).

- E Speaker cord (Red/)
- F Speaker cord (Black/)
- G To left speaker

To use the iPod

Insert an iPod Dock Adapter into the iPod Dock **10** before use.

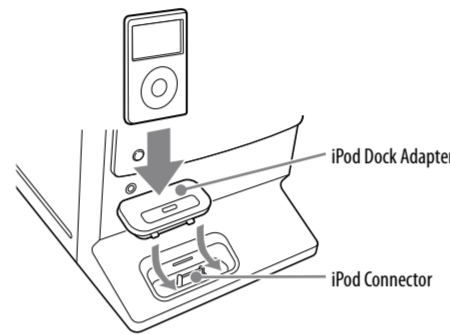

To remove the iPod Dock Adapter, pull it up with your fingernail or a flat object using the slot inside the adapter.

Note

The iPod Dock Adapter is not supplied with the system. Use the adapter supplied with your iPod when using an iPod model. For details on the iPod Dock Adapters, refer to the instructions supplied with the iPod Dock Adapters.

To connect an optional headphones

Connect headphones to the PHONES jack **11** on the unit.

Operations

Playing a CD/MP3 disc

- 1 Select the CD function.
Press FUNCTION +/- **9** repeatedly.
- 2 Place a disc.
Press PUSH OPEN/CLOSE **6** on the unit, and place a disc with the label side up on the CD compartment.
To close the CD compartment, press PUSH OPEN/CLOSE **6** on the unit.
- 3 Start playback.
Press (play) **9**.

Other operations

To	Press
Pause playback	(pause) 9 . To resume play, press the button again.
Stop playback	(stop) 9 .
Select a folder on an MP3 disc	(select folder) +/- 5 repeatedly.
Select a track or file	(go back) 2 / (go forward) 3 .
Find a point in a track or file	Hold down (rewind) 2 / (fast forward) 3 during playback, and release the button at the desired point.
Select Repeat Play	REPEAT 22 repeatedly until "REP" or "REPI" appears.

To change the play mode

Press PLAY MODE **21** repeatedly while the player is stopped. You can select normal play ("") for all MP3 files in the folder on the disc, shuffle play ("SHUF" or " SHUF*" for folder shuffle), or program play ("PGM").
* When playing a CD-DA (audio) disc, (SHUF) Play performs the same operation as normal (SHUF) Play.

Note on Repeat Play

"REP1" indicates that a single track or file is repeated until you stop playback.

Note on shuffle play mode

 
When you turn off the system, the selected shuffle play mode ("SHUF" or " SHUF") is cleared and the play mode returns to normal play mode ("").

Listening to the radio

- 1 Select "TUNER FM" or "TUNER AM."
Press FUNCTION +/- **9** repeatedly.
- 2 Perform tuning.

For automatic scanning

Press TUNING MODE **21** repeatedly until "AUTO" appears, and then press + **3**/- **2**. Scanning stops automatically when a station is tuned in, and "TUNED" and "ST" (for stereo programs only) light up in the display.



If "TUNED" does not light up and the scanning does not stop, press **9** to stop scanning, then perform manual tuning (below).

For manual tuning

 
Press TUNING MODE **21** repeatedly until "MANUAL" appears, and then press + **3**/- **2** repeatedly to tune in the desired station.

Tip

To reduce static noise on a weak FM stereo station, press FM MODE **22** repeatedly until "MONO" appears to turn off stereo reception.

Presetting radio stations

- 1 Tune in the desired station.
- 2 Press TUNER MEMORY **20** to select the tuner memory mode.



- 3 Press + **3**/- **2** repeatedly to select the desired preset number.

If another station is already assigned to the selected preset number, the station is replaced by the new station.

- 4 Press **4** to store the station.

- 5 Repeat steps 1 through 4 to store other stations.
You can preset up to 20 FM and 10 AM stations. The preset stations are retained for about half a day even if you disconnect the power cord or if a power failure occurs.

- 6 To call up a preset radio station, press TUNING MODE **21** repeatedly until "PRESET" appears, and then press + **3**/- **2** repeatedly to select the desired preset number.

Playing the iPod

- 1 Select the iPod function.
Press FUNCTION +/- **9** repeatedly.
- 2 Place the iPod.
- 3 Start playback.
Press **9**.

To control the iPod

To	Press
Pause playback	9 .
Scroll up/down the iPod menus	19 .
Select a track or chapter of audiobook/podcast	2 / 3 . To fast-forward or fast-rewind, hold down the button.
Choose the selected item	19 / 4 .
Find a point in a track or chapter of audiobook/podcast	Hold down 2 / 3 during playback, and release the button at the desired point.
Return to the previous menu or select a menu	19 /TOOL MENU 17 /RETURN 18 .

To use the system as a battery charger

You can use the system as a battery charger for the iPod when the system is on.
The charging begins when the iPod is placed on the iPod connector. The charge status appears in the iPod display. For details, see the user's guide of your iPod.

To stop charging the iPod

Remove the iPod. Turning off the system also stops charging the iPod.

Notes

- When placing or removing the iPod, handle the iPod in the same angle as that of the iPod connector on the unit and do not twist or sway the iPod to prevent connector damage.
- Do not carry the unit with an iPod set on the connector. Doing so may cause a malfunction.
- When placing or removing the iPod, brace the unit with one hand and take care not to press the controls of the iPod by mistake.
- Before disconnecting the iPod, pause playback.
- Hold down **2**/ **3** to fast-forward (fast-rewind) while playing video if **2**/ **3** does not function.
- To change the volume level, use VOLUME +/- **8**. The volume level does not change even if adjusted on the iPod.
- The iPod Dock **10** on the unit is designed for iPod only. You cannot connect any other portable audio players.
- To use an iPod, refer to the user's guide of your iPod.
- Sony cannot accept responsibility in the event that data recorded to iPod is lost or damaged when using an iPod with this unit.

