

Warranty Service

This warranty gives you specific legal rights and you may also have other rights that vary from state to state. Some states do not allow the exclusion limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so that the above limitations and exclusions may not apply to you.

U.S. Warranty Service

In the United States, service is provided by our Company-owned Service Centers and over 300 Authorized Service Dealers. For the address of your nearest authorized Service Dealer, please consult our website at www.remington-products.com or your local telephone directory under "Shaver-Electric-Repair." If you wish, you may mail the product in the U.S., postpaid, to Remington Products Company, L.L.C., 60 Main Street, Bridgeport, CT 06604, Attention: Service Department or Remington Products (Canada) Inc., 61 Amber Street, Markham, Ontario L3R 3J7 in Canada, Attention: Customer Service

International Warranty Service

Service under the Remington warranty can be obtained outside the United States by Remington-authorized Distributors and Service Dealers. Please consult your local telephone directory for the nearest location.

Questions or Comments: Please call 800-736-4648 in the U.S. or 888-277-6333 in Canada.

Visit us at www.remington-products.com



Remington and Precision are trademarks of Remington Corporation, L.L.C. in the U.S. Remington is a trademark of Remington Corporation, L.L.C. in Canada. © 2002 R.P.C., L.L.C. Job #G02-011 5/02 Part No.13245 Patents Pending

Remington Products Company, L.L.C.
60 Main Street
Bridgeport, CT 06604
MADE IN CHINA

Remington Products (Canada) Inc.
61 Amber Street
Markham, Ontario L3R 3J7

Performance Guarantee

Remington® Money-Back Offer

You have just bought one of the finest trimmers available today. If for any reason, within 30 days of the purchase of your Remington Precision Trimmer, you are not satisfied and would like a refund, just return your product, with the sales receipt to the retailer from whom you purchased it. Remington will reimburse all retailers who accept the product within 30 days of purchase. If you have any questions regarding the money-back guarantee, please call 800-736-4648 in the U.S. or 888-277-6333 in Canada.

Full Two-Year Warranty

Remington warrants that this product is free from defect in material and workmanship for two years after its original purchase date – except for the replaceable trimmer blades, and damage as specified below. Remington will correct any such defect without charge if you return the complete product either in person or by mail, postage paid, to a Remington company-owned Service Center or Authorized Service Dealer within two years after the date of purchase with original receipt.

Do not return this product to the retailer from whom the product was purchased.

This warranty does not cover damage by accident, misuse, abuse, or by affixing an unauthorized accessory or alteration to the product, or by connection of the product and adapter to any but the specific current and voltage indicated the instruction booklet, or by any other conditions beyond our control.

No responsibility, obligation, or liability is assumed for the installation or maintenance of this product. Warranty service must be performed by a Remington Company-owned Service Center or Authorized Service Dealer and damage or loss of any kind resulting from servicing by any other person is not covered under warranty. Company-owned Service Centers and Authorized Service Dealers may be found in our website at www.remington-products.com or your local telephone directory. If you wish, you may mail the product postpaid to Remington Products Company, L.L.C., 60 Main St., Bridgeport, CT 06604 Attention: Service Department or Remington Products (Canada) Inc, 61 Amber Street, Markham, Ontario, L3R 3J7.

REMINGTON SHALL NOT BE RESPONSIBLE FOR ANY INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES.

All implied warranties including but not limited to implied warranties of fitness and merchantability, are limited in duration to two years from date of original purchase.

REMINGTON® precision



Pivoting 2-in-1 Trimmer

Neckline/
Sideburns
Nose/Ear

NNE-10

Use & Care Guide

SAVE THESE INSTRUCTIONS

- Do not use this appliance with a damaged or broken cutting unit, as injury may occur.
- Close supervision is necessary when this appliance is used by, on or near children or invalids.
- This trimmer is designed for household use only.
- Do not use attachments not recommended or authorized by Remington Company, L.L.C.
- Always store your trimmer in a moisture-free environment. Do not store trimmer in temperatures exceeding 130°F/54°C.
- Always remember to turn on the trimmer before you insert it into your nose or ear to avoid painfully snagging hairs.
- Never insert the trimmer more than 1/4" (6mm) into nose or ear. Foreign objects should never come into contact with the eardrum.

To reduce the risk of burns, fire, electric shock or injury to persons:

WARNING

 
READ ALL INSTRUCTIONS BEFORE USING.

IMPORTANT SAFETY INSTRUCTIONS

- ### Changing Batteries
- Your groomer requires 2 "AA" alkaline batteries.
- Be sure groomer is shut off.
 - Hold groomer horizontally in one hand and gently twist battery cap 1/16 turn counter-clockwise and pull off.
 - Insert batteries as shown, making sure the (+) and (-) markings on ends of batteries match those on inside of compartment.
 - Replace battery compartment cap.
- NOTE: Groomer will not operate if batteries are inserted incorrectly.**
- Use of any batteries other than alkaline will negatively affect the unit's operating performance. Batteries should not be left in the unit if the unit is not in use for long periods. To prevent battery corrosion the unit should be kept in a dry environment. Do not use this unit with batteries that have been recharged. The lower voltage in recharged batteries impairs the performance of the cutting unit.
- ### Cleaning and Maintaining Your Groomer
- Clean and lubricate your groomer regularly to ensure your unit's operating life is not prematurely shortened.
- Groomer should always be shut off when you clean it.
 - Do not use harsh or corrosive cleaners on unit or cutters.
 - Do not use apply pressure or hard objects to cutters.
 - If groomer is not used regularly, remove batteries to prevent possible chemical leakage.
 - Apply a drop of light oil to the blades.
- ### The Best Technique for Nose & Ear
- Here are a few tips for trimming the various parts of your face.
- To remove hair from nose:
 - Attach nose, ear, eyebrow attachment.
 - Turn groomer on.
 - Insert groomer's cutting unit gently into the nostril.
 - Rotate groomer in a circular motion around the opening of the nostril.
 - For best cutting efficiency, gently move the groomer in and out of the nostril as you rotate the groomer.
 - Remember to avoid inserting the groomer more than 1/4" into your nostril to ensure safe trimming.
 - To remove hair from ear:
 - Attach nose, ear, eyebrow attachment.
 - Turn groomer on.
 - Insert groomer's cutting unit gently into the outer ear canal.
 - Gently rotate groomer in a circular motion opening.
 - To trim hairs protruding from the surface of the ear surround the outer ear canal, guide the groomer around the edge of the ear.



- Remember to avoid inserting the groomer more than 1/4" into your ear canal to ensure safe trimming.
- To remove hair from eyebrows:
 - Attach nose, ear, eyebrow attachment.
 - Turn groomer on.
 - Gently guide cutting unit to stray, unwanted hairs along the eyebrow line or protruding from the eyebrow itself.
 - Move the unit slowly and carefully so as not to accidentally cut any hairs you do not intend to trim. It is not recommended that you use the groomer to define or trim the entire eyebrow.
- To use the other trimmer:
 - Depress the button on the rear of the unit's top, and swivel the trimmer head 180° until it clicks into place. Release the button to secure the trimmer in position.
 - You will need a hand mirror for this operation if performing it alone. The mirror is not necessary if trimming is performed by a second person.
 - Remove the hair length attachment.
 - Use your fingers to lift the hair at the base of your head up off the neck. Your index finger should be covering the roots of the hairs you are lifting to prevent accidental removal by groomer.
 - Using your other hand, hold the groomer horizontally to the base of your neck with the cutting unit facing up, and move the groomer up the length of the neck until the unit touches your finger covering the hair roots at the base of your head. Repeat this procedure for the entire area of the neck. Be sure to move the unit slowly when performing this operation and to keep the hair roots at the base of your head out of the way of the groomer.
 - Use the hand mirror to inspect the results of the operation and ensure all hairs along the nape of the neck have been trimmed.



Your New Trimmer

