

REMINGTON®

TRAVEL GROOMING KIT

Thank you for purchasing this fine Travel Grooming Kit from Remington®.

Inside you will find tips on using and caring for your groomer to help you look your best.



Use and Care Guide

TLG-100

IMPORTANT SAFETY INSTRUCTIONS

When using your personal groomer, basic precautions should always be observed, including the following. Read all instructions before using this groomer.

READ ALL INSTRUCTIONS BEFORE USING.

DANGER

- Do not use while bathing or in a shower.
- Do not place or store groomer where it can fall or be pulled into a tub or sink.
- Do not place in drop into water or other liquid.

WARNING

- To reduce the risk of burns or injury:**
- Close supervision is necessary when this appliance is used on or near children or invalids.
 - Use the groomer only its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
 - Never operate this groomer if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the groomer to a service center for examination and repair.
 - Never drop or insert any object into any opening.
 - Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
 - Do not use this groomer with a damaged or broken cutting unit, as facial injury may occur.
 - Always store your groomer in a moisture-free area.
 - Dispose of used batteries properly. Do not incinerate. Batteries may explode if overheated. Do not wrap in metal or aluminum foil. Wrap in newspaper before discarding. It is suggested that you contact local town/city officials to determine proper battery redemption site(s) in your area.
 - Do not attempt to recharge alkaline, heavy-duty or regular batteries in battery charger.
 - For "Household Use Only."

SAVE THESE INSTRUCTIONS

Your New Groomer

CONGRATULATIONS on the purchase of your new Travel Grooming Kit. It contains all the attachments and accessories needed to maintain a well-groomed look on your beard, mustache, sideburns, neckline, nose, ears, and eyebrows. As with all Remington products, your groomer has been manufactured with the utmost care and attention to detail to ensure years of reliable use. Using your groomer is easy, but take a few minutes to familiarize yourself with these instructions.

Before Using Your Trimmer

- Beard, mustache, or sideburn hairs should be dry. Avoid using lotions before using your groomer.
- Be certain hair length attachment is at the desired setting. When first using, you may want to begin on the highest setting (longest hair) to prevent trimming off too much hair initially.
- Comb hairs outward so they are at their maximum height and facing in the same direction.
- Clean and lubricate cutter blades regularly (see Maintenance section).
- Never use groomer with damaged or broken cutter units.

For assistance or help, call our customer service at 1-800-736-4648 or 905-470-9400 in Canada.

Take a Moment

Be patient when first using your Remington® Travel Grooming Kit. As with any new product, it may take a little while to familiarize yourself with it, especially if you are using a groomer for the first time or are using a different brand. Take the time to acquaint yourself with your new groomer, as we are confident you will receive years of enjoyable use and complete satisfaction.

Changing Your Batteries

- Your groomer requires 2 "AAA" alkaline batteries.
- Be sure groomer is shut off.
 - Hold groomer horizontally in one hand and gently twist battery cap 1/16 turn counter-clockwise and pull off.
 - Insert batteries as shown, making sure the (+) and (-) markings on end of batteries match those on inside of compartment.
 - Replace battery compartment cap.
- NOTE: groomer will not operate if batteries are inserted incorrectly.*



Product Features

- Product Features**
- Tweezers
 - Scissors
 - Nail Clipper
 - Detail Trimmer
 - Trimmer Handle
 - Nose & Ear Trimmer
 - Short - 4 Length Comb
 - Long - 4 Length Comb
 - Toothbrush
 - Nail File
 - Oil Bottle
 - Cleaning Brush
 - Mustache Comb
 - Hair Comb
 - Storage Case



Operating Your Groomer

Trimming Beards or Mustaches

- Before you begin. Comb your hair in the direction that it grows so that the hairs are at their maximum height and facing in the same direction.
- Place the hair length attachment on the groomer's trimmer head and determine how much hair you want to cut. Remember, until you are familiar with using the groomer, it's always better to select a longer hair setting initially in order not to trim too much hair.
- Turn the groomer's power switch to ON, and begin trimming.
- Start trimming under your chin, and following your jawbone line, work toward your ear and upper beard line using an upward motion. Allow the hair length attachment to follow to contours of your face.
- When finished trimming, turn the unit's power switch to OFF.



TO TRIM EDGE OF MUSTACHE

- Remove hair length attachment.
- Mustache hairs should be dry and avoid any waxes or lotions before using trimmer.
- Use the unit's styling comb or a small comb to comb hairs straight for trimming.
- Hold groomer with trimmer cutting blade facing you.
- Trim hairs using a downward motion following the direction of your hair growth or trim against your hair growth, whichever is preferred.

NOTE: Since all hairs do not grow in the same direction, you may want to try different trimming positions (i.e., upwards, downwards, or across). Practice is best for optimum results.

- After achieving desired length, use a downward motion to blend mustache hairs.

NOTE: Use slow and light pressure. Too much pressure may trim off more hair than desired.

TO TRIM SIDEBURNS

- Comb sideburns following the direction of your hair growth.
- Be certain hair length attachment is ON.
- Hold groomer vertically with front of groomer facing you.
- Trim sideburns using a downward motion.
- Turn groomer OFF.

Hair Length Attachment

The hair length attachment controls the length of the cut. There are four positions for each attachment:

- Hair Length Attachment 1**
- 0-Extra Close
 - 1-Close
 - 2-Short
 - 3-Medium Short
- Hair Length Attachment 2**
- 0-Medium
 - 1-Medium Long
 - 2-Long
 - 3-Extra Long



To fasten the hair length attachment, place the front hooks on the hair length attachment over the front of the groomer's trimmer head and pivot onto backside of the groomer's trimmer head to lock into place.

To remove, push up on tab on back of hair length attachment.

Trimming the Nape of Your Neck

- You will need a hand mirror for this operation if performing it alone. The mirror is not necessary if trimming is performed by a second person.
- Remove the hair length attachment.
- Use your fingers to lift the hair at the base of your head up off the neck. Your index finger should be covering the roots of the hairs you are lifting to prevent accidental removal by groomer.
- Using your other hand, hold groomer horizontally to the base of your neck with the cutting unit facing up, and move the groomer along the length of the neck until the unit touches your finger covering the hair roots at the base of your head. Repeat this procedure for the entire area of the neck. Be sure to move the unit slowly when performing this operation and to keep the hair roots at the base of your head out of the way of the groomer.
- Use the hand mirror to inspect the results of the operation and ensure all hairs along the nape of the neck have been trimmed.



To Define the Beard Line

- Remove the hair length attachment.
- Hold groomer with trimmer blade facing you.
- Start with edge of beard line, and with the cutting blades resting lightly against your skin, use motions towards edge of beard line to trim the beard line to desired locations in facial area and away from beard in neck area.

To Thin and Taper the Beard

- Remove the hair length attachment.
- Use unit's styling comb or a small comb to comb and hold the beard hairs in place while trimming.
- Hold the groomer with the cutting unit facing away from you, move the groomer along the length of the comb.



The Best Technique for Nose & Ear

Here are a few tips for trimming the various parts of your face.

- To remove hair from nose:**
- Nose, ear, eyebrow attachment should be on.
 - Turn groomer on.
 - Insert groomer's cutting unit gently into the nostril.
 - Rotate groomer in a circular motion around the opening of the nostril.
 - For best cutting efficiency, gently move the groomer in and out of the nostril as you rotate the groomer.
 - Remember to avoid inserting the groomer more than 1/4" into your nostril to insure safe trimming.



To remove hair from ear:

- Nose, ear, eyebrow attachment should be on.
- Turn groomer on.
- Insert groomer's cutting unit gently into the outer ear canal opening.
- Gently rotate groomer in a circular motion.
- To trim hairs protruding from the surface of your ear surrounding the outer ear canal, guide the groomer around the edge of the ear.
- Remember to avoid inserting the groomer more than 1/4" into your ear canal to insure safe trimming.



To remove hair from eyebrows:

- Nose, ear, eyebrow attachment should be on.
- Turn groomer on.
- Gently guide cutting unit to stray, unwanted hairs along the eyebrow line or protruding from the eyebrow itself.
- Move the unit slowly and carefully so as not to accidentally cut any hairs you do not intend to trim. *It is not recommended that you use the groomer to define or trim the entire eyebrow.*



Cleaning & Maintenance

Cleaning and Maintaining Your Groomer

 
 
- Clean and lubricate your groomer regularly to insure your unit's operating life is not prematurely shortened.
- Groomer should always be shut off.
 - Do not apply pressure or hard objects to cutters.
 - Do not use harsh or corrosive cleaners on unit or cutters.
 - If groomer is not used regularly, remove batteries to prevent possible chemical leakage.

Weekly

Your groomer has rust-resistant stainless steel cutting blades that permit the cutting assembly to be rinsed under running water, if desired. Or, you can still conveniently clean your unit with the included brush.

Cleaning with water

- Remove the trimmer attachment or nose/ear attachment by rotating approximately 1/8 inch turn to the left (counter-clockwise) and pull off.
 - Rinse attachments under running water. DO NOT run entire unit under water, ONLY attachments. Use warm water. DO NOT use hot water. Hot water may cause damage to components.
 - To dry off the attachments, you can use a hair dryer on a cool or medium heat setting to help dry them before reassembly onto the groomer.
- Caution: Too high a heat will damage attachments.*



Cleaning with brush

- Thoroughly brush and blow out hair clippings from cutter, bottom of attachments and top of power handle.
- Monthly**
- Lubricate both attachment cutter blades once a month with oil provided.
 - Use 1-2 drops of oil and spread lightly over cutters with fingertip. Do not over oil. Wipe away any excess from cutter or groomer.

Troubleshooting

- The groomer does not work when turned on:**
- Be certain batteries have been properly installed. Groomer will not operate unless batteries are correctly positioned.
 - If battery power has been depleted, replace with 2 "AAA" alkaline batteries (see Battery section).
- Groomer cutters do not move:**
- The cutting unit may be dirty and clogged. Clean and lubricate the unit as directed in Cleaning section.

Performance Guarantee

Limited Two-Year Warranty

Spectrum Brands, Inc. is a global consumer products company with a diverse portfolio of world-class brands, including Remington-branded electric shavers. Spectrum Brands, Inc. warrants this product against any defects that are due to faulty material or workmanship for a two-year period from the original date of consumer purchase. This warranty does not include damage to the product resulting from accident or misuse. If the product should become defective within the warranty period, we will replace it free of charge. Return your product and sales receipt with your name, address and day time phone

number to: Spectrum Brands, Inc., Attention: Consumer Services, 601 Rayovac Drive, Madison, WI 53711. For more information call 800-736-4648.

Exclusions

- The trimmer blades are consumable parts and are excluded from this guarantee, as are defects that result from misuse or abuse of your trimmer.
- KEEP ORIGINAL SALES RECEIPT AS PROOF OF PURCHASE FOR WARRANTY PURPOSES.**
- This warranty does not cover products damaged by the following:
- Accident, misuse, abuse or alteration of the product
 - Service by unauthorized persons
 - Use with unauthorized accessories
 - Connecting it to incorrect current and voltage
 - Wrapping cord around appliance causing premature wear & breakage
 - Any other conditions beyond our control

No responsibility, obligation, or liability is assumed for the installation or maintenance of this product.

SPECTRUM BRANDS, INC. SHALL NOT BE RESPONSIBLE FOR ANY INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT. ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO TWO YEARS FROM DATE OF ORIGINAL PURCHASE.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state. Some states do not allow the exclusion or limitation of incidental, special or consequential damages.

Spectrum Brands, Inc. Money-back Offer

If within 30 days after you have purchased your Remington® branded product, you are not satisfied and would like a refund, return it with the sales slip indicating purchase price and date of purchase to the retailer from whom it was purchased. Spectrum Brands, Inc. will reimburse all retailers who accept the product within 30 days from the date of purchase. If you have any questions concerning the money-back guarantee, please call 800-736-4648.

Questions or comments:
Call 800-736-4648 in the US or 905-470-9400 in Canada or visit www.remington-products.com

Remington is a Registered Trademark of ROVICAL, INC., a subsidiary of Spectrum Brands, Inc.

Dist. by: Spectrum Brands, Inc., Madison, WI 53711
Dist. by: Spectrum Brands Canada, Inc., Mississauga, ON L5L 0A1

REMINGTON®

TRAVEL GROOMING KIT

NÉCESSAIRE DE TOILETTE

Merci d'avoir acheté cette magnifique Nécessaire de toilette de Remington®.

Vous trouverez à l'intérieur de ce manuel conseils sur la façon d'utiliser et d'entretenir votre tondeuse pour vous aider à faire votre toilette.



Guide d'utilisation et d'entretien

TLG-100

INSTRUCTIONS IMPORTANTES RELATIVES À LA SÉCURITÉ

Lorsque vous utilisez votre tondeuse personnelle, des précautions élémentaires relatives à la sécurité doivent toujours être observées, notamment celles qui suivent. Lisez toutes les instructions avant l'utilisation de cette tondeuse.

DANGER

- N'utilisez pas cette tondeuse lorsque vous prenez un bain ou une douche
- Ne placez pas et ne rangez pas cette tondeuse de manière à ce qu'elle risque de tomber ou d'être entraînée dans un lavabo ou une ébaignoire.
- Ne la placez pas ou ne la faites pas tomber dans l'eau ou dans tout autre liquide.

ADVERTISSEMENT

Pour réduire les risques de brûlure ou de blessure :

- Une supervision attentive est nécessaire lorsque cet appareil est utilisé par des enfants, des invalides ou des personnes handicapées, ou en leur présence.
- N'utilisez cette tondeuse qu'aux fins exclusives auxquelles elle est destinée, telles qu'elles sont décrites dans ce manuel. N'utilisez pas des accessoires qui ne sont pas recommandés par le fabricant.
- Ne faites jamais fonctionner cette tondeuse si elle ne fonctionne pas correctement ; si on l'a laissée tomber ou si elle a été abîmée, ou si elle est tombée dans l'eau. Retournez la tondeuse à un centre d'entretien et de dépannage pur qu'elle soit examinée et réparée.
- Ne faites jamais tomber et n'insérez jamais d'objets dans les ouvertures.
- N'utilisez pas cet appareil à l'extérieur ou ne le faites pas fonctionner dans un endroit où des produits aérosols (en bombe) sont utilisés ou dans un endroit où de l'oxygène est administré.
- N'utilisez pas cette tondeuse avec un bloc de coupe endommagé ou cassé, des blessures au visage pouvant se produire.
- Débarrassez-vous convenablement des piles usagées. Ne les incinerez pas. Les piles peuvent exploser si elles sont surchauffées. Ne les emballez pas dans des feuilles de métal ou d'aluminium. Emballez-les dans du papier journal avant de vous en débarrasser. Il est conseillé d'entrer en contact avec les autorités locales ou municipales pour localiser les centres de recyclage appropriés dans votre région.
- N'essayez pas de recharger des piles alcalines, des piles à fort rendement ou des piles ordinaires dans un chargeur.
- Conçu pur une « utilisation à l'intérieur seulement »

CONSERVEZ CES INSTRUCTIONS

Votre Nouvelle Tondeuse

FÉLICITATIONS pour l'achat de votre nouvelle . Elle est accompagnée de toutes les pièces et accessoires dont vous aurez besoin pour soigner votre barbe, vos moustaches, vos pattes, votre encolure, votre nez, vos oreilles ou vos sourcils. Comme pour tous les produits de Remington, votre tondeuse a été fabriquée avec le plus grand soin et la plus grande attention aux détails, pour vous garantir des années d'utilisation fiables. L'utilisation de votre tondeuse est facile, mais prenez quelques minutes pour vous familiariser avec ces instructions.

Avant d'utiliser votre taille-pois

- Barbe, moustaches et pattes doivent être sèches. Évitez d'utiliser des lotions avant de vous servir de votre tondeuse.
- Assurez-vous que le dispositif de longueur de poil est réglé à la position désirée. Pour une première utilisation, il est recommandé de commencer au le plus haut réglage (poils les plus longs) afin d'éviter de tailler trop de poils initialement.
- Peignez les poils vers l'extérieur afin qu'ils soient à leur longueur maximale et qu'ils se présentent dans la même direction.
- Nettoyez et lubrifiez les couteaux de la tondeuse régulièrement (consultez la section « Entretien »).
- N'utilisez jamais de tondeuse présentant un bloc de coupe endommagé ou cassé.

Pour toute assistance ou aide, appelez notre service clients au 905 470 9400

Prenez un moment

Soyez patient lorsque vous utilisez pour la première fois la Nécessaire de toilette de Remington®. Comme avec tout nouveau produit, il se peut qu'il vous faille un peu de temps pour vous familiariser avec lui, surtout si vous utilisez une tondeuse pour la première fois ou si vous utilisez une marque différente. Prenez le temps de faire connaissance avec votre obtiendrez des années d'utilisation agréable et une complète satisfaction.

Piles

- 2 piles « AAA » alcalines.
- Assurez-vous que la tondeuse est à l'arrêt.
- Tenez la tondeuse horizontalement d'une main et tournez doucement le capot du compartiment des piles de 1/16 de tour dans le sens contraire des aiguilles d'une montre et tirez.
- Insérez les piles comme indiqué, en vous assurant que les signes (+) et (-) au bout des piles sont accordés avec ceux de l'intérieur du compartiment.
- Remplacez le capot du compartiment des piles.

REMARQUE : La tondeuse ne fonctionnera pas si les piles sont insérées de manière incorrecte.

Caractéristiques du Produit

Caractéristiques du Produit

1. Pincettes à cils
2. Ciseaux
3. Coupe-ongles
4. Tondeuse miniaturisée
5. Tondeuse manche
6. Tondeuse pour les poils
7. Peigne 4 longueurs pour cheveux courts
8. Peigne 4 longueurs pour cheveux longs
9. Brosse à dents
10. Lime à ongles
11. Flaçon d'huile
12. Brosse de nettoyage
13. Peigne pour la moustache
14. Peigne
15. Étui de rangement



Fonctionnement de Votre Tondeuse

Pour tailler barbes et moustaches

- Avant de commencer, peignez vos poils dans la direction où ils poussent afin qu'ils soient à leur longueur maximale et qu'ils se présentent dans la même direction.
- Placez le guide de coupe sur la tête de la tondeuse et déterminez le volume de poil que vous voulez tailler. Souvenez-vous—jusqu'à ce que l'utilisation de la tondeuse vous soit devenue familière—qu'il est toujours préférable de sélectionner initialement un réglage de longueur de poil plus long afin de ne pas tailler trop de poil.
- Basculez le commutateur de l'appareil sur MARCHE, et commencez à tailler.
- Commencez à tailler sous le menton et, tout en suivant la ligne de la mâchoire, allez vers l'oreille et la ligne supérieure de barbe en utilisant un mouvement de bas en haut. Faites en sorte que le guide de coupe suive les contours de votre visage.
- Lorsque vous avez fini de tailler, basculez l'interrupteur sur ARRÊT.

POUR TAILLER LES BORDS DES MOUSTACHES

- Retirez le guide de coupe.
- Les poils de la moustache doivent être secs ; évitez toute lotion ou cire avant de vous servir du taille-pois.
- Utilisez le peigne d'entretien de l'appareil ou un petit peigne afin de peigner les poils droits pour les tailler.
- Tenez la tondeuse de manière à ce que les couteaux du taille-pois vous fassent face.
- Taillez les poils dans un mouvement de haut en bas, dans le sens où le poil pousse ou à contre-poil, selon votre préférence

REMARQUE : Les poils ne poussent pas tous dans la même direction, il est recommandé d'essayer différentes positions de taille (par ex. vers le haut, le bas, en travers). Le mieux est de s'exercer en vue d'un résultat optimal.

- Après avoir obtenu la longueur désirée, adoptez un mouvement de haut en bas pour lisser les poils des moustaches.

REMARQUE : Exercez une pression légère et lente. Une pression trop forte pourrait tailler plus de poils que désiré.

- Mettez la tondeuse à l'arrêt.

POUR TAILLER LES FAVORIS

- Peignez les favoris en suivant le sens où votre poil pousse.
- Assurez-vous que le guide de coupe est INSÉRÉ.
- Tenez la tondeuse verticalement, le devant de la tondeuse vous faisant face.
- Taillez les favoris dans un mouvement de haut en bas.
- Mettez la tondeuse à l'ARRÊT.

Guide de Coupe

Le guide de coupe contrôle la longueur de la coupe. Il existe quatre positions pour chaque dispositif :

- | Guide de coupe n°1 | Guide de coupe n°2 |
|---------------------|--------------------|
| 0-Moyen | 0-Moyen |
| 1-Près | 1-Moyennement long |
| 2-Court | 2-Long |
| 3-Moyennement court | 3-Extra Long |

Guide de coupe n°1

- 0-Moyen
- 1-Près
- 2-Court
- 3-Moyennement court

Guide de coupe n°2

- 0-Moyen
- 1-Moyennement long
- 2-Long
- 3-Extra Long

Guide de coupe n°3

- 0-Moyen
- 1-Moyennement long
- 2-Long
- 3-Extra Long

Guide de coupe n°4

- 0-Moyen
- 1-Moyennement long
- 2-Long
- 3-Extra Long

Guide de coupe n°5

- 0-Moyen
- 1-Moyennement long
- 2-Long
- 3-Extra Long

Guide de coupe n°6

- 0-Moyen
- 1-Moyennement long
- 2-Long
- 3-Extra Long

Guide de coupe n°7

- 0-Moyen
- 1-Moyennement long
- 2-Long
- 3-Extra Long

Guide de coupe n°8

- 0-Moyen
- 1-Moyennement long
- 2-Long
- 3-Extra Long

Guide de coupe n°9

- 0-Moyen
- 1-Moyennement long
- 2-Long
- 3-Extra Long

Guide de coupe n°10

- 0-Moyen
- 1-Moyennement long
- 2-Long
- 3-Extra Long

Guide de coupe n°11

- 0-Moyen
- 1-Moyennement long
- 2-Long
- 3-Extra Long

