


SF Asennusohje
 S Installation instruktioner
 N Installationsinstruktioner
 DK Installationsinstruktus
 NL Installatievoorschrift
 D Montageanweisung
 F Instructions d'installation
 ES Instrucciones de montaje
 I Istruzioni di montaggio

ML7425A6008/B6007 Electric Linear Valve Actuators

INSTALLATION INSTRUCTIONS

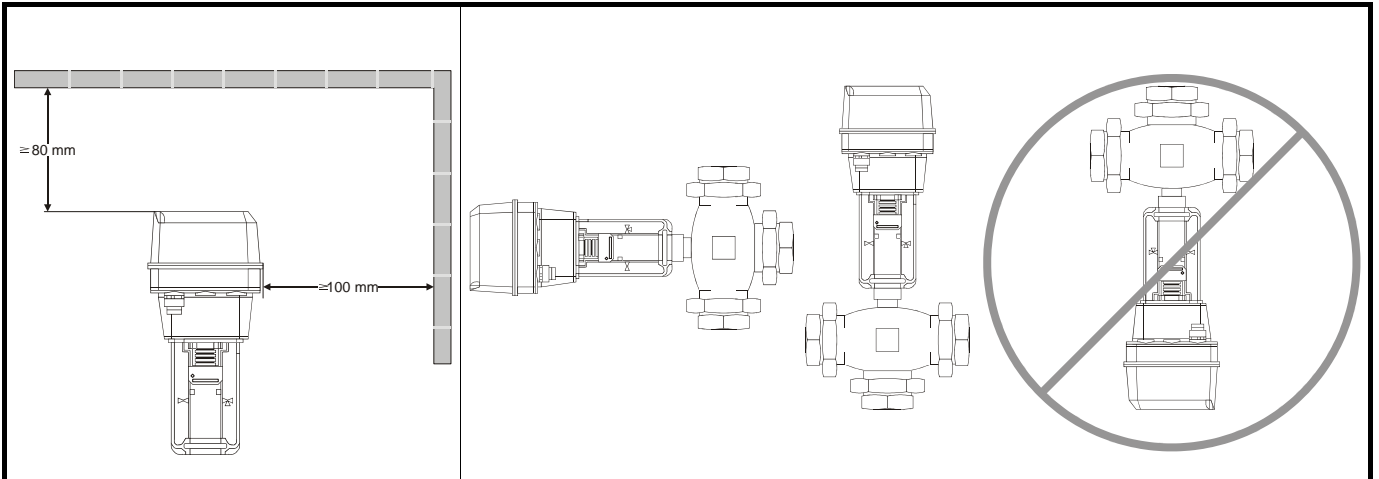

A1-A7: Installation

mounting
 D Einbau
 F montage
 I montaggio
 NL montage
 DK montere
 N monterings
 FIN asentaminen
 S montera
 E montaje

A1

~ 108 mm

A2

10 mm

A3

24 Vac

4...5 mm

A4

position

Y 0(2)...10 V 2...10 V

24 V L 24 V L

24 V ~ 24 V ~

1 2

B

A5a

W1

W1

W1

0% 50% 100%

<p>A5b</p> <p>0 ... 10 V = </p> <p>2 ... 10 V</p> <p>W3 0(2) V \updownarrow 10 V = </p> <p>W3 10 V \updownarrow 0(2) V</p>	<p>A6</p> <p>Labels: a, b</p>	<p>A7</p> <p>24 Vac </p> <p>Labels: a, b</p>
<p>B1: Manual</p> <p>24 Vac </p> <p>4..5 mm</p> <p>Labels: a, b</p>	<p>B2</p> <p>Labels: a, b</p>	
<p>C1-C2: Dismounting</p> <p>dismounting</p> <p>D Ausbau</p> <p>F démontage</p> <p>I smontaggio</p> <p>NL demontage</p> <p>DK afmontere</p> <p>N demontere</p> <p>FIN purkaminen</p> <p>S nedmontera</p> <p>E desmontaje</p>	<p>C1</p> <p>24 Vac </p> <p>50%</p> <p>Labels: a, b, c, d</p>	<p>C2</p> <p>10 mm</p> <p>Labels: a, b, c</p>

Automation and Control Solutions

Honeywell GmbH
 Böblinger Straße 17
 D-71101 Schönaich / Germany
 Phone: (49) 7031 637 - 01
 Fax: (49) 7031 637 - 493
<http://europe.hbc.honeywell.com>