

QUICK START GUIDE

Welcome

Thank you for purchasing this AIWA product.

When you unpack your DVD player/video cassette recorder for the first time, follow these procedures for set up.

For Assistance And Information

Call Toll Free 1-800-BUY-AIWA
(United States and Puerto Rico)


AIWA CO., LTD

8C-JF1-914-01
020408AMK-U-L


Printed in Indonesia

You will find these accessories in the package box.


Antenna cable (1)

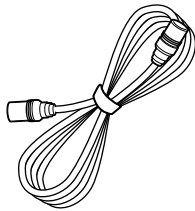

Video cable (1)

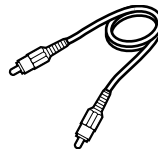


Audio cable (1)

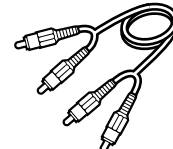

Remote control (1)



Operating instructions (1)

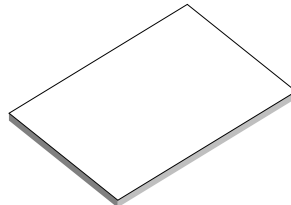


Please read the information on pages 2 and 3 of the Operating Instructions before installing or operating your DVD player/VCR.

1

Installing Batteries in the Remote Control


Insert two R03 (size AAA) batteries (not supplied) with correct polarity, as indicated inside the battery compartment.

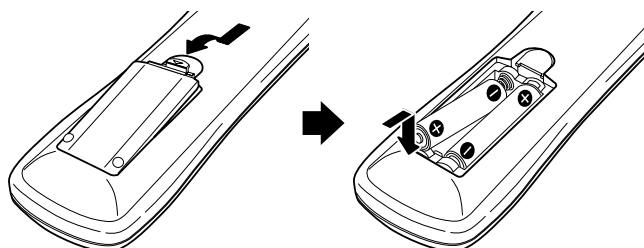

2

Connection


Basic connections

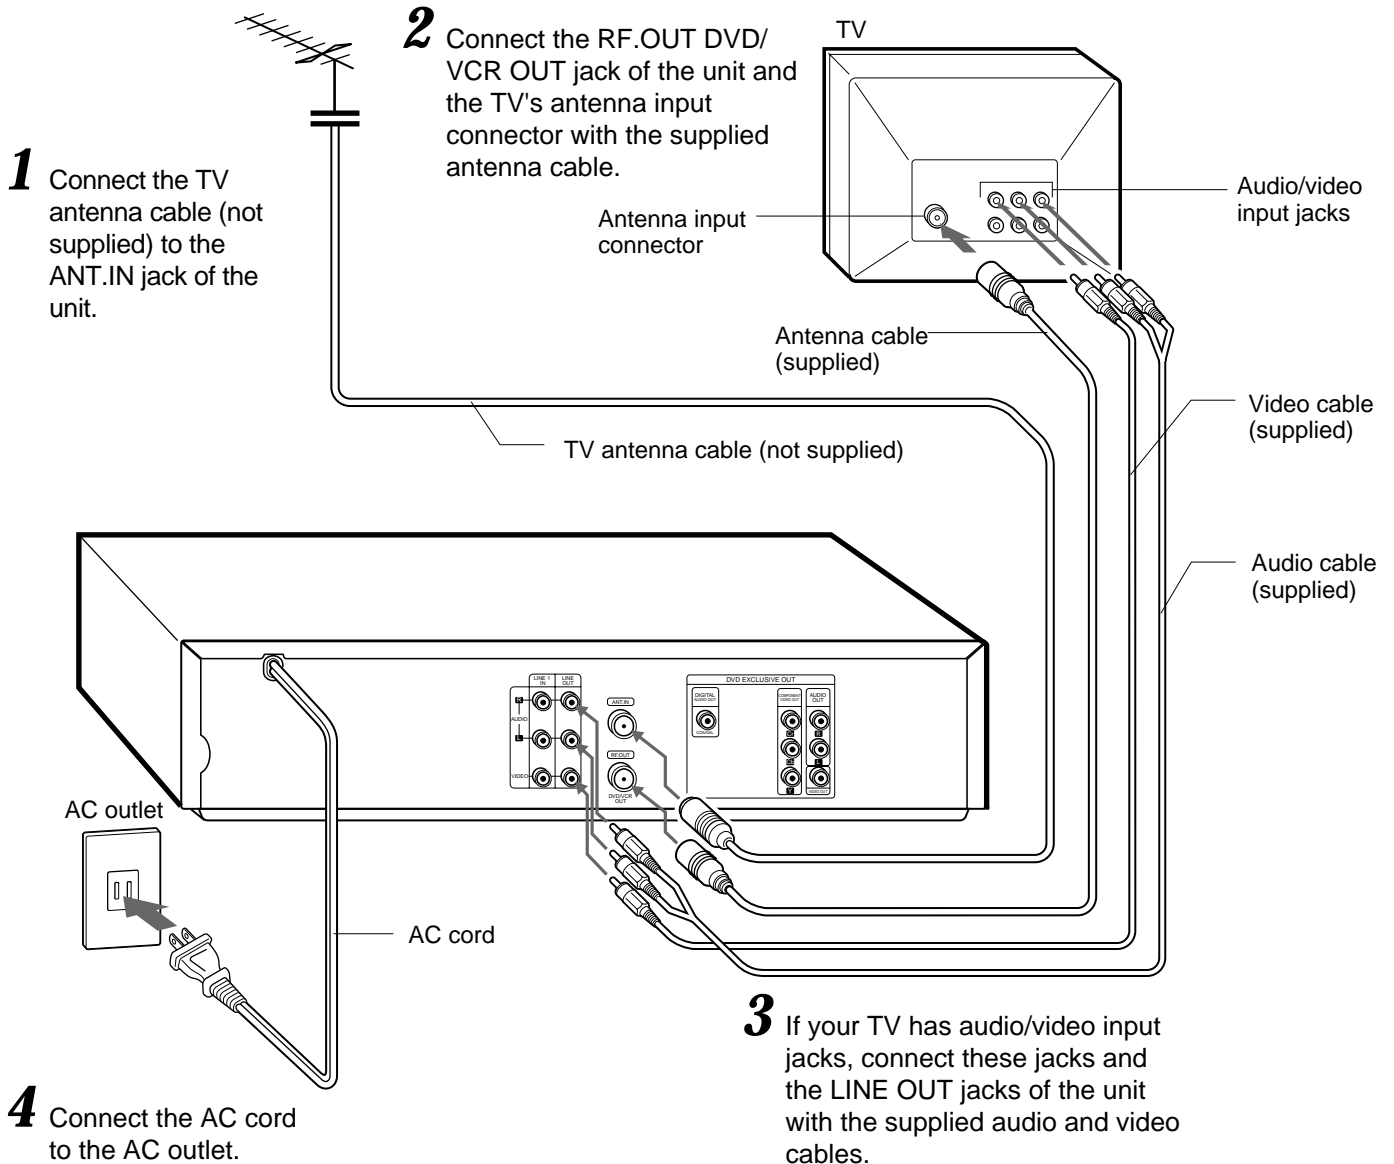

Important


Connect the AC cord to the AC outlet after all connections are complete.

When the TV is connected to the unit only with the antenna cable

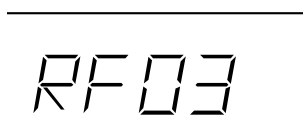

You need to set the unit's RF output channel to a channel that is not used for broadcasts in your area. The default is channel 3. To change the RF output channel setting, make sure the AC cord is plugged in to the AC outlet, but keep the power turned off. Press and hold down either of the two CHANNEL buttons at the front of the unit until the display in the LCD changes. When displaying the output from this unit on the TV, select this channel on the TV.

CATV connections

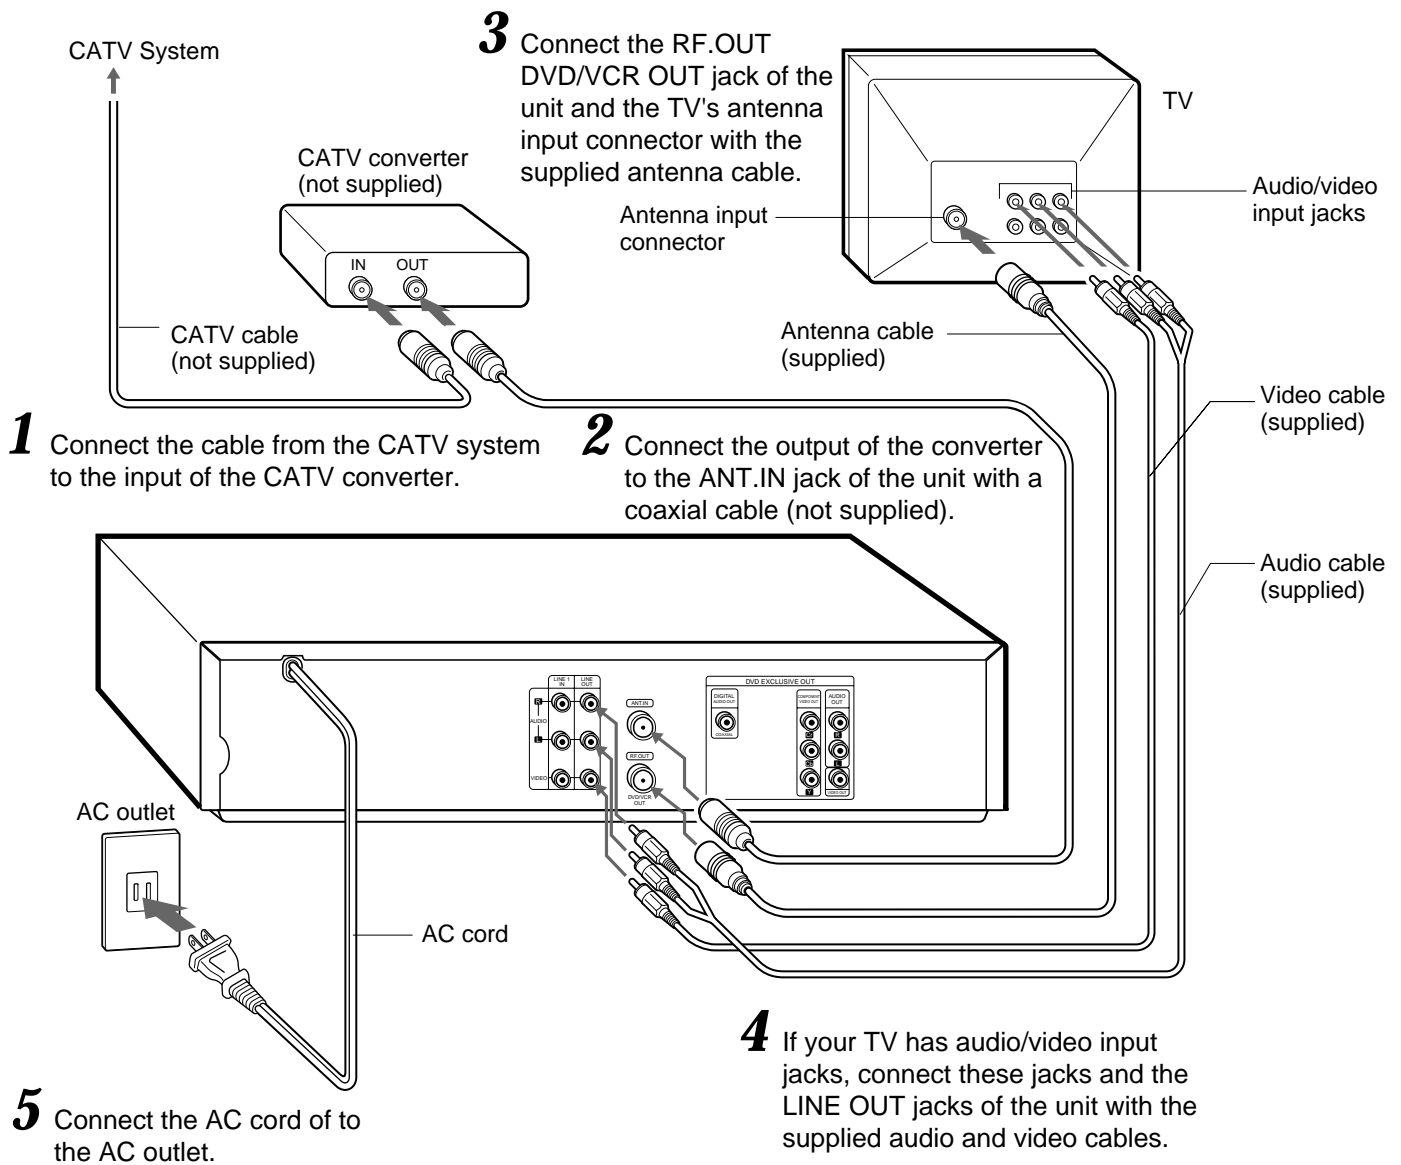

To connect to a CATV system without a CATV converter

 
Connect the cable from the CATV system to the ANT.IN jack of the unit in step 1 above.

If the program tuned in on the TV is not displayed clearly

Press TV/VCR on the remote control to turn off "VCR" in the display window, or turn off this unit.

To display TV or video program output from the unit


Press TV/VCR on the remote control to display "VCR" in the display window.

 



3


Setting the menu language


The on-screen menu can be displayed in English, Spanish, or French. The default language is English. Skip this step if you do not need to change it.

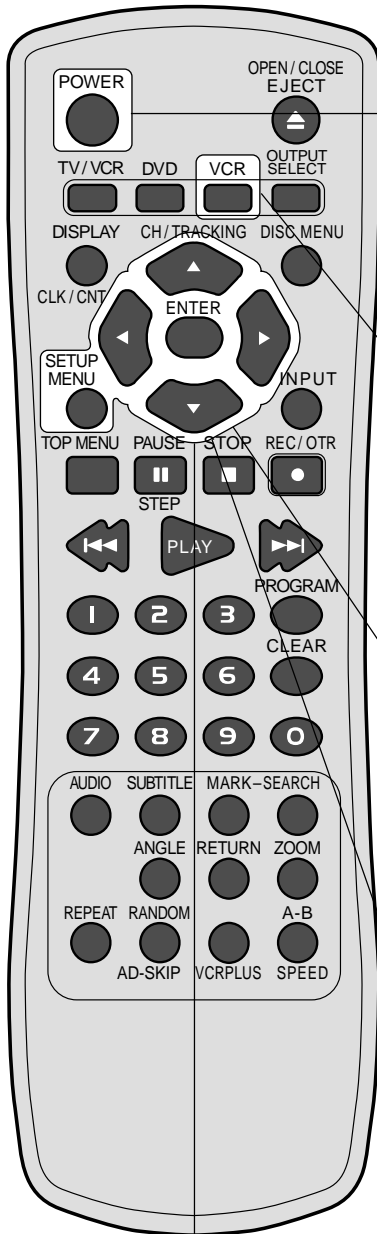


1  Press **POWER** to turn on the unit.

2  Press **VCR**.


3  Press **SETUP MENU**. Press **▲** or **▼** to select VCR SETUP, then press **ENTER**.

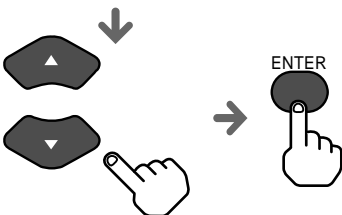


	SET CLOCK
	TIMER RECORD
	CHANNEL SETUP
	VCR SETUP
▲▼ SELECT ENTER ENTER TO EXIT PRESS MENU	

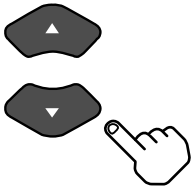4  Press **▲** or **▼** to select LANGUAGE.

	SCREEN DISPLAY :
LANGUAGE :	ENGLISH
AUDIO MODE :	
BROADCAST TYPE :	
AUDIO OUTPUT :	
▲▼ SELECT ◀▶ ADJUST TO EXIT PRESS MENU	

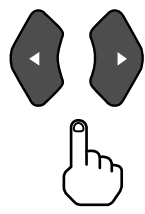
5  Press **◀** or **▶** to select the desired language. The on-screen display language changes accordingly.

6  Press **SETUP MENU** to exit the menu.

 
4

 



Setting the Clock

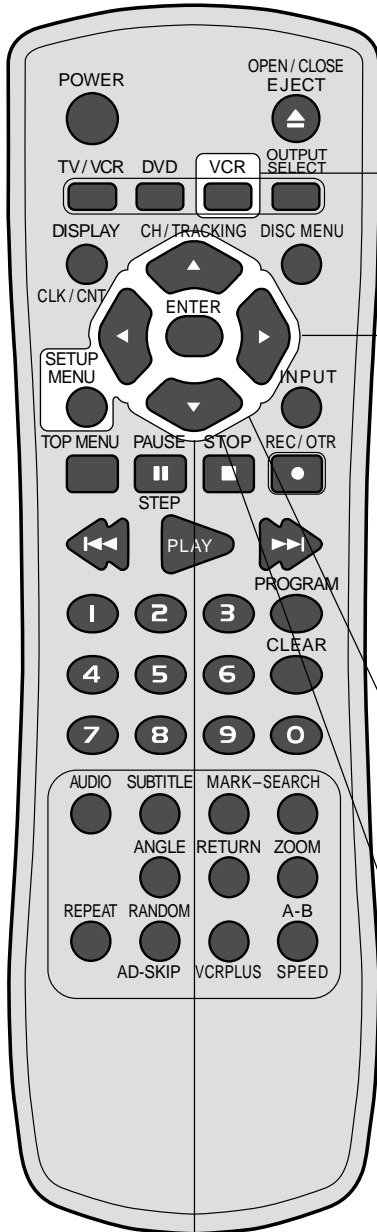
You must set the date and time to perform timer recordings accurately.




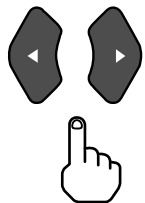
1  Press **VCR**.


2  Press **SETUP MENU**. Press **▲** or **▼** to select **SET CLOCK**, then press **ENTER**.

 SET CLOCK
 TIMER RECORD
 CHANNEL SETUP
 VCR SETUP
▲▼ SELECT **ENTER** **ENTER** TO EXIT PRESS **MENU**

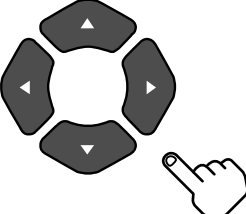
3  Press **◀** or **▶** to set the **MONTH**, then press **▼**.


 **MONTH : JUNE**
 DAY : 1 MON
 YEAR : 2002
 TIME : 12:00 AM
 AUTO CLOCK SET: OFF
 PBS CH. : 2 CATV
▲▼ SELECT **▶◀** ADJUST TO EXIT PRESS **MENU**

4  Set **DAY**, **YEAR**, and **TIME** as in step 3.

 **MONTH : JUNE**
 DAY : 15 SAT
 YEAR : 2002
TIME : 10:30 AM
 AUTO CLOCK SET: OFF
 PBS CH. : 2 CATV
▲▼ SELECT **▶◀** ADJUST TO EXIT PRESS **MENU**

Press and hold **◀** or **▶** to change the setting rapidly.

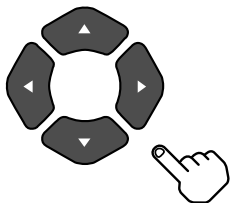5  Press **◀** or **▶** to set **AUTO CLOCK SET** to **ON**. Press **▼**, then press **◀** or **▶** to select the **PBS channel** for your area. The VCR automatically corrects the clock setting once you set **AUTO CLOCK SET** to **ON**.


 **MONTH : JUNE**
 DAY : 17 SAT
 YEAR : 2000
 TIME : 10:30 AM
AUTO CLOCK SET: ON
 PBS CH. : 2 CATV
▲▼ SELECT **▶◀** ADJUST TO EXIT PRESS **MENU**


6  Press **SETUP MENU** to start the clock and exit the menu.




 
5

Setting the VCR channels





1  Press **VCR**.

2  Press **SETUP MENU**. Press **▲** or **▼** to select **CHANNEL SETUP**, then press **ENTER**.


-  SET CLOCK
-  TIMER RECORD
-  CHANNEL SETUP
-  VCR SETUP


▲▼ SELECT **ENTER** **ENTER** TO EXIT PRESS **MENU**

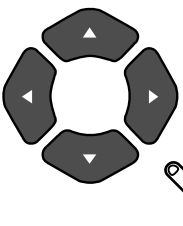
3  Press **▲** or **▼** to select **INPUT SELECT**, then press **◀** or **▶** to display **TUNER**.

 AUTO CHANNEL SEARCH
CHANNEL SOURCE :
ADD / DEL CH :
INPUT SELECT : TUNER

▲▼ SELECT **◀▶** ADJUST TO EXIT PRESS **MENU**

5  Press **SETUP MENU** to exit the menu.

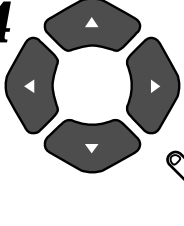4  Press **▲** or **▼** to select **AUTO CHANNEL SET**, then press **◀** or **▶**.
When all available channels are set, the screen returns to the previous display.

 AUTO CHANNEL SEARCH
CHANNEL SOURCE :
ADD / DEL CH :
INPUT SELECT :

▲▼ SELECT **◀▶** ADJUST TO EXIT PRESS **MENU**

➔

AUTO CHANNEL SEARCH
IN PROGRESS

CHANNEL 11

TO EXIT PRESS **MENU**