



**SONY**<sup>®</sup>

4-205-754-64



420575464

# ***Trinitron Colour Television***

---

Operating Instructions \_\_\_\_\_

**GB**



***KV-28DX30U  
KV-32DX30U***


## NOTICE FOR CUSTOMERS IN THE UNITED KINGDOM

A moulded plug complying with BS1363 is fitted to this equipment for your safety and convenience.

Should the fuse in the plug supplied need to be replaced, a 5 AMP fuse approved by ASTA or BSI to BS 1362 (i.e. marked with  $\diamond$  or  $\heartsuit$ ) must be used.

When an alternative type of plug is used it should be fitted with a 5 AMP FUSE, otherwise the circuit should be protected by a 5 AMP FUSE at the distribution board.

If the plug supplied with this equipment has a detachable fuse cover, be sure to attach the fuse cover after you change the fuse. Never use the plug without the fuse cover. If you should lose the fuse cover, please contact your nearest Sony service station.

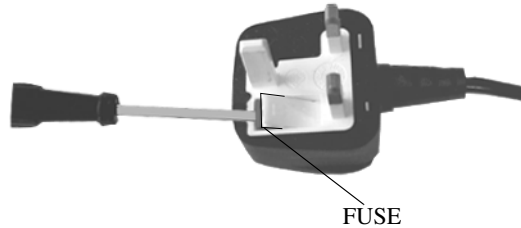

### How to replace the Fuse

Open the fuse compartment with a flat blade screwdriver, and replace the fuse.

- **IMPORTANT**

If the plug supplied is not suitable for the socket outlet in your home, it should be cut off and an appropriate plug fitted in accordance with the following instructions:

The wires in this mains lead are coloured in accordance with the following code:

Blue      Neutral

Brown     Live

As the colours of the wires in the mains lead of this apparatus may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black. The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red. Do not connect either wire to the earth terminal in the plug which is marked by the letter E or by the safety earth symbol  $\perp$  or coloured green or green and yellow.

### **WARNING**

- To prevent shock hazard, do not insert the plug cut off from the mains lead into a socket outlet. This plug cannot be used and should be destroyed.
- To prevent fire or shock hazard, do not expose the unit to rain or moisture.
- Dangerously high voltages are present inside the set. Do not open the cabinet. Refer servicing to qualified personnel only.





## Safety Information

# For your safety

All TVs operate on extremely high voltages. To prevent fire or electric shock, please follow the safety procedures indicated below.

### For General Safety

- Do not expose the TV set to rain or moisture.
- Do not remove the rear cover.
- For your protection, refer all servicing to qualified personnel only.

### For Safe Installation

- Do not install the TV in hot, humid or excessively dusty places.
- Do not block or cover the ventilation openings. For ventilation, leave a space of at least 10 cm all around the set.
- Do not install the TV where it may be exposed to mechanical vibrations.
- Place the TV set only on a stable stand designed for the weight and dimensions of the TV.

### For Safe Operation

- Do not operate the TV set on anything other than a 220-240V AC, 50Hz supply.
- Do not operate the TV if any liquid or solid objects fall in through the ventilation slots. Have it checked immediately.
- For environmental and safety reasons, it is recommended that the TV set is not left in standby mode when not in use. Switch off at the mains.
- Do not disconnect the TV by pulling on the power cable. Disconnect by removing the mains plug.
- In case of a thunderstorm, disconnect the TV set from the main supply and the aerial. Otherwise the set may be damaged by a stroke of lightning.

### For Maintenance

- Clean the TV screen with a soft dampened cloth. Do not use any abrasive cleaners.
- Dust and nicotine deposits may cause heat accumulation inside the TV set. In the long term this could be a safety risk and may shorten the lifetime of your TV set. Therefore have your set serviced about every five years.

# Table of Contents

<b>Getting Started</b>	
Checking the accessories supplied	4
Inserting batteries into the remote control	4
Connecting your own speakers	5
Connecting the aerial	6
Switching on the TV	6
Automatically tuning the TV	7
Finding your video channel after tuning	7
<b>Overview</b>	
Overview of the TV buttons	8
Overview of the remote control buttons	9
<b>Additional TV Features</b>	
Adjusting the picture	10
Changing picture and sound modes quickly	10
Adjusting the sound	11
Setting up Virtual Dolby Surround	12
Setting up Dolby Pro Logic	13
Changing the screen mode	14
Setting the digital setup menu	15
Using the further programme preset feature	16
Adjusting the picture rotation	17
Using the parental lock	17
Using the sleep timer	18
Manually tuning the TV	19
Skipping programme positions	20
Naming a channel (Analogue channels only)	21
Choosing a language for the TV menu screens	22
Using the info menu screen	22
Automatically tuning the TV	23
Re-arranging the TV channels	24
<b>Teletext</b>	
Viewing standard teletext	25
Viewing digital teletext	26
<b>Electronic Programme Guide (EPG)</b>	
Displaying the EPG	27
Viewing information on the EPG	27
Recording programmes	28
Setting the manual timer	29
<b>Optional Equipment</b>	
Connecting equipment to the TV	30
Additional information when connecting equipment	30
Selecting the output source for the scart sockets <b>G</b> or <b>H</b>	31
Smartlink	31
Using the AV label preset feature	32
<b>Additional Information</b>	
Specifications	33
Troubleshooting	34

## Getting started

Follow steps 1-7 to:

- Check the accessories supplied
- Insert batteries into your remote control
- Connect your own speakers
- Connect the aerial to your TV
- Plug in and switch on the TV
- View programmes on your TV
- Find your video channel

## 1. Checking the accessories supplied




Remote control



Batteries

## 2. Inserting batteries into the remote control

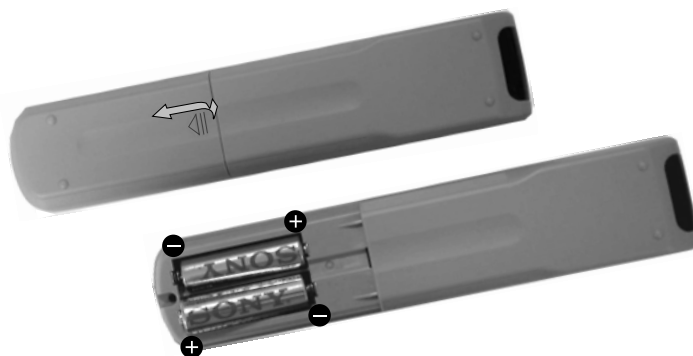

Always remember to dispose of used batteries in an environmentally friendly way.





# 3. Connecting your own speakers

This TV has been designed to create 'Virtual Dolby Surround' without the need for additional speakers. If however, you wish to experience the full Dolby Pro Logic Surround, you will need to connect your own speakers (SS-CR190 or equivalent) as shown below. Connect the striped speaker leads to the red terminals and the black leads to the black terminals.

Dolby\* Pro Logic Surround normally requires 5 speakers:

- Centre Speaker** - to anchor the fixed sounds, like dialogues, to the screen.
- Left and Right Front Speakers** - for the normal two channel stereo or bilingual broadcasts.
- Surround Speakers** - for the special effects created by the surround channels.

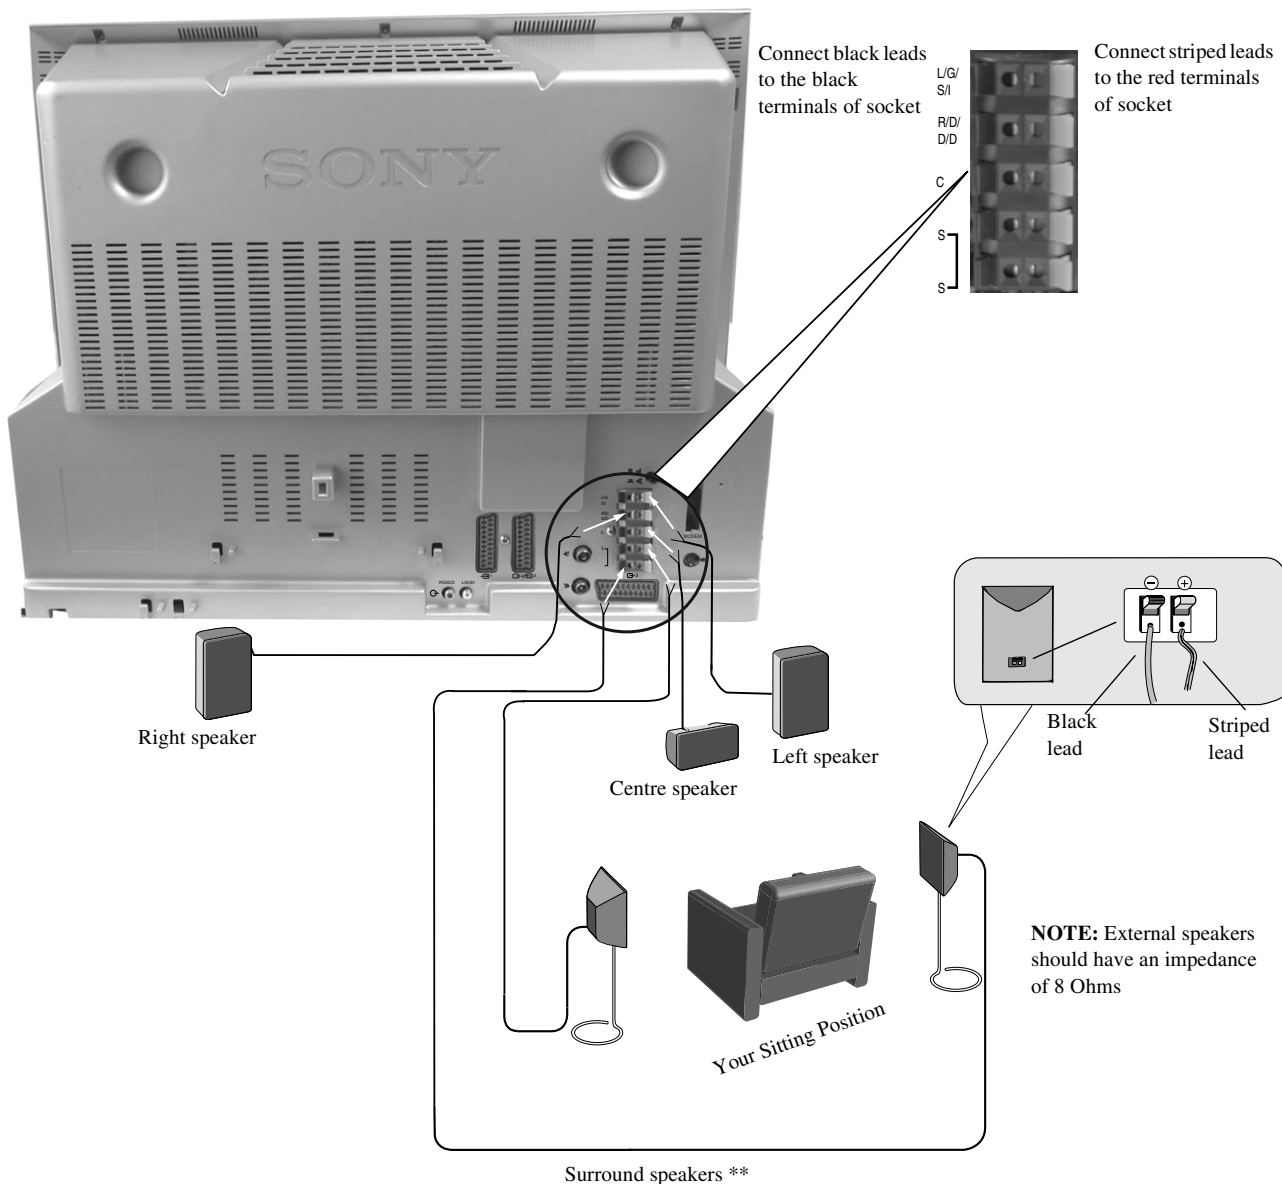


**Note:** When you connect your own external left and right speakers you must mute the internal speakers by pressing in the button marked  on the rear of the TV.


\* Manufactured under licence from Dolby Laboratories. 'Dolby', 'Pro Logic', and the double-D symbol are trademarks of the Dolby Laboratories .

\*\* For the best sound effects, place the surround speakers one meter above your listening position.


## 4. Connecting the aerial



### Connecting an aerial to your TV

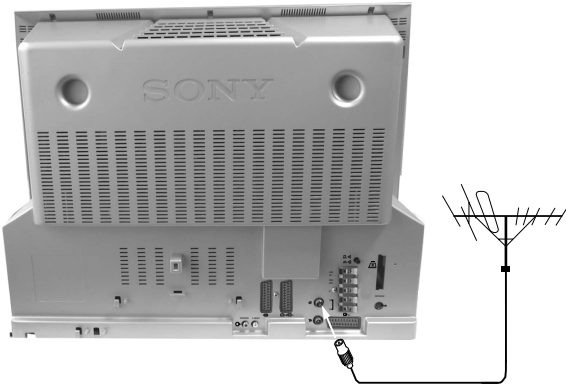

Connect your existing aerial to the socket marked  on the rear of the TV.

### Connecting an aerial and VCR to your TV

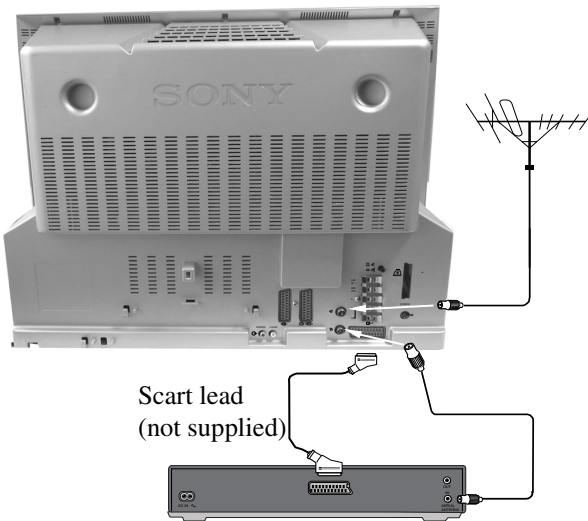

  - 1 Connect your existing aerial to the upper socket marked  on the rear of the TV as shown.
- 2 Connect a lead from the RF input of your VCR to the lower aerial socket marked  on the TV.
- 3 Connect the VCR to the mains socket and switch on.
- 4 Insert a pre-recorded tape into the VCR and press the 'PLAY' button. This enables the TV set to locate and store the video channel during the 'Automatically tuning the TV' procedure.

## 5. Switching on the TV



Connect the TV plug to the mains socket (220-240V AC, 50Hz) and switch on.




Push in the on/off switch on the front of the TV.

# 6. Automatically tuning the TV


When you first switch on the TV, the following sequence of menu screens appear on the TV enabling you to 1) choose a language for the TV menu screens, 2) tune channels to the TV, 3) arrange the channels.




1. When switching on the TV for the first time, the 'LANGUAGE' menu appears automatically on the TV screen enabling you to select in which language you wish to read the TV menu screens. Press the **▲** or **▼** buttons on the remote control to select your chosen language then press the OK button to confirm your selection.

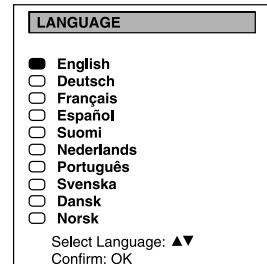


2. The 'automatic tuning' menu appears on the TV screen in your selected language. Press the **▲** or **▼** buttons to select 'YES' then press the OK button to confirm.

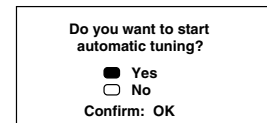

3. Ensure the antenna is connected as instructed, then press the OK button to confirm. The TV starts to automatically search and store all available channels for you. Please be patient and do not press any buttons.

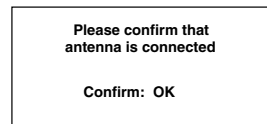


The digital channels will be stored on programme numbers 1-90 and the analogue channels on programme numbers 91-99.

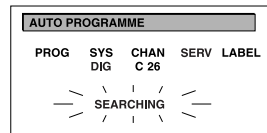


**Note:** If any digital channels are stored on programme numbers 91-99 during the Automatic Tuning procedure, then no analogue channels will be allocated. If this happens, please refer to the section 'Manually tuning the TV' on page 19 of this manual to tune in and store the analogue channels.

4. When the TV has finished tuning in all available channels, the 'PROGRAMME SORTING' menu appears on the TV screen enabling you to change the order of the channels on your TV. If you do not wish to use this option, proceed to step 5.

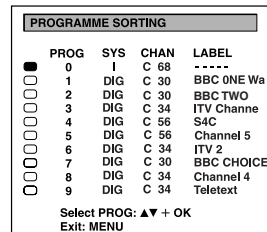

If you wish to change the channel order, press the **▲** or **▼** buttons on your remote control to select the channel you want to move, then press the OK button. Press the **▲** or **▼** buttons to select the new programme number position for your selected channel then press the OK button to confirm. The selected channel now moves to its new programme position. Repeat this procedure if you wish to sort the order of other channels on your TV.

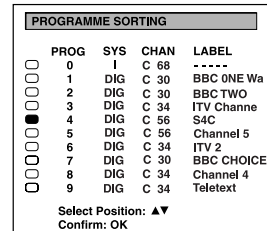

5. Press the MENU button to remove the menu from the TV screen.

6. Press the PROGR+/- or the numbered buttons on the remote control to view the TV channels.

# 7. Finding your video channel after tuning

If you have connected a VCR to your TV, you now need to find the video channel.

1. Press the PROGR +/- buttons on the remote control until the video picture appears on the TV screen.

**Note:** If you wish to move your video channel to a different programme position, refer to the 'Re-arranging the TV channels' section in this instruction manual.

# Overview of the TV buttons



Press the door flap as shown.



Control panel appears.

**Video input button.**  
Press to select the input signals from VCR etc.



**Programme Up or Down buttons.**  
Press to increase(+)/decrease(-) channels.

**Volume control buttons.**  
Press to increase(+)/decrease(-) volume.

**Auto tune button.**  
Press to select the automatic tuning function.

# Overview of the remote control buttons

**To mute sound**

Press to mute TV sound. Press again to restore the sound.

**To reveal on screen information**

Press to reveal all on-screen indications. Press again to cancel. In teletext mode, press to reveal concealed information (e.g. answers to a quiz) then press again to cancel.

**To select channels**

Press the numbered buttons to select channels.

For double digit programme numbers, e.g.23, press -/-- first, then the buttons 2 and 3. If you enter an incorrect first digit, select -/-- button again to enter the programme number of your choice.

**To select EPG**

Press to display the Electronic Programme Guide. Press again to remove display.

**To select Teletext**

Press to switch on Teletext.

**To display picture menu**

Press to change the picture settings. Press the OK button to remove the display.

**To display sound menu**

Press to change the sound settings. Press the OK button to remove the display.

**To adjust TV volume**

Press to adjust the volume of the TV.

**To temporarily switch off TV**

Press to temporarily switch off TV. Press again to switch on from standby mode. To save energy, we recommend switching off completely when the TV is not in use.

**NOTE:** After 15-30 minutes without a TV signal and without any button being pressed, the TV switches automatically into standby mode.

**To select input signal or freeze teletext**

Press to select inputs from the TV sockets (see Using Optional Equipment section). In teletext mode, press to freeze the displayed page. Press once again to cancel.

**To exit digital teletext or return to previous channel**

Press to exit digital teletext, or in TV mode, press to return to the previous channel you were watching. **Note:** This can be done only if you have watched the previous channel for at least 5 seconds.

**To display the menu**

Press to use the TV menu system. Press again to remove the menu from the TV screen.

**To select menu items**

Use these buttons and the OK button to select the options available when in the menu system of this TV. Pressing the OK button in normal TV mode will display the channel listing table.

**To change screen format**

Press to change the size of the screen.

See Teletext section of manual for details.

**To select channels**

Press to select channels.





# Adjusting the picture

Although the picture is adjusted at the factory, you can modify it to suit your own taste.



1. Press the MENU button on the remote control to display the menu on the TV screen.
2. Press the  $\uparrow$  or  $\downarrow$  buttons on the remote control to select the symbol on the menu screen then press the  $\rightarrow$  button to enter the 'PICTURE CONTROL' menu.
3. Press the  $\uparrow$  or  $\downarrow$  buttons to select the item on the screen you wish to adjust then press the  $\rightarrow$  button to confirm. For a description of the menu items and their effects, see the table below.
4. If you selected 'Picture Mode' or 'Format' in step 3, press the  $\uparrow$  or  $\downarrow$  buttons to select the item on the screen you wish to adjust then press the  $\rightarrow$  button to confirm.
5. Press the  $\rightarrow$  or  $\leftarrow$  buttons to adjust your selected item.
6. As soon as you have adjusted the item, press the OK button to store the new setting.
7. If you selected 'Picture Mode' or 'Format' in step 3, press the  $\leftarrow$  button to return to the 'PICTURE CONTROL' menu.
8. Repeat steps 3-7 to adjust the other items.
9. Press the MENU button to remove the menu from the TV screen.

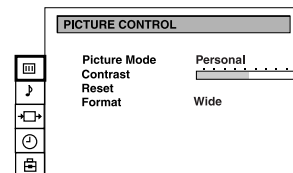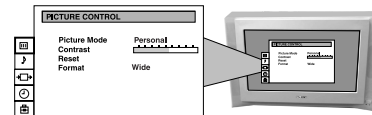

<b>Picture Mode</b>	Picture Mode $\rightarrow$ Personal (for individual settings)
	Movie (for films)
	$\leftarrow$ Live (for live broadcasts)
	Brightness*
	Colour*
<b>Contrast</b>	
	<b>Reset</b> <span style="float: right;">Resets picture to factory preset levels</span>
<b>Format</b>	Format (refer to page 14 for details)
	Scroll Auto 16:9 $\rightarrow$ Off $\leftarrow$ On

\*Only if you select 'Personal' in 'Picture Mode'.



\*\* Available for NTSC colour system only.

## Changing picture and sound modes quickly

You can quickly change the Picture Mode or the Sound Mode without entering the 'PICTURE CONTROL' or the 'SOUND CONTROL' menu screens.

**Note:** These quick change options will not work on digital channels that are transmitting digital teletext. In those instances please use the menu system for any adjustments you require.

1. Press the symbol on the remote control for picture modes or the symbol for sound modes.
2. Press the  $\uparrow$  or  $\downarrow$  buttons to select the desired mode.
3. Press the OK button to remove the display from the TV screen.

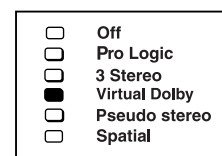
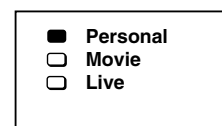


 

 
# Adjusting the sound

Although the sound is adjusted at the factory, you can modify it to suit your own taste.



1. Press the MENU button on the remote control to display the menu on the TV screen.
2. Press the **↑** or **↓** buttons to select the **🎵** symbol on the menu screen then press the **➡** button to enter the 'SOUND CONTROL' menu.
3. Press the **↑** or **↓** buttons to select the item on the screen you wish to adjust then press the **➡** button to confirm. For a description of the menu items and their effects, see the table below.
4. If you selected 'Sound Mode' or 'Surround Mode' in step 3, press the **↑** or **↓** buttons to select the item on the screen you wish to adjust then press the **➡** button to confirm.
5. Press the **➡** or **⬅** buttons to adjust your selected item.
6. As soon as you have adjusted the item, press the OK button to store the new setting.
7. If you selected 'Sound Mode' or 'Surround Mode' in step 3, press the **⬅** button to return to the 'SOUND CONTROL' menu.
8. Repeat steps 3-7 to adjust the other items.
9. Press the MENU button to remove the menu from the TV screen.

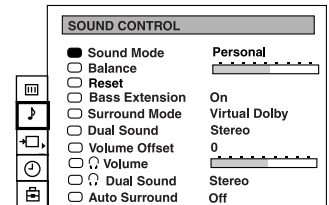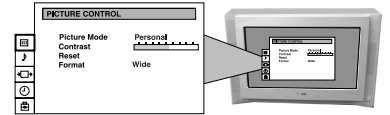

<b>Sound Mode</b>	<ul style="list-style-type: none"> <li>➡ Personal</li> <li>Rock</li> <li>Jazz</li> <li>⬅ Pop</li> </ul> <p>In 'Personal' mode, Treble and Bass can be adjusted</p>
<b>Balance</b>	 <p>Only available when 'Surround Mode' is set to 'Off'</p>
<b>Reset</b>	Resets sound to factory preset levels
<b>Bass Extension</b>	Boosts bass by a fixed amount
<b>Surround Mode</b>	Choose from the special sound effects: Off --> Pro Logic --> 3 Stereo --> Virtual Dolby --> Pseudo Stereo --> Spatial
<b>Dual Sound</b>	<p>Stereo <b>⬅</b>    <b>➡</b> Mono (for a stereo broadcast)</p> <p>A for channel 1 <b>⬅➡</b> B for channel 2 (for a bilingual broadcast)</p>
<b>Volume Offset</b>	<b>⬅</b> The channel volume level can be <b>➡</b> adjusted over a range of -12 to +12.
<b>Headphones</b>	
<b>Volume</b>	
<b>Dual Sound</b>	<p>Stereo <b>⬅</b>    <b>➡</b> Mono (for a stereo broadcast)</p> <p>A for channel 1 <b>⬅➡</b> B for channel 2 (for a bilingual broadcast)</p>
<b>Auto Surround</b>	Set to 'On' to automatically turn on Pro Logic decoding when a programme encoded with Dolby Surround is transmitted.

# Setting up Virtual Dolby Surround

The Virtual Dolby Surround feature gives you the effect of Dolby Pro Logic without having to connect any external centre or rear speakers. The surround signals are processed and redirected to the front speakers in order to create the illusion of virtual centre and rear speakers.



1. Press the MENU button on the remote control to display the menu on the TV screen.

2. Press the **▲** or **▼** buttons to select the **☰** symbol on the menu screen then press the **▶** button to enter the 'PRESET' menu.

3. Press the **▲** or **▼** buttons to select 'Surround Mode Setup' on the menu screen then press the **▶** button to enter the 'SURROUND MODE SETUP' menu.

4. Press the **▲** or **▼** buttons to select 'Surround Mode', then press the **▶** button to enter.





5. Press the **▶** or **◀** buttons to select Virtual in the display, then press the OK button.

6. Press the **▼** button to select 'Virtual Effect', then push the **▶** button to enter.

7. Press the **▶** or **◀** buttons to adjust the Virtual Effect level until the illusion of being surrounded by the TV sound is at its most effective.


8. Press the MENU button to remove the display from the TV screen.

**Note:** To achieve the maximum effect from Virtual Dolby Surround, you should sit facing the centre of the TV screen.

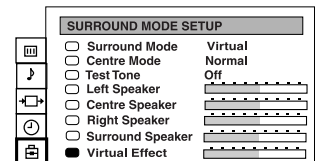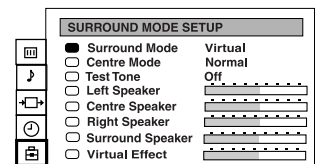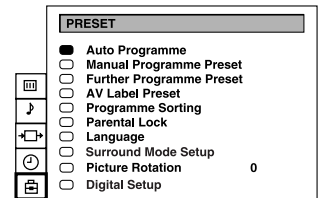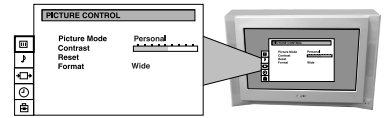




 

 
# Setting up Dolby Pro Logic

Before listening to Dolby Surround encoded programmes, you can adapt the features of Dolby Pro Logic to suit your own taste. **Note:** Dolby Pro Logic decoding should only be turned on when external centre and/or surround speakers are connected. Sony recommend that the centre and/or surround speakers should only be SS-CR190 or equivalent. There will be no output available from the headphones or the audio output socket  on the rear of the TV when Dolby Pro Logic has been selected.



 


1. Press the MENU button on the remote control to display the menu on the TV screen.






---

2. Press the  or  buttons to select the  symbol on the menu screen then press the  button to enter the 'PRESET' menu.





---

   3. Press the  or  buttons to select 'Surround Mode Setup' on the menu screen then press the  button to enter the 'SURROUND MODE SETUP' menu.





---

      4. Press the  or  buttons to select 'Surround Mode', then press the  button to enter. Press the  or  buttons to select one of the following modes then press the OK button to store the chosen mode:  
 Pro Logic: all 5 speakers are activated  
 3 stereo: surround speakers are not used  
 Virtual: no external speakers required. Do not select this mode if you wish to receive Dolby Pro logic


 
---

5. Press the  button to select 'Centre Mode', then push the  button to enter. Press the  or  buttons to select one of the following modes then press the OK button to store the chosen mode:  
 Normal: all 5 speakers are activated  
 Wide: wider bandwidth for centre speaker  
 Phantom: centre speaker is not used (This cannot be selected if you have chosen "3 stereo" mode in step 4)

 
 
---

6. Press the  button to select 'Test Tone' then push the  button to enter. Press the  or  buttons to select 'On', then press the OK button.  
 The test tone will cycle through all the speakers.

---

7. Press the  button to select the 'Left Speaker', then press the  button to confirm. The tone remains at the left speaker.

---


8. Press the  or  buttons to alter the sound level, then press the OK button.

---

9. Repeat steps 7 and 8 to select and adjust the 'Centre', 'Right', and 'Surround' speakers, so that the sound output from all speakers are balanced in relation to your sitting position.

---

10. Press the MENU button to remove the display.

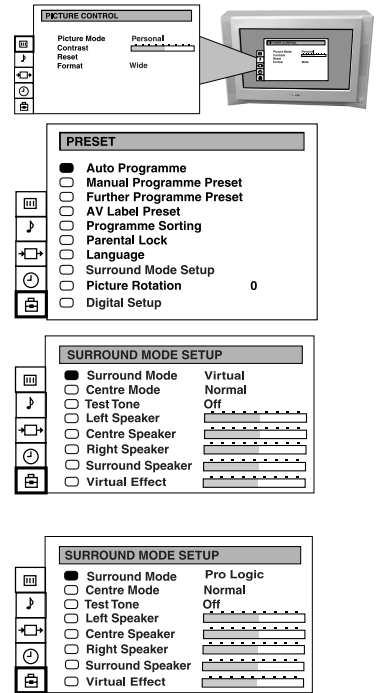


**Note:** After setting up Dolby Pro Logic, refer to the 'Adjusting the sound' section on page 11 and set the Surround Mode to Pro Logic.

# Changing the screen mode

Using this Screen Mode feature you can change the aspect ratio of the screen.



1. Press the MENU button on the remote control to display the menu on the TV screen.

2. Press the  $\uparrow$  or  $\downarrow$  buttons to select the  symbol on the menu screen then press the  $\rightarrow$  button to enter the 'PICTURE CONTROL' menu.

3. Press the  $\uparrow$  or  $\downarrow$  buttons to select 'Format' on the menu screen then press the  $\rightarrow$  button to enter the 'FORMAT' menu.

**4. Format**

Press the  $\uparrow$  or  $\downarrow$  buttons to select 'Format' then press the  $\rightarrow$  button to enter. Press the  $\rightarrow$  or  $\leftarrow$  buttons repeatedly to select one of the following modes then press the OK button to store the chosen mode:

- Smart - imitation of wide screen effect (16:9) for 4:3 broadcasts
- Wide - for 16:9 broadcasts
- Zoom - imitation of wide screen effect (16:9) for movies broadcast in cinemascope format
- 14:9 - compromise between 4:3 and 16:9 format - for conventional 14:9 picture
- 4:3 - conventional 4:3 picture








**5. Scroll** (Applies to Zoom, 14:9 or Smart format only)


Press the  $\uparrow$  or  $\downarrow$  buttons to select 'Scroll'. You can use 'Scroll' to move the screen up or downwards in order to see the cut-off parts (e.g. to read subtitles). Press the  $\rightarrow$  button to highlight the present value then press the  $\leftarrow$  or  $\rightarrow$  buttons to adjust the screen position over a range of -5 to +5. Press the OK button to store.

**6. Auto 16:9**

Press the  $\uparrow$  or  $\downarrow$  buttons to select 'Auto 16:9' then press the  $\rightarrow$  button to enter. Press the  $\leftarrow$  or  $\rightarrow$  buttons to select 'On' if you wish the TV to switch automatically to wide format when a 16:9 broadcast is detected, or 'Off' to retain the format selected in step 4. Press the OK button to store.

7. Press the MENU button to remove the menu from the TV screen.

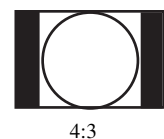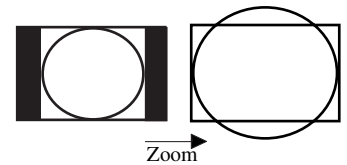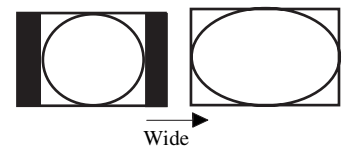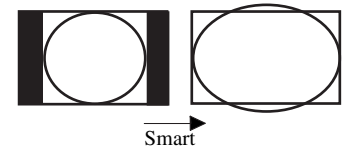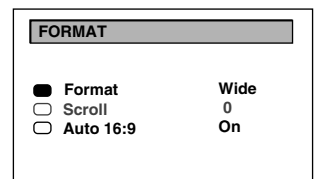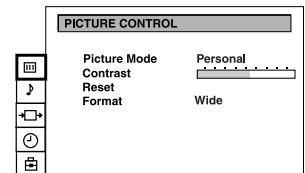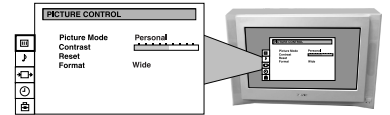


**Note:** You can change the picture format quickly without having to enter the menu system. Simply press the  button repeatedly until the picture is displayed in the format you desire. This function will not work on digital channels that are transmitting digital teletext. In those instances please use the menu system as described above.

# Setting the digital setup menu


The Digital Setup menu allows you to set three options for digital channels.




1. Press the MENU button on the remote control to display the menu on the TV screen.

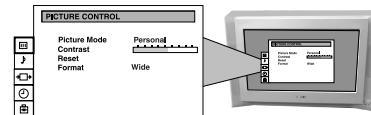

2. Press the **▲** or **▼** buttons to select the **☰** symbol on the menu screen then press the **▶** button to enter the 'PRESET' menu.

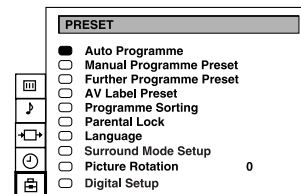

3. Press the **▲** or **▼** buttons to select 'Digital Setup' then press the **▶** button to enter the 'DIGITAL SETUP' menu.

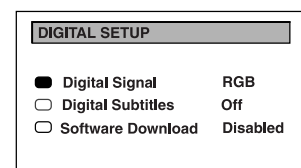

4. Press the **▲** or **▼** buttons to choose the option you wish to alter, then press the **▶** or **◀** buttons to change the present setting.  
The options and their effects are explained in the table below.

5. Press the OK button to confirm your selection.

6. Press the MENU button to remove the menu from the TV screen.


Option	Effect
Digital Signal	Set to RGB or Composite. Choose the option that gives you the picture quality you prefer.
Digital Subtitles	Selects the language to be displayed when viewing subtitles. You can choose from English, Welsh or Gaelic (when transmitted by broadcaster).
Software Download	Periodically the software may be updated. When notified by the broadcasting authorities or Sony, set this option to enabled and the new software will be downloaded automatically.

# Using the further programme preset feature


With this feature you can a) manually fine-tune the TV to obtain a better picture reception if the picture is distorted or b) preset the AV output to the programme positions of channels with scrambled signals (e.g. from a pay TV decoder). In this way a connected VCR records the unscrambled signal.




1. Press the MENU button on the remote control to display the menu on the TV screen.

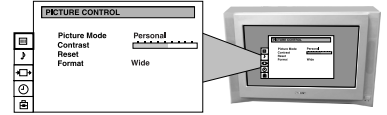


2. Press the **▲** or **▼** buttons to select the **☰** symbol on the menu screen then press the **▶** button to enter the 'PRESET' menu.

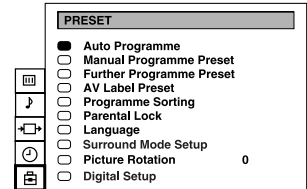

3. Press the **▲** or **▼** buttons to select 'Further Programme Preset' then press the **▶** button to enter the 'FURTHER PROGRAMME PRESET' menu.

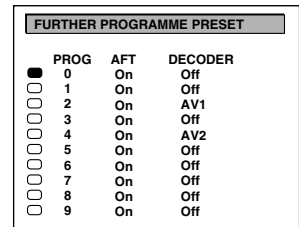

4. Press the **▲** or **▼** buttons to select the relevant programme number then press the **▶** button repeatedly to select a) AFT or b) DECODER. The selected item changes colour.  
**Note:** AFT will only be available on analogue channels.

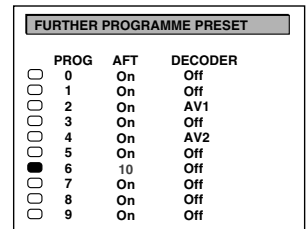

5. a) **AFT**  
Press the **▲** or **▼** buttons to fine tune the channel frequency over a range of -15 to +15. Press the OK button to confirm. Repeat steps 4 and 5a if you wish to fine tune other channels.


b) **DECODER**  
Press the **▲** or **▼** buttons to select AV1, AV2 or AV3 for the programme position chosen, then press the OK button to confirm. You can now attach a decoder to the AV1, AV2 or the AV3 socket on the back of the TV and the picture from that decoder will appear on this programme number. Repeat steps 4 and 5b to preset the AV output for other programme positions.




6. Press the MENU button to remove the menu from the TV screen.

# Adjusting the picture rotation

If, due to the earth's magnetic field, the picture slants, you can use this feature to readjust the picture.



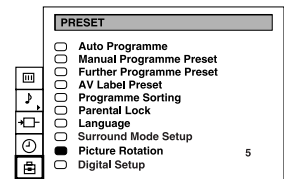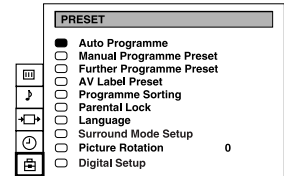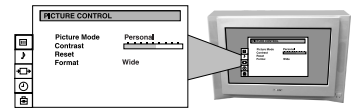


1. Press the MENU button on the remote control to display the menu on the TV screen.
2. Press the  $\uparrow$  or  $\downarrow$  buttons to select the  symbol on the menu screen then press the  $\rightarrow$  button to enter the 'PRESET' menu.
3. Press the  $\uparrow$  or  $\downarrow$  buttons to select 'Picture Rotation' then press the  $\rightarrow$  button to highlight the 0 (zero) on the right of the menu.
4. Press the  $\rightarrow$  or  $\leftarrow$  buttons to adjust the picture rotation. The adjusting range is -5 to +5.
5. Press the OK button to store the new range.
6. Press the MENU button to remove the menu from the TV screen.





# Using the parental lock

This feature enables you to prevent undesirable broadcasts appearing on the TV



1. Press the MENU button on the remote control to display the menu on the TV screen.
2. Press the  $\uparrow$  or  $\downarrow$  buttons to select the  symbol on the menu screen then press the  $\rightarrow$  button to enter the 'PRESET' menu.
3. Press the  $\uparrow$  or  $\downarrow$  buttons to select 'Parental Lock' then press the  $\rightarrow$  button to enter the 'PARENTAL LOCK' menu.
4. Press the  $\uparrow$  or  $\downarrow$  buttons to select the channel you wish to block then press the OK button to confirm your selection. The  symbol appears before the programme position to indicate this channel is now blocked. To unblock the channel, press the OK button again. The  symbol disappears.
5. Repeat step 4 if you wish to block other channels.
6. Press the MENU button to remove the menu from the TV screen.

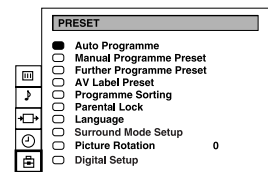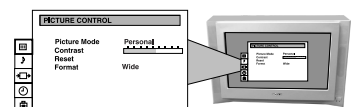

PARENTAL LOCK				
PROG	SYS	CHAN	LABEL	
<input type="checkbox"/>	0	I	C 68	----
<input type="checkbox"/>	1	DIG	C 30	BBC 0
<input type="checkbox"/>	2	DIG	C 30	BBC T
<input type="checkbox"/>	3	DIG	C 34	ITV C
<input type="checkbox"/>	4	DIG	C 56	S4C
<input type="checkbox"/>	5	DIG	C 56	Chan
<input type="checkbox"/>	6	DIG	C 34	ITV 2
<input type="checkbox"/>	7	DIG	C 30	BBC C
<input type="checkbox"/>	8	DIG	C 34	Chann
<input type="checkbox"/>	9	DIG	C 34	Telet


PARENTAL LOCK				
PROG	SYS	CHAN	LABEL	
<input type="checkbox"/>	0	I	C 68	----
<input type="checkbox"/>	1	DIG	C 30	BBC 0
<input type="checkbox"/>	2	DIG	C 30	BBC T
<input type="checkbox"/>	3	DIG	C 34	ITV C
<input checked="" type="checkbox"/>	4	DIG	C 56	S4C
<input type="checkbox"/>	5	DIG	C 56	Chan
<input type="checkbox"/>	6	DIG	C 34	ITV 2
<input type="checkbox"/>	7	DIG	C 30	BBC C
<input type="checkbox"/>	8	DIG	C 34	Chann
<input type="checkbox"/>	9	DIG	C 34	Telet

# Using the sleep timer

 
The TV can be set to switch automatically to standby mode after a length of time chosen by you. You may set the time in 30 minute steps up to 4 hours.




1. Press the MENU button on the remote control to display the menu on the TV screen.



2. Press the **▲** or **▼** buttons to select the **⌚** symbol on the TV screen then press the **▶** button twice.

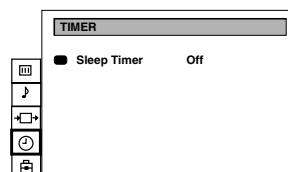

3. Press the **▶** or **◀** buttons repeatedly until the required amount of time delay appears on the screen.

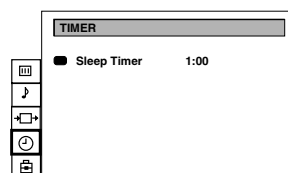

4. Once the time delay has been selected, press the OK button to enter.

5. Press the MENU button to remove the menu from the TV screen.

One minute before standby, the display shown appears on the screen.



**Notes:** When watching TV, press the **ⓘ+** button if you wish to see the time remaining.

To return to normal operation from standby mode, press the **|/⏻** button.


# Manually tuning the TV

You have already tuned the TV automatically using the instructions at the start of this manual. You can however carry out this operation manually, adding channels to the TV, one at a time.



1. Press the MENU button on the remote control to display the menu on the TV screen.

---

2. Press the  $\uparrow$  or  $\downarrow$  buttons to select the  symbol on the TV screen then press the  $\rightarrow$  button to enter the PRESET menu.

---

3. Press the  $\uparrow$  or  $\downarrow$  buttons to select 'Manual Programme Preset' on the menu screen then press the  $\rightarrow$  button to enter the 'MANUAL PROGRAMME PRESET' menu.

---

4. Press the  $\uparrow$  or  $\downarrow$  buttons to select an unused programme number for your channel then press the  $\rightarrow$  button to enter.

---

5. Press the  $\uparrow$  or  $\downarrow$  buttons to select the TV broadcast system (I for analogue or DIG for digital) or a video input source (AV1, AV2 ...) then press the  $\rightarrow$  button to confirm.

---

6. Select the first number digit of 'CHAN' (channel) then the second number digit of 'CHAN' with the numbered buttons on the remote control  
or  
Press the  $\uparrow$  or  $\downarrow$  buttons to search for the next available channel.

---

7. If you wish to change the 'SERV' service number (on digital programmes only), select each digit in turn and press the numbered buttons on the remote control to change to your desired service.

---



8. If you do not wish to store this channel on the programme number you selected, press the  $\uparrow$  or  $\downarrow$  buttons on the remote control to continue searching for the desired channel.

---

9. If this is the channel you wish to store, press the OK button.

---

10. Repeat steps 4-9 if you wish to store more channels then press the MENU button to remove the menu from the TV screen.

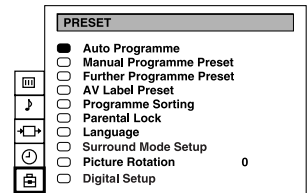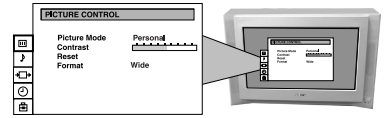

MANUAL PROGRAMME PRESET				
PROG	SYS	CHAN	SERV	LABEL
<input checked="" type="checkbox"/>	0	C	68	----
<input type="checkbox"/>	1	DIG	C 30 04	BBC ONE Wa
<input type="checkbox"/>	2	DIG	C 30 05	BBC TWO
<input type="checkbox"/>	3	DIG	C 34 01	ITV Channe
<input type="checkbox"/>	4	DIG	C 56 01	S4C
<input type="checkbox"/>	5	DIG	C 56 04	Channel 5
<input type="checkbox"/>	6	DIG	C 34 02	ITV 2
<input type="checkbox"/>	7	DIG	C 30 06	BBC CHOICE
<input type="checkbox"/>	8	DIG	C 34 03	Channel 4
<input type="checkbox"/>	9	DIG	C 34 05	Teletext

MANUAL PROGRAMME PRESET				
PROG	SYS	CHAN	SERV	LABEL
<input type="checkbox"/>	30	---	C 21 01	
<input checked="" type="checkbox"/>	31	---	C 21 01	
<input type="checkbox"/>	32	---	C 21 01	
<input type="checkbox"/>	33	---	C 21 01	
<input type="checkbox"/>	34	---	C 21 01	
<input type="checkbox"/>	35	---	C 21 01	
<input type="checkbox"/>	36	---	C 21 01	
<input type="checkbox"/>	37	---	C 21 01	
<input type="checkbox"/>	38	---	C 21 01	
<input type="checkbox"/>	39	---	C 21 01	


**NOTE:** After manually tuning in the channels you require, you can sort the channels into the order you prefer by following the procedure 'Re-arranging the TV channels' on page 24.

# Skipping programme positions

 
This function enables you to skip unused programme positions when selecting them with the PROGR+/- buttons. However, by using the numbered buttons you can still select the skipped programme position.



1. Press the MENU button on the remote control to display the menu on the TV screen.



2. Press the **▲** or **▼** buttons to select the **☰** symbol on the menu screen then press the **▶** button to enter the 'PRESET' menu.

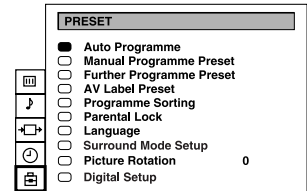

3. Press the **▲** or **▼** buttons to select 'Manual Programme Preset' then press the **▶** button to enter the 'MANUAL PROGRAMME PRESET' menu.

MANUAL PROGRAMME PRESET					
PROG	SYS	CHAN	SERV	LABEL	
<input checked="" type="checkbox"/>	0	I	C 68	----	
<input type="checkbox"/>	1	DIG	C 30 04	BBC ONE Wa	
<input type="checkbox"/>	2	DIG	C 30 05	BBC TWO	
<input type="checkbox"/>	3	DIG	C 34 01	ITV Channe	
<input type="checkbox"/>	4	DIG	C 56 01	S4C	
<input type="checkbox"/>	5	DIG	C 56 04	Channel 5	
<input type="checkbox"/>	6	DIG	C 34 02	ITV 2	
<input type="checkbox"/>	7	DIG	C 30 06	BBC CHOICE	
<input type="checkbox"/>	8	DIG	C 34 03	Channel 4	
<input type="checkbox"/>	9	DIG	C 34 05	Teletext	

4. Press the **▲** or **▼** buttons to select the programme position you want to skip then press the **▶** button to enter the 'SYS' column.

MANUAL PROGRAMME PRESET					
PROG	SYS	CHAN	SERV	LABEL	
<input type="checkbox"/>	0	I	C 68	----	
<input type="checkbox"/>	1	DIG	C 30 04	BBC ONE Wa	
<input type="checkbox"/>	2	DIG	C 30 05	BBC TWO	
<input type="checkbox"/>	3	DIG	C 34 01	ITV Channe	
<input checked="" type="checkbox"/>	4	----	C 56 01	S4C	
<input type="checkbox"/>	5	DIG	C 56 04	Channel 5	
<input type="checkbox"/>	6	DIG	C 34 02	ITV 2	
<input type="checkbox"/>	7	DIG	C 30 06	BBC CHOICE	
<input type="checkbox"/>	8	DIG	C 34 03	Channel 4	
<input type="checkbox"/>	9	DIG	C 34 05	Teletext	

5. Press the **▼** button to select '---' then press the OK button to store.

6. Repeat steps 4 and 5 to skip other programme positions.

7. Press the MENU button to remove the menu from the TV screen.




# Naming a channel (Analogue channels only)


Names for channels are usually taken automatically from Teletext if available. You can however name a channel or an input video source using up to five characters (letters or numbers).



1. Press the MENU button on the remote control to display the menu on the TV screen.

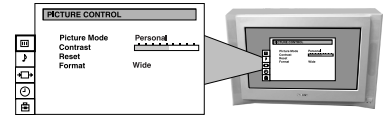

2. Press the **▲** or **▼** buttons to select the **☰** symbol on the menu screen then press the **▶** button to enter the 'PRESET' menu.

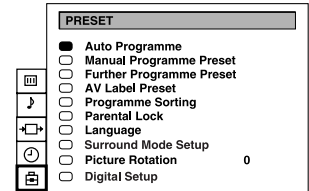

3. Press the **▲** or **▼** buttons to select 'Manual Programme Preset' then press the **▶** button to enter the 'MANUAL PROGRAMME PRESET' menu.

MANUAL PROGRAMME PRESET				
PROG	SYS	CHAN	SERV	LABEL
<input checked="" type="checkbox"/>	0		C 29	----
<input type="checkbox"/>	1		C 31	----
<input type="checkbox"/>	2		C 32	----
<input type="checkbox"/>	3		C 36	----
<input type="checkbox"/>	4		C 37	----
<input type="checkbox"/>	5		C 40	----
<input type="checkbox"/>	6		C 41	----
<input type="checkbox"/>	7		C 44	----
<input type="checkbox"/>	8		C 49	----
<input type="checkbox"/>	9		C 52	----

4. Press the **▲** or **▼** buttons to select the channel you wish to name.

MANUAL PROGRAMME PRESET				
PROG	SYS	CHAN	SERV	LABEL
<input type="checkbox"/>	0		C 29	----
<input type="checkbox"/>	1		C 31	----
<input type="checkbox"/>	2		C 32	----
<input type="checkbox"/>	3		C 36	----
<input type="checkbox"/>	4		C 37	----
<input checked="" type="checkbox"/>	5		C 40	----
<input type="checkbox"/>	6		C 41	----
<input type="checkbox"/>	7		C 44	----
<input type="checkbox"/>	8		C 49	----
<input type="checkbox"/>	9		C 52	----

5. Press the **▶** button repeatedly until the first element of the 'LABEL' column is highlighted.

6. Press the **▲** or **▼** buttons to select a letter or number (select '-' for a blank) then press the **▶** button to confirm. Select the other four characters in the same way.

7. After selecting all the characters, press the OK button.


8. Repeat steps 4 to 7 if you wish to label other channels.



9. Press the MENU button to remove the menu from the TV screen.

# Choosing a language for the TV menu screens

 This TV uses a menu system which can appear on screen in a variety of languages. Use the following feature to select the language that best suits you.







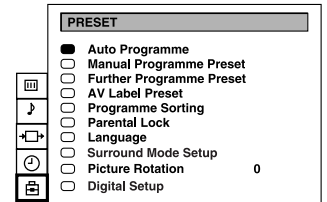
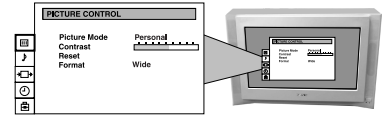
1. Press the MENU button on the remote control to display the menu on the TV screen.
2. Press the  $\uparrow$  or  $\downarrow$  buttons to select the  symbol on the menu screen then press the  $\rightarrow$  button to enter the 'PRESET' menu.
3. Press the  $\uparrow$  or  $\downarrow$  buttons to select 'Language' on the menu screen then press the  $\rightarrow$  button to enter the 'LANGUAGE' menu.
4. Press the  $\uparrow$  or  $\downarrow$  buttons to select your chosen language.
5. Press the OK button to confirm your selection.
6. Press the MENU button to remove the display from the TV screen.





# Using the info menu screen

    This menu is a useful means of seeing what programme is on now and next on the digital channel you are watching.



1. Press the  button to display the info menu on screen. This display gives a brief description about the programme currently being transmitted. When you wish to exit the info menu press the  button again.
2. To obtain a description of what is on next, press the  $\rightarrow$  button to highlight NEXT.
3. Should you wish to record the programme that is on next, press the  $\rightarrow$  button to highlight , then press the OK button. The EPG "TIMER" menu will now be displayed.
4. At the bottom of the timer page you can see the symbols  back to menu),  (to record a programme) or  (to set the programme to switch on automatically).
5. Press the  $\leftarrow$  or  $\rightarrow$  buttons to select one of these symbols then press the OK button to confirm your selection. Follow the on-screen instructions until the info menu reappears on screen.

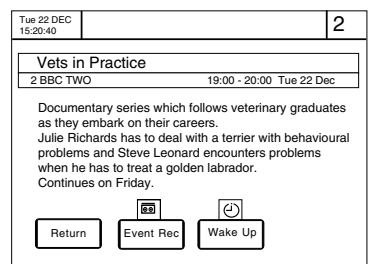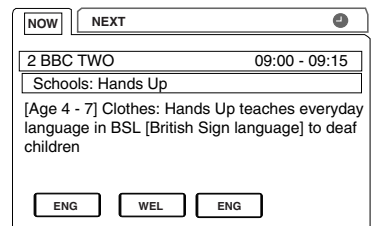


**Note:** If available, you can change the language of the audio output. Press the  $\downarrow$  button to highlight one of the language bars at the bottom of the info screen, then press the  $\leftarrow$  or  $\rightarrow$  button to select the language in which you wish to hear the programme. Press the  $\uparrow$  button to return highlight to the top of the display.


# Automatically tuning the TV

 
You should have already tuned in all available channels using the 'Automatically tuning the TV' section at the start of this manual. If you need to repeat the tuning procedure however, follow the instructions below and the TV automatically searches and stores all available channels for you.




1. Press the MENU button on the remote control to display the menu on the TV screen.

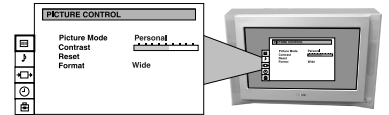


2. Press the **↑** or **↓** buttons to select the  symbol on the menu screen then press the **▶** button to enter the 'PRESET' menu.

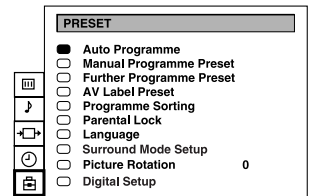


3. Press the **↑** or **↓** buttons to select 'Auto Programme' then press the **▶** button to display the autotune menu.

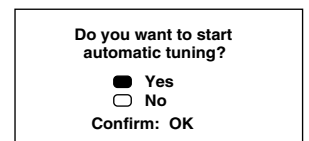

4. Press the **↑** or **↓** buttons to select 'YES' then press the OK button to confirm.

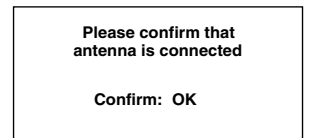

5. Ensure the antenna is connected as instructed, then press the OK button to confirm. The TV starts to automatically search and store all available channels for you. Please be patient and do not press any buttons. The digital channels will be stored on programme numbers 1-90 and the analogue channels on programme numbers 91-99.

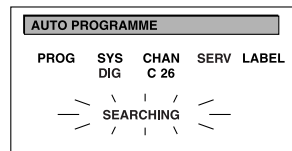

**Note:** If any digital channels are stored on programme numbers 91-99 during the Automatic Tuning procedure, then no analogue channels will be allocated. If this happens, please refer to the section 'Manually Tuning the TV' in this manual to tune in and store the analogue channels.

6. When the automatic tuning procedure is complete, the menu disappears from the TV screen. Press the **PROGR+/-** or the numbered buttons on the remote control to view the TV channels.


**Note:** Press the MENU button if you wish to stop the automatic tuning procedure at any time.

# Re-arranging the TV channels


After tuning the TV, you can use this feature to change the channel order.



1. Press the MENU button on the remote control to display the menu on the TV screen.

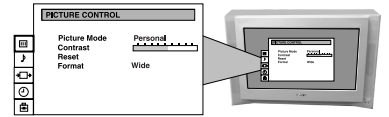

2. Press the **▲** or **▼** buttons to select the **☰** symbol on the menu screen then press the **▶** button to enter the 'PRESET' menu.

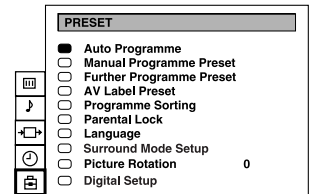

3. Press the **▼** button to select 'Programme Sorting' then press the **▶** button to enter the 'PROGRAMME SORTING' menu.

PROGRAMME SORTING				
PROG	SYS	CHAN	LABEL	
<input checked="" type="checkbox"/>	0	I	C 68	----
<input type="checkbox"/>	1	DIG	C 30	BBC ONE Wa
<input type="checkbox"/>	2	DIG	C 30	BBC TWO
<input type="checkbox"/>	3	DIG	C 34	ITV Channe
<input type="checkbox"/>	4	DIG	C 56	S4C
<input type="checkbox"/>	5	DIG	C 56	Channel 5
<input type="checkbox"/>	6	DIG	C 34	ITV 2
<input type="checkbox"/>	7	DIG	C 30	BBC CHOICE
<input type="checkbox"/>	8	DIG	C 34	Channel 4
<input type="checkbox"/>	9	DIG	C 34	Teletext

4. Press the **▲** or **▼** buttons to select the channel you want to move then press the OK button to confirm.

PROGRAMME SORTING				
PROG	SYS	CHAN	LABEL	
<input type="checkbox"/>	0	I	C 68	----
<input type="checkbox"/>	1	DIG	C 30	BBC ONE Wa
<input type="checkbox"/>	2	DIG	C 30	BBC TWO
<input type="checkbox"/>	3	DIG	C 34	ITV Channe
<input type="checkbox"/>	4	DIG	C 56	S4C
<input type="checkbox"/>	5	DIG	C 56	Channel 5
<input type="checkbox"/>	6	DIG	C 34	ITV 2
<input type="checkbox"/>	7	DIG	C 30	BBC CHOICE
<input checked="" type="checkbox"/>	8	DIG	C 34	Channel 4
<input type="checkbox"/>	9	DIG	C 34	Teletext

5. Press the **▲** or **▼** buttons to select the new programme position (e.g. PROG 4) for your selected channel, then press the OK button to confirm. The selected channel now moves to its new programme position.

PROGRAMME SORTING				
PROG	SYS	CHAN	LABEL	
<input type="checkbox"/>	0	I	C 68	----
<input type="checkbox"/>	1	DIG	C 30	BBC ONE Wa
<input type="checkbox"/>	2	DIG	C 30	BBC TWO
<input type="checkbox"/>	3	DIG	C 34	ITV Channe
<input checked="" type="checkbox"/>	4	DIG	C 56	S4C
<input type="checkbox"/>	5	DIG	C 56	Channel 5
<input type="checkbox"/>	6	DIG	C 34	ITV 2
<input type="checkbox"/>	7	DIG	C 30	BBC CHOICE
<input type="checkbox"/>	8	DIG	C 34	Channel 4
<input type="checkbox"/>	9	DIG	C 34	Teletext

6. Repeat steps 4 and 5 if you wish to sort other channels.




7. Press the MENU button to remove the menu from the TV screen.


# Viewing standard teletext

Teletext is an information service transmitted by most TV stations.





## Selecting teletext

1. When viewing analogue channels press a numbered button on the remote control to select the channel which carries the teletext service you wish to receive.
2. Press the  on the remote control to switch on teletext. Press the  button again if you wish to superimpose teletext on to the TV screen.
3. Select your required page using the numbered buttons on the remote control. If you make an error, complete the number, then re-enter the correct page number.
4. Press the  button to switch off teletext.

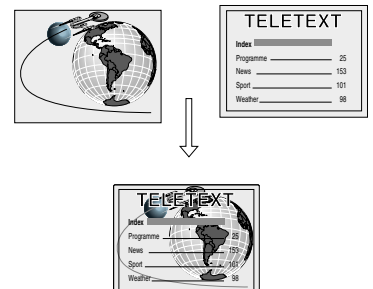


## Using other standard teletext functions

 
### To move to the next or preceding page

Press the  or  buttons to select the previous or next page.

### To freeze a Teletext page

Press the  button to freeze the page. Press again to cancel the freeze.

### Revealing concealed information (eg: answers to a quiz).

 

Press the  button to reveal information. Press again to conceal the information.

### Using colour buttons to access pages (Fastext)

When the colour coded menu appears at the bottom of a page, press the colour buttons (red, green, yellow or blue) on the remote control to access the corresponding page.

### Displaying TOP-Text (when available)

With TOP-Text you can access pages easily by selecting blocks or groups of pages. The block is a category (for example Sports) which includes the groups (for example Football). When TOP-Text is broadcast, a colour coded menu appears at the bottom of the screen. The colours of this menu correspond to the red, green, yellow and blue buttons on the remote control. Press these coloured buttons to display the desired pages.

1. Press the  button to display teletext.
2. Press the coloured buttons to search for the page you desire:  
Red: to go back to the previous page.  
Green: to proceed to the next page.  
Yellow: to proceed to the first page of the next group.  
Blue: to proceed to the first page of the next block.
3. Press the  button twice to return to normal TV.

## Viewing digital teletext

Most of the digital TV channels broadcast information via teletext. This digital service includes high quality text and graphics as well as advanced navigational options. Additionally, this television set has access to a dedicated digital teletext channel.



### Selecting the dedicated digital teletext channel

1. To view the dedicated digital teletext service, press the numbered buttons on your remote control to select the relevant channel number. If you do not know the channel number, press the OK button to look for that channel in the channel table.
2. Once the teletext channel is displayed, press the **▲**, **▼**, **◀** or **▶** buttons as instructed on the screen to select your requirement, then press the OK button to display the chosen information.  
**Note:** On some pages the TV programme will also be displayed. You can view the other TV programmes available on the selected channel by pressing the **◀** or **▶** buttons.
3. Alternatively, you can use the numbered and coloured buttons on the remote control to directly enter the page number required and to display the various pages of text information.
4. If when viewing the teletext pages, you are requested to select 'OK' or 'Cancel', press the OK button for 'OK' or the **⦿** button for 'Cancel'.
5. When you have finished viewing teletext, press the **☰** button or the PROG +/- buttons, and then select an alternative digital channel.

### Selecting teletext from the other digital channels

Normal teletext services may also be available on other digital channels. Sometimes this is indicated by a small symbol or text display on your TV screen, superimposed on the channel you are watching.

1. Press the **▲**, **▼**, **◀** or **▶** buttons to select the symbol then press the OK button to display the chosen information.
2. Alternatively, you may be requested to use the numbered and coloured buttons on your remote control to display the various pages of text information. If when viewing the teletext pages, you are requested to select 'OK' or 'Cancel', press the OK button for 'OK' or the **⦿** button for 'Cancel'.
3. Once the text information is displayed on screen, use the **▲**, **▼**, **◀** or **▶** buttons, the coloured buttons and/or the numbered buttons to access the chosen information.
4. When you have finished viewing teletext, press the **☰** button and then select an alternative digital channel.

On other channels there may be no on-screen symbol, but you can see if there is a digital service as follows:

1. When watching a digital TV channel, press the **☰** button on your remote control to display any text service which may be available.
2. Press the numbered buttons to select the various pages of information available and/or the coloured buttons for the functions shown on screen.
3. When you have finished using the text service, press the **☰** button to return to normal TV.

# Electronic Programme Guide (EPG)

The Electronic Programme Guide (EPG) is a guide which provides programme information for all digital channels supporting EPG.



## Displaying the EPG

1. Press the button on the remote control to display the programme guide on the TV screen. You may see the message 'EPG INFORMATION IS TEMPORARILY UNAVAILABLE' whilst waiting for the EPG to appear on screen.
2. Press the , , or buttons on the remote control to move the on-screen cursor around the guide.
3. Press the button again to remove the programme guide from the TV screen.

## Viewing information on the EPG

You can alter the type of information presented on the EPG by changing data in each of the EPG columns. You can for example display information for all sports programmes being shown tomorrow from 5.00pm onwards.

1. Press the button on the remote control to display the EPG on the TV screen.
2. Press the or buttons to highlight the 'date' column then press the or buttons to select your chosen date.
3. Press the or buttons to highlight the 'time' column then press the or button to select your chosen time.
4. Press the button or press the OK button. The EPG will display programme information according to the date and time you selected.
5. Press the button to highlight the 'programme type' column then press the or button to select News, Films, Sport, Entertainment, Lifestyle, Education or Childrens Programmes.
6. Press the or buttons or press the OK button to update the programme information accordingly. If you selected tomorrow's date, 17:00 and Sport, you should now be able to view all the sports programmes being shown tomorrow from 5.00 pm onwards.
7. Press the button on the remote control to remove the EPG from the TV screen.

Tue 22 DEC 15:20:40		Press O.K. to view data for all available channels Press to return to programme list.	12
22 Tues	6 3:45	2 BBC 2 International Cricket - - - - 13:35 - 18:25	
23 Wed	9	4 Channel 4 Racing From Epsom - - - 14:00 - 16:30	
24 Thu	12 3:45	5 C 5 Film: Rachel And The - - - 15:30 - 17:10	
25 Fri	16:00	1 BBC 1 The Little Pet Shop - - - 15:50 - 16:00	
26 Sat	18 4:15	3 HTV Bernards Watch 15:55 - 16:15	
27 Sun	21	1 BBC 1 Boger And Badger N 16:00 - 16:15	
28 Mon	24 1:15	1 BBC 1 Bailey Kippers Pov S - - - 16:15 - 16:35	
	3	3 HTV Sabrina The Teenage - - - 16:15 - 16:40	
		4 BBC 1 Vets In Practice 16:30 - 17:30	

Tue 22 DEC 15:20:40		Press O.K. to view data for all available channels Press to return to programme list.	12
22 Tues	6 3:45	2 BBC 2 International Cricket - - - - 13:35 - 18:25	
23 Wed	9	4 Channel 4 Racing From Epsom - - - 14:00 - 16:30	
24 Thu	12 3:45	5 C 5 Film: Rachel And The - - - 15:30 - 17:10	
25 Fri	16:00	1 BBC 1 The Little Pet Shop - - - 15:50 - 16:00	
26 Sat	18 4:15	3 HTV Bernards Watch 15:55 - 16:15	
27 Sun	21	1 BBC 1 Boger And Badger N 16:00 - 16:15	
28 Mon	24 1:15	1 BBC 1 Bailey Kippers Pov S - - - 16:15 - 16:35	
	3	3 HTV Sabrina The Teenage - - - 16:15 - 16:40	
		4 BBC 1 Vets In Practice 16:30 - 17:30	

# Electronic Programme Guide (EPG)



## Recording programmes

- 1 Press the button on the remote control to display the EPG on the TV screen.
- 2 Press the or buttons to highlight the 'programme' column then press the or buttons to select your desired programme.
- 3 Press the OK button. If the programme is currently being broadcast, it will be displayed on your TV. If not, the 'TIMER' menu will be displayed on the TV screen.
- 4 At the bottom of the timer page you can see the symbols (back to EPG), (to record a programme) or (to set the programme to switch on automatically).
- 5 Press the or buttons to select one of these symbols then press the OK button to confirm your selection. Follow the on-screen instructions until the EPG menu reappears on screen with the relevant icon appearing next to the programme you selected in step 2.
- 6 If you wish to cancel a recording, select the relevant programme and press the OK button. A menu is displayed on screen requesting you to select 'Return' if you wish to continue to record the programme or 'Delete' if you wish to cancel the recording request.
- 7 After making your selection, press the OK button to confirm. The record icon disappears from the EPG if 'Delete' was selected in step 6.
- 8 If you have finished viewing programmes on your TV, press the before the timer recording starts to leave your TV in standby mode for the timer settings to be activated. If, however, you wish to continue watching other programmes after setting the timer, you can do so by changing programmes in the normal way. If you are watching another programme when the timer is due to start, a display will appear on screen advising you that, if you change channels, you automatically cancel the recording.
- 9 If you do not wish to cancel or view the recording, press the whilst one of the displays are still on screen to leave your TV in standby mode. The standby indicator on the front of the TV will flash to show that the timer record operation is active. If, however, you choose to change programmes, you automatically cancel the recording.

**Notes:** If your video recorder (VCR) is not Smartlink compatible, you will need to set your VCR to switch on and off automatically after setting the timer on the EPG.

If you want to change channel once a digital programme has started recording, select the channel by using the remote control buttons as normal. A menu appears asking if you wish to stop recording. Select Yes or No using the or buttons, then press OK to confirm your choice.

Tue 22 DEC 15:20:40		Press O.K. to view data for all available channels Press to return to programme list.		12
22 Tues	6	2	BBC 2 International Cricket --- 13:35 - 18:25	
23 Wed	9	4	Channel 4 Racing From Epsom --- 14:00 - 16:30	
24 Thu	12	5	C 5 International Boxing --- 15:30 - 17:10	
25 Fri	17:00	1	BBC 1 Tennis --- 15:45 - 16:45	
26 Sat	18	3	HFV Motor Cross 15:55 - 16:25	
27 Sun	21	1	BBC 2 International Athletics --- 19:00 - 21:15	
28 Mon	24	1	BBC 1 Speedway --- 16:15 - 16:30	
	3	3	HFV Swimming --- 16:15 - 16:40	
	3	4	BBC 1 Match of the day 16:30 - 17:30	

Tue 22 DEC 15:20:40		2
Vets in Practice		
2 BBC TWO	19:00 - 20:00	Tue 22 Dec
Documentary series which follows veterinary graduates as they embark on their careers. Julie Richards has to deal with a terrier with behavioural problems and Steve Leonard encounters problems when he has to treat a golden labrador. Continues on Friday.		

Timer Recording Event will begin soon. During this event you cannot select the channel

<b>Stop recording</b>	
<input checked="" type="radio"/>	<b>Yes</b>
<input type="radio"/>	<b>No</b>
<b>Confirm: OK</b>	



# Electronic Programme Guide (EPG)



## Setting the manual timer

- 1 Press the button on the remote control to display the EPG on the TV screen.
- 2 Press the or button to highlight the 'programme type' column then press the button to select the timer symbol .
- 3 Press the OK button to display a screen of 9 programme slots, each one indicating that it is either free for programming, or that it has a programme already stored in it.
- 4 Press the button to enter the 'programme' column.
- 5 Press the or button to select a free row then press the OK button to display the Set Timer screen. This screen asks you to confirm the date, programme number, start time and stop time.
- 6 Press the button to select the date area then press the or buttons on the remote control to enter the date.
- 7 Press the button to confirm the date then press the or button to select the month.
- 8 Press the button to confirm the month and to select the start time.
- 9 Press the or buttons to enter the time when you want the timer to switch on, preferably several minutes before your video recorder is due to start recording. Press the button to confirm after each entry.
- 10 Press the or buttons to enter the time you want the timer to switch off, preferably after your video is due to stop recording.
- 11 Press the button to confirm each entry, then press the or buttons to select the programme number.
- 12 Press the OK button to save the settings, then follow the on-screen instructions until you finally select to return to the Manual Timer Setup menu.
- 13 Select another available slot if you wish to record a further programme. Otherwise, press the button to enter the 'programme type' column then press the OK button to return to the EPG.
- 14 If you have finished viewing programmes on your TV, press the button before the timer recording starts. This will leave your TV in standby mode for the timer settings to be activated. If, however, you wish to continue watching other programmes after setting a timer, you can do so by changing programmes in the normal way. If you are watching another programme when the timer is due to start, the display shown will appear on screen.
- 15 If you do not wish to view the recording, press the button whilst the display is still on screen to leave your TV in standby mode. The standby indicator on the front of the TV will flash to show that the timer record operation is active. If, however, you choose to change programmes, a display appears asking if you wish to cancel the recording. Select Yes or No using the or buttons, then press OK to confirm your choice.

Tue 22 DEC 15:20:40		Press O.K. to view data for all available channels Press to return to programme list.	12
22 Tues	6 3%	2 BBC 2 International Cricket - - - 19:35 - 18:28	
23 Wed	9	4 Channel 4 Racing From Epsom - - - 14:00 - 16:35	
24 Thu	12 3%	5 C 5 Film: Rachel And The - - - 15:30 - 17:14	
25 Fri	16:00	1 BBC 1 The Little Pet Shop - - - 15:50 - 16:00	
26 Sat	18 4%	3 HTV Bernards Watch 15:55 - 16:15	
27 Sun	21	1 BBC 1 Boger And Badger N 16:00 - 16:15	
28 Mon	24 3	1 BBC 1 Baitly Kippers Pw S - - - 16:15 - 16:35	
	3	3 HTV Sabrina The Teenage - - - 16:15 - 16:44	
		4 BBC 1 Vets In Practice 16:30 - 17:35	

Tue 22 DEC 15:20:40		Timer event list. Press OK to view	2
22 Tues	6 3%	Manual Timer Setup	
23 Wed	9	Manual Timer Setup	
24 Thu	12 3%	Manual Timer Setup	
25 Fri	15	Manual Timer Setup	
26 Sat	18 4%	Manual Timer Setup	
27 Sun	21	Manual Timer Setup	
28 Mon	24 3	Manual Timer Setup	
		Manual Timer Setup	

Tue 22 DEC 15:45:40		12		
Manual Timer Setup				
	DATE	START	STOP	PROG NO
	THU 24	DEC 16 : 00	-- : --	10
Return				


Timer Recording Event will begin soon. During this event you cannot select the channel






Stop recording
<input checked="" type="radio"/> Yes
<input type="radio"/> No
Confirm: OK

 
# Connecting equipment to the TV

Using the following instructions, you can connect a wide range of optional equipment to your TV.

## Connecting equipment to the TV

1. Connect your equipment to the correct TV socket as shown.
2. Press the  button repeatedly on the remote control until the correct input symbol for your equipment appears on the TV screen:

Symbol	Input signals
 1	<ul style="list-style-type: none"> <li>• Audio/video input signal through the scart connector <b>F</b></li> </ul>
	<ul style="list-style-type: none"> <li>• RGB input signal through the scart connector <b>F</b></li> </ul>
 2	<ul style="list-style-type: none"> <li>• Audio/video input signal through the scart connector <b>G</b> or the phono sockets <b>B</b> and <b>C</b></li> </ul>
 2	<ul style="list-style-type: none"> <li>• S video input signal through the scart connector <b>G</b> or the sockets <b>A</b> and <b>C</b></li> </ul>
 3	<ul style="list-style-type: none"> <li>• Audio/video input signal through the scart connector <b>H</b></li> </ul>



3. Switch on the connected equipment.
4. To return to normal TV operation, keep pressing the  button on the remote control until the TV picture appears.

**Note:** To avoid picture distortion, do not connect equipment to the **A**, **B**, **C** and **G** sockets at the same time.

## Additional information when connecting equipment

### Connecting a VCR

To record and playback digital programmes you must connect your VCR to the **H** socket using a scart lead (the VCR relies on the TV to convert digital programmes to signals suitable for recording, which are then output from the TV via the scart socket).

To record analogue programmes on the VCR, connect your external aerial to the upper socket marked  on the TV, then connect a lead from the RF input of the VCR to the lower aerial socket marked  on the TV.

**Note:** If you have set the Auto 16:9 feature to 'On' (see page 14), any digital recording made from the **H** socket will not detect the 16:9 mode, and during playback the picture will be displayed in the mode you previously selected from the 'Format' options.

 
### Connecting headphones


Plug in your headphones to the **D** socket of the concealed panel on the side of the TV.

### Connecting to external audio equipment

Plug in your hi-fi equipment to the **E** sockets on the rear of the TV if you wish to amplify the audio output from the TV. The output level from the **E** sockets can be varied by adjusting the volume of the headphones (refer to the 'Adjusting the sound' section of this manual).

### For mono equipment

Connect the phono plug of your equipment to the L/G/S/I socket of the concealed panel on the side of the TV, then select the  input signal using the instructions on this page. Finally, refer to the 'Adjusting the sound' section of this manual and select 'A' on the sound menu screen.

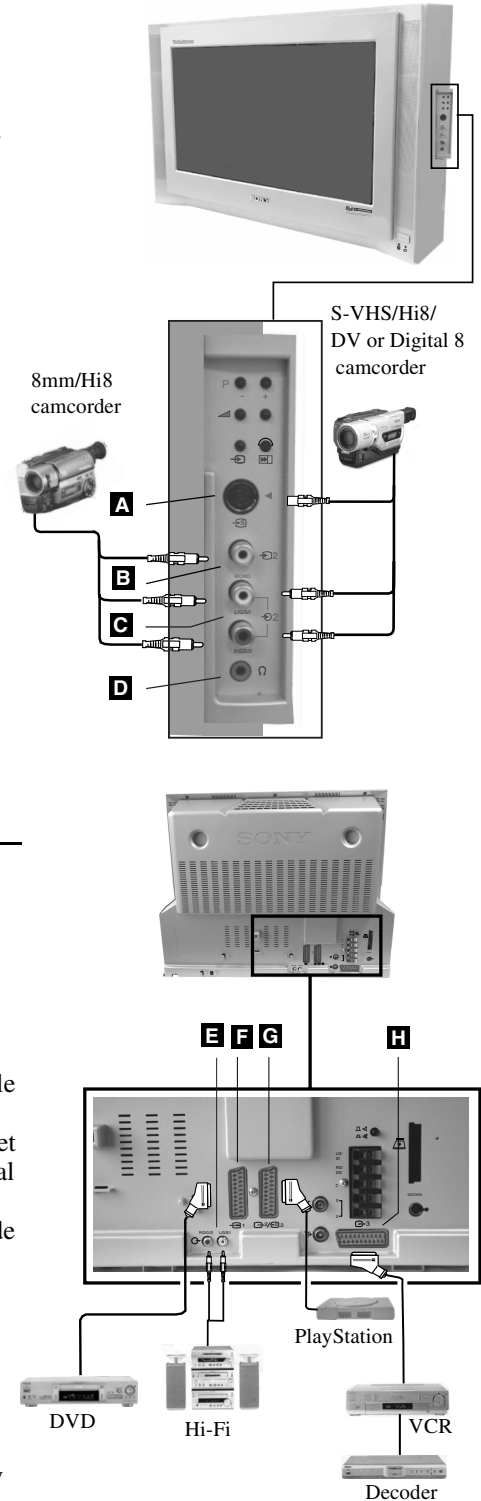

# Connecting equipment to the TV





## Selecting the output source for the scart socket **G** or **H**

1. Press the MENU button on the remote control to display the menu on the TV screen.
2. Press the **▲** or **▼** buttons to select the **→□→** symbol on the menu screen then press the **▶** button to enter the 'VIDEO CONNECTION' menu screen.
3. Press the **▲** or **▼** buttons to highlight 'TV Screen' (input source for the TV screen) or 'Output' (output source for **G**2/**H**2 or **G**3 socket) then press the **▶** button to confirm.
4. Press the **◀** or **▶** button to select the desired source (see below) then press the OK button to confirm:

TV Screen	TV, AV1, RGB, AV2, YC2, AV3
Output	TV, AV1, AV2, YC2, AV3, AUTO

**Note:** When Auto is selected as the output source, then the signal being viewed on the TV will also be output to AV2.

5. Press the MENU button to remove the menu from the TV screen.

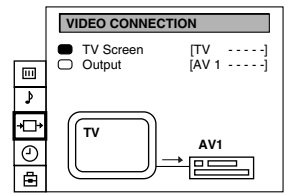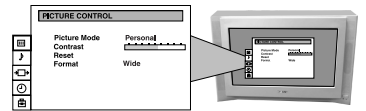

## Smartlink

Smartlink is a direct link between your TV set and VCR.

For Smartlink you need:

- a VCR which supports Smartlink, NexTView Link or Megalogic.
- A fully-wired 21-pin scart cable to connect your VCR to scart connector **G**3 .

The features of Smartlink are:

- tuning information such as the channel overview are downloaded from the TV set to the VCR.
- direct TV recording: While watching TV you need to press just one button on the VCR to record this programme.


**For more information on Smartlink please refer to your VCR instruction manual.**


# Using the AV label preset feature


This function enables you to designate a name to the optional equipment you have connected to the sockets of this TV. This name can be up to 5 characters (letters or numbers) and will appear on screen whenever the equipment is selected for use.




1. Press the MENU button on the remote control to display the menu on the TV screen.

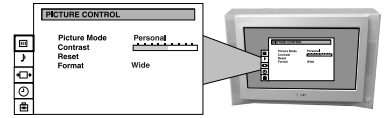


2. Press the **▲** or **▼** buttons to select the  symbol on the menu screen then press the **▶** button to enter the 'PRESET' menu.

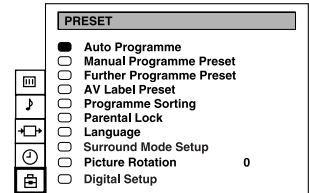

3. Press the **▲** or **▼** buttons to select 'AV Label Preset' then press the **▶** button to enter the 'AV LABEL PRESET' menu.

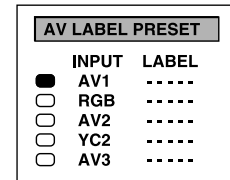

4. Press the **▲** or **▼** buttons to select the input source you wish to name (e.g. AV2) then press the **▶** button to highlight the first element of the 'LABEL' column.

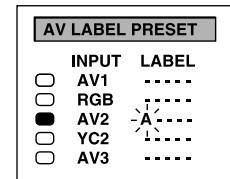

5. Press the **▲** or **▼** buttons to select a letter or number (select '-' for a blank) then press the **▶** button to confirm. Select the other four characters in the same way.

6. After selecting all the characters, press the OK button.

7. Repeat steps 4 to 6 if you wish to label other input sources.

8. Press the MENU button to remove the menu from the TV screen.

# Specifications

## TV system

I/DVB-T

## Colour system

PAL

NTSC 3.58, 4.43 (only Video in)

## Channel coverage

UHF:B21-B69

## Picture tube

KV-28DX30U

FD Trinitron WIDE






Approx. 71cm (28inches) (Approx. 66cm picture measured diagonally), 102° deflection

KV-32DX30U

 



FD Trinitron WIDE

Approx. 82cm (32 inches) (Approx. 76cm picture measured diagonally), 102° deflection

## Rear Terminals

-  1 21-pin Euro connector (CENELEC standard) including audio/video input, RGB input, TV audio/video output.
-  2 /  2 21-pin Euro connector (CENELEC standard) including audio/video input, S-video input, selectable audio/video output.
-  3 21-pin Euro connector (CENELEC standard) including audio/video input, selectable audio/video output.
-  Audio outputs - phono jacks
- MODEM Modem connection

## Front Terminals

-  2 Video input - phono jack
-  2 Audio inputs - phono jacks
-  S video input - 4 pin DIN
-  Headphones jack - minijack stereo

## Sound output

Left/Right: 2x20W (music power)

## Power consumption

KV-28DX30U: 136W

KV-32DX30U: 134W

## Dimensions (wxhxd)

KV-28DX30U: Approx. 796x518x522mm

KV-32DX30U: Approx. 883x567x562mm

## Weight

KV-28DX30U: Approx. 44kg

KV-32DX30U: Approx. 62kg

## Accessories supplied

RM-888 remote control (1)

IEC designated size AA battery (2)

## Other features

Teletext

 
 

 
 
 
 
 
 
 
 

Dolby Pro Logic Surround System

Smartlink

**Design and specifications are subject to change without notice.**

# Troubleshooting

Here are some simple solutions to problems which may affect the picture and sound.

Problem	Cause
<p>No picture, no sound.</p> <p>Poor or no picture (screen is dark), but good sound. No picture on any channel after digital tuning.</p> <p>Some channels are blank.</p> <p>Standby indicator flashing.</p> <p>Good Picture, no sound.</p> <p>No head phone output and no output from the audio sockets marked  on the rear of the TV. Poor picture quality. No colour on colour programmes. Remote control does not function. Distorted picture when changing programmes or selecting Teletext.</p>	<ul style="list-style-type: none"> <li>• Power off.</li> <li>• TV in standby.</li> <li>• Aerial disconnected.</li> <li>• Picture preset level adjustment.</li> <li>• No digital transmissions in your area.</li> <li>• No digital transmissions from the transmitter you are currently using.</li> <li>• Weak signal.</li> <li>• Unsuitable aerial.</li> <li>• Scrambled/subscription-only channel.</li> <li>• Programme used only for data (no picture or sound).</li> <li>• Programme not being transmitted.</li> <li>• Digital mode Timer Record active (regular flash).</li> <li>• Fault (irregular flash).</li> <li>• Volume control.</li> <li>• The button marked  on the rear of the TV is pressed in.</li> <li>• The TV has been set to perform Dolby Pro Logic decoding.</li> <li>• Wrong external mode selected on an RGB video source.</li> <li>• Colour level setting.</li> <li>• Batteries low.</li> <li>• Inputs from external equipment not switched off.</li> </ul>
Cause	Solution
<p>Power off. TV in standby.</p> <p>Aerial disconnected.</p> <p>Picture level adjustment.</p> <p>No digital transmissions in your area.</p> <p>No digital transmissions from the transmitter you are currently using. Unsuitable aerial.</p> <p>Weak signal.</p> <p>Scrambled/subscription-only channel. Programme information without picture or sound.</p> <p>Fault.</p> <p>Volume control.</p> <p>Wrong external mode selected.</p> <p>Colour level setting.</p>	<ul style="list-style-type: none"> <li>• Plug in the TV.</li> <li>• Press the  button on the front of the TV.</li> <li>• If the  indicator is on press the  button or a numbered button on the remote control.</li> <li>• Check the aerial connection.</li> <li>• Select  on the TV menu system then adjust the brightness, picture and colour balance levels.</li> <li>• Tune in the analogue channels available using the ‘Manually tuning the TV’ instruction in this manual, then contact a local installer to find out when digital transmissions begin in your area.</li> <li>• Contact a local installer to find out which transmitter you should be pointing your aerial at.</li> <li>• Change your aerial to cover the channels used by digital programmes. (Contact a local installer)</li> <li>• Ensure aerial is correctly aligned to transmitter.</li> <li>• Ensure aerial is plugged directly into the TV (not through other equipment).</li> <li>• Upgrade to a higher gain aerial.</li> <li>• Subscribe to pay-per-view broadcaster.</li> <li>• See ‘Skipping programme positions’ section.</li> <li>• See ‘Re-arranging the TV channels’ section.</li> <li>• Do not open the cabinet, refer to qualified personnel.</li> <li>• Contact your nearest Sony Service Centre.</li> <li>• Press the  + button on the remote control.</li> <li>• If  is displayed on the screen, press the  button on the remote control.</li> <li>• Press the  button repeatedly until the RGB symbol  is displayed on screen.</li> <li>• Select  on the TV menu system then adjust the colour setting.</li> </ul>

- **If you continue to have these problems, have your TV serviced by qualified personnel or you can contact the Sony UK Digital HelpLine on 0870 600 1717.**
- **NEVER open the casing yourself.**



