

## WARNING

To prevent fire or shock hazard, do not expose the unit to rain or moisture. To avoid electrical shock, do not open the cabinet. Refer servicing to qualified personnel only.

Mains cord must only be changed at qualified service shop.

### CAUTION

The use of optical instruments with this product will increase eye hazard. As the laser beam used in this CD/DVD Player is harmful to eyes, do not attempt to disassemble the cabinet.

Refer servicing to qualified personnel only.



This label is located on the Laser protective housing inside the enclosure.

## Precautions

### Safety

- This unit operates on 220 - 240 V AC, 50 Hz. Check that the unit's operating voltage is identical with your local power supply.
- If anything falls into the cabinet, unplug the unit and have it checked by qualified personnel before operating it any further.
- The unit is not disconnected from the mains as long as it is connected to the mains outlet, even if the unit itself has been turned off.
- Unplug the unit from the wall outlet if you do not intend to use it for an extended period of time. To disconnect the cord, pull it out by the plug, never by the cord.

### Installing

- Allow adequate air circulation to prevent internal heat buildup.
- Do not place the unit on surfaces (rugs, blankets, etc.) or near materials (curtains, draperies) that may block the ventilation slots.
- Do not install the unit near heat sources such as radiators or air ducts, or in a place subject to direct sunlight, excessive dust, mechanical vibration or shock.
- Do not install the unit in an inclined position. It is designed to be operated in a horizontal position only.
- Keep the unit and discs away from equipment with strong magnets, such as microwave ovens or large loudspeakers.
- Do not place heavy objects on the unit.
- If the unit is brought directly from a cold to a warm location, moisture may condense inside the CD/DVD player and cause damage to the lenses. When you first install the unit, or when you move it from a cold to a warm location, wait for about one hour before operating the unit.

---

 
## Welcome!

Thank you for purchasing the Sony CD/DVD Player. Before operating the unit, please read this manual thoroughly and retain it for future reference.

# TABLE OF CONTENTS

---

This Player Can Play the Following Discs .....	4
<hr/>	
<b>Getting Started</b>	
Unpacking .....	6
Hooking Up the System .....	6
Necessary Setup Before Using the Player .....	9
Selecting the Language for On-screen Display .....	9
<hr/>	
Basic Operations	
Playing a DVD .....	10
Playing a CD/VIDEO CD .....	14
<hr/>	
<b>Playing Discs in Various Modes</b>	
Using the On-Screen Display .....	18
Using the Front Panel Display .....	20
Playing Repeatedly (Repeat Play) .....	22
Playing in Random Order (Shuffle Play) .....	23
Creating Your Own Program (Program Play) .....	24
Resuming Playback from the Point Where You Stopped a Disc (Resume Play) .....	25
Reducing the Picture Noise (DNR: Digital Video Noise Reduction) .....	26
Changing the Sounds .....	26
Displaying the Subtitles .....	27
Changing the Angles .....	27
Limiting Playback by Children (Parental Control) .....	28
Controlling the TV or the AV Amplifier (Receiver) with the Supplied Remote .....	30
<hr/>	
<b>Settings and Adjustments</b>	
Using the Setup display .....	32
Setting the Language for Display and Sound (LANGUAGE SETUP) .....	33
Settings for Display (INITIAL SETUP 1) .....	34
Settings for Sound (INITIAL SETUP 2) .....	35
<hr/>	
<b>Dolby* Digital Surround</b>	
What is Dolby Digital Surround? .....	36
Speaker System Hookups .....	36
Speaker Setup .....	38
Setting for Dolby Digital Surround .....	40
<hr/>	
<b>Additional Information</b>	
Precautions .....	42
Notes on Discs .....	42
Troubleshooting .....	43
Self-diagnosis function .....	45
Specifications .....	46
Glossary .....	46
Index to Parts and Controls .....	48
Setup Display Item List .....	51
Language Code List .....	52
<hr/>	
Index .....	53






\* Manufactured under license from Dolby Laboratories.  
"Dolby", "Pro Logic" and the double-D symbol  are trademarks of Dolby Laboratories.  
Confidential Unpublished Works. ©1992-1997 Dolby Laboratories, Inc. All rights reserved.

## About This Manual

The instructions in this manual are for model DVP-S505D.

### Conventions

- Instructions in this manual describe the controls on the player.  
You can also use the controls on the remote if they have the same or similar names as those on the player.
- The icons on the right are used in this manual:

Icon	Meaning
	Indicates that you can use only the remote to do the task.
	Indicates tips and hints for making the task easier.
	Indicates the functions for DVD VIDEOS.
	Indicates the functions for VIDEO CDs.
	Indicates the functions for Audio CDs.

## This Player Can Play the Following Discs


	DVD VIDEOS		VIDEO CDs		Audio CDs	
Disc logo						
Contents	Audio + Video		Audio + Video		Audio	
Disc size	12 cm	8 cm	12 cm	8 cm	12 cm	8 cm (CD single)
Play time	About 4 h (for single-sided DVD)/ about 8 h (for double-sided DVD)	About 80 min. (for single-sided DVD)/ about 160 min. (for double-sided DVD)	74 min.	20 min.	74 min.	20 min.

“DVD VIDEO” logo is a trademark.

This player switches the color system, PAL or NTSC, according to the connected TV. (For details, see page 9.)

 
### Region code of DVDs you can play on this unit

Your DVD player has a region code printed on the back of the unit and will only play DVDs that are labeled with identical region codes.

DVDs labeled  will also play on this unit.

If you try to play any other DVD, the message “Playing this disc prohibited by area limits.” will appear on the TV screen.

Depending on the DVD, no region code indication may be labeled even though playing the DVD is prohibited by the area limits.

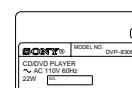


Region code

### Note on playback operations of DVDs and VIDEO CDs

Some playback operations of DVDs and VIDEO CDs may be intentionally fixed by software producers. Since this player plays DVDs and VIDEO CDs according to the disc contents the software producers designed, some playback features may not be available. Also refer to the instructions supplied with the DVDs or VIDEO CDs.

**Terms for discs**

- **Title**  
The longest sections of a picture or a music piece on a DVD; a movie, etc, for a picture piece on a video software; or an album, etc, for a music piece on an audio software. Each title is assigned a title number enabling you to locate the title you want.
- **Chapter**  
Sections of a picture or a music piece that are smaller than titles. A title is composed of several chapters. Each chapter is assigned a chapter number enabling you to locate the chapter you want. Depending on the disc, no chapters may be recorded.
- **Track**  
Sections of a picture or a music piece on a VIDEO CD or a CD. Each track is assigned a track number enabling you to locate the track you want.

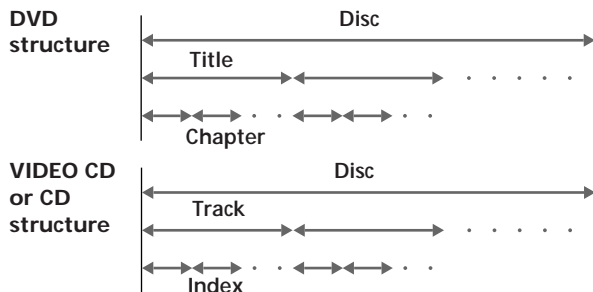

- **Index (CD) / Video Index (VIDEO CD)**  
A number that divides a track some sections to easily locate the point you want on a VIDEO CD or a CD. Depending on the disc, no indexes may be recorded.
- **Scene**  
On a VIDEO CD with PBC functions, the menu screens, moving pictures and still pictures are divided into sections called “scenes.” Each scene is assigned a scene number enabling you to locate the scene you want.

**Note on PBC (Playback Control) (VIDEO CDs)**

This player conforms to Ver. 1.1 and Ver. 2.0 of VIDEO CD standards. You can enjoy two kinds of playback according to the disc type.

Disc type	You can
VIDEO CDs without PBC functions (Ver. 1.1 discs)	Enjoy video playback (moving pictures) as well as music.
VIDEO CDs with PBC functions (Ver. 2.0 discs)	Play interactive software using menu screens displayed on the TV screen (PBC Playback), in addition to the video playback functions of Ver 1.1 discs. Moreover, you can play high-resolution still pictures, if they are included on the disc.

**Discs that the player cannot play**

The player cannot play discs other than the ones listed in the table on page 4. CD-ROMs including PHOTO CDs, data sections in CD-EXTRAS and DVD-ROMs etc. can not be played.


This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.


## Unpacking


Check that you have the following items:

- Audio/video connecting cord (1)
- S video cable (1)
- Remote commander (remote) RMT-D102E (1)
- Size AA (R6) batteries (2)

## Inserting batteries into the remote

You can control the player using the supplied remote. Insert two R6 (size AA) batteries by matching the + and - on the batteries. When using the remote, point it at the remote sensor  on the player.

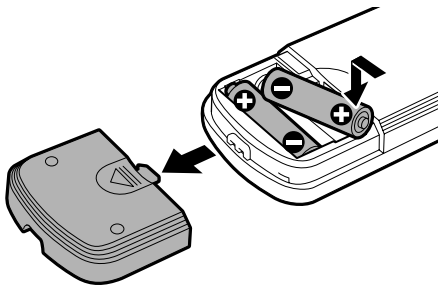

 You can control TVs and Sony AV receivers using the supplied remote  
See page 30.

## Notes


- Do not leave the remote in an extremely hot or humid place.
- Do not drop any foreign object into the remote casing, particularly when replacing the batteries.
- Do not expose the remote sensor to direct sunlight or lighting apparatuses. Doing so may cause a malfunction.
- If you will not use the remote for an extended period of time, remove the batteries to avoid possible damage from battery leakage and corrosion.

## Hooking Up the System


### Overview

This section describes how to hook up the CD/DVD player to a TV (with audio/video input jacks) and/or an amplifier. You cannot connect this player to a TV without a video input connector. Be sure to turn off the power of each component before making the connections.

- To listen to the sound through TV speakers (2ch - L,R)

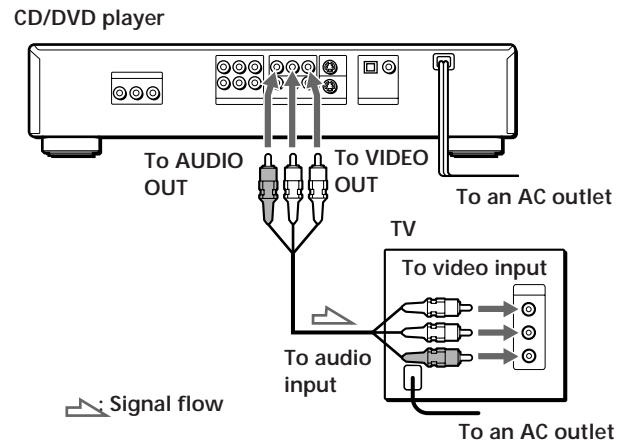


- To listen to the sound through speakers connected to an amplifier (receiver) (2ch - L,R)

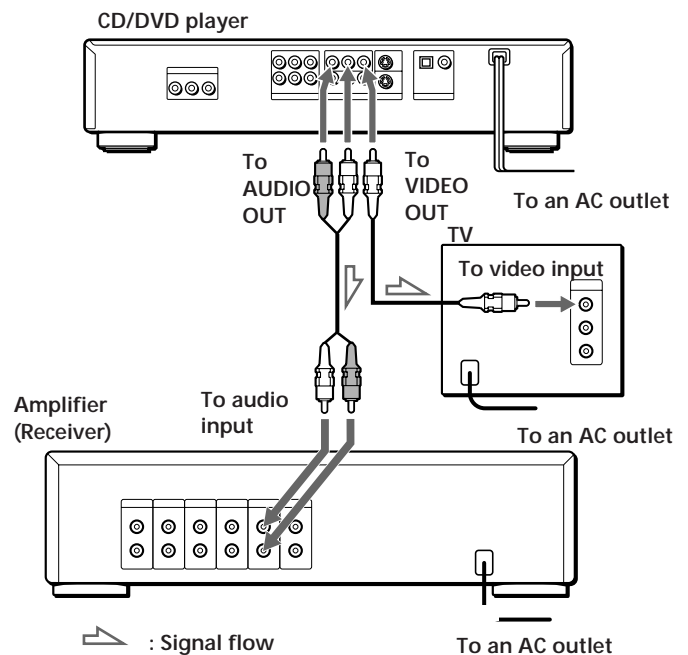

- To enjoy Dolby Digital surround sound by connecting the player to an amplifier with 5.1 channel inputs  
See page 36.

What cords will I need?

 
Audio/video connecting cord (supplied) (1)

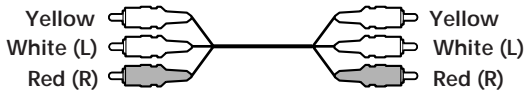


Hookups

When connecting the cords, be sure to match the color-coded cord to the appropriate jacks on the components: Yellow (video) to Yellow, Red (right) to Red and White (left) to White. Be sure to make connections firmly to avoid hum and noise.

■ To listen to the sound through TV speakers

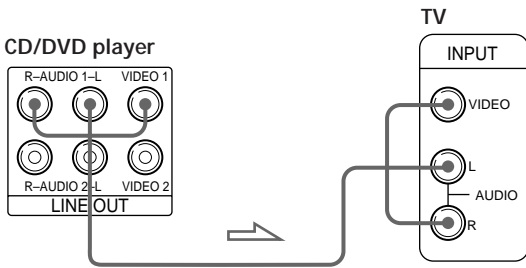


■ To listen to the sound through speakers connected to an amplifier

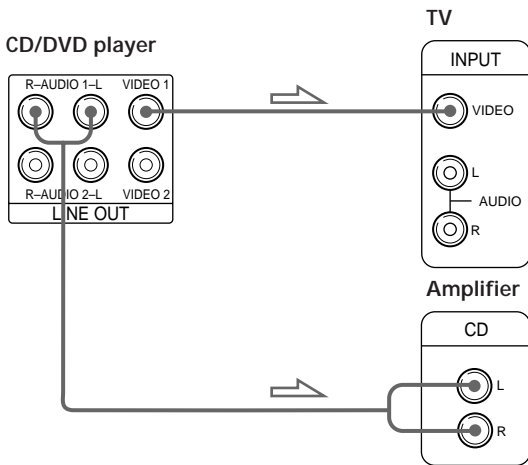

Notes


- Do not connect this player to a video deck. If you view the pictures on your TV after making the connections shown on the right, a picture noise may appear.

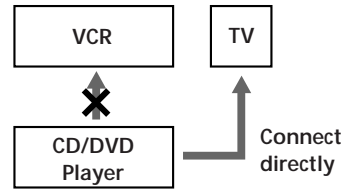


- Depending on the TV or amplifier, sound distortion may occur because the audio output level is high. In this case, set "AUDIO ATT" in "INITIAL SETUP 2" to "ON" in the setup display. For details, see page 35.



If your TV has an S video input connector Connect the component via the S VIDEO OUT connector using the S video cable (supplied) instead of the video connecting cord. You will get a better picture.

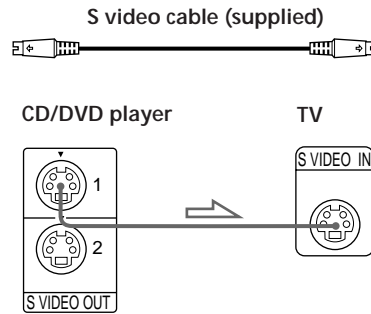

 If you connect the player to a monitor or projector with component video input connectors that conform to output signals from the COMPONENT VIDEO OUT (Y, Cb/B-Y, Cr/R-Y) connectors on the player Connect the component via the COMPONENT VIDEO OUT connectors using three video connecting cords (not supplied) of the same kind. You will get a better picture.

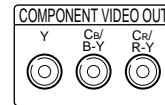

Note

Refer to the instructions supplied with the component to be connected.

(Continued)




If you have a digital component such as an amplifier with a digital connector, DAT or MD


Connect the component via the DIGITAL OUT OPTICAL or COAXIAL connector using an optical or coaxial digital connecting cord (not supplied).

When you play a DVD, set "DIGITAL OUT" in "INITIAL SETUP 2" to "PCM" in the setup display. (page 35)



### ■ When using an optical digital connecting cord

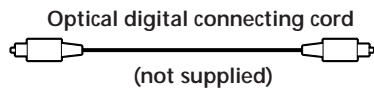 

Take off the cap and plug in the optical digital connecting cord.

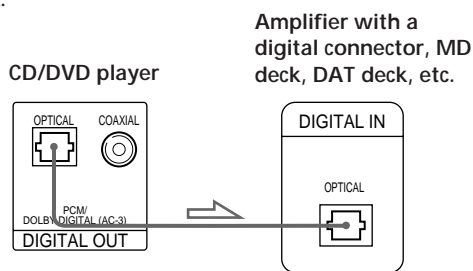

### ■ When using a coaxial digital connecting cord

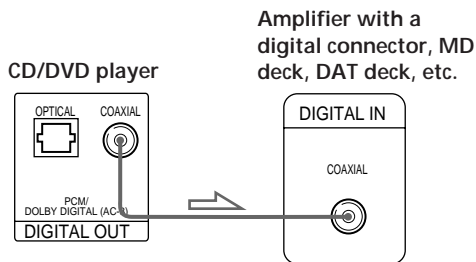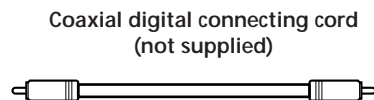 

### Notes

- Refer to the instructions supplied with the component to be connected.
- You cannot make digital audio recordings of discs recorded in Dolby Digital (AC-3) format directly using an MD deck or DAT deck.

When you make the connections above, do not set "DIGITAL OUT" in "INITIAL SETUP 2" to "DOLBY DIGITAL/PCM." If you do, a loud noise will suddenly come out from the speakers, affecting your ears or causing the speakers to be damaged.

## Necessary Setup Before Using the Player

Some setups are necessary for the player depending on the TV or other components to be connected.

For details on using the setup display, see page 32.


For details on each setup display item, see pages 33 to 35.

For details to enjoy Dolby Digital Surround, see pages 36 to 41.

### ■ If the color system of the TV is PAL or DUAL

Since the color system of the unit is set to PAL, you can use the unit as it is.

### ■ If the color system of the TV is NTSC

To set the TV to NTSC, turn on the unit while pressing the  button of the unit. To reset to PAL, turn off the unit and then turn on as described above.

### ■ To connect the player to a wide-screen TV

In the setup display, set "TV TYPE" in "INITIAL SETUP 1" to "16:9" (default setting).

### ■ To connect the player to a normal TV

In the setup display, set "TV TYPE" in "INITIAL SETUP 1" to "4:3 LETTER BOX" or "4:3 PAN SCAN." For details, see page 34.

### ■ To listen to the sound through speakers connected to an amplifier with a digital connector or to output the sound to a digital component such as a DAT or MD deck

When you play a DVD, set "DIGITAL OUT" in "INITIAL SETUP 2" to "PCM" in the setup display. This is default setting.

### ■ To enjoy Dolby Digital surround sound by connecting the player to an amplifier with 5.1 ch inputs

In the setup display, set "MODE" in "5.1 OUTPUT SETUP 2" to "OFF." This is default setting. See page 36 to hookup the speaker system and page 38 to set each speaker position or distance etc.

### ■ To connect the player to an audio component with a built-in Dolby Digital decoder

In the setup display, set "DIGITAL OUT" in "INITIAL SETUP 2" to "DOLBY DIGITAL/PCM."


Use the setup display to change the various settings for the picture and sound.

 
For details, see page 32.


To enjoy surround sound with front speakers only, set "MODE" in "5.1 OUTPUT SETUP 2" to "VES A" or "VES B." You can enjoy surround sound through both the LINE OUT (AUDIO 1, 2) and FRONT (L/R) of the 5.1 OUTPUT connectors. See page 40 for details.

## Selecting the Language for On-screen Display


You can select the language for the setup display or the messages displayed on the screen. Default setting is "ENGLISH."

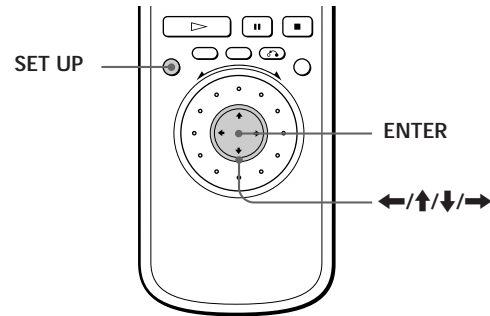


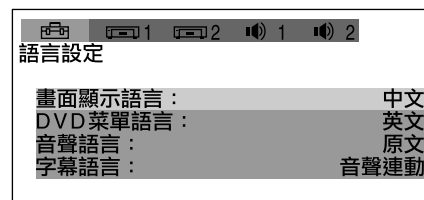
- 1 Press SET UP and select "SET UP" using , and then press ENTER.

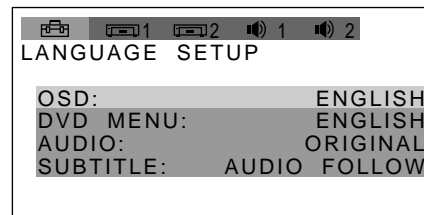

- 2 Select "OSD" using , then press  or ENTER.

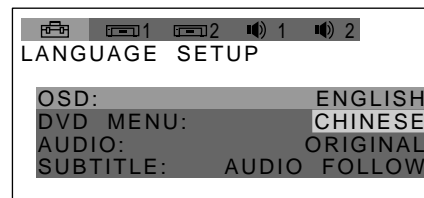

- 3 Select the language you want using , then press ENTER.




To cancel using the setup display on the way  
Press SET UP.

### Note

The languages you can select are the ones displayed in step 2.  
For details, see page 33.



# Playing a DVD

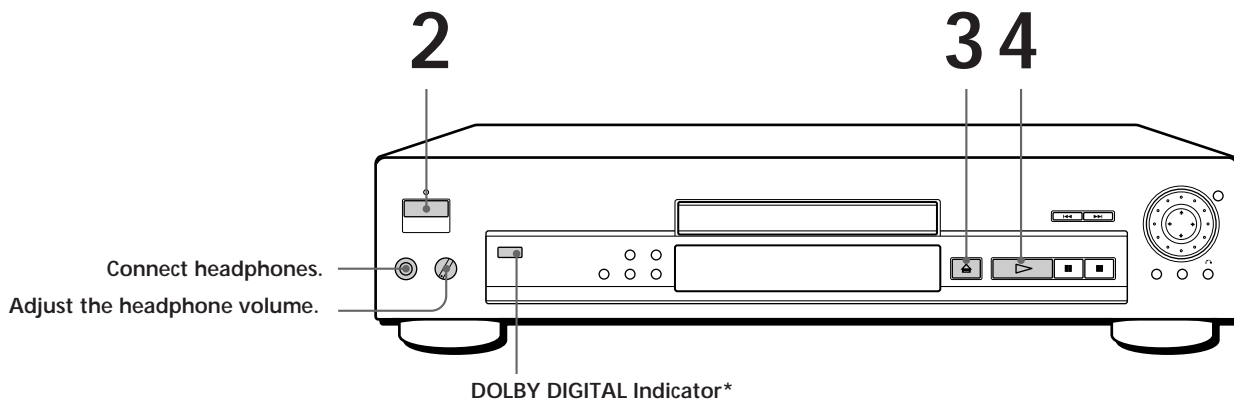

- The operating procedure of CDs or VIDEO CDs is different from that of DVDs. For details, see pages 14 to 17.

You can turn on the player using the remote. Press POWER when the indicator above the POWER button on the front panel is lit in red.

- \* The DOLBY DIGITAL indicator lights up except for the case as follows:
  - you insert a CD or a VIDEO CD.
  - the current audio format is PCM or MPEG Audio.

**Notes**

- If you leave the player or the remote in pause or stop mode for 15 minutes, the screen saver image appears automatically. To disappear the screen saver, press ▷. (If you want to set the screen saver function to off, see page 34.)
- If you don't operate the player or the remote for more than 30 minutes when a disc is not being played, the power is automatically turned off (Auto Power Off function.)

---

**1** **Make settings on your TV.**  
Turn on the TV and select the video input so that you can view the pictures from this player.

**When using an amplifier**


Turn on the amplifier and select the appropriate position so that you can listen to the sound from this player.

---

**2** **Press POWER to turn on the player.**  
The indicator (red) above the POWER button changes to green and the front panel display lights up.

---

**3** **Press , and place the disc on the disc tray.**

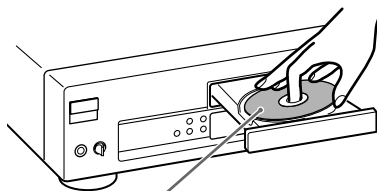

With the playback side facing down

---

**4** **Press .**  
The disc tray closes, and the player starts playback (Continuous Play). Adjust the volume on the TV or the amplifier.


---

After following Step 4  
A DVD menu or title menu may appear on the TV screen (see page 13).

Depending on the DVD, some operations may be different or restricted. Refer to the instructions supplied with your disc.

**💡** When "RESUME" appears on the front panel display  
 You can resume playback from the point where you stopped the DVD. For details on playing from the beginning of the disc, see page 25.

**Note**  
 You may not be able to do Resume Play depending on the DVD.

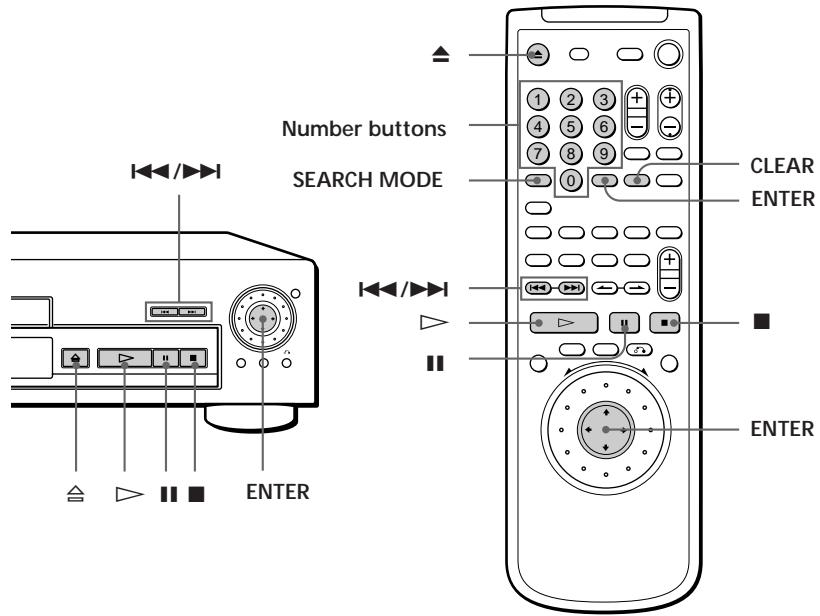

**💡** What are chapter and title?  
 See page 5.

**Notes**  
 Depending on the DVD, you may not be able to do some of the operations described on the right.


**💡** Each time you press SEARCH MODE  
 "CHAPTER SEARCH,"  
 "TITLE SEARCH" and  
 "TIME SEARCH" appear on the TV screen.

To	Press
Stop	■
Pause	⏸
Resume play after pause	⏸ or ▷
Go to the next chapter in Continuous Play mode	▶▶
Go back to the preceding chapter in Continuous Play mode	◀◀
Select the chapter	1 SEARCH MODE repeatedly until "CHAPTER SEARCH" appears on the TV screen. 2 Number buttons to select the chapter number, then ENTER or ▷.
Select the title	1 SEARCH MODE repeatedly until "TITLE SEARCH" appears on the TV screen. 2 Number buttons to select the title number, then ENTER or ▷.
Locate a point using the time code	1 SEARCH MODE repeatedly until "TIME SEARCH" appears on the TV screen. 2 Number buttons to enter a time code, then ENTER or ▷.
Stop play and remove the disc	▲

If you have made a mistake when you press the number button.  
 Press CLEAR, then the correct number button.

## To play at various speeds/frame-by-frame

Using the click shuttle and the JOG button/indicator, you can playback a DVD with various speed or frame-by-frame. Each time you press JOG, it changes between shuttle mode and jog mode.

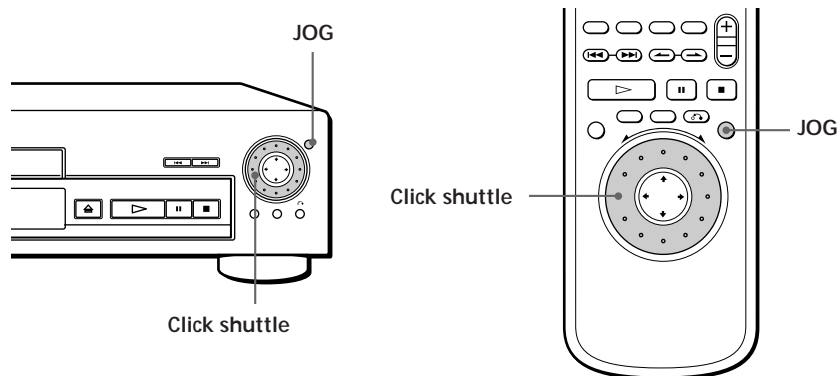

### Notes

- Depending on the DVD, you may not be able to do some of the operations described on the right.
- When you play back a DVD at twice the normal speed in either direction, the sounds of the picture will come out from the LINE OUT (AUDIO 1, 2) connectors. The sounds are lower than the ones at normal speed. In this case, no sounds come out from the DIGITAL OUT OPTICAL and COAXIAL connectors. But there is no sound when you set "MODE" in "5.1 OUTPUT SETUP" to "VES A" or "VES B" (page 40).


### Notes

- The JOG indicator shows the mode of the click shuttle close to the indicator only. When the indicator on the remote does not light up, it keeps shuttle mode on the remote even if the indicator on the player lights up.
- If you don't operate the click shuttle for about 20 seconds after pressing JOG, it returns to shuttle mode on the remote. On the player, it keeps jog mode.

### ■ To change the playback speed (Shuttle mode)

Turn the click shuttle. The playback speed changes depending on the turning direction and angle as follows:

- FF2▶▶ (about 30 times the normal speed)
- ↕
- FF1▶▶ (about 10 times the normal speed)
- ↕
- ×2▶ (about twice the normal speed)
- ↕
- PLAY▶ (Normal speed)
- ↕
- SLOW1▶▶ (playback direction)
- ↕
- SLOW2▶▶ (playback direction  
- slower than "SLOW1▶▶")
- ↕
- PAUSE||
- ↕
- SLOW2◀◀ (opposite direction  
- slower than "SLOW1◀◀")
- ↕
- SLOW1◀◀ (opposite direction)
- ↕
- ×2◀ (about twice the normal speed : opposite direction)
- ↕
- FR1◀◀ (about 10 times the normal speed)
- ↕
- FR2◀◀ (about 30 times the normal speed)

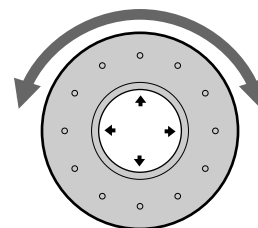

If you turn the click shuttle quickly, the playback speed goes to FF2▶▶/FR2◀◀ at once.

### ■ To play the DVDs frame-by-frame changing the playback speed (Jog mode)

- 1 Press JOG.  
JOG lights up during jog mode. When you press JOG on the player, it becomes pause.
- 2 Turn the click shuttle.

Depending on the turning speed, the playback goes to frame-by-frame toward the turning direction of the click shuttle. If you turn the click shuttle with constant speed for a while, the playback speed goes to slow or normal.

### ■ To return to Continuous Play


Press ▷.

Notes

- Depending on the DVD, you may not be able to select the title.
- Depending on the DVD, a “title menu” may simply be called a “menu” or “title” in the instructions supplied with the disc. “Press ENTER.” may also be expressed as “Press SELECT.”

Using the Title Menu

A DVD is divided into long sections of a picture or a music piece called “titles.” When you play the DVD which contains several titles, you can select the title you want using the title menu.

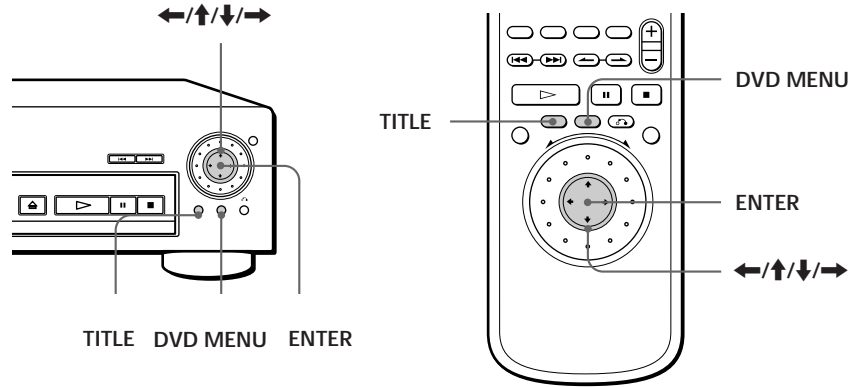


- 1 Press TITLE.  
The title menu appears on the TV screen. The contents of the menu varies from disc to disc.
- 2 Press ←/↑/↓/→ to select the title you want to play.  
Depending on the disc, you can use the number buttons to select the title.
- 3 Press ENTER.  
The player starts playing the selected title.

Using the DVD menu


Some DVDs allow you to select the disc contents using the menu. When you play these DVDs, you can select the language for the subtitles, the language for the sound, etc., using the DVD menu.

- 1 Press DVD MENU.  
The DVD menu appears on the TV screen. The contents of the menu vary from disc to disc.
- 2 Press ←/↑/↓/→ to select the item you want to change.  
Depending on the disc, you can use the number buttons to select the item.
- 3 To change other items, repeat Step 2.
- 4 Press ENTER.

 If you want to select the language for the DVD menu Change the setting using “LANGUAGE SETUP” in the setup display (see page 33).

Note  
Depending on the DVD, a “DVD menu” may simply be called a “menu” in the instructions supplied with the disc.

# Playing a CD/VIDEO CD

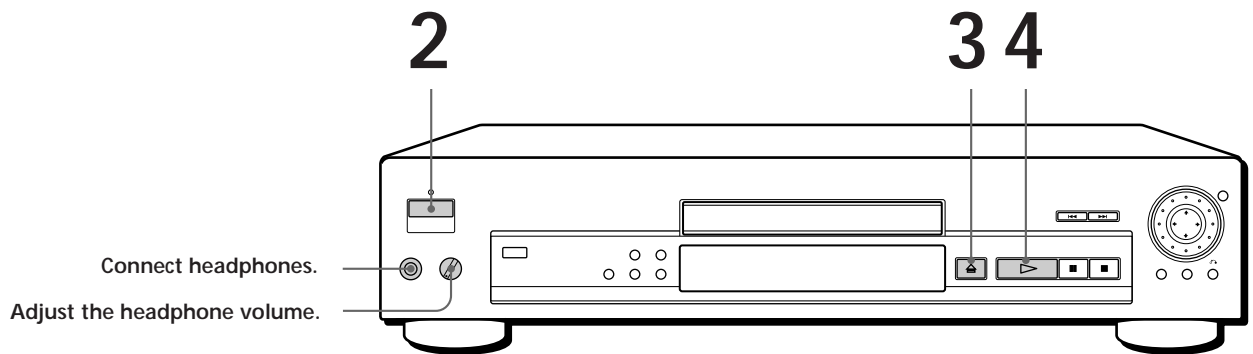

- The operating procedure of DVDs is different from that of CDs or VIDEO CDs. For details, see pages 10 to 13.

You can turn on the player using the remote  
Press POWER when the indicator above the POWER button on the front panel is lit in red.

After following Step 4  
The menu screen may appear on the TV screen depending on the VIDEO CD. You can play the disc interactively, following the instructions on the menu screen. (PBC Playback, see page 17.)

**Notes**

- If you leave the player or the remote in pause or stop mode for 15 minutes, the screen saver image appears automatically. To disappear the screen saver, press . (If you want to set the screen saver function to off, see page 34.)
- If you don't operate the player or the remote for more than 30 minutes when a disc is not being played, the power is automatically turned off (Auto Power Off function.)

---

**1** **Make settings on your TV.**  
Turn on the TV and select the video input so that you can view the pictures from this player.

**When using an amplifier**


Turn on the amplifier and select the appropriate position so that you can listen to the sound from this player.

---

**2** Press POWER to turn on the player.  
The indicator (red) above the POWER button changes to green and the front panel display lights up.

---

**3** Press and place the disc on the disc tray.

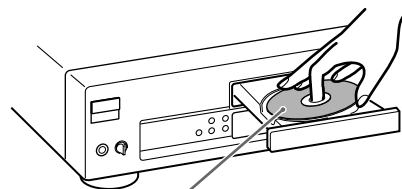


With the label side facing up


---


**4** Press .  
The disc tray closes and the player starts playback (Continuous Play). Adjust the volume on the TV or the amplifier.


---


Depending on the VIDEO CD, some operations may be different or restricted. Refer to the instructions supplied with your disc.


 When "RESUME" appears on the front panel display  
You can resume playback from the point where you stopped the CD/VIDEO CD. For details on playing from the beginning of the disc, see page 25.

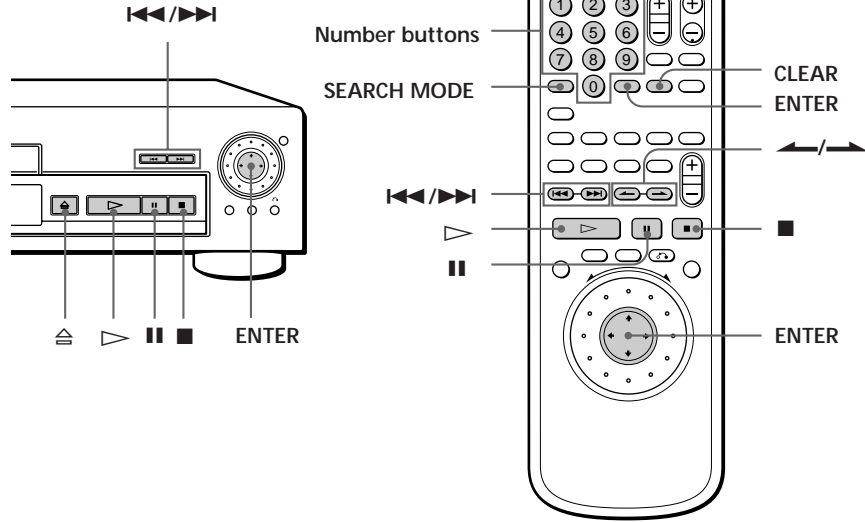

 What is a track?  
See page 5.

 What is an index?  
See page 5.

 What is a scene?  
See page 5.

 If you want to change the search mode  
Press SEARCH MODE. Each time you press in case of a VIDEO CD, "SCENE SEARCH," "TRACK SEARCH" and "V. (VIDEO) INDEX SEARCH" appear on the TV screen. In case of a CD, only "TRACK SEARCH" appears.


**Note**  
Some discs do not allow you to start playing from a particular scene. In this case, if you do Scene Search before you start playing, the player starts playing from scene 1. If you do Scene Search while playing a disc, the player starts playing from the current scene.

To	Press
Stop	■
Pause	⏸
Resume play after pause	⏸ or ▷
Go to the next track in Continuous Play mode	▶▶
Go back to the preceding track in Continuous Play mode	◀◀
Go to the next index	➡
Go back to the preceding index	➡
Select the track	1 SEARCH MODE repeatedly until "TRACK SEARCH" appears on the TV screen. 2 Number buttons to select the track number, then ENTER or ▷.
Select the scene before you start playing a VIDEO CD with PBC functions and during PBC playback (Scene Search)	1 SEARCH MODE repeatedly until "SCENE SEARCH" appears on the TV screen. 2 Number buttons to select the scene number, then ENTER or ▷. (To check the current scene number, press DISPLAY. The scene number appears at the left top of the TV screen.)
Stop play and remove the disc	▲

If you have made a mistake when you press the number button.  
Press CLEAR, then the correct number button.

**To play at various speeds / frame-by-frame**

Using the click shuttle and the JOG button/indicator, you can playback a CD/VIDEO CD with various speed or frame-by-frame. Each time you press JOG, it changes between shuttle mode and jog mode.


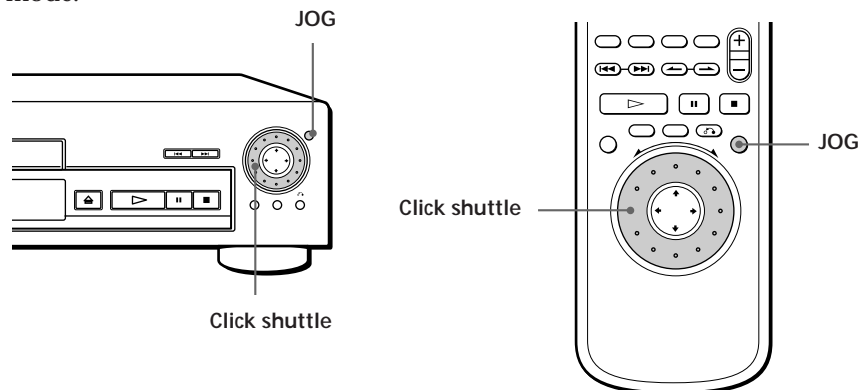


**Notes**

- Depending on the VIDEO CD, you may not do some of the operations described on the right.
- When you play a VIDEO CD, there is no sound except for the playback at normal speed.

■ To change the playback speed (Shuttle mode)

Turn the click shuttle. The playback speed changes depending on the turning direction and angle as follows:

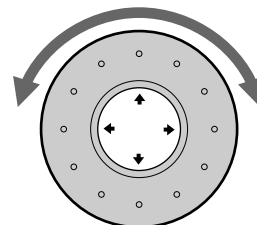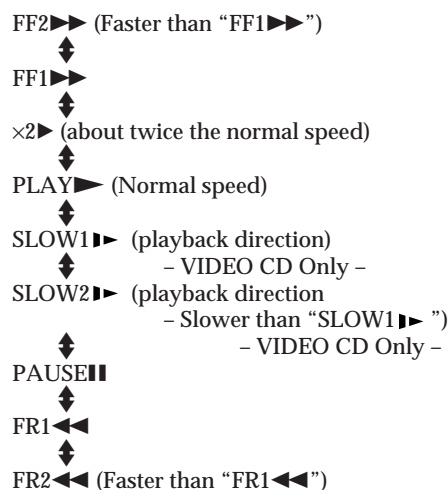

If you turn the click shuttle quickly, the playback speed goes to FF2/FR2 at once.

■ To play the VIDEO CDs frame-by-frame changing the playback speed (Jog mode – VIDEO CD Only)

- 1 Press JOG.  
JOG lights up during jog mode. When you press JOG on the player, it becomes pause.
- 2 Turn the click shuttle.


Depending on the turning speed, the playback goes to frame-by-frame toward the playback direction only. If you turn the click shuttle with constant speed for a while, the playback speed goes to slow or normal.


■ To return to Continuous Play

 

 
 


Press  $\triangleright$ .

**Notes**

- The JOG indicator shows the mode of the click shuttle close to the indicator only. When the indicator on the remote does not light up, it keeps shuttle mode on the remote even if the indicator on the player lights up.
- If you don't operate the click shuttle for about 20 seconds after pressing JOG, it returns to shuttle mode on the remote. On the player, it keeps jog mode.

 When playing VIDEO CDs with PBC functions PBC playback starts automatically.






 To cancel PBC playback of a VIDEO CD with PBC functions and play the disc in Continuous Play mode There are two ways.


- Before you start playing, select the track you want using  or , then press ENTER or .
  - Before you start playing, select the track number using the number buttons on the remote, then press ENTER or .
- “Play without PBC” appears on the TV screen and the player starts Continuous Play. You cannot play still pictures such as a menu screen. To return to PBC playback, press  twice then press .

### Playing VIDEO CDs with PBC Functions (PBC Playback – VIDEO CD Only)

When playing VIDEO CDs with PBC functions (Ver. 2.0 discs), you can enjoy simple interactive operations, operations with search functions, etc.


PBC Playback allows you to play VIDEO CDs interactively, following the menu screen on the TV screen.

On this player, you can use the number buttons, ENTER, or /SELECT, , ,  and  (RETURN) during PBC Playback.

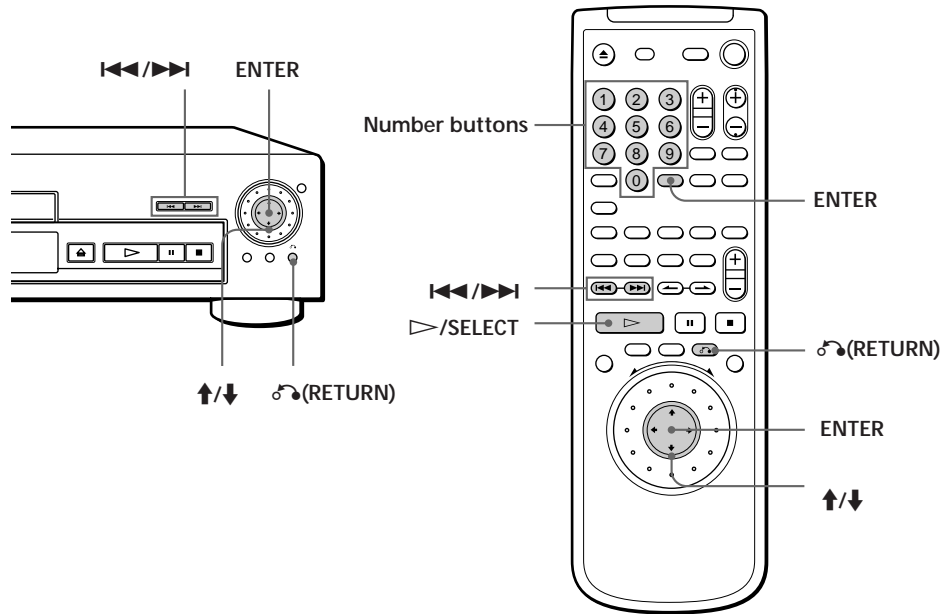

**Note**  
Depending on the VIDEO CD, “Press ENTER” in Step 3 may be expressed as “Press SELECT” in the instructions supplied with the disc.

**1** Start playing a VIDEO CD with PBC functions, following Steps 1 to 4 in “Playing a VIDEO CD” on page 14.

**2** Select the item number you want.  
On the player  
Press  to select the item number.

On the remote  
Press the number button of the item you want.

**3** Press ENTER or /SELECT.

**4** Follow the instructions on the menu screen for interactive operations.  
Refer to the instructions supplied with the disc, as the operating procedure may differ according to the VIDEO CD.

### Going back to the menu screen


Press , , or .




## Using the On-Screen Display



You can check the operating status of the player and the information about the disc using the on-screen display on the TV screen.

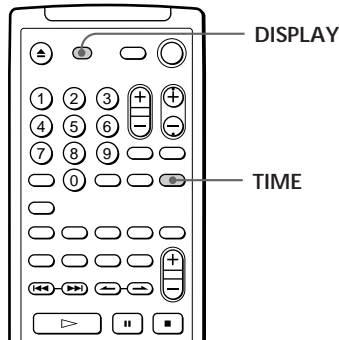


### ■ Display information of the on-screen display 2 mode

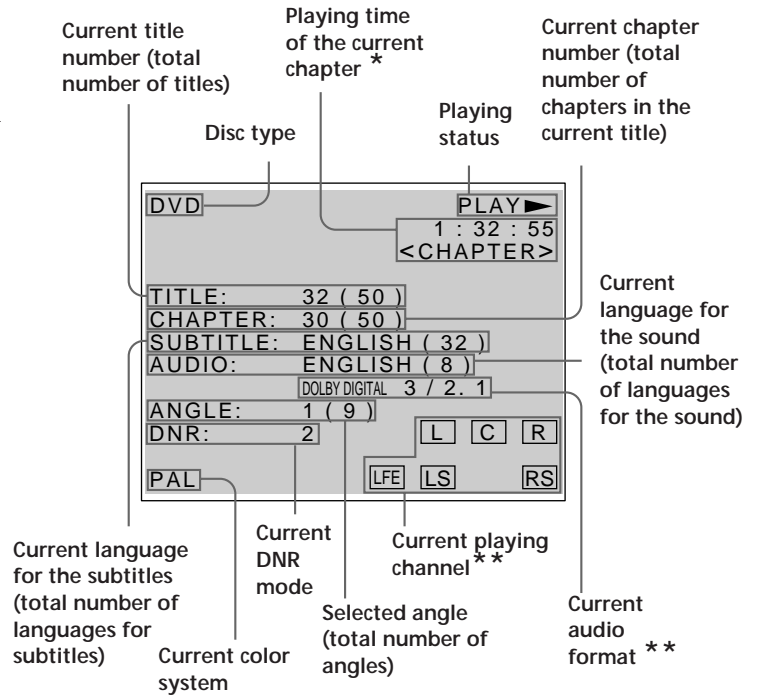

### Note

Some information may not be displayed depending on a DVD.

\* In display 1 or 2 mode, each time you press TIME the information changes as shown below.

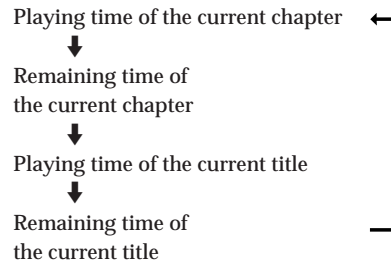


\*\* See page 41 for details.

### When playing back or stopping a DVD




Press DISPLAY.

Each time you press the button, the on-screen display changes as follows:

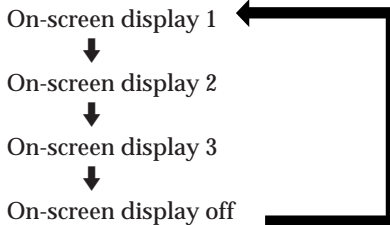


### ■ Display information of the on-screen display 1 mode

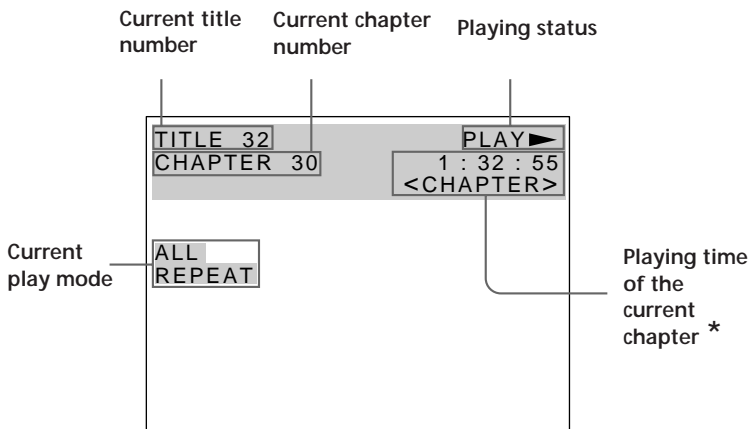

### ■ Display information of the on-screen display 3 mode

While playing a disc, the approximate bit rate of the playback picture is always displayed by Mbps (Mega bit per second).

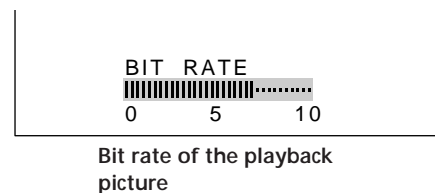

### What is bit rate?

Bit rate refers to the amount of video data per second in a disc. The higher the bit rate is, the larger the amount of data. However, this does not always mean that you can get higher quality pictures.


- Display information of the on-screen display off mode  
No information is displayed. (Messages, etc., will be displayed.)

## When playing back or stopping a CD/VIDEO




Press DISPLAY.


Each time you press the button, the on-screen display changes as follows:

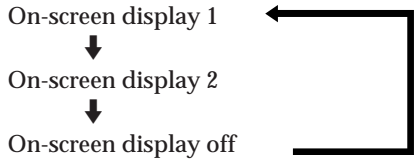


- Display information of the on-screen display 1 mode

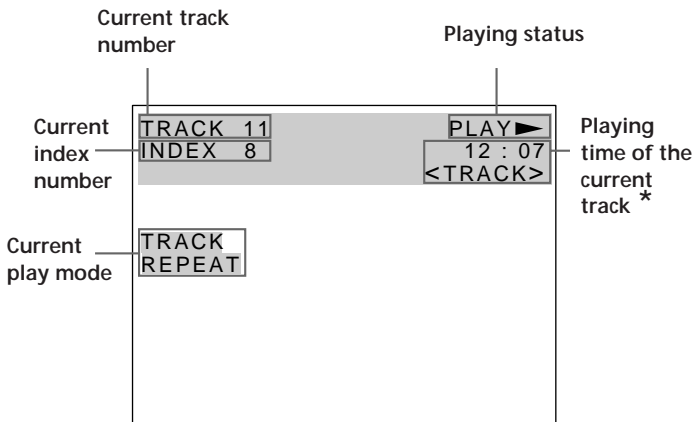


- During PBC playback (VIDEO CD Only)

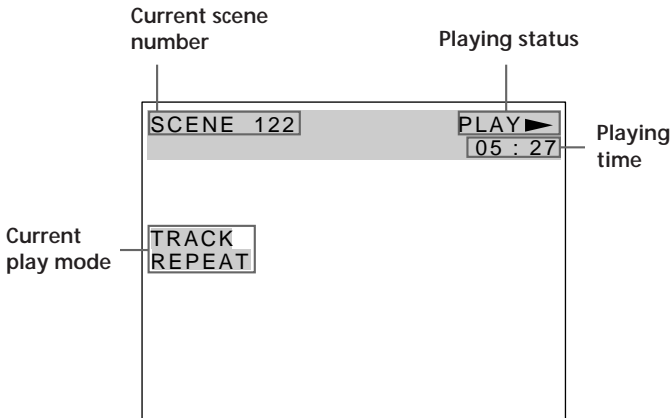


- Display information of the on-screen display 2 mode

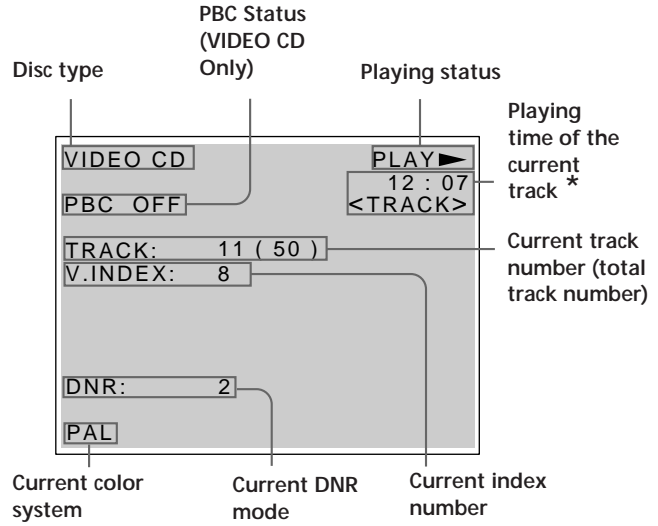

- During PBC playback (VIDEO CD Only)

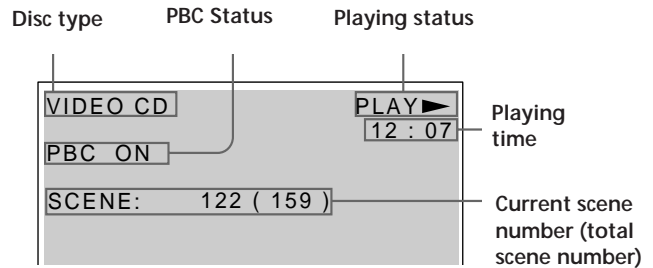

\* In display 1 or 2 mode, each time you press TIME, the information changes as shown below.

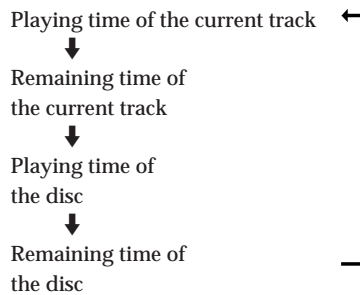


While you are doing Shuffle Play, Program Play, or PBC Playback, the playing time of the disc and the remaining time of the disc are not displayed.

- Display information of the on-screen display off mode  
No information is displayed. (Messages, etc., will be displayed.)

## Using the Front Panel Display




You can check information about the disc, such as the total number of the titles or the tracks or remaining time, using the front panel display.

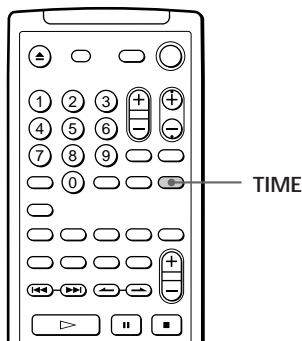

### When playing back a DVD

■ Display information while playing the disc

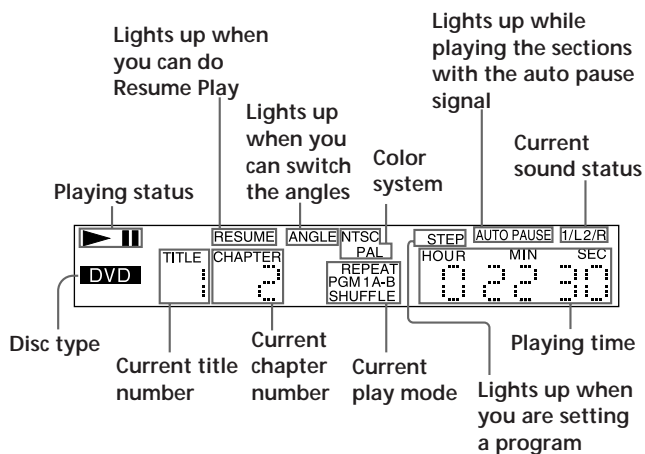


■ Checking the remaining time


Press TIME.

Each time you press TIME while playing the disc, the display changes as shown in the following chart. The time information in the on-screen display 1 or 2 mode also changes each time you press TIME.

 
Playing time and number of the current chapter

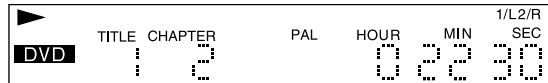


Remaining time of the current chapter

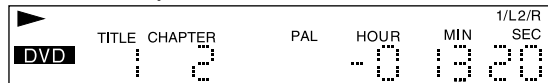 

 Playing time and number of the current title

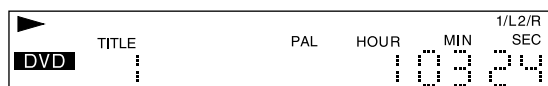

Remaining time of the current title

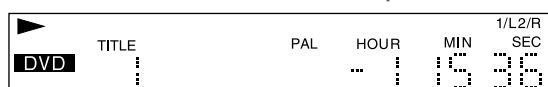 

Press TIME


Notes

- Depending on the DVD, the chapter number or time may not appear.
- While you are doing Shuffle Play or Program Play, the playing time of the disc and the remaining time of the disc are not displayed.

### When playing back a CD/VIDEO CD



■ Display information while playing a disc

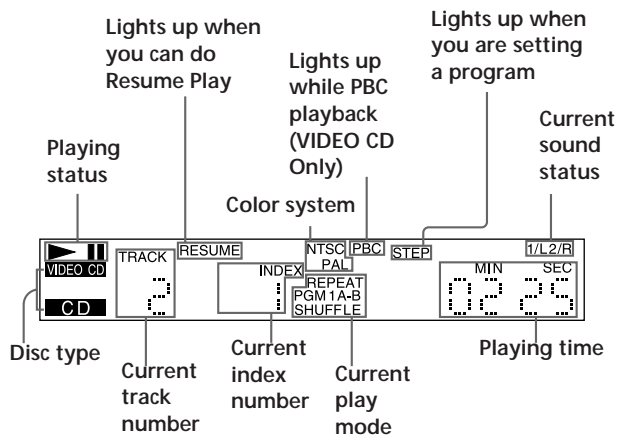

When playing VIDEO CDs with PBC functions


The current scene number is displayed instead of the current track number and the current index number. In this case, the front panel display does not change when you press TIME.

## ■ Checking the remaining time

 Press TIME.


Each time you press TIME while playing a disc, the display changes as shown in the following chart. The time information in the on-screen display 1 and 2 mode also changes each time you press TIME.

Playing time and number of the current track

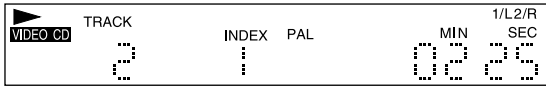


Remaining time of the current track

 Press TIME

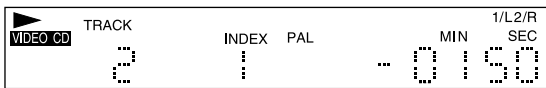


Playing time of the disc

 Press TIME

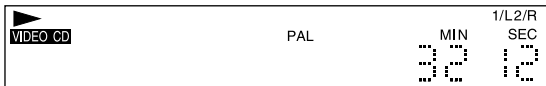

Remaining time of the disc

 Press TIME

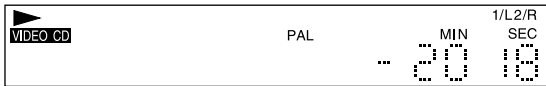


Press TIME

### Note

While you are doing Shuffle Play, Program Play, or PBC playback, the playing time of the disc and the remaining time of the disc are not displayed.

## Playing Repeatedly (Repeat Play)

You can play the all the titles/tracks on a disc, a single title/chapter/track or a specific portion repeatedly.

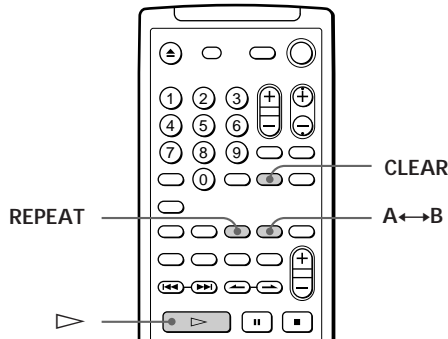

### Repeating all the titles or all the tracks on a disc **DVD** **VIDEO CD** **CD**

In Shuffle or Program Play mode, the player repeats the titles or tracks in the shuffled or programmed order.

You cannot do Repeat Play during PBC playback of VIDEO CDs (page 17). You may not be able to do Repeat Play depending on the DVD.

Press REPEAT during playback.

“ALL REPEAT” appears on the screen and “REPEAT” appears on the front panel display. The player repeats the titles/chapters/tracks as follows:

When the disc is played in	The player repeats
Continuous Play (page 10 or 14)	All the titles/all the tracks
Shuffle Play (page 23)	All the titles or tracks in random order
Program Play (page 24)	Programmed titles /chapters /tracks

To cancel repeating all the titles or all the tracks on a disc  
Press CLEAR.

### Repeating the current title or chapter

#### **DVD**

You can repeat only the current title or chapter in Continuous Play mode. You may not be able to do Repeat Play depending on the DVD.

#### ■ Repeating the current title

While the title you want is being played, press REPEAT repeatedly until “TITLE REPEAT ” appears on the TV screen.

The player repeats the current title.

#### ■ Repeating the current chapter

While the chapter you want is being played, press REPEAT repeatedly until “CHAPTER REPEAT ” appears on the TV screen.

The player repeats the current chapter.

“REPEAT 1” appears on the front panel display.

“CHAPTER” is displayed when you select the current chapter




To cancel repeating the current title or chapter  
Press CLEAR.

### Repeating the current track **VIDEO CD** **CD**

You can repeat only the current track in Continuous Play mode.

While the track you want is being played, press REPEAT until “TRACK REPEAT ” appears on the TV screen.

“REPEAT 1” appears on the front panel display and the player repeats the current track.

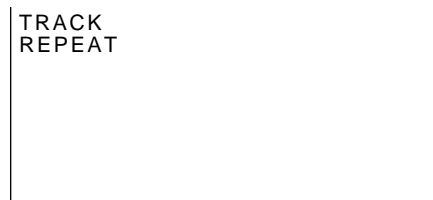

To cancel repeating the current track  
Press CLEAR.

#### Note

Repeat play is canceled when you turn the power off.

## Repeating a specific portion

(A↔B Repeat)   


You can play a specific portion of a title, chapter, track repeatedly. This is useful when you want to memorize lyrics.

During PBC Playback of VIDEO CDs (page 17), this function is available only while playing moving pictures.

You may not be able to do Repeat Play depending on the DVD.

- 1 During playback, when you find the starting point (point A) of the portion to be played repeatedly, press A↔B.

The starting point (point A) is set. "A-B REPEAT" is appears on the TV screen and "B" flashes.

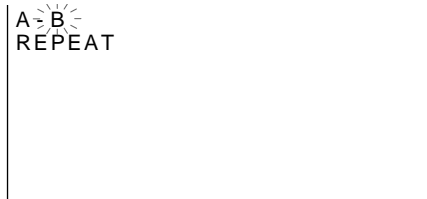

"REPEAT A-" also appears on the front panel display and "B" flashes.

- 2 When you reach the ending point (point B), press A↔B again.

"A-B REPEAT" on the TV screen disappears and the player starts repeating this specific portion.

"REPEAT A-B" appears on the front panel display during A↔B repeat play.

To cancel A↔B Repeat  
Press CLEAR.

To cancel setting halfway  
Press CLEAR.


### Notes


- A↔B Repeat is canceled when:
  - you open or close the disc tray
  - you turn the power off
- When you set A↔B Repeat, the settings for Shuffle Play and Program Play are canceled.
- You may not be able to set A↔B Repeat, depending on the scene of a DVD or a VIDEO CD.

## Playing in Random Order (Shuffle Play)

You can have the player "shuffle" titles or tracks and play them in a random order.

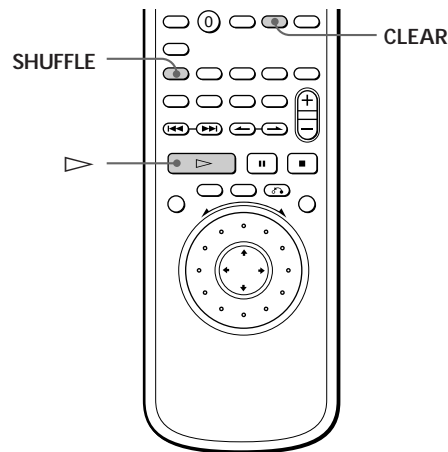

- 1 Press SHUFFLE.
- 2 Press . (During playback, the player starts Shuffle Play when you follow the step 1.)

To cancel Shuffle Play  
Press CLEAR.


### Notes

- The Shuffle Play is canceled when:
  - you open or close the disc tray
  - you turn the power off
- You may not be able to do Shuffle Play depending on the DVD.
- When you play a DVD, you can do Shuffle Play only by titles.

## Creating Your Own Program (Program Play)




You can arrange the order of the titles, chapters or tracks on the disc and create your own program. The program can contain up to 99 titles, chapters and tracks.

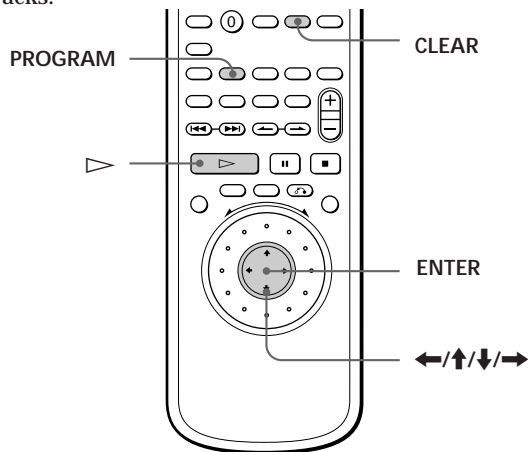


- 1 Press PROGRAM.  
The programming display appears.

"TRACK\_" is displayed when you play a VIDEO CD or a CD.

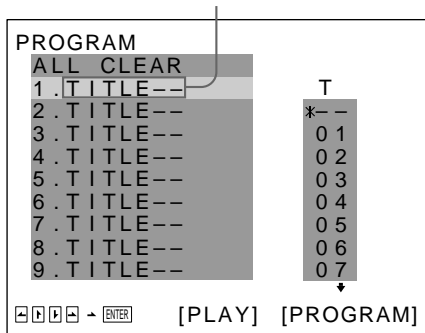



- 2 Press →.  
"01" is highlighted.

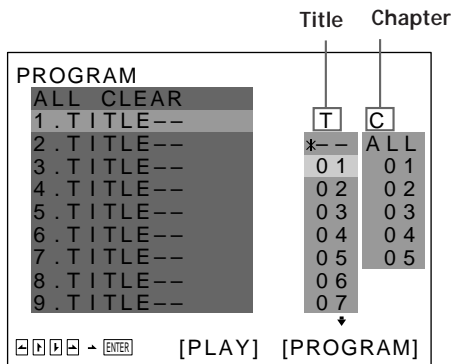

- 3 Select the title, chapter or track you want to program using ↑/↓, then press ENTER.  
For example, select title or track 2.  
(You can also use the number buttons and ENTER button to select. In this case, the selected number is displayed on the screen.)

### When playing a DVD


When both titles and chapters are recorded on the disc, select the title, then the chapter.

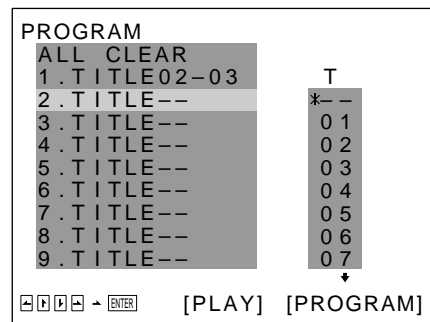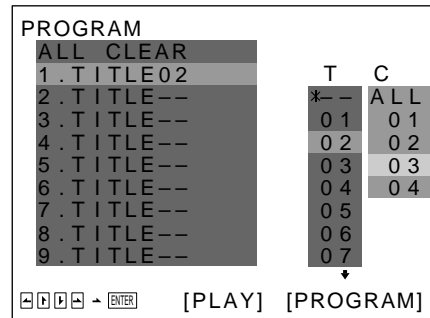


### When playing a VIDEO CD or CD

Select the track you want to program.

Total time of the programmed tracks

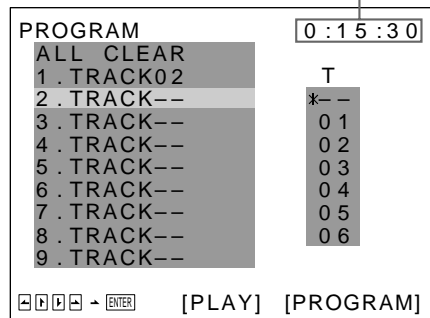

- 4 To program other titles, chapters or tracks, repeat Step 3.  
The programmed titles, chapters or tracks are displayed from 02 in order.

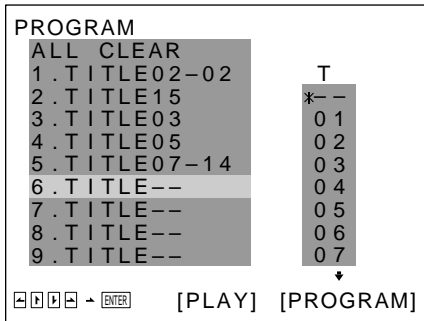

- 5 Press  $\triangleright$  to start Program Play.

To cancel Program Play  
Press CLEAR.

To cancel programming  
Press PROGRAM.

To change programming

- In Step 2, select the program number of the title, chapter or track you want to change using  $\uparrow/\downarrow$ .
- Follow Step 3 for new programming.

To cancel the programmed order

To cancel all the titles, chapters or tracks in the programmed order, select "ALL CLEAR" in Step 2.  
To cancel the selected program, select the program using  $\uparrow/\downarrow$  in Step 2 then press CLEAR, or select "-" in Step 3 then press ENTER.

The program remains even after the Program Play ends  
When you press  $\triangleright$ , you can play the same program again.

You can do Repeat Play or Shuffle Play of the programmed titles, chapters or tracks  
During Program Play, press REPEAT or SHUFFLE.


#### Notes

- The number of titles, chapters or tracks displayed are that of the titles, chapters or tracks recorded on a disc.
- The program is canceled when:
  - you open or close the disc tray
  - you turn the power off
- You may not be able to do Program Play depending on the DVD.
- While you are doing PBC playback, you cannot set a program unless you stop playback once.

## Resuming Playback from the Point Where You Stopped a Disc (Resume Play)



The player stores the point where you stopped a disc if "RESUME" appears on the front panel display. In this case, you can resume playback from that point. As long as you do not open the disc tray, Resume Play is available even if you turn the power off.

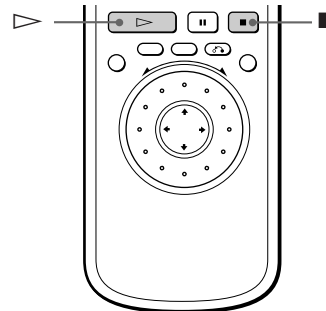

- While playing a disc, press  $\blacksquare$  to stop playback. "RESUME" appears in the front panel display and "When playing next time, disc restarts from point you stopped." appears on the TV screen. If "RESUME" does not appear, Resume Play is not available.
- Press  $\triangleright$ .  
The player starts playback from the point you stopped the disc in Step 1.

To play from the beginning of the disc  
When "RESUME" appears on the front panel display before you start playing, press  $\blacksquare$  to turn off "RESUME," then press  $\triangleright$ .

#### Notes


- You may not do Resume Play depending on the DVD.
- Resume Play is not available in Shuffle or Program Play mode.
- Depending on where you stopped the disc, the player may resume playback from a different point.
- The point where you stopped playing is cleared when:
  - you open or close the disc tray
  - you disconnect the AC power cord
  - you change the play mode
  - you start playback after selecting a title, chapter or track
  - you change the settings of "DVD MENU", "AUDIO" or "SUBTITLE" in "LANGUAGE SETUP" in the setup display
  - you change the settings of "TV TYPE", "PARENTAL CONTROL" in "INITIAL SETUP 1" in the setup display



## Reducing the Picture Noise (DNR: Digital Video Noise Reduction)




You can make the picture clearer by reducing the picture noise.

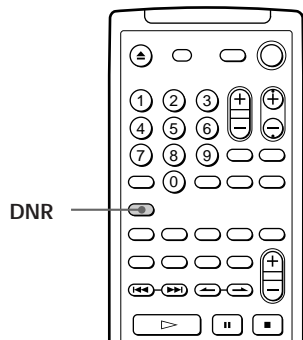

Press DNR.

 Each time you press the button, the value for DNR changes as follows:

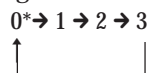

\* 0 means that DNR is off.

As the value increases, the picture noise will be reduced. However, afterimages may increase.

### Notes


- Depending on the disc, the effect may be difficult to tell.
- If the afterimages appear on the TV screen, set the noise reduction function to off on your TV. Then set DNR to "0" on the player.

## Changing the Sounds



With DVDs on which multilingual sounds are recorded, you can select the language you want while playing the DVD.

With multiplex VIDEO CDs, you can select the sound from the right or left channel and listen to the sound of the selected channel through both the right and left speakers. In this case, the sound loses the stereo effect.

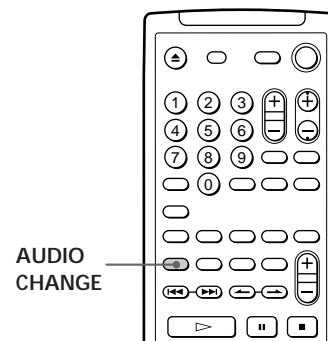

Press AUDIO CHANGE while playing a disc.

Each time you press the button, the indication and the language/sound from the speakers change as follows:

### ■ When playing a DVD

AUDIO 1 → AUDIO 2 → .....



### ■ When playing a VIDEO CD or a CD

1/L : The sound of the left channel



2/R : The sound of the right channel



STEREO (1/L 2/R) : The standard stereo sound




### Notes

- Depending on the DVD, you may not be able to change the languages even if multilingual sounds are recorded on the DVD.
- While playing the CD/VIDEO CD, the standard stereo playback will be resumed when:
  - you open or close the disc tray
  - you turn the power off
- While playing the DVD, the sound may be changed when:
  - you open or close the disc tray
  - you change the title
- If the language is displayed as 4 digits number, refer to the language code list in page 52.

## Displaying the Subtitles

**DVD**

With DVDs on which subtitles are recorded, you can turn the subtitles on and off whenever you want while playing the DVD. With DVDs on which multilingual subtitles are recorded, you can change the subtitle language whenever you want while playing the DVD.

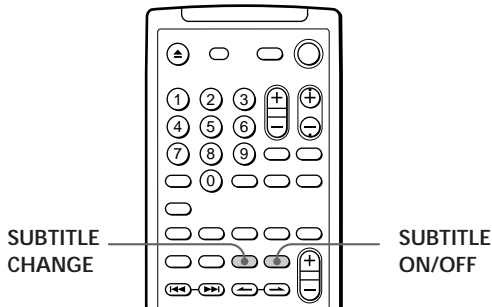

### Turning the Subtitles On and Off

Press SUBTITLE ON/OFF while playing a DVD. Subtitles appear on the TV screen.

To turn off the subtitles  
Press SUBTITLE ON/OFF again.


#### Notes

- When playing the DVD on which no subtitles are recorded, no subtitles appear even if you press SUBTITLE ON/OFF.
- Depending on the DVD, you may not be able to turn the subtitles on even if they are recorded on the DVD.
- Depending on the DVD, you may not be able to turn the subtitles off.
- If the language is displayed as 4 digits number, refer to the language code list in page 52.

### Changing the Subtitle Language

When subtitles are turned off, press SUBTITLE ON/OFF to turn on the subtitles.

While playing a DVD, press SUBTITLE CHANGE repeatedly until the subtitles you want appear on the TV screen.

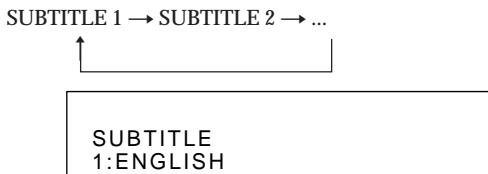


#### Notes



- The type and number of languages for subtitles vary from disc to disc.
- Depending on the DVD, you may not be able to change the subtitles even if multilingual subtitles are recorded on the DVD.
- While playing the DVD, the subtitle may be changed when:
  - you open or close the disc tray
  - you change the title

## Changing the Angles **DVD**

With DVDs on which various angles (multi-angles) for a scene are recorded, you can change the angles whenever you want while playing the DVD.

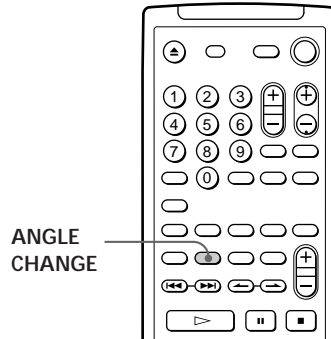

  When "ANGLE" appears on the front panel display while playing a DVD, press ANGLE CHANGE repeatedly until you get the angle you want.

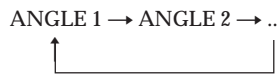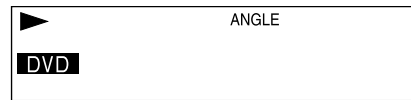

#### You can specify the angle beforehand


Specify the angle when "ANGLE" is not displayed on the front panel display. When a scene on which multi-angles are recorded comes, the angle is automatically selected.

#### Notes


- The number of angles varies from disc to disc or from scene to scene. The number of angles that can be changed on a scene is that of angles recorded for that scene.
- Depending on the DVD, you may not be able to change the angles even if multi-angles are recorded on the DVD.

## Limiting Playback by Children (Parental Control)


Playing some DVDs can be limited depending on the age of users. The “Parental Control” function allows you to set a playback limitation level.

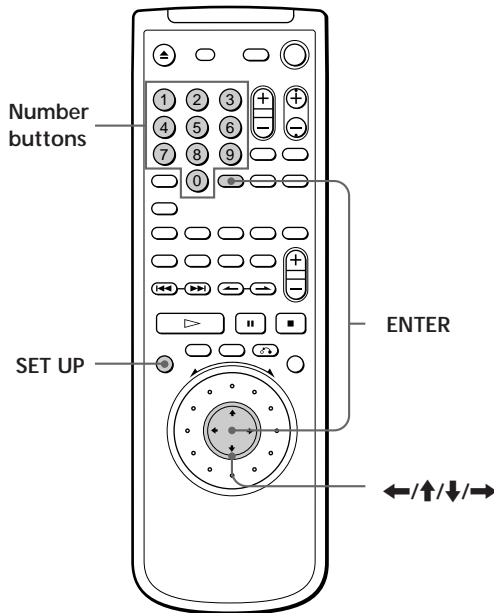

- 1 Press SET UP to display the setup display on the TV screen before playing.

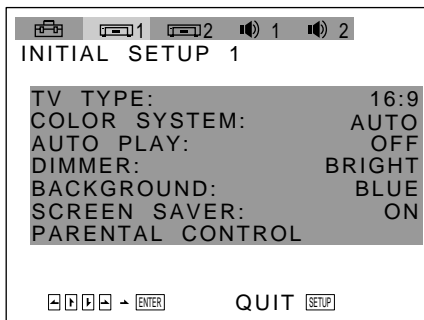


- 2 Select “INITIAL SETUP 1” using ←/→, then press ↓ or ENTER.

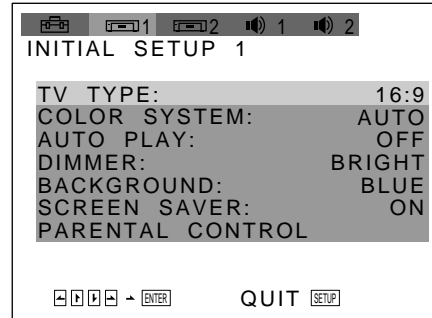


- 3 Select “PARENTAL CONTROL” using ↑/↓, then press ENTER.


- When you have not entered a password yet  
The display for entering a password appears.

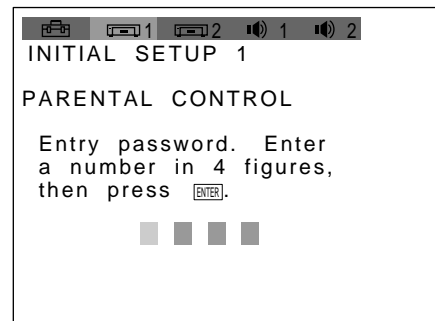


- When you have already entered a password  
The display for confirming the password appears.  
Skip Step 4.

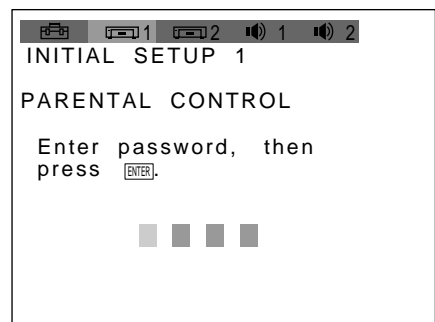


- 4 Enter a password in 4 figures using the number buttons, then press ENTER. The figures change to asterisks (\*), and the display for confirming the password appears.

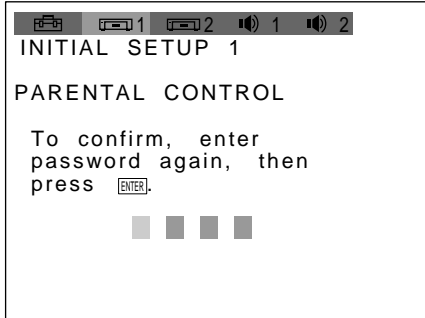


- 5 To confirm your password, enter it using the number buttons, then press ENTER. The display for setting the playback limitation level and changing the password appears.

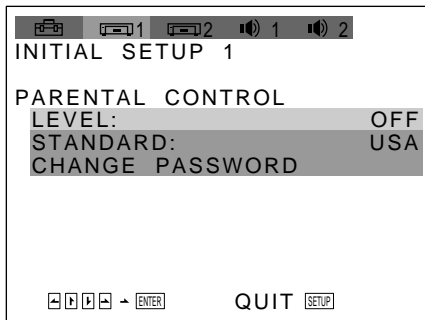


- 6 Select "STANDARD" using ↑/↓, then press →.

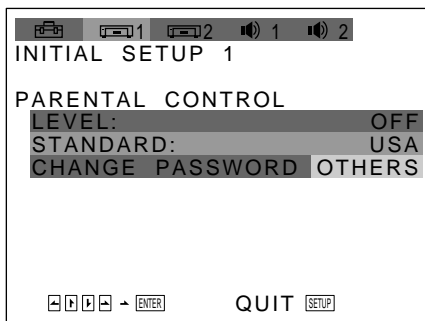


- 7 Select an area as the standard for playback limitation level using ↑/↓, then press →. When you select "OTHERS", select and enter the standard code in the table below using number buttons.

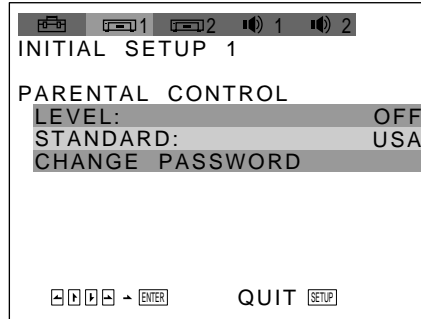

- 8 Select "LEVEL" using ↑/↓, then press →.

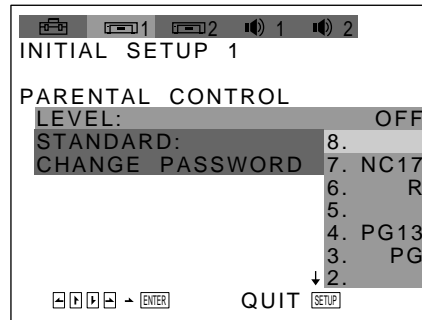

- 9 Select the level you want using ↑/↓, then press ENTER.

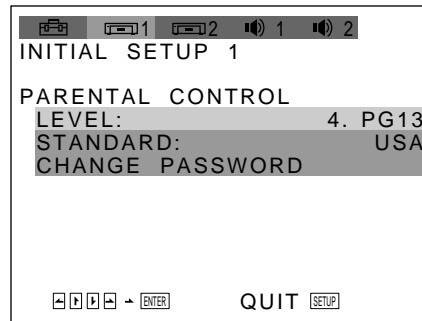

The lower the value is, the more strict the limitation.

To return to the normal screen  
Press SET UP.

To turn off the Parental Control function and play the DVD after entering your password  
Set "LEVEL" to "OFF" in Step 9, then press ▷.

(Continued)

To change the password

- In Step 5, select "CHANGE PASSWORD" using  $\uparrow/\downarrow$ , then press  $\rightarrow$  or ENTER.  
The display for changing the password appears.
- Follow Steps 4 and 5 to enter a new password.



### If you have forgot your password


Enter 6 digits number "199703" in Step 4 to clear the current password. To enter a new password, follow the procedure from Step 4 again.

### Notes


- When you play DVDs which do not have the Parental Control function, playback cannot be limited on this player.
- When you do not set a password, you cannot change the settings for playback limitation.
- Depending on the DVD, you may be asked to change the parental control level while playing the disc. In this case, enter the password, then change the level.  
When you stop playing the DVD, the level returns to the original level.

Standard	Code number
Austria	2046
Belgium	2057
Canada	2079
China	2092
Denmark	2115
Finland	2165
France	2174
Germany	2109
Hong Kong	2219
Indonesia	2238
Italy	2254
Japan	2276
Malaysia	2363
Netherlands	2376
Norway	2379
Philippines	2424
Singapore	2501
Spain	2149
Sweden	2499
Switzerland	2086
Taiwan	2543
Thailand	2528
United Kingdom	2184

## Controlling the TV or the AV Amplifier (Receiver) with the Supplied Remote

If you adjust the remote signal, you can control your TVs with the supplied remote. Default setting is to control Sony TVs with the  mark.

When you connect the player to a Sony amplifier, you can also set the input of the amplifier to this player with the supplied remote .

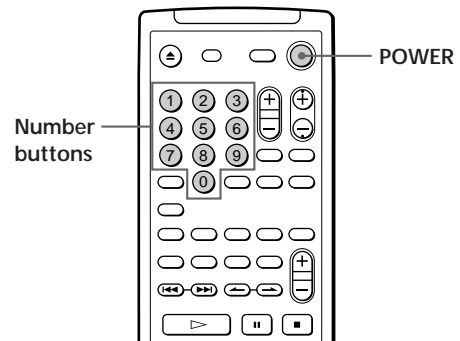

### Controlling TVs with the remote

Hold down POWER, and enter your TV's manufacturer's code in the table below using the number buttons. Then release POWER.

#### Code numbers of controllable TVs


If more than one code number is listed, try entering them one at a time until you find the one that works with your TV.

#### Notes

- If you enter a new code number, the code number previously entered will be erased.
- When you replace the batteries of the remote commander, the code number automatically resets to 01 (Sony). Reset the appropriate code number.

Manufacturer	Code number	Manufacturer	Code number
Sony (default)	01	Sharp	29
Gold Star	03, 04	Aiwa	32
Philips	06, 08	JVC	33
Miver	09	Toshiba	38
Blaupunkt	10, 21	Siemens	39
Grundig	11	Thomson	43
Saba	12, 13	Loewe	45
Panasonic	17, 49	Orion	47, 48
Samsung	23	Ferguson	52
Hitachi	24	NEC	66
Sanyo	25	TEAC	67
Pioneer	26	Akai	68
Mitsubishi	27, 28, 50	Nokia	69

You can control your TV using the buttons below.

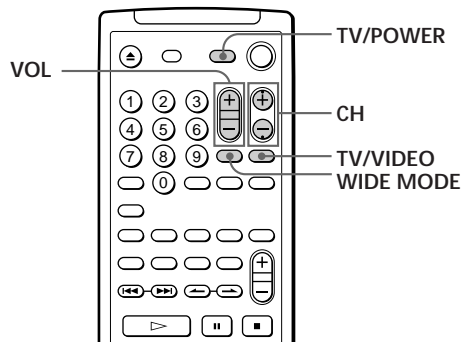

By pressing	You can
TV POWER	Turn on or off the TV
TV/VIDEO	Select the input source for the TV
WIDE MODE	Switches the wide mode of the TV
VOL	Adjust the volume of the TV
CH	Change the channel of the TV

### Note

Depending on the TV, you may not be able to control your TV or to use some buttons above.


## Controlling Sony AV amplifier with the remote

Hold down POWER, and enter your AV amplifier's input connector code in the table below using the number buttons.\* Then release POWER.

Amplifier connector	Code number
VIDEO 1	91
VIDEO 2	92
VIDEO 3	93
AUX 1	94
LD/DVD (default setting)	95
AC-3	96
TV	97

\* If you connect the player to the SONY Mini Hi-Fi Component System, enter "98".

When you press AV CENTER on the supplied remote, you can set the input of AV amplifier to the player.\*\* You can also change the volume of the sound using AV VOL.

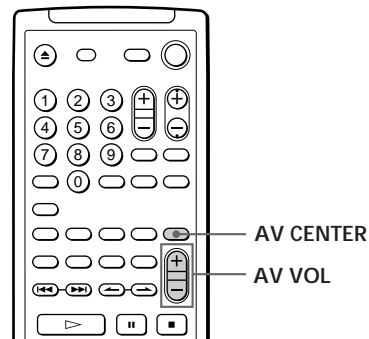


\*\* If you connect the player to the SONY Mini Hi-Fi Component System, press AV CENTER repeatedly to change the input of the system.

## Using the Setup display


Using the setup display, you can do the initial setup, adjusting the picture and sound quality, setting the various outputs, etc. You can also set a language for the subtitles and the setup display, limit playback by children, etc.

For details on each setup display item, see pages 33 to 35. If you want to change the settings for 5.1 channel, see pages 36 to 41.


The setup display items are listed in page 51.

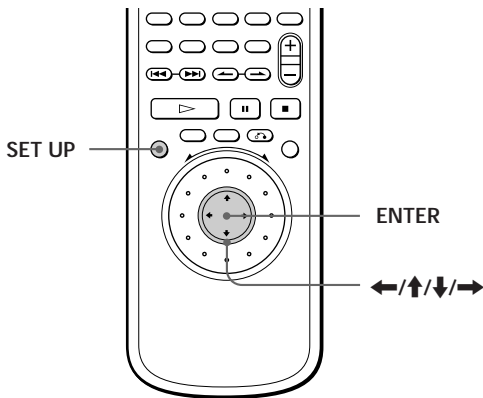


- 1 Press SET UP to display the setup display on the TV screen.

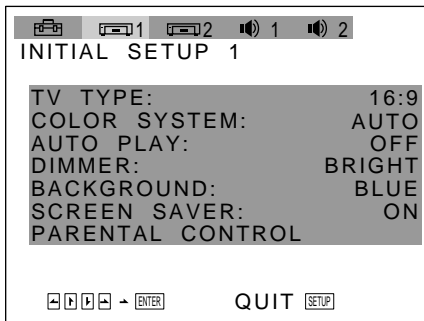


- 2 Select the main item you want using ←/→, and then press ENTER. The selected main item is highlighted.

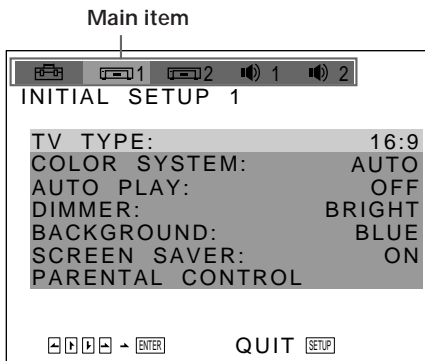

- 3 Select the item you want using ↑/↓, then press → or ENTER.

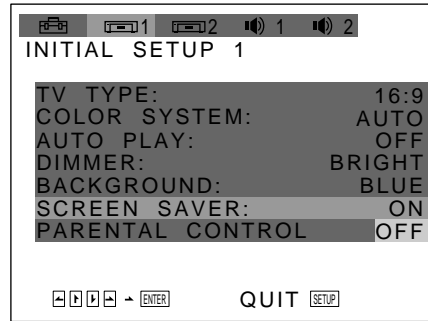

- 4 Select the setting you want using ↑/↓, then press ENTER.

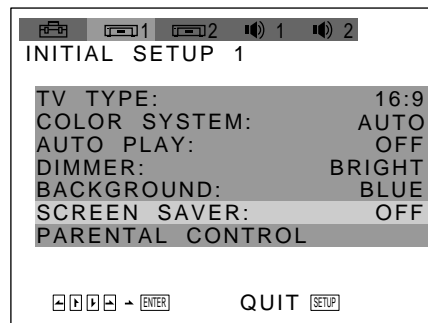

To cancel using the setup display on the way Press SET UP.

### Note

Some setup display items require operations other than selecting the setting. For details on these items, see the relevant pages.


## Setting the Language for Display and Sound (LANGUAGE SETUP)

Select “

“LANGUAGE SETUP” allows you to set various languages for on-screen display or sound. Default settings are underlined.

### Note

When you select a language that is not recorded on the DVD, one of the recorded languages is automatically selected except for “OSD”.

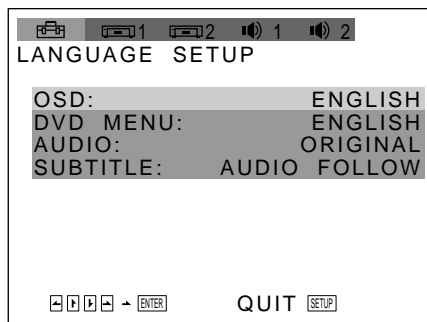

### ■ OSD (On-Screen Display)

Switches the language for the on-screen display.

- ENGLISH
- CHINESE

### ■ DVD MENU

Switches the language for the DVD menu.

- ENGLISH
- CHINESE
- SPANISH
- PORTUGUESE
- JAPANESE
- FRENCH
- GERMAN
- ITALIAN
- DUTCH
- OTHERS➔

When you select “OTHERS,” select and enter the language code from the list using the number buttons (page 52).

### ■ AUDIO

Switches the language for the sounds.

- ORIGINAL : the language given the priority in the disc
- ENGLISH
- CHINESE
- SPANISH
- PORTUGUESE
- JAPANESE
- FRENCH
- GERMAN
- ITALIAN
- DUTCH
- OTHERS➔

When you select “OTHERS,” select and enter the language code from the list using the number buttons (page 52).

### ■ SUBTITLE

Switches the language for the subtitles.

- AUDIO FOLLOW\*
- ENGLISH
- CHINESE
- SPANISH
- PORTUGUESE
- JAPANESE
- FRENCH
- GERMAN
- ITALIAN
- DUTCH
- OTHERS➔


When you select “OTHERS,” select and enter the language code from the list using the number buttons (page 52).

\* When you select “AUDIO FOLLOW,” the language for the subtitles change according to the language for the sound.



## Settings for Display (INITIAL SETUP 1)

Select “ 1” after pressing SET UP.  
 “INITIAL SETUP 1” allows you to set the display according to the playback conditions.  
 Default settings are underlined.

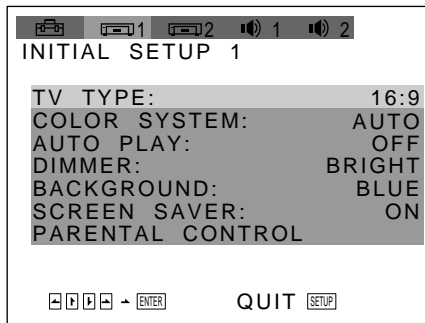


### ■ TV TYPE

Selects the aspect ratio of the TV to be connected.

- 16:9: when you connect a wide-screen TV to the player.
- 4:3 LETTER BOX: when you connect a normal TV to the player. Displays the wide picture with bands displayed on the upper and lower portions of the screen.
- 4:3 PAN SCAN: when you connect a normal TV to the player. Displays the wide picture on the whole screen with a portion automatically cut off.


16:9

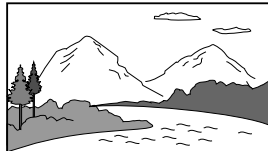

4:3 LETTER BOX



4:3 PAN SCAN

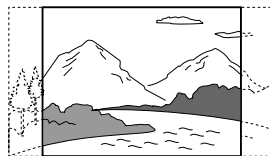

### Note

Depending on the DVD, “4.3 LETTER BOX” may be selected automatically instead of “4.3 PAN SCAN” and vice versa.

### ■ COLOR SYSTEM

Selects the color system when you play a VIDEO CD.

- AUTO: Outputs the video signal in the system of the VIDEO CD, either PAL or NTSC. If your TV is the DUAL system, select AUTO.
- PAL: changes the video signal of an NTSC VIDEO CD and outputs it in PAL system.
- NTSC: changes the video signal of a PAL VIDEO CD and outputs it in NTSC system.

### Notes

- You cannot change the color system of the DVD itself.
- You can change the color system of this unit according to the connected TV. See page 9.

### ■ AUTO PLAY

Selects the setting of Auto Play when you connect the AC power cord to the AC outlet.

- OFF: does not use “TIMER”, “DEMO1” or “DEMO2” to start playing.
- TIMER: starts playing a disc automatically when you connect the AC power cord to the AC outlet. By connecting a timer (not supplied), you can start playing at any time you want.
- DEMO1: starts playing the demonstration 1 automatically.
- DEMO2: starts playing the demonstration 2 automatically.

### ■ DIMMER

Adjusts the lighting of the front panel display.

- BRIGHT: makes the front panel display bright.
- DARK: makes the front panel display dark.
- OFF: turns off the lighting of the front panel display.

### ■ BACKGROUND

Selects the background color of the TV screen in stop mode.

- BLUE: The background color is blue.
- BLACK: The background color is black.

### ■ SCREEN SAVER

Turns on and off the screen saver. If you turn on the screen saver, the screen saver image appears when you leave the player or the remote in pause or stop mode for 15 minutes. The screen saver is useful to prevent your display from damage.

- ON: turns on the screen saver.
- OFF: turns off the screen saver.

### ■ PARENTAL CONTROL

Sets a password and playback limitation level when you play DVDs with playback limitation for children.


For details, see page 28.

## Settings for Sound (INITIAL SETUP 2)

Select "2" after pressing SET UP.

"INITIAL SETUP 2" allows you to set the sound according to the playback conditions.

Default settings are underlined.

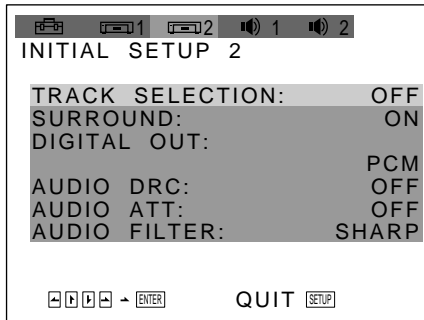

### ■ TRACK SELECTION

Gives the Dolby Digital (AC-3) format priority when you play a DVD on which multiple audio formats are recorded. If multiple audio channels are recorded in Dolby Digital (AC-3) format, the higher-numbered channel audio recorded in Dolby Digital (AC-3) format is played.

- OFF: No priority given.
- AUTO: Priority given.

### Notes

- When you set this item to "ON", the language may change depending on the "AUDIO" settings in "LANGUAGE SETUP." The "TRACK SELECTION" setting has higher priority than that of "AUDIO" settings in "LANGUAGE SETUP" (page 33).
- Depending on the DVD, the audio with priority may be predetermined. In this case, you cannot give priority to the Dolby Digital (AC-3) format by selecting "AUTO."

### ■ SURROUND\*

Switches the mixing down methods when you play a DVD on which the sound in Dolby Digital (AC-3) format is recorded.

- ON: when the player is connected to an audio component that conforms to Dolby surround, Dolby Pro Logic surround, etc.
- OFF: when the player is connected to a normal audio component.

\* The setting affects the connectors as follows:

- LINE OUT (AUDIO 1, 2) connectors
- DIGITAL OUT (OPTICAL, COAXIAL) connectors.

### ■ DIGITAL OUT

Switches the methods of outputting audio signals from the DIGITAL OUT OPTICAL and COAXIAL connectors on the rear panel of the player.

- PCM: when the player is connected to an audio component without a built-in Dolby Digital (AC-3) decoder  
If you play the Dolby Digital (AC-3) sound track, the player outputs no sound.
- DOLBY DIGITAL/PCM: when the player is connected to audio component with a built-in Dolby Digital (AC-3) decoder
- D-PCM (Downmix PCM): when you play the Dolby Digital (AC-3) sound tracks, the output audio signals are mixed down to 2 channels. By the settings of the item "SURROUND," you can select whether the signals contain the surround component or not. The output audio signals from the 5.1 OUTPUT connectors are also mixed down in the same way. To enjoy the original Dolby Digital (AC-3) sound through the 5.1 OUTPUT connectors, do not set this item to "D-PCM."

### Note

Select the setting correctly. Otherwise, no sound or strange sound will come out from the speakers, affecting your ears or causing the speakers to be damaged.

### ■ AUDIO DRC (Dynamic Range Control)

Makes the sound clear with the volume turned down at night, etc. when you play a DVD. This affects the output from the DIGITAL OUT connectors only when "DIGITAL OUT" in "INITIAL SETUP 2" is set to "PCM," the output from the LINE OUT (AUDIO 1,2), and 5.1 OUTPUT connectors.

- OFF: Normally select this position.
- ON: makes the sound clear even if you turned the volume down.

### Note

When you play DVDs without the AUDIO DRC function, there may be no effect on the sound.

### ■ AUDIO ATT (attenuation)

Selects the setting of the output from the LINE OUT (AUDIO 1, 2) and 5.1 OUTPUT connectors according to audio equipment to be connected.

- OFF: turns off the audio attenuation.
- ON: reduces the audio output level so that no sound distortion occurs.

### Note

The setting does not affect the output from the DIGITAL OUT OPTICAL and COAXIAL connectors.

### ■ AUDIO FILTER

Selects the type of digital filter to reduce the noise higher frequency than 22.05kHz (fs 44.1kHz), 24kHz (fs 48kHz) or 48kHz (fs 96kHz).

- SHARP: makes the sound clear and provides smooth sound reproduction. Normally set this position.
- SLOW: makes the sound warm and deep.

### Note

Depending on the disc, there may be no effect on the sound.

## What is Dolby Digital Surround?

Some DVDs have up to 5.1 channel soundtrack recorded in Dolby Digital (AC-3) format. Using an amplifier with 5.1 channel inputs and the 5 (+1\*) speakers, you can enjoy more real audio presence in the comfort of your own home.

Even if you have fewer than 5 (+1\*) speakers, the player distributes the output signal to the speakers appropriately.

You can also enjoy the VES (Virtual Enhanced Surround) system using the DCS (Digital Cinema Sound) method that Sony developed. The VES system realize surround sound only with front speakers.

\* Subwoofer


## Speaker System Hookups


### Hookups

Connect an amplifier with 5.1 channel inputs to the player and to the speakers. See the figure on the next page.

### Notes on connection

- Do not connect the power cord to an AC outlet or press the POWER switch before completing all connections.
- The cable connectors should be fully inserted into the jacks. Loose connection may cause hum and noise.
- Jacks and plugs of the connecting cords are color-coded as follows:  
Red jacks and plugs: Right audio channel  
White jacks and plugs: Left audio channel  
You can use either red or white cables to connect the center speaker and sub woofer.

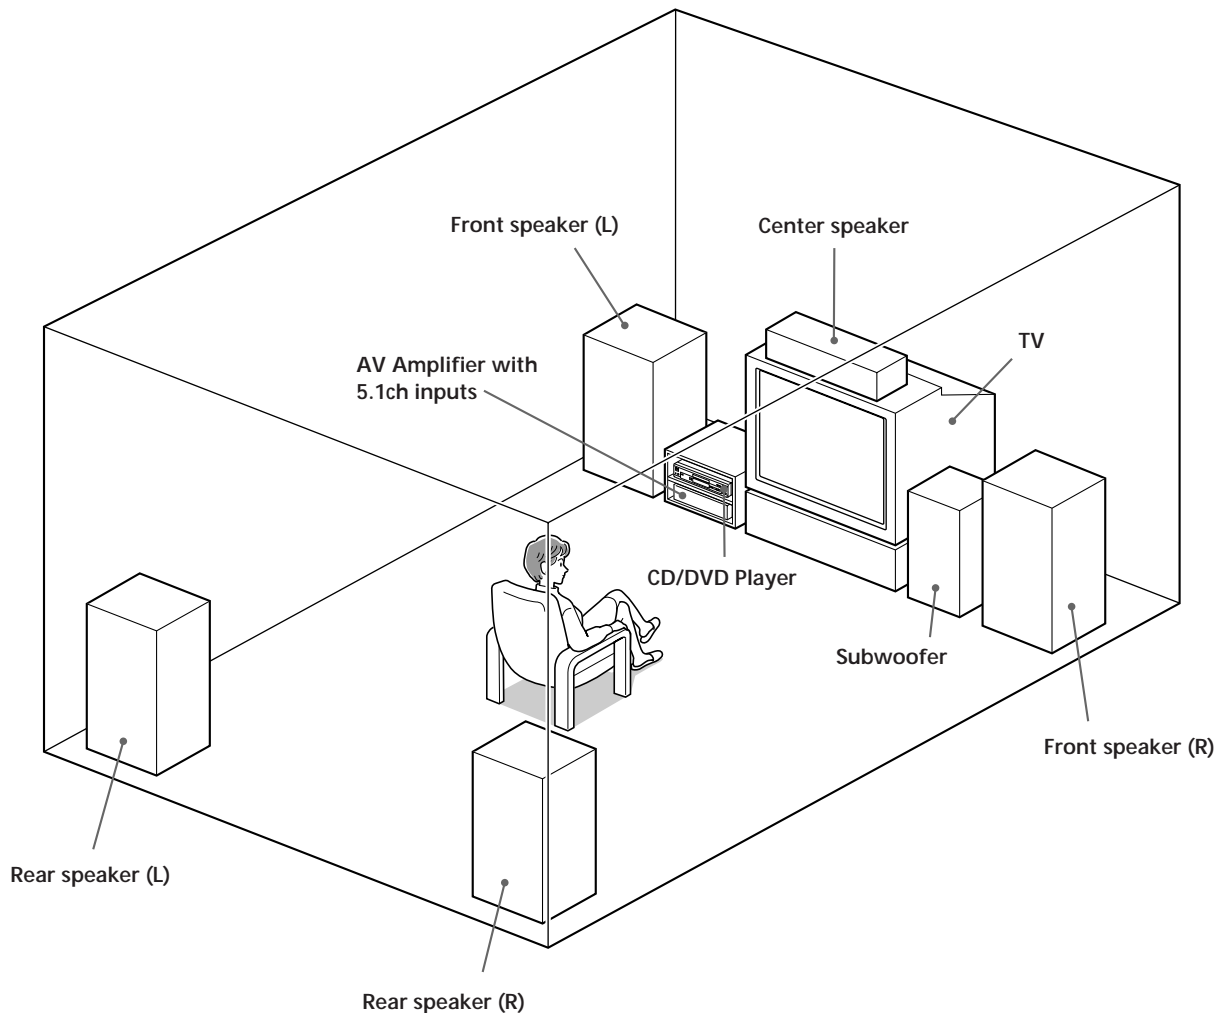

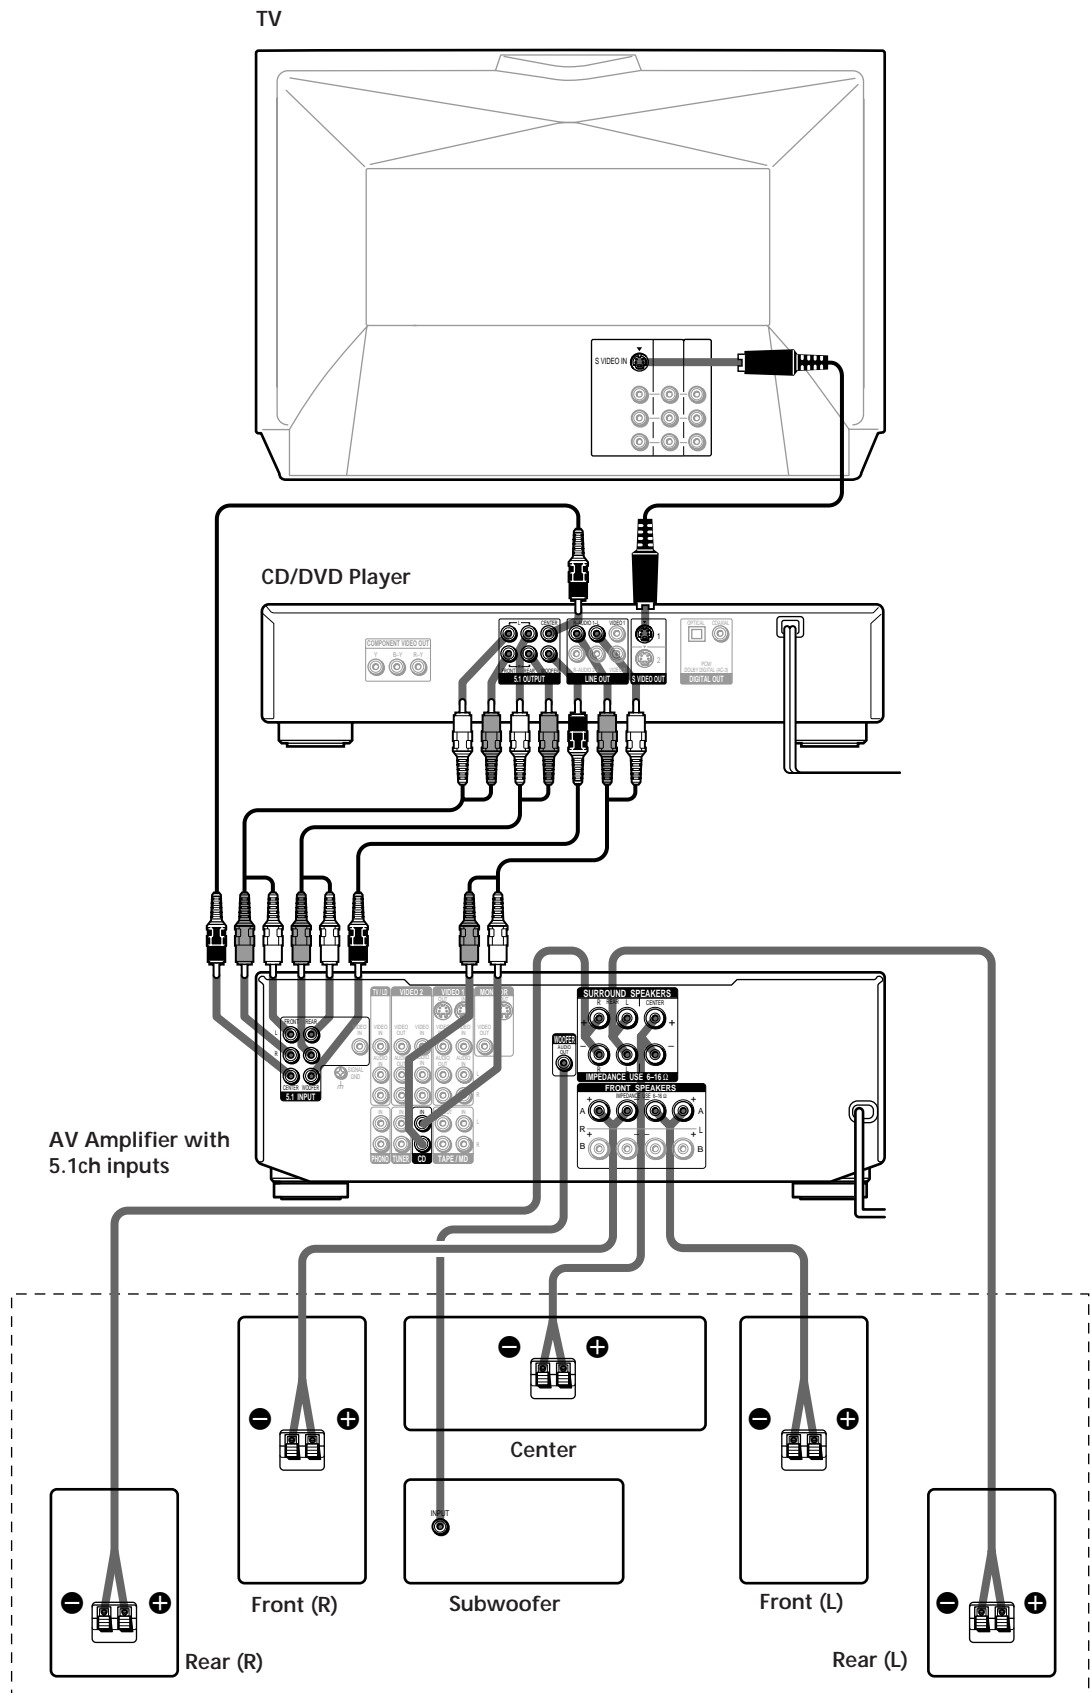

Speakers

## Speaker Placement

For the best possible surround sound, we recommend the following conditions.


- Use higher performance speakers.
- Use rear and center speakers that match your front speakers in size and performance.
- All speakers should be the same distance from the listening position.
- Place the subwoofer between the front (L, R) speakers if possible.

### Note

Do not place the center or rear speakers farther away from the listening position than the front speakers.


## Speaker Set Up

To obtain the best possible surround sound, first specify the type of speakers you have connected and their distance from your listening position. Then use the test tone to adjust the speaker volumes to the same level.

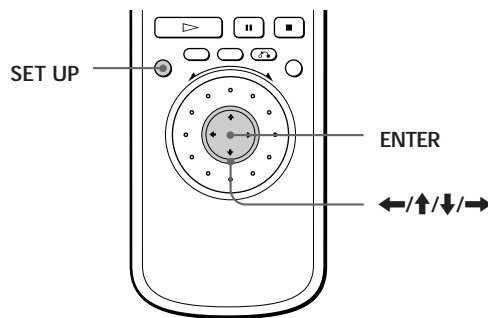

## Specifying the speaker type

- 1 Press SET UP and select “ 1”, then press ENTER.
- 2 Select the speaker you want to adjust in “SPEAKER SETUP” and press ENTER.
- 3 Select the appropriate symbol for the speaker, then press ENTER.

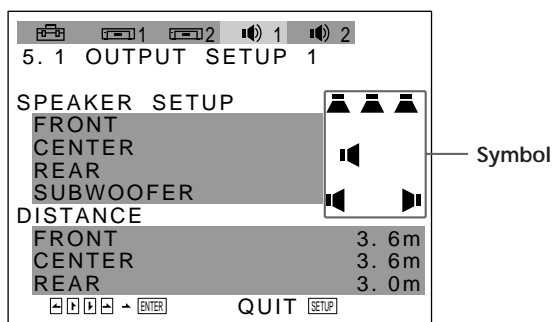

### Note

When you select a symbol, the sound cuts off for a moment.

### ■ Front speaker, Center speaker, or Rear speaker

Normally select this symbol. This is default setting.

When the sound cracks or the effects of the surround is difficult to hear, select this symbol. This activates the Dolby Digital (AC-3) bass redirection circuitry and outputs the bass frequencies of the speaker from some other speakers .

If you will not connect the speaker, select this symbol. You cannot select this symbol for the front speakers.

### ■ Sub woofer

If you connect a sub woofer, select this symbol to output the LFE (low frequency effects) channel from the sub woofer. This is default setting.

If you do not connect a sub woofer, select this symbol. This activates the Dolby Digital (AC-3) bass redirection circuitry and outputs the LFE signals from other speakers.

### Notes

- The cut off frequency for the subwoofer is fixed at 100Hz.
- Set the subwoofer's cut off frequency as high as possible.
- Depending on the settings of other speakers, the subwoofer may output excessive sound.
- The bass management options provided by the bass redirection circuitry in this player will optimize system set-up based on total system configuration selected. In some instances, independent speaker selections might be changed to reflect the most optimum multi-channel sound experience.
- If your speakers are too small to reproduce low bass frequencies, please set all speaker settings to “ (small)” and utilize a subwoofer for low frequency sound.

## Specifying the speaker distance

- 1 Press SET UP and select “**1**”, then press ENTER.
- 2 Select the speaker you want to adjust in “DISTANCE” and press ENTER.
- 3 Adjust the value using **↑/↓**, then press ENTER.

### Note

When you set the distance, the sound cuts off for a moment.

You can vary the distance of each speaker as follows. Default adjustments are in the brackets.

#### ■ Front speaker (3.6 m)

- Front speaker distance can be set in 0.2 meter steps from 1 to 15 meters.
- If both speakers are not placed an equal distance from your listening position, set the distance of the closest speaker.

#### ■ Center speaker (3.6 m)

Center speaker distance can be set in 0.2 meter steps from a distance equal to the front speaker distance to a distance 1 meter closer to your listening position.

### Note

Do not place the center speaker farther away from your listening position than the front speakers.

#### ■ Rear speaker (3.0 m)


- Rear speaker distance can be set in 0.2 meter steps from a distance equal to the front speaker distance to a distance 5 meters closer to your listening position.
- If both speakers are not placed an equal distance from your listening position, set the distance of the closest speaker.

### Note

Do not place the rear speaker farther away from your listening position than the front speakers.

## Adjusting the speaker volume

- 1 While you stop playback, press SET UP and select “**2**”, then press ENTER.
- 2 Set “TEST TONE” to “ON.”  
You will hear the test tone from each speaker in sequence.
- 3 From your listening position, adjust the value of “BALANCE” and “LEVEL” using **↑/↓** and ENTER.  
During this adjustment, the test tone is emitted from both speakers simultaneously.
- 4 Set “TEST TONE” to “OFF” to turn off the test tone.

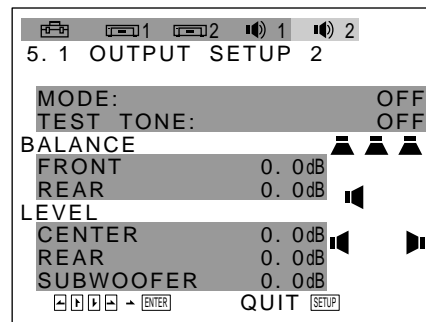

### Note

While you are playing a disc, you cannot here the test tone.

You can vary the balance and the level of each speaker as follows. Default adjustments are in the brackets.

#### ■ Front speaker balance (0dB)

Adjust the balance between the front left and right speakers (-8dB [L] ~+8dB [R], 0.5dB steps).

#### ■ Rear speaker balance (0dB)

Adjust the balance between the rear left and right speakers (-8dB [L] ~+8dB [R], 0.5dB steps).

#### ■ Center speaker level (0dB)

Adjust the level of the center speaker (-20dB ~+6dB, 0.5dB steps).

#### ■ Rear speaker level (0dB)

Adjust the level of the rear speakers (-20dB ~+6dB, 0.5dB steps).

#### ■ Sub woofer level (0dB)

Adjust the level of the sub woofer (-10dB ~+6dB, 0.5dB steps). The test tone does not be output from the subwoofer.

To adjust the volume of all the speakers at one time  
Use the amplifier's volume control.

To return to the default setting


Select the sybol or the item, then press CLEAR.

## Setting for Dolby Digital Surround


To enjoy Dolby Digital Surround sound, set the output signal from the 5.1 channel output connectors.

### Note

To enjoy the original Dolby Digital (AC-3) sound through the 5.1 OUTPUT connectors, do not set "DIGITAL OUT" to "D-PCM" under "INITIAL SETUP 2" in the setup display. For details, see page 35.

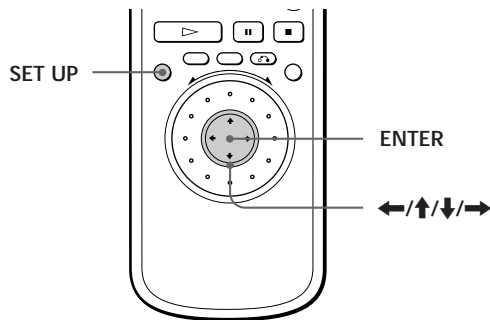

- 1 Press SET UP and select "2", then press ENTER.
- 2 Set "MODE" to the desired item.

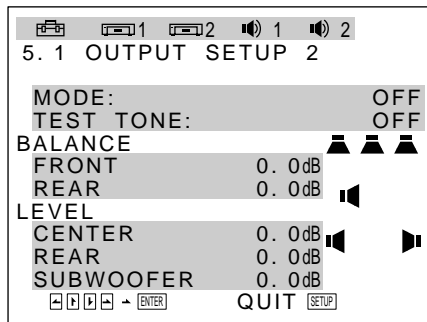

Default setting is "OFF."

### MODE


- **OFF** : outputs all channel signals recorded on the DVD. When you connect fewer than 5 (+1) speakers, the player distributes the output signal for the missing speaker to other speakers appropriately. When you play a CD or a VIDEO CD, outputs the stereo signal to the front speakers.
- **PRO LOGIC** : outputs the Pro Logic processed signals when the input signals are stereo.
- **VES A\*** : uses 3D sound imaging to create virtual rear speakers from the sound of the front speakers (L, R) without using actual rear speakers. The virtual speakers are reproduced as shown in Ill. 1.
- **VES B\*** : uses 3D sound imaging to create virtual rear speakers from the sound of the front speakers (L, R) without using actual rear speakers. The virtual speakers are reproduced as shown in Ill. 2.

\* These settings also affect the output from the LINE OUT (AUDIO 1, 2) connectors.


### Notes

- When you select an item, the sound cuts off for a moment.
- When you select "PRO LOGIC", the sound may only come from the center speaker depending on the disc.
- When the playing signal does not contain the surround component, the effects may be difficult to hear even if you select "PRO LOGIC", "VES A" or "VES B."
- If the sound distortion occurs when you select "PRO LOGIC", "VES A" or "VES B," set this item to "OFF".
- If you connect the front speakers only, there is no surround effects even if you select "PRO LOGIC."
- When you select "VES A" or "VES B," you cannot adjust the level or the balance of the speakers except for the front speakers.
- If both the front speakers are not placed an equal distance from your listening position, the effects may be difficult to hear even though you select "VES A" or "VES B."
- The setting "PRO LOGIC" affects only when:
  - you play a CD/VIDEO CD
  - you play the PCM sound track on a DVD
  - you play the "DOLBY DIGITAL 2/0" sound track on a DVD.

### III.1 VES (Virtual Enhanced Surround) A

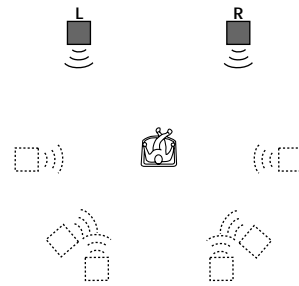


### III.2 VES (Virtual Enhanced Surround) B

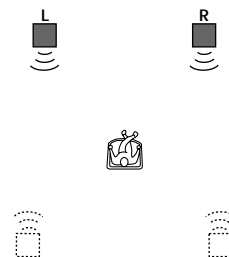


## To display the playing channels

You can display the playing channels on the screen. In Dolby Digital (AC-3) format, the signals from monaural to 5.1 channel can be recorded on a DVD. Depending on the DVD the numbers of the recorded channels are different.

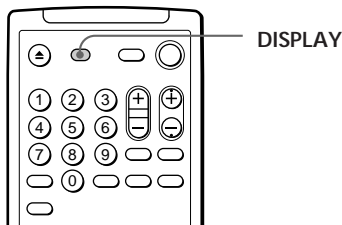


Press DISPLAY repeatedly until the channel display appears.

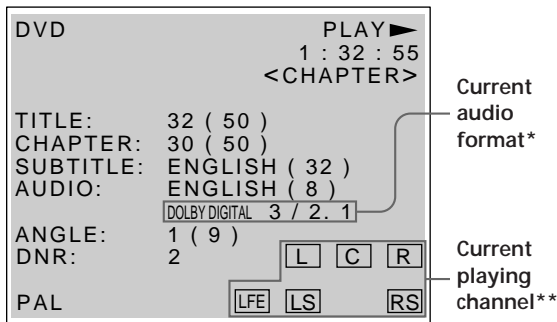

\* "PCM", "MPEG" or "DOLBY DIGITAL" is displayed. In "DOLBY DIGITAL" case, the channels in the playing track are displayed by number as follows:

The case of Dolby Digital (AC-3) 5.1 ch:

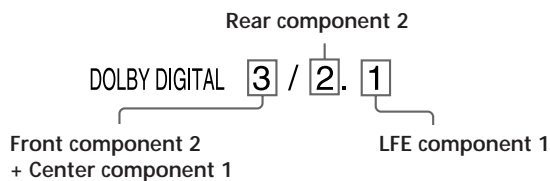

\*\* The playing channel shows the signals from 5.1 OUTPUT connectors whether the speakers exist or not. The letters in the channel display mean the following:

- L: Front (L)
- R: Front (R)
- C: Center (monaural)
- LS: Rear (L)
- RS: Rear (R)


S: Rear (monaural) – the rear component of the Pro Logic processed stereo signal.

LFE: – displayed only when the LFE (Low Frequency Effects) signal is playing


If "S" is displayed in gray, you can enjoy the surround effect when you set "MODE" under "5.1 OUTPUT SETUP 2" to "PRO LOGIC," "VES A" or "VES B" in the setup display. This affects only when the current audio format is "DOLBY DIGITAL 2/0."

The display examples are as follows:


• PCM (stereo)

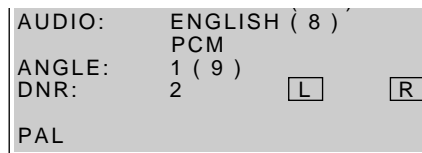

• PRO LOGIC (PCM)

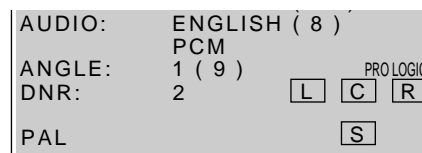

• Dolby Digital (AC-3) 5.1ch

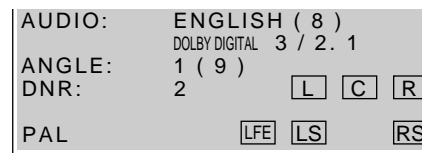

💡 You can find Dolby Surround-encoded software by looking at the packaging

Use discs with the logo. In order to enjoy Dolby Digital (AC-3) playback you must use discs bearing this logo.

### Note

The DOLBY DIGITAL indicator turns off when:

- you insert a CD or a VIDEO CD.
- the current audio format is PCM or MPEG Audio.



### Precautions

#### On safety

- Caution – The use of optical instruments with this product will increase eye hazard.
- Should any solid object or liquid fall into the cabinet, unplug the player and have it checked by qualified personnel before operating it any further.

#### On power sources

- The player is not disconnected from the AC power source (mains) as long as it is connected to the wall outlet, even if the player itself has been turned off.
- If you are not going to use the player for a long time, be sure to disconnect the player from the wall outlet. To disconnect the AC power cord (mains lead), grasp the plug itself; never pull the cord.
- Should the AC power cord (mains lead) need to be changed, have it done at a qualified service shop only.

#### On placement

- Place the player in a location with adequate ventilation to prevent heat build-up in the player.
- Do not place the player on a soft surface such as a rug that might block the ventilation holes on the bottom.
- Do not place the player in a location near heat sources, or in a place subject to direct sunlight, excessive dust or mechanical shock.

#### On operation

- If the player is brought directly from a cold to a warm location, or is placed in a very damp room, moisture may condense on the lenses inside the player. Should this occur, the player may not operate properly. In this case, remove the disc and leave the player turned on for about half an hour until the moisture evaporates.

#### On adjusting volume

- Do not turn up the volume while listening to a portion with very low level inputs or no audio signals. If you do, the speakers may be damaged when a peak level portion is played.

#### On cleaning

- Clean the cabinet, panel and controls with a soft cloth slightly moistened with a mild detergent solution. Do not use any type of abrasive pad, scouring powder or solvent such as alcohol or benzine.

If you have any questions or problems concerning your player, please consult your nearest Sony dealer.

 

#### IMPORTANT NOTICE

Caution: The enclosed DVD Player is capable of holding a still video image or Setup display image on your television screen indefinitely. If you leave the still video image or Setup display image displayed on your TV for an extended period of time you risk permanent damage to your television screen. Projection televisions are very susceptible.

### Notes on Discs

#### On handling discs

- To keep the disc clean, handle the disc by its edge. Do not touch the surface.
- Do not stick paper or tape on the disc. If there is glue (or a similar substance) on the disc, remove the glue completely before using the disc.

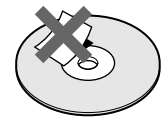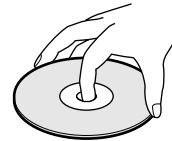


Not this way

- Do not expose the disc to direct sunlight or heat sources such as hot air ducts, or leave it in a car parked in direct sunlight as there can be considerable rise in temperature inside the car.
- After playing, store the disc in its case.

#### On cleaning

- Before playing, clean the disc with a cleaning cloth. Wipe the disc from the center out.

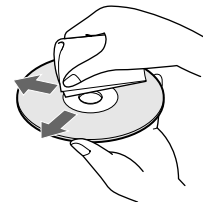

- Do not use solvents such as benzine, thinner, commercially available cleaners or anti-static spray intended for vinyl LPs.

## Troubleshooting

If you experience any of the following difficulties while using the player, use this troubleshooting guide to help you remedy the problem. Should any problem persist, consult your nearest Sony dealer.

The power is not turned on.

- ➔ If the indicator above the POWER button is not lit, check that the AC power cord is connected securely.


There is no picture.

- ➔ Check that the player is connected securely.
- ➔ The video connecting cord is damaged. Replace it with a new one.
- ➔ Make sure you connect the player to the video input connector on the TV. (page 6)
- ➔ Make sure you turn on the TV.
- ➔ Make sure you select the video input on the TV so that you can view the pictures from the player.

There is no sound.

- ➔ Check that the player is connected securely.
- ➔ The audio connecting cord is damaged. Replace it with a new one.
- ➔ Make sure you connect the player to the audio input connectors on the amplifier. (page 6)
- ➔ Make sure you turn on the TV and the amplifier.
- ➔ Make sure you select the appropriate position on the amplifier so that you can listen to the sound from the player.
- ➔ The player is in pause mode or in Slow-motion Play mode. Press ▷ to return to normal play mode.
- ➔ Fast forward (FF1 or FF2) or fast reverse (FR1 or FR2) is performed. Press ▷ to return to normal play mode.
- ➔ Check the speaker connections and settings. (page 37) Refer to the operating manual of your amplifier.
- ➔ When you play the Dolby Digital (AC-3) sound tracks and attempt to output from the DIGITAL OUT connectors, set "DIGITAL OUT" to "D-PCM" under "INITIAL SETUP 2" in the setup display. Otherwise no sound will come out from the DIGITAL OUT connectors. (page 35)

The remote does not function.

- ➔ Remove any obstacles between the remote and the player.
- ➔ Use the remote near the player.
- ➔ Point the remote at the remote sensor  on the player.
- ➔ Replace all the batteries in the remote with new ones if they are weak.

The picture noise appears.

- ➔ Clean the disc.
- ➔ If video from your DVD player has to go through your VCR to get to your TV, the copy-protection applied to some DVD programs could affect picture quality. If you still experience problems after checking your connections, please try connecting your DVD player directly to your TV's S-input, if your TV is equipped with these input. (page 7)

The sound noise is heard.

- ➔ Clean the disc.

The sound distortion occurs.

- ➔ In the setup display, set "AUDIO ATT" in "INITIAL SETUP 2" to "ON."

The disc does not play.

- ➔ There is no disc inside ("INSERT DISC" appears on the TV screen).  
Insert a disc.
- ➔ Insert the disc with the playback side facing down on the disc tray correctly.
- ➔ Place the disc on the disc tray correctly.
- ➔ Clean the disc.
- ➔ The player cannot play CD-ROMs, etc. (page 5)  
Insert a DVD, a VIDEO CD, or CD.
- ➔ Check the region code of the DVD. (page 4)
- ➔ Moisture has condensed inside the player.  
Remove the disc and leave the player turned on for about half an hour. (page 42)

The player does not play from the beginning when playing a disc.

- ➔ Repeat Play, Shuffle Play or Program Play has been selected. Press CLEAR. (page 22 to 24)
- ➔ Resume Play has been selected.  
Press ■ on the front panel or on the remote before you start playing. (page 25)
- ➔ A title menu or a DVD menu automatically appears on the TV screen when you play your DVD, or a setup display automatically appears on the TV screen when you play your VIDEO CD with PBC functions.

The DVD does not play when you select a title.

- ➔ The Parental Control functions. (page 28)

The player starts playing the DVD automatically.

- ➔ The DVD features the auto playback function.

Playback stops automatically.

- ➔ Depending on the disc, the auto pause signal is recorded. While playing such a disc, the player stops playback at the signal.

Stopping playback, Search, Slow-motion Play, Repeat Play, Shuffle Play or Program Play, etc., cannot be done.

- ➔ Depending on the disc, you may not do some of the operations above.

Messages do not appear on the TV screen in the language you want.

- ➔ In the setup display, select the language for the on-screen display in "OSD" under "LANGUAGE SETUP." (page 33)

The language for the sound cannot be changed when you play a DVD.

- ➔ Multilingual sound is not recorded on the DVD.
- ➔ Changing the language for the sound is prohibited on the DVD.

The language for the sound changes automatically.

- ➔ When you set the "TRACK SELECTION" in "INITIAL SETUP 2" to "ON" in the setup display, the language may change depending on the "AUDIO" settings in "LANGUAGE SETUP." The "TRACK SELECTION" setting has higher priority than that of "AUDIO" settings. (page 33)

The language for the subtitles cannot be changed when you play a DVD.

- ➔ Multilingual subtitles are not recorded on the DVD.
- ➔ Changing the language for the subtitles is prohibited on the DVD.

The subtitles cannot be turned off when you play a DVD.

- ➔ Depending on the DVD, you may not be able to turn the subtitles off.

The angles cannot be changed when you play a DVD.

- ➔ Multi-angles are not recorded on the DVD.
- ➔ Change the angles when "ANGLE" appears on the front panel display. (page 27)
- ➔ Changing the angles is prohibited on the DVD.

The aspect ratio of the screen cannot be changed even though you set "TV TYPE" in "INITIAL SETUP 1" in the setup display when you play a wide picture.

- ➔ The aspect ratio is fixed on your DVD.
- ➔ If you connect the player with the S video cable, connect directly to the TV. Otherwise, you may not change the aspect ratio.
- ➔ Depending on the TV, you may not change the aspect ratio.

The menu screen does not appear when you play a VIDEO CD.

- ➔ The VIDEO CD does not feature PBC functions.
- ➔ Follow the correct operating procedure. (Also refer to the instructions supplied with the disc.)

The sound loses stereo effect when you play a VIDEO CD or a CD.

- ➔ "1/L" or "2/R" appears on the front panel display.  
On the remote, press AUDIO CHANGE repeatedly until "1/L 2/R" appears. (page 26)
- ➔ Make sure you connect the player appropriately. (page 10, 11)

The surround effect is difficult to hear when you are playing a Dolby Digital (AC-3) sound track.

- ➔ Check the speaker connections and settings. (page 37) Refer to the operating manual of your amplifier.
- ➔ Set "MODE" in "5.1 OUTPUT SETUP 2" to "OFF" in setup display. (page 40)
- ➔ Depending on the DVD, the output signal may not be the entire 5.1 channel but monaural or stereo even if the sound track is recorded in Dolby Digital (AC-3) format.

The sound comes from the center speaker only.

- ➔ Set "MODE" in "5.1 OUTPUT SETUP 2" to "OFF" in setup display. (page 40)
- ➔ Depending on the disc, the sound may come from the center speaker only.

The player does not operate properly.

- ➔ Static electricity, etc., may affect the player's operation.  
Disconnect the AC power cord once, then connect it again.

The numbers or letters of 5 characters are displayed on the screen.

- ➔ Self diagnosis function was activated. See the table in page 45 and treat the player appropriately.

## Self-diagnosis function

The self-diagnosis function works to prevent the player from malfunctioning, a five-digit service number (combination of a letter and figures) flashes on the screen. In this case, check the following table.



First three digits	Cause and/or Corrective Action
C13	<ul style="list-style-type: none"> <li>The disc is dirty.</li> <li>➔ Clean the disc with a cleaning cloth. (page 42)</li> </ul>
C31	<ul style="list-style-type: none"> <li>The disc is not inserted correctly.</li> <li>➔ Open the disc tray and insert the disc correctly.</li> </ul>
Exx (xx is any number)	<ul style="list-style-type: none"> <li>To prevent the player from operating malfunctioning, the self-diagnosis function has worked.</li> <li>➔ When you contact your Sony dealer or local authorized Sony service facility, inform the service number with five digits. (example: E:61:10)</li> </ul>

## Specifications

### CD/DVD player

Laser	Semiconductor laser
Signal format system	PAL/NTSC

### Audio characteristics

Frequency response	DVD (PCM 96 kHz): 2 Hz to 44 kHz (±0.5 dB)* DVD (PCM 48 kHz): 2 Hz to 22 kHz (±0.5 dB) CD: 2 Hz to 20 kHz (±0.5 dB)
Signal-to-noise ratio	More than 115 dB (LINE OUT (AUDIO 1, 2) connectors only)
Harmonic distortion	Less than 0.0028%
Dynamic range	More than 100 dB (DVD) More than 97 dB (CD)
Wow and flutter	Less than detected value (±0.001% W PEAK)

### Outputs and inputs

	Jack type	Output level	Load impedance
LINE OUT (AUDIO 1, 2)	Phono jacks	2 Vrms (at 50 kilohms)	Over 10 kilohms
DIGITAL OUT (OPTICAL)	Optical output connector	-18 dBm	Wave length: 660 nm
DIGITAL OUT (COAXIAL)	Phono jack	0.5 Vp-p	75 ohms terminated
LINE OUT (VIDEO 1, 2)	Phono jacks	1.0 Vp-p	75 ohms, sync negative
S VIDEO OUT (1, 2)	4-pin mini DIN	Y: 1.0 Vp-p C: 0.3 Vp-p	75 ohms, sync negative 75 ohms terminated
COMPONENT VIDEO OUT (Y, Cb/B-Y, Cr/R-Y)	Phono jacks	Y: 1.0 Vp-p Cb/B-Y, Cr/R-Y: 0.7 Vp-p	75 ohms, sync negative 75 ohms
PHONES	Phone jack	12 mW	32 ohms
5.1 OUTPUT	Phono jacks	1.6 Vrms (at 50 kilohms)	Over 10 kilohms

### General

Power requirements	220-240 V AC, 50 Hz
Power consumption	22 W
Dimensions (approx.)	430 × 98 × 325 mm incl. projecting parts
Mass (approx.)	4.0 kg
Operating temperature	5 °C to 35 °C
Operating humidity	5% to 90%

### Supplied accessories

See page 6.

\* The signals from LINE OUT (AUDIO 1, 2) connectors are measured. When you play the PCM sound tracks with 96 kHz sampling frequency, the output signals from the DIGITAL OUT (OPTICAL, COAXIAL) and 5.1 OUTPUT connectors are converted to 48 kHz (sampling frequency)/16 bits (quantization bits).

Design and specifications are subject to change without notice.

## Glossary

### Bit rate (page 18)

Value indicating the amount of video data compressed in a DVD per second. The unit is Mbps (Mega bit per second). 1 Mbps indicates that the data per second is 1,000,000 bits. The higher the bit rate is, the larger the amount of data. However, this does not always mean that you can get higher quality pictures.

### Chapter (page 5)

Sections of a picture or a music piece on a DVD that are smaller than titles. A title is composed of several chapters. Each chapter is assigned a chapter number enabling you to locate the chapter you want.

### Digital Cinema Sound (DCS) (page 40)

The general name of technology that Sony developed to enjoy the surround sound in a home. To enjoy the surround sound of the movie theater in the comfort of your own home, it simulates the sound not in a concert hall as usual but in a movie editing studio. This player adopts VES (Virtual Enhanced Surround) system from various DCS programs. The VES system can create the sound image of virtual rear speakers from the sound of the front speakers (L, R) without using actual rear speakers.

**Dolby Digital (AC-3)** (page 36)

Digital audio compression technology that the Dolby Laboratories Corporation developed. This technology conforms to 5.1-channel surround. The rear channel is stereo and there is discrete subwoofer channel in this format. The good channel separation is realized because the all channel data is recorded discrete and processed in digital.

**Dolby Pro Logic** (page 40)

Audio signal processing technology that Dolby Laboratories Corporation developed for surround sound. When the input signal has the surround component, the Pro Logic process outputs the front, center and rear signals. The rear channel is monaural.

**DVD** (page 4)

A disc that contains up to 8 hours of moving pictures even though its diameter is the same as a CD.

The data capacity of a single-layer and single-sided DVD, at 4.7 GB (Giga Byte), is 7 times that of a CD. Furthermore, the data capacity of a dual-layer and single-sided DVD is 8.5 GB, a single-layer and double-sided DVD 9.4 GB, and a dual-layer and double-sided DVD 17 GB.

The picture data uses the MPEG 2 format, one of the worldwide standards of digital compression technology. The picture data is compressed to about 1/40 of its original size. The DVD also uses the variable rate coding technology that changes the data to be allocated according to the status of the picture.

The audio data is recorded in Dolby Digital (AC-3) as well as in PCM, allowing you to enjoy more real audio presence.

Furthermore, various advanced functions such as the multi-angle, multilingual, and Parental Control functions are provided with the DVD.

**Multi-angle function** (page 27)

Various angles, or viewpoints of the video camera, for a scene are recorded on some DVDs.

**Multilingual function** (page 27)

Several languages for the sound or sub-titles in a picture are recorded on some DVDs.

**Parental Control** (page 28)

A function of the DVD to limit playback of the disc by the age of the users according to the limitation level in each country. The limitation varies from disc to disc; when it is activated, playback is completely prohibited, violent scenes are skipped or replaced with other scenes and so on.

**Playback Control (PBC)** (page 17)

Signals encoded on VIDEO CDs (Version 2.0) to control playback.

By using menu screens recorded on VIDEO CDs with PBC functions, you can enjoy playing simple interactive programs, programs with search functions, and so on.

**Title** (page 5)

The longest sections of a picture or a music piece on a DVD; a movie, etc., for a picture piece on video software; or an album, etc., for a music piece on an audio software. Each title is assigned a title number enabling you to locate the title you want.

**Track** (page 5)

Sections of a picture or a music piece on a CD or VIDEO CD. Each track is assigned a track number enabling you to locate the track you want.

**VES (Virtual Enhanced Surround)** (page 40)

See DCS (Digital Cinema Sound) (page 46).

**VIDEO CD** (page 4)

A compact disc that contains moving pictures. The picture data uses the MPEG 1 format, one of the worldwide standards of digital compression technology. The picture data is compressed to about 1/140 of its original size. Consequently, a 12 cm VIDEO CD can contain up to 74 minutes of moving pictures.

VIDEO CDs also contain compact audio data. Sounds outside the range of human hearing are compressed while the sounds we can hear are not compressed. VIDEO CDs can hold 6 times the audio information of conventional audio CDs.

There are 2 versions of VIDEO CDs.


- Version 1.1: You can play only moving pictures and sounds.
- Version 2.0: You can play high-resolution still pictures and enjoy PBC functions.

This player conforms to both versions.

## Index to Parts and Controls


Refer to the pages indicated in parentheses for details.

### Front Panel

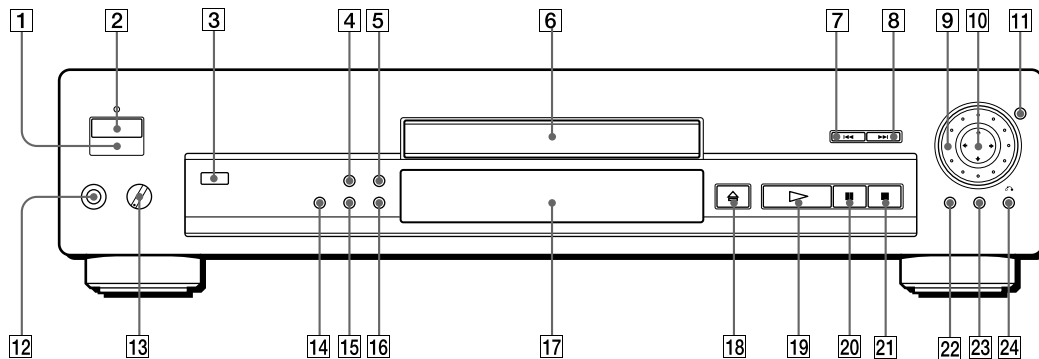

- |  |   |
|--|---|
| <p><b>1</b>  (remote sensor) (6)<br/>Accepts the remote control signals.</p> <p><b>2</b> POWER switch and indicator (10, 14)<br/>Turns on and off the power of the player.</p> <p><b>3</b> DOLBY DIGITAL indicator (10, 41)<br/>Indicates Dolby Digital (AC-3) sound tracks.</p> <p><b>4</b> SHUFFLE button (23)<br/>Press to execute the shuffle play.</p> <p><b>5</b> REPEAT button (22)<br/>Press to execute the repeat play.</p> <p><b>6</b> Disc tray (10, 14)<br/>Place a disc on the tray.</p> <p><b>7</b>  PREV button (11, 15)<br/>Press to go back to the preceding chapter or track.</p> <p><b>8</b>  NEXT button (11, 15)<br/>Press to go to the next chapter or track.</p> <p><b>9</b> Click shuttle (12, 16)<br/>Changes the playback speed.</p> <p><b>10</b>  / ENTER button<br/>Selects and executes the items or settings.</p> <p><b>11</b> JOG button / indicator (12, 16)<br/>Press to play a disc frame by frame.</p> <p><b>12</b> PHONES connector (10, 14)<br/>Connect the headphones to this connector.</p> | <p><b>13</b> PHONE LEVEL control (10, 14)<br/>Adjusts the headphone volume.</p> <p><b>14</b> DNR button (26)<br/>Reduces the picture noise.</p> <p><b>15</b> PROGRAM button (24)<br/>Press to execute the program play.</p> <p><b>16</b> CLEAR button (11, 15, 22, 23, 24)<br/>Press to return to the continuous play etc.</p> <p><b>17</b> Front Panel Display (20)<br/>Indicates the playing time, etc.</p> <p><b>18</b>  OPEN/CLOSE button (10, 14)<br/>Opens or closes the disc tray.</p> <p><b>19</b>  PLAY/SELECT button (10, 14)<br/>Plays a disc.</p> <p><b>20</b>  PAUSE button (11, 15)<br/>Pauses playing a disc.</p> <p><b>21</b>  STOP button (11, 15, 25)<br/>Stops playing a disc.</p> <p><b>22</b> TITLE button (13)<br/>Displays the title menu on the TV screen.</p> <p><b>23</b> DVD MENU button (13)<br/>Displays the DVD menu on the TV screen.</p> <p><b>24</b>  RETURN button (17)<br/>Press to return to the preceding selection screen, etc.</p> |
|--|---|


Rear Panel

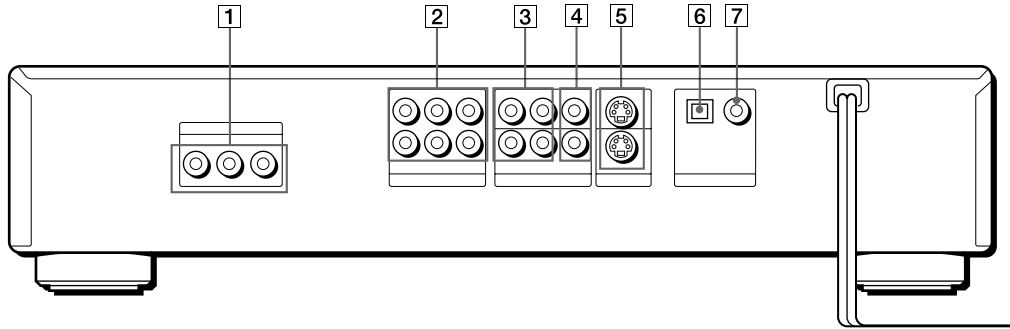

- 1** COMPONENT VIDEO OUT connectors (7)  
Connects to the monitor or projector with component video input connectors (Y, CB/B-Y, CR/R-Y) that conform to output signals from the player.
- 2** 5.1 OUTPUT connectors (37)  
Connects to the amplifier with 5.1 channel input connectors.
- 3** LINE OUT (AUDIO 1, 2) connectors (7)  
Connects to the audio input connector on the TV or amplifier.
- 4** LINE OUT (VIDEO 1, 2) connectors (7)  
Connects to the video input connector on the TV or monitor.
- 5** S VIDEO OUT (1, 2) connectors (7)  
Connects to the S video input connector on the TV or VCR.
- 6** DIGITAL OUT (OPTICAL) connector (8)  
Connects to an audio component using the optical digital connecting cord.
- 7** DIGITAL OUT (COAXIAL) connector (8)  
Connects to an audio component using the coaxial digital connecting cord.



## Remote

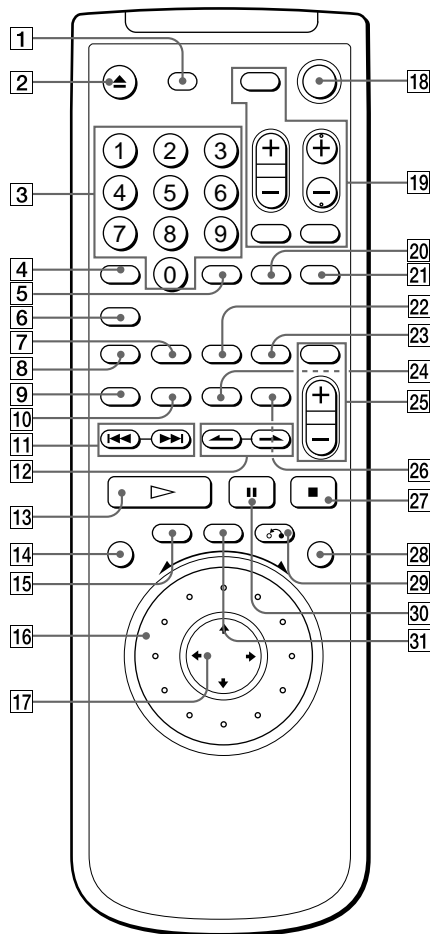

- 1** **DISPLAY button (18, 41)**  
Displays the current playing status on the TV screen.
- 2** **▲OPEN/CLOSE button (11, 15)**  
Opens or closes the disc tray.
- 3** **Number buttons (11, 15, 30)**  
Selects the items or settings.
- 4** **SEARCH MODE button (11, 15)**  
Press to select the unit for search (track, index, etc.)
- 5** **ENTER button**  
Executes the items or settings.
- 6** **DNR button (26)**  
Reduces the picture noise.
- 7** **PROGRAM button (24)**  
Press to execute the program play.
- 8** **SHUFFLE button (23)**  
Press to execute the shuffle play.
- 9** **AUDIO CHANGE button (26)**  
Changes the sound while playing a DVD or VIDEO CD.
- 10** **ANGLE CHANGE button (27)**  
Changes the angles when playing a DVD.
- 11** **◀◀/▶▶PREV/NEXT buttons (11, 15)**  
Press to go to the next chapter or track or to go back to the preceding chapter or track.
- 12** **◀/▶ INDEX SEARCH buttons (15)**  
Press to go to the next index or to go back to the preceding index.
- 13** **▷ PLAY/SELECT button (10, 14)**  
Plays a disc.
- 14** **SET UP button (32)**  
Displays the setup display on the TV screen to set or adjust the items.
- 15** **TITLE button (13)**  
Displays the title menu on the TV screen.
- 16** **Click shuttle (12, 16)**  
Changes the playback speed.
- 17** **◀/▲/▼/▶/ENTER button**  
Selects and executes the items or settings.
- 18** **POWER button (10, 14)**  
Turns on and off the power of the player.
- 19** **TV operation buttons (30)**  
Controls Sony TVs.
- 20** **CLEAR button (22-24)**  
Cancels the number selected with the number buttons.
- 21** **TIME button (18, 20)**  
Displays the playing time of the disc, etc., on the front panel display.
- 22** **REPEAT button (22)**  
Press to execute the repeat play.
- 23** **A↔B button (22)**  
Press to execute the A↔B repeat play.
- 24** **SUBTITLE CHANGE button (27)**  
Changes the subtitles when playing a DVD.
- 25** **Amplifier operation buttons (31)**  
Controls Sony (AV) amplifiers.
- 26** **SUBTITLE ON/OFF button (27)**  
Turns the subtitles on and off when playing a DVD.
- 27** **■STOP button (11, 15, 25)**  
Stops playing a disc.
- 28** **JOG button/indicator (12, 16)**  
Press to play a disc frame by frame.
- 29** **↶RETURN button (17)**  
Press to return to the preceding selection screen, etc.
- 30** **■PAUSE button (11, 15)**  
Pauses playing a disc.
- 31** **DVD MENU button (13)**  
Displays the DVD menu on the TV screen.

## Setup Display Item List

Default settings are underlined.

### LANGUAGE SETUP (page 33)

- OSD — ENGLISH  
CHINESE
- DVD MENU — ENGLISH  
CHINESE  
SPANISH  
PORTUGUESE  
JAPANESE  
FRENCH  
GERMAN  
ITALIAN  
DUTCH  
OTHERS →
- AUDIO — ORIGINAL  
(same as DVD MENU)
- SUBTITLE — AUDIO FOLLOW  
(same as DVD MENU)

### 1 INITIAL SETUP 1 (page 34)

- TV TYPE — 16:9  
4:3 LETTER BOX  
4:3 PAN SCAN
- COLOR SYSTEM — AUTO  
PAL  
NTSC
- AUTO PLAY — OFF  
TIMER  
DEMO1  
DEMO2
- DIMMER — BRIGHT  
DARK  
OFF
- BACKGROUND — BLUE  
BLACK
- SCREEN SAVER — ON  
OFF
- PARENTAL CONTROL (page 28)

### 2 INITIAL SETUP 2 (page 35)

- TRACK SELECTION — OFF  
AUTO
- SURROUND — ON  
OFF
- DIGITAL OUT — PCM  
DOLBY DIGITAL / PCM  
D-PCM
- AUDIO DRC — OFF  
ON
- AUDIO ATT — OFF  
ON
- AUDIO FILTER — SHARP  
SLOW

## Language Code List

For details, see page 33.

The language spellings conform to the ISO 639: 1988 (E/F) standard.

Code	Language	Code	Language	Code	Language	Code	Language
1027	Afar	1186	Scots Gaelic	1350	Malayalam	1513	Siswati
1028	Abkhazian	1194	Galician	1352	Mongolian	1514	Sesotho
1032	Afrikaans	1196	Guarani	1353	Moldavian	1515	Sundanese
1039	Amharic	1203	Gujarati	1356	Marathi	1516	Swedish
1044	Arabic	1209	Hausa	1357	Malay	1517	Swahili
1045	Assamese	1217	Hindi	1358	Maltese	1521	Tamil
1051	Aymara	1226	Croatian	1363	Burmese	1525	Telugu
1052	Azerbaijani	1229	Hungarian	1365	Nauru	1527	Tajik
1053	Bashkir	1233	Armenian	1369	Nepali	1528	Thai
1057	Byelorussian	1235	Interlingua	1376	Dutch	1529	Tigrinya
1059	Bulgarian	1239	Interlingue	1379	Norwegian	1531	Turkmen
1060	Bihari	1245	Inupiak	1393	Occitan	1532	Tagalog
1061	Bislama	1248	Indonesian	1403	(Afan) Oromo	1534	Setswana
1066	Bengali; Bangla	1253	Icelandic	1408	Oriya	1535	Tonga
1067	Tibetan	1254	Italian	1417	Punjabi	1538	Turkish
1070	Breton	1257	Hebrew	1428	Polish	1539	Tsonga
1079	Catalan	1261	Japanese	1435	Pashto; Pushto	1540	Tatar
1093	Corsican	1269	Yiddish	1436	Portuguese	1543	Twi
1097	Czech	1283	Javanese	1463	Quechua	1557	Ukrainian
1103	Welsh	1287	Georgian	1481	Rhaeto-Romance	1564	Urdu
1105	Danish	1297	Kazakh	1482	Kirundi	1572	Uzbek
1109	German	1298	Greenlandic	1483	Romanian	1581	Vietnamese
1130	Bhutani	1299	Cambodian	1489	Russian	1587	Volapük
1142	Greek	1300	Kannada	1491	Kinyarwanda	1613	Wolof
1144	English	1301	Korean	1495	Sanskrit	1632	Xhosa
1145	Esperanto	1305	Kashmiri	1498	Sindhi	1665	Yoruba
1149	Spanish	1307	Kurdish	1501	Sangho	1684	Chinese
1150	Estonian	1311	Kirghiz	1502	Serbo-Croatian	1697	Zulu
1151	Basque	1313	Latin	1503	Singhalese	1703	Not specified
1157	Persian	1326	Lingala	1505	Slovak		
1165	Finnish	1327	Laothian	1506	Slovenian		
1166	Fiji	1332	Lithuanian	1507	Samoan		
1171	Faroese	1334	Latvian; Lettish	1508	Shona		
1174	French	1345	Malagasy	1509	Somali		
1181	Frisian	1347	Maori	1511	Albanian		
1183	Irish	1349	Macedonian	1512	Serbian		

## Index

### Numerics

- 4:3 LETTER BOX 34
- 4:3 PAN SCAN 34
- 5.1 OUTPUT SETUP 1 38
- 5.1 OUTPUT SETUP 2 39, 40

### A

- A↔B Repeat 22
- Adjusting
  - volume 10, 14
- Angle 27
- AUDIO ATT 35
- AUDIO DRC 35
- AUDIO FILTER 35
- AUTO PLAY 34
- Auto pause 20

### B

- Batteries 6

### C

- CD 14
- Changing
  - angles 27
  - sound 26
  - subtitles 27
- Chapter 5, 46
- Connecting 6
- Continuous play
  - CD/VIDEO CD 14
  - DVD 10
- COLOR SYSTEM 34

### D, E

- DCS 46
- Display
  - front panel display 20
  - on-screen display 18
  - setup display 32
- Digital output 8, 35
- DNR 26
- Dolby Digital (AC-3) 8, 36
- DVD 10
- DVD menu
  - language 33
  - usage 13

### F, G

- Fast Forward 12, 16
- Fast Reverse 12, 16
- Front panel display 20

### H

- Handling discs 42
- Hi-speed search 11, 15
- Hooking up 6

### I, J, K

- INITIAL SETUP 1 34
- INITIAL SETUP 2 35

### L

- LANGUAGE SETUP 33
- Locating
  - a specific point 11, 15
  - by observing the TV screen 12, 16

### M, N, O

- On-screen display
  - usage 18
  - language 9, 33

### P, Q

- Parental control 28
- PBC functions 17
- PBC Playback 17, 47
- Playback
  - at various speeds 12, 16
  - Continuous Play 10, 14
  - frame by frame 12, 16
  - Program Play 24
  - Repeat Play 22
  - Shuffle Play 23
- PRO LOGIC 40
- Program Play 24

### R

- Remote 6, 30
- Repeating
  - a specific portion 23
  - current title, chapter or track 22
  - disc 22
- Resume Play 25

### S

- Scene 5
- Screen saver 34
- Setup display
  - 5.1 OUTPUT SETUP 1 38
  - 5.1 OUTPUT SETUP 2 39, 40
  - INITIAL SETUP 1 34
  - INITIAL SETUP 2 35
  - item list 51
  - LANGUAGE SETUP 33
  - usage 32
- Searching. *See* Locating.
- Shuffle Play 23
- Slow-motion Play 12, 16
- Speakers
  - adjusting 39
  - hookup 36
  - set up 38
- S video output 7
- Subtitles
  - changing 27
  - turning on and off 27

### T

- Test tone 39
- Title 5, 47
- Title menu 13
- Track 5, 47
- Troubleshooting 43

### U

- Usable discs 4

### V, W, X, Y, Z

- VES 40, 47
- VIDEO CD 14