

## Wi-Fi connection guide Dual Camera

Model No. **HX-WA30**

VQC9443  
1AG6P1P6680--(S)

This unit cannot be used to connect to a public wireless LAN connection.


- Step.1** Install the “Image App”
- Step.2** Confirm the Wi-Fi® connecting method
- Step.3** Connect to Wi-Fi

To use the Wi-Fi® function, it is required to connect this unit to a wireless access point or smartphone via Wi-Fi.

- This guide explains with Wi-Fi connection that allows using the [REMOTE CTRL].

- A** [REMOTE CTRL]
- B** [DLNA PLAYBACK]
- C** [Wi-Fi SETUP]

- Please refer to the operating instructions (PDF format) of this unit for details about the setting/operating of this unit.
- Please refer to the operating instructions of the device in use for details about the setting/operating of the wireless access point or smartphone.

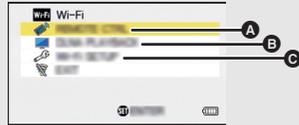

## Step.1 Install the “Image App”

An environment that can connect to the network is required.

To connect this unit with the smartphone, it is required to install “Image App” in the smartphone to be used.

- [Android™]:** Select “Google Play™ Store”.
- Enter “Panasonic Image App” into the search box.
- Select “Image App” and install it.

## Step.2 Confirm the Wi-Fi® connecting method

Confirm the wireless access point and smartphone used.



When connecting to a wireless access point (wireless LAN router)



When connecting to a smartphone



- Check if the wireless access point is compatible with IEEE802.11b/g/n.

- Proceed to 2 once the compatibility is confirmed.

- Check if the wireless access point is compatible with WPS\*.

Compatible with WPS:

Proceed to **A** [Easy Connection (WPS)] of Step.3

Not compatible with WPS:

Proceed to **B** [Manual Connection] of Step.3

\* WPS is an abbreviation for Wi-Fi Protected Setup™.

Operation cannot be guaranteed for all devices. For compatible devices, see the following support site.  
[http://panasonic.jp/support/global/cs/e\\_cam/index.html](http://panasonic.jp/support/global/cs/e_cam/index.html) (This Site is English only.)

- Android and Google Play are trademarks or registered trademarks of Google Inc.
- App Store is a service mark of Apple Inc.
- “Wi-Fi”, “Wi-Fi Protected Setup”, “WPA” and “WPA2” are marks or registered marks of the Wi-Fi Alliance.

## Step.3 Connect to Wi-Fi

The setting screen for the wireless access point is displayed when the Wi-Fi button is pressed for the first time.



When connecting to a wireless access point (wireless LAN router)

### **A** [Easy Connection (WPS)]

- Press the Wi-Fi button on this unit and setup the Wi-Fi.

[Wi-Fi SETUP] → [Set Wireless Access Point]

- Select the part where no wireless access point is displayed using the SET button and then press the SET button.
- Select [SET] using the SET button and then press the SET button.
- Select [Easy Connection (WPS)] using the SET button and then press the SET button.



- Set the wireless access point to waiting for WPS.

- A message is displayed on this unit screen when the connection is complete.

- Press the MENU button twice.

- Select [REMOTE CTRL] using the SET button and then press the SET button.

- Start up the smartphone application “Image App”.

- When the connection is complete, images of this unit is displayed on the smartphone screen.



### **B** [Manual Connection]

- Please refer to the operating instruction of the device in use for details about the setting and display of the wireless access point.

- Press the Wi-Fi button on this unit and setup the Wi-Fi.

[Wi-Fi SETUP] → [Set Wireless Access Point]

- Select the part where no wireless access point is displayed using the SET button and then press the SET button.
- Select [SET] using the SET button and then press the SET button.
- Select [Manual Connection] using the SET button and then press the SET button.



- Select [Search] using the SET button and then press the SET button.

- Please refer to the operating instructions (PDF format) of this unit for details about the setting when the [Set Manually] is selected.

- Select the wireless access point to be connected using the SET button and then press the SET button.

- If an Encryption key (Password) is not set, the connection is complete and a message is displayed.

- (When there is an Encryption key (Password)) Select [INPUT] using the SET button and then press the SET button.

- When the connection is complete, images of this unit is displayed on the smartphone screen.

- Enter the Password using the SET button.

- For details on how to enter characters, refer to the operating instructions (PDF format).
- When the entry is complete, select [ENTER] using the SET button and then press the SET button.

- (When there is an Encryption key (Password)) Select [NEXT] using the SET button and then press the SET button.

- A message is displayed when the connection is complete.

- Press the MENU button twice.

- Select [REMOTE CTRL] using the SET button and then press the SET button.

- Start up the smartphone application “Image App”.

- When the connection is complete, images of this unit are displayed on the smartphone screen.



When connecting to a smartphone

### **C** [Direct Connection]

- Press the Wi-Fi button on this unit and setup the Wi-Fi.

[Wi-Fi SETUP] → [Direct Connection]

- Select the SSID displayed on this unit in the Wi-Fi setting of the smartphone.
- Enter the Password displayed on this unit into a smartphone.

- Start up the smartphone application “Image App”.

- When the connection is complete, images of this unit is displayed on the smartphone screen.