



MARQUE : HAiER
REFERENCE : LE75B9300U 4K UHD
CODiC : 4293150

PROViSOiREMENT EN ANGLAiS



NOTiCE



Haier

LED Backlit Flat TV

INSTRUCTION MANUAL

LE75B9300U

Please read this manual carefully before operating the unit, and keep it for future reference.

Contents

01 Safety Warnings

Welcome	2
Important Information.....	2
Safety notice	3
Warning and cautions	4

02 Introduction

Caution	5
Main Features	5
Main Parameter.....	5
Installation.....	5
Base Stand Assembly Instruction.....	6
Wall Mounting Installation Guidelines	7
Front Control Panel.....	8
Rear/Side Sockets.....	8
Connecting to your Haier TV.....	9
Common Interface	11

03 Remote Control

Remote Control.....	12
Teletext	13

04 Operation

Installation Guide	14
Picture menu	15
Sound menu	15
Network menu	16
Setup menu	16
Channel menu.....	17
Lock menu	18
USB play	19
Photo	19

Music	19
Movie	19

05 Trouble shooting

Trouble shooting	20
------------------------	----

06 Specification

Specification	23
---------------------	----

01 Safety warnings

WELCOME

Thanks for buying this 75" LED LCD TV. This guide will help you set up and begin using your TV.

First, check the contents of your box with the parts check list below:

- 75" UHD Digital LED LCD TV
- Remote control
- AAA battery x2
- Instruction Manual
- Warranty Card
- Screws
- Stand
- AV adaptor cable
- YPbPr adaptor cable

Now you can get started!

IMPORTANT INFORMATION

READ ALL INSTRUCTIONS BEFORE USE AND KEEP FOR FUTURE REFERENCE.



CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN



CAUTION

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. FOR ANY PROBLEMS, REFER SERVICING TO THE CUSTOMER HELP LINE. THERE IS A LIGHTNING BOLT SYMBOL IN THE TRIANGLE: THIS SYMBOL INDICATES HIGH VOLTAGE IS PRESENT INSIDE. IT IS DANGEROUS TO MAKE ANY KIND OF CONTACT WITH ANY INSIDE PART OF THIS PRODUCT.

THERE IS AN EXCLAMATION MARK IN THE TRIANGLE: THIS SYMBOL ALERTS YOU THAT IMPORTANT LITERATURE CONCERNING OPERATION AND MAINTENANCE HAS BEEN INCLUDED WITH THIS PRODUCT.



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK AND FIRE, DO NOT PUT THE TV SET NEAR SOURCES OF HUMIDITY. DO NOT USE ANY ABRASIVE CLEANERS WHICH MAY SCRATCH OR DAMAGE THE LCD SCREEN. AVOID CONTACT WITH OBJECTS THAT MAY SCRATCH THE LCD SCREEN.




NOTE: SERVICING THE UNIT YOURSELF IS UNAUTHORISED AND COULD LEAD TO INJURY OR PRODUCT DAMAGE. REFER ALL SERVICING TO THE CUSTOMER HELPLINE.

Safety notice

- Warning: To reduce the risk of electric shock, do not remove the cover or back. There are no user-serviceable parts inside. Refer servicing to qualified personnel.
- Warning: To prevent fire or electric shock hazard, do not expose the unit to rain or moisture.
- Do not expose the product to water (dripping or splashing) and no objects filled with liquids, such as vases, should be placed on the unit.
- Keep the product away from direct sunlight and heat source such as radiators or stoves.
- Do not block the ventilation openings. Slots and openings on the unit are provided for ventilation. The openings should never be blocked by placing your product on a cushion, sofa or other similar surface.
- Do not place the product on unstable cart, stand, tripod, bracket or table. The unit may fall, resulting in possible damage or injury.
- Never place heavy or sharp objects on the panel or frame.
- Unplug the Power from the outlet when the unit is not in use.
- Attention should be drawn to the environmental aspects of battery disposal.
- WARNING: The battery shall not be exposed to excessive heat such as sunshine, fire or the like.
- WARNING: Excessive sound pressure from earphones or headphones can cause hearing loss.
- CAUTION: When the apparatus was in electrostatic circumstance, it maybe malfunction and need to reset by user.






This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

CE RoHS ✓


WARNING AND CAUTIONS

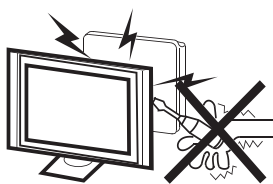

Warning




High voltages are used in the operation of this television receiver. Do not remove the cabinet back from your set. Refer servicing to qualified service personnel.

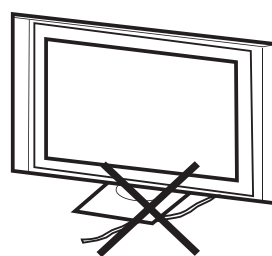

Caution




Do not trap the power supply cord under the television receiver.

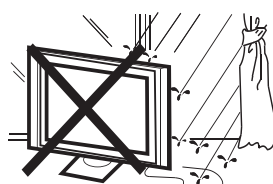

Warning



To prevent fire or electrical shock hazard, do not expose the television receiver to rain or moisture.

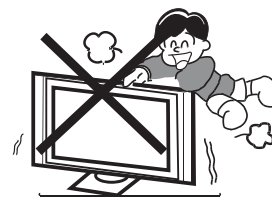

Caution



Never stand on, lean on, or suddenly push the television or its stand. You should pay special attention to children. Serious injury may result if it should fall.



Warning




Do not drop or push objects into the television cabinet slots or openings. Never spill any kind of liquid on the television receiver.



Caution



Do not place your television on an unstable cart, stand, shelf or table. Serious injury to an individual, and damage to the television, may result if it should fall.

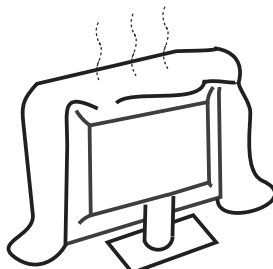

Caution




Do not block the ventilation holes in the back cover. Adequate ventilation is essential to prevent failure of electrical components.



Caution



When the television receiver is not used for an extended period of time, it is advisable to disconnect the AC power cord from the AC outlet.

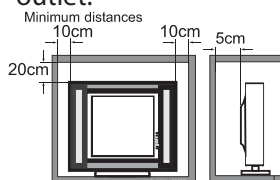

Caution



If the television is to be built into a compartment or similar enclosure, the minimum distances must be maintained. Heat build-up can reduce the service life of your television, and can also be dangerous.

02 Introduction

CAUTION

Never tamper with any components inside the TV, or any other adjustment controls not described in this manual. All LED-TV's are high voltage electrical equipment.

When you clean dust or any water drops off the SCREEN or CABINET or around any of the buttons or connectors, the power cabled should be removed from the power socket. Wipe the TV with a soft, dry, dust free cloth.

During thunderstorms, unplug the power cable and aerial / antenna cable to prevent damage to your TV and any other devices connected to it. All repairs to this TV should only be performed by qualified TV service personnel.

Main features

- ① Used as Television, display terminal ;
- ② High luminance, wide viewingangle;
- ③ HDMI interface ;

INSTALLATION

*Locate the TV in the room where light does not strike the screen directly.

*Total darkness or a reflection on the picture screen can cause eyestrain. Soft and indirect lighting is recommended for comfortable viewing.

*Allow enough space between the TV and the wall to permit ventilation.

*Avoid excessively warm locations to prevent possible damage to the cabinet or premature component failure.

*Do not cover the ventilation openings when using theTV.

④ NICAM;


⑤ Time-shift;

Main parameter

Panel	75"
TV System	PAL-B/G , I , D/K SECAM-B/G , D/K , L DVB-T/T2, DVB-C
Video Signal System	PAL/SECAM/MPEG2/MPEG4/H.265
Storage channel number	99CH(ATV);700CH(DVB-T/T2+DVB-C)
Input Power Voltage	AC 100-240V ~ 50/60Hz
Power consumption	280W
Standby Power consumption	≤0.50W
Audio Output Power (THD≤7%)	2x10W
Signal Input	RJ45 x 1 High-Definition Multimedia Interface (HDMI) x 3 YPbPr x 1 AV x 1 CI x 1 USB x 3 RF x 1
Signal output	Headphone x 1 Optical x 1
Horizontal definition (TV line)	Composite video input ≥=350 YPbPr ≥=400


Base Stand Assembly Instruction

- 1 Place TV unit face down on a soft and flat surface (blanket, foam, cloth, etc.) to prevent any damage to the TV.

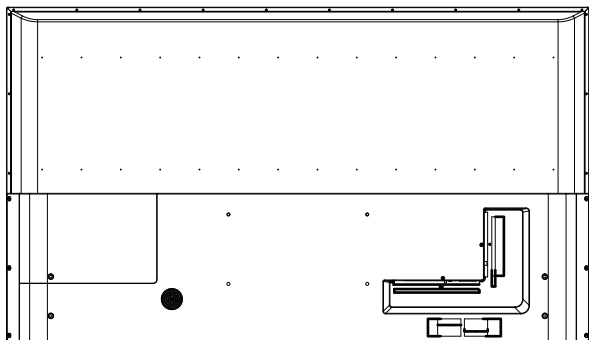

- 2 Position the TV stand with the curved bracket facing the front of the TV.
Pls ensure that the legs of the TV stand are pointed outward with and with the longer leg pointed toward the front of the TV.

- 3 Attach the TV stand to the bottom of the TV with the eight MB6 (26mm) black screws.

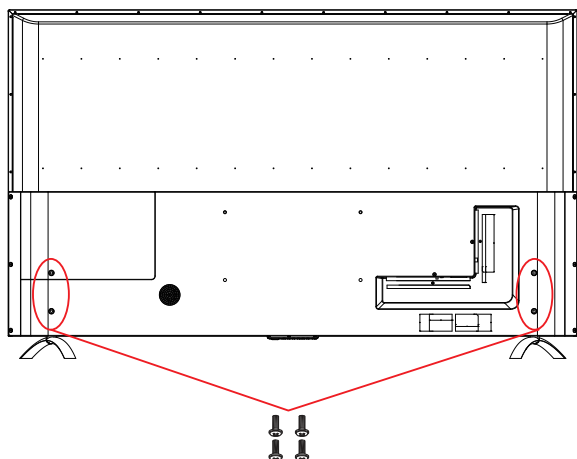

INSTALLATION NOTES

Locate the TV in a room where light does not strike the screen directly. Total darkness or a reflection on the screen can cause eyestrain. Soft and indirect lighting is recommended for comfortable viewing.

Allow enough space between the TV and the wall to permit ventilation.


Please do not attempt to rotate the TV on the stand.

Avoid excessively warm locations to prevent possible damage to the cabinet or premature component failure.

WALL MOUNTING INSTALLATION GUIDELINES


This television can be wall mounted as follows:

1. Use the four screws provided to fix the TV onto a wall mounting bracket (not included) via the four VESA standard holes on the back of the television.

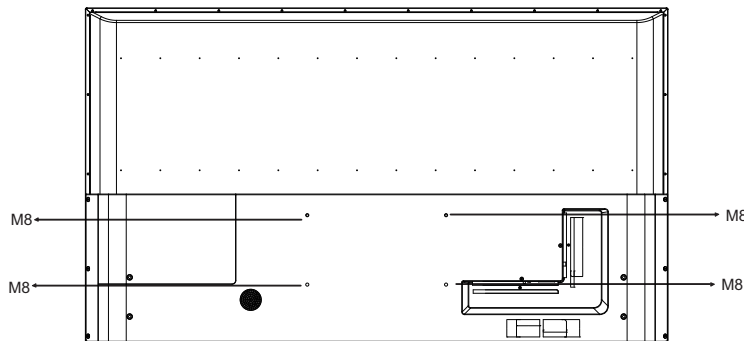


(75")

Front control panel

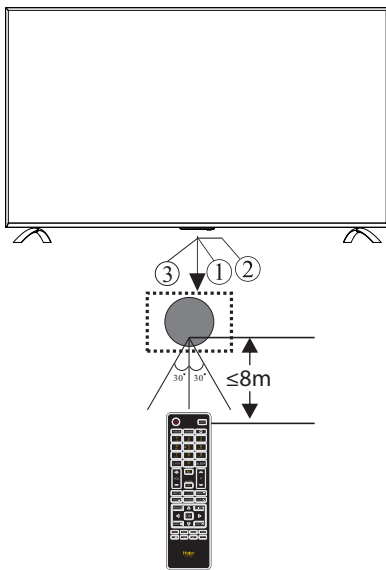


- 1 Remote control sensor.
- 2 Indicator LED:
RED: STAND BY.
- 3 Key board.

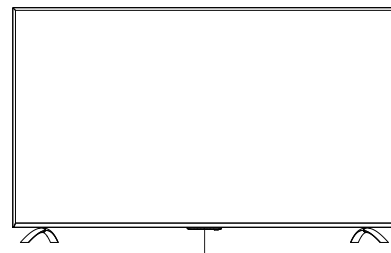

SOURCE MENU VOL+ VOL- CH+ CH- POWER

- | | | |
|---|------------------|---|
| 1 | SOURCE | Display the input source menu. |
| 2 | MENU | Display main MENU. |
| 3 | VOL+/VOL- | Adjust sound level.
In MENU, adjust the item that you selected. |
| 4 | CH+/CH- | In TV mode, press CH+ or CH- to change the channel up and down.
In MENU, press CH+ or CH- to select items. |
| 5 | POWER | Turn the TV On/Off. |


Rear/Side Sockets

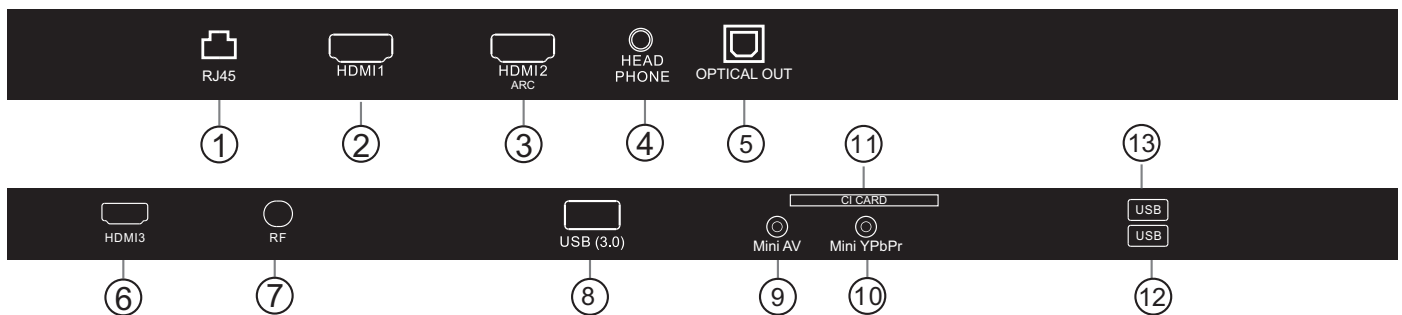

- | | | |
|---|------------------|-----------------------|
| 1 | RJ45 | input/output |
| 2 | HDMI 1 | input |
| 3 | HDMI 2 | input |
| 4 | HEADPHONE | analogue audio output |
| 5 | OPTICAL | digital audio output |
| 6 | HDMI 3 | input |
| 7 | RF | input |

- | | | |
|----|-----------------------------|-------|
| 8 | USB(3.0) | input |
| 9 | AV | input |
| 10 | YPbPr | input |
| 11 | COMMON INTERFACE(CI) | input |
| 12 | USB | input |
| 13 | USB | input |

Connecting to your Haier TV

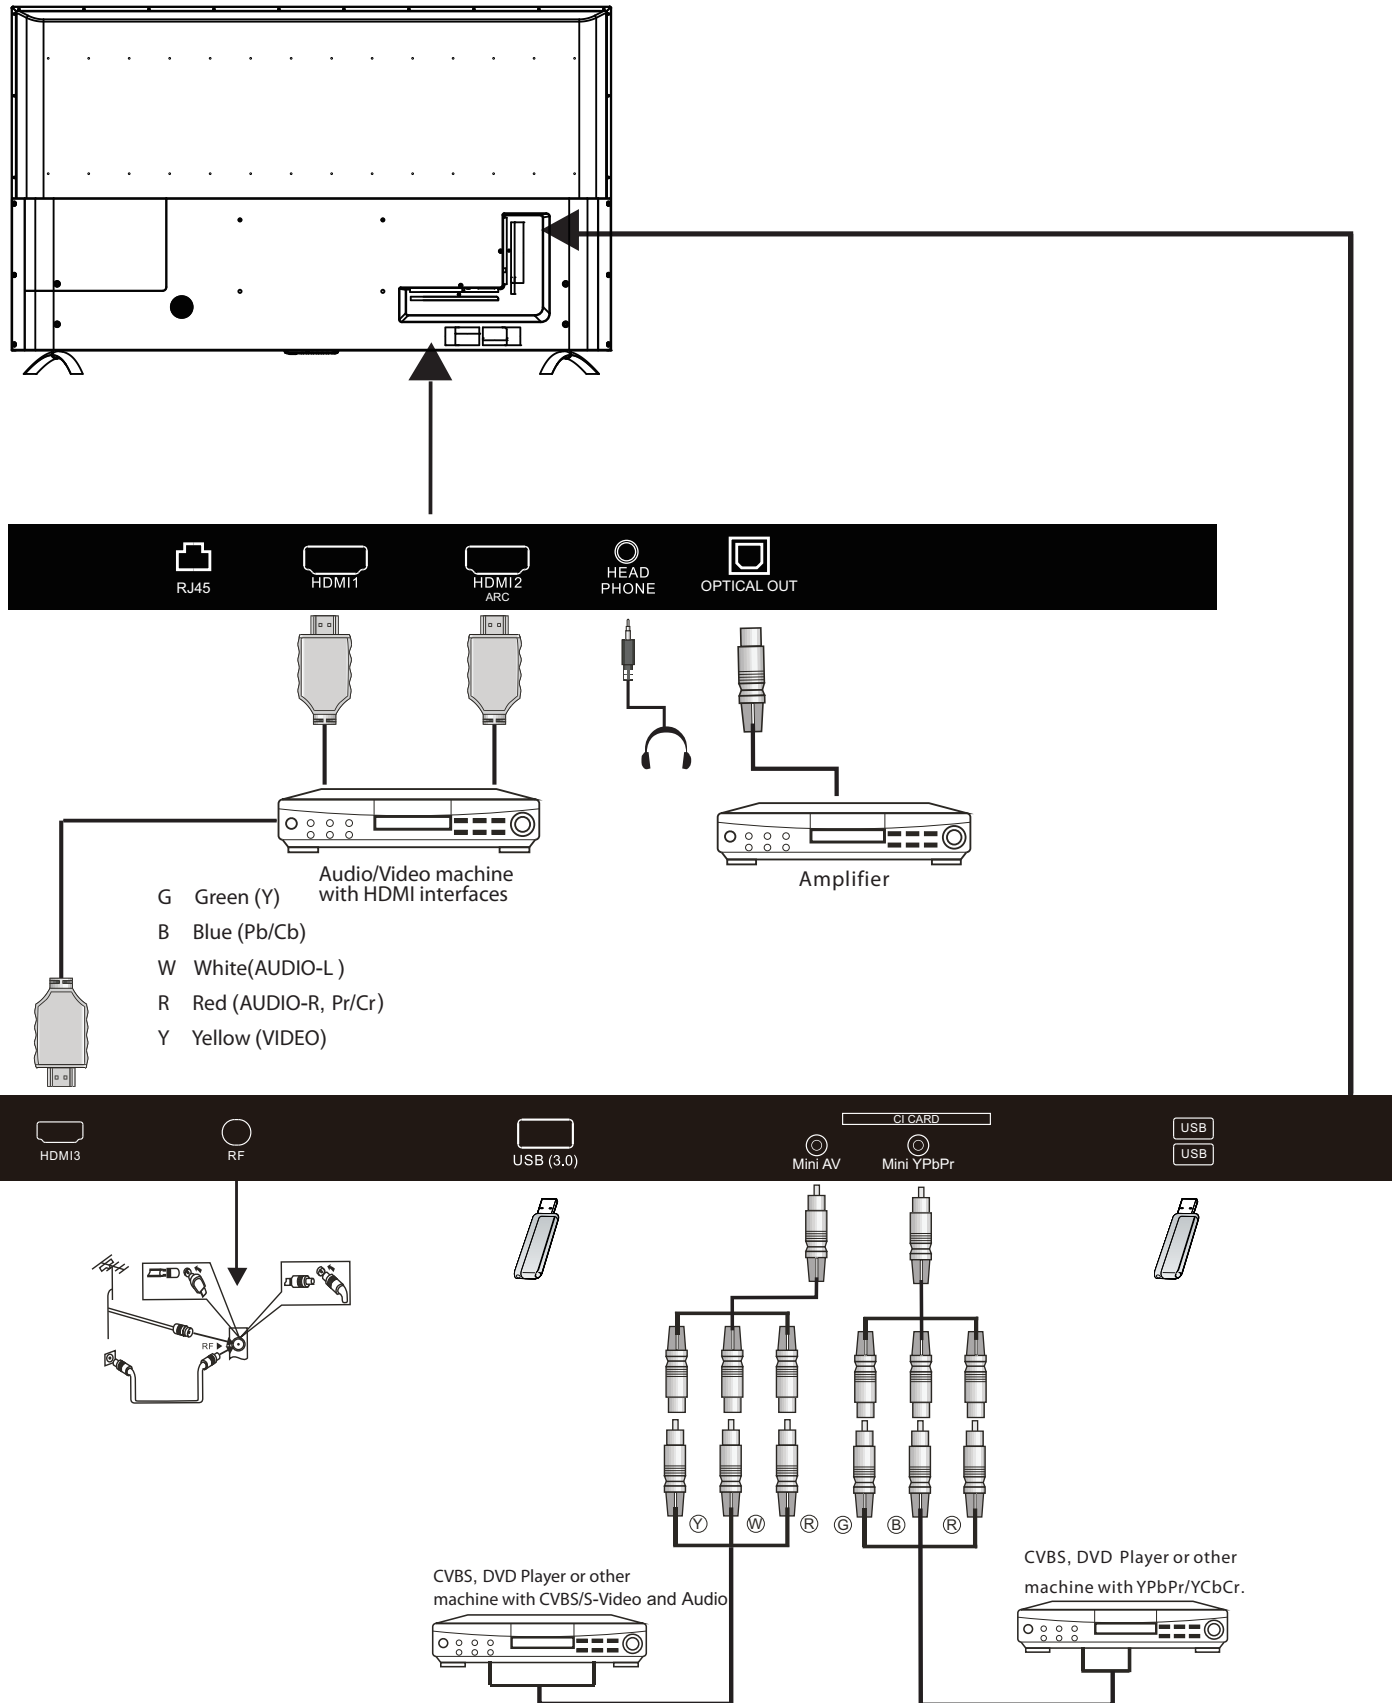

Connecting to your Haier TV

Connecting a DVD player / Satellite / cable set top box receiver / games console / PC or Laptop

There are several options to connecting a DVD player / Satellite or Cable set top box receiver / games console / PC or Laptop to your TV.

Option 1 **HDMI**

1 If the device you want to connect to the TV is switched on, switch off the device first.

2 Connect a HDMI cable (not supplied) from the HDMI socket on the TV to the DVD player / Satellite or cable receiver or games console.

3 Switch on the device you have just connected to the TV

4 To select the device connected with the HDMI cable press the **SOURCE** button on the remote and use the **▼▲** keys to select **HDMI** and press the **OK** button.

Option 2 **AV Audio Visual**

(Yellow/White/Red)

1 Make sure that both TV and the device are switched off before connecting.

2 Connect the AV cables (not supplied) from the Video (yellow) and Audio (white, red) sockets on the TV to the DVD player or games console etc.

3 To select the device connected with the **AV** cable press the **SOURCE** button on the remote and use the **▼▲** keys to select **AV** and press the **OK** button.

Option 3 **YPbPr**

(Green/Blue/Red)+(White/Red)

1 Make sure that both TV and the device are switched off before connecting.

2 Connect the cables (not supplied) from the YPbPr IN sockets Y, Pb, Pr (green, blue, red) and L-Audio-R (white, red) on the TV to the DVD player or games console etc.

3 To select the device connected with the **YPbPr** cable press the **SOURCE** button on the remote and use the **▼▲** keys to select **YPbPr** and press the **OK** button.

Option 4 **USB**

1 Most USB sticks can be connected to your TV and some digital cameras may also work.

2 Connect USB stick (not supplied) or a USB cable (not supplied) to the TV.

3 To select the USB device connected to the TV, press the **SOURCE** button on the remote and use the **▼▲** keys to select **USB** and press the **OK** button.

Note 1: Only *.jpg, *.mp3, *.txt, *.avi, *.mp4, files will work, other file types are not guaranteed and may not.

Note 2. Apple iPhones and iPods are not compatible with your TV.

Note 3. When connecting any device to the USB connection, keep the USB cable length as short as possible.

Option 5 **HEADPHONE OUTPUT**

Insert the plug of the earphone into the headphone socket on the TV. The TV speakers are now muted. Alternatively you can also plug in external speakers if required.

Option 6 **DIGITAL AUDIO OUT(OPTICAL)**

OPTICAL is a digital audio connection used to connect audio equipment, for example home theatres and other digital HiFi systems over short distances. The signal is transmitted over either a coaxial cable with RCA connectors.

1 Make sure that both TV and the device are switched off before connecting.

2 Connect the AV cables (not supplied) from the **OPTICAL** socket on the TV to the Home Theater sound system or digital HiFi system etc.

COMMON INTERFACE


The common interface (CI) slot is designed to accept the conditional Access (CA) Module and Smart card in order to view the pay TV programmes and additional services. Contact your Common Interface service provider to get more information about the modules and subscription.

Please noted that CA modules and smart cards are neither supplied nor optional accessories from us.

Warning

- Switch off your TV before any module is inserted in the Common Interface slot.

- 1** Insert the CAM correctly, then Smart Card to the CI slot that is located at the side of the TV.

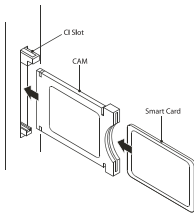

- 2** Turn on the TV and it will display the below message if the CI module is detected. Wait for few moments until the card is activated.

CI Module Inserted


- 3** Detailed information on the CI card in use is displayed.

- 4** Press **OK** button to access the card menu. Refer to the module instruction manual for setting details.

- 5** When module is removed, the following message will appear on the screen.

CI Module Removed

03 Remote Control

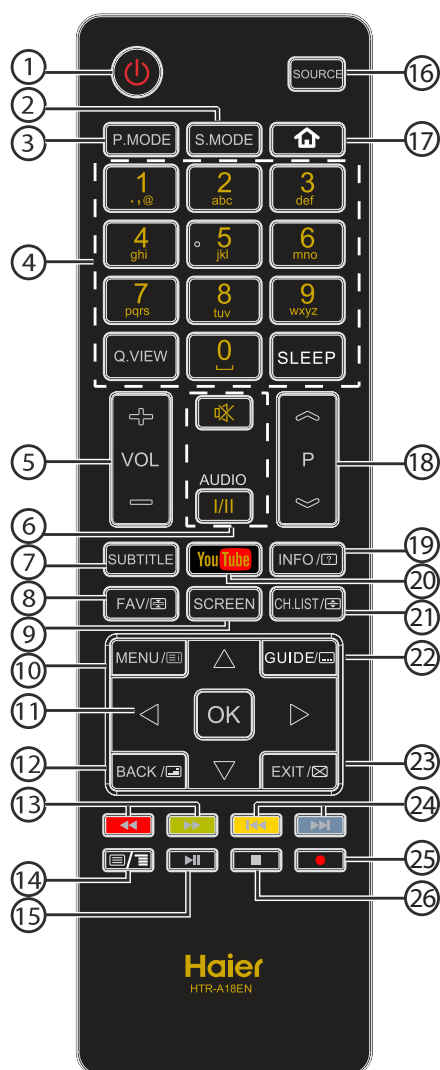


9	SCREEN	Press to change picture aspect ratio.
10	MENU/☰	Press to open the on-screen menu. In teletext mode, press to open the INDEX page.
11	▲▼◀▶	Press to navigate the on-screen menu.
	OK	Press to confirm a selection.
12	BACK/☒	Press to return to the previous screen. In teletext mode, press to enter mix mode.
13	◀◀ (reverse) ▶▶ (forward)	Press to fast forward or reverse playback in multimedia mode.
14	☰/☷	In teletext mode, press to open or close teletext page. Press to display main menu in the MHL mode, for example the APP menu.
15	▶II (play/pause)	Press to play/pause in multimedia mode, Time Shift in DTV mode.
16	SOURCE	Press to open the input source list.
17	🏠	Press to open the home mode.
18	P ▲/▼	Press to change the channel.
19	INFO/☒	Press to display the channel information. In teletext mode, press to reveal the hidden information.
20	YouTube	Press to open the YouTube.
21	CH.LIST/☒	Press to open the channel list. In teletext mode, press to switch the image to top, bottom or full.
22	GUIDE/☒	Press to display electronic programme guide in TV mode. Press to enter the teletext subpage.
23	EXIT/☒	Press to close the on-screen menu. In teletext mode, press to hide the text.
24	◀◀ (previous) ▶▶ (next)	Press to select previous or next file.
25	● (REC)	Press to record the TV program you are watching in DTV mode.
26	■ (stop)	Press to stop multimedia playback.

En

#	Button	Descriptions
1	⏻ (Power)	Press to turn the TV on or off.
2	S.MODE	Press to select the sound mode.
3	P.MODE	Press to select the picture mode.
4	0-9	Press to enter a channel number or password.
	Q.VIEW	Press to switch to the last viewed channel.
	SLEEP	Press to set the sleep timer.
5	VOL +/-	Press to adjust the volume level.
6	🔇 (Mute)	Press to turn the sound on or off.
	AUDIO(I/II)	Press to select Mono, Nicam stereo for ATV channel. Select Audio language for DTV channel.
7	SUBTITLE	Press to turn the subtitle on or off.
8	FAV/☒	Press to open a favorite channel list. In teletext mode, press to hold a page.

Insert Batteries into the Remote Control

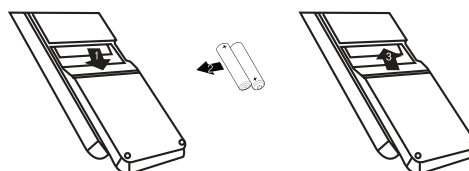

















1. Remove the battery cover.
2. Inserting the 2 AAA 1.5V batteries making sure the polarity (+ or -) of the batteries matches the polarity marks inside the unit.
3. Mount the battery cover. Replace with new batteries when the TV set begins to show the following symptoms: Operation is unsteady or erratic. Sometimes the TV set does not function with Remote Control Unit.

Remark:

- 1) Alkaline Battery Recommended.
- 2) Remove batteries when they are exhausted or if the remote control is not to be used for long time.

TELETEXT


Teletext is an information system broadcast by certain channels which can be consulted like a newspaper. It also offers access to subtitles for viewers with hearing problems or who are not familiar with the transmission language(cable networks, satellite channels, etc.)

Press:	You will obtain:
 /  TEXT	This is used to call or exit teletext modes. The summary appears with a list of items that can be accessed. Each item has a corresponding 3 digit page number.
SELECTING A PAGE   	Enter the number of the page required using the 0 to 9 up/down. Example: page 120, enter 120. The number is displayed top left, the counter turns and then the page is displayed. Repeat this operation to view another page. If the counter continues to search, this means that the page is not transmitted. Select another number.
DIRECT ACCESS TO THE ITEMS    	Coloured are as are displayed at the bottom of the screen. The 4 coloured keys are used to access the items or corresponding pages. The coloured areas flash when the item or the page is not yet available.
MENU/  INDEX	This returns to the contents page (usually page 100).
GUIDE/  SUB CODE	Press the button and enter the 4-digit number to enter a secondary page.
FAV/  HOLD	To freeze the page.
INFO/  REVEAL	To display or hide the concealed information (games solutions).
BACK/  MIX	This will superimpose the teletext data on top of the TV picture. Press button again to return to full text.
EXIT/  EXIT	Hide the teletext.
CH.LIST/  SIZE	Switch the image to top,bottom.




04 OPERATION

First Time Installation

please according to the Text Tip to First Time Setup.

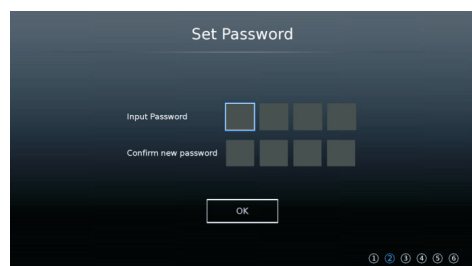


Remarque: Définissez le mot de passe initial de votre téléviseur.
Si le pays sélectionné est la France, le mot de passe ne peut pas être défini comme 0000.

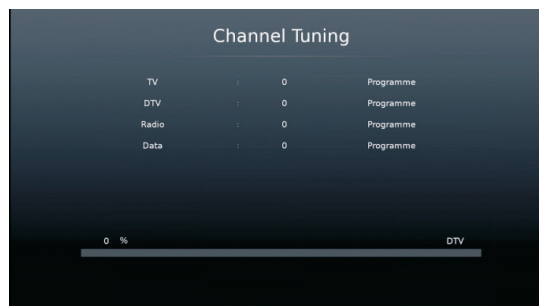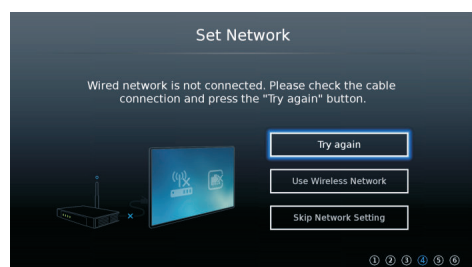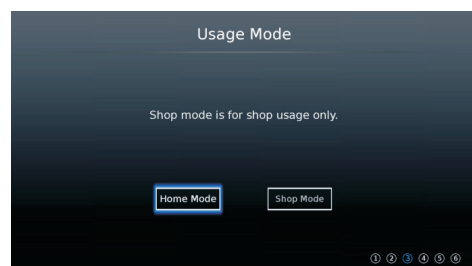


En

Home:

Press **[HOME]** button to enter the HOME menu.
Press **[▼]** / **[▲]** / **[◀]** / **[▶]** button to select sources and application.
Press **OK** to select .

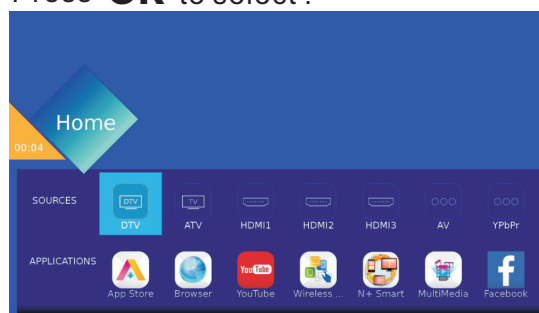


APPLICATIONS

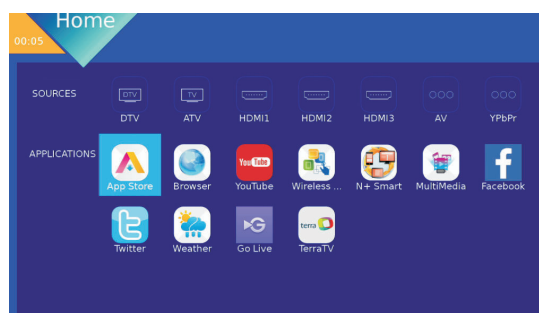

TV SETTINGS



Press **MENU** button to display the main menu.
Press **[▼]** / **[▲]** / **[◀]** / **[▶]** button to select what you want set.
Press **OK** to enter setting.

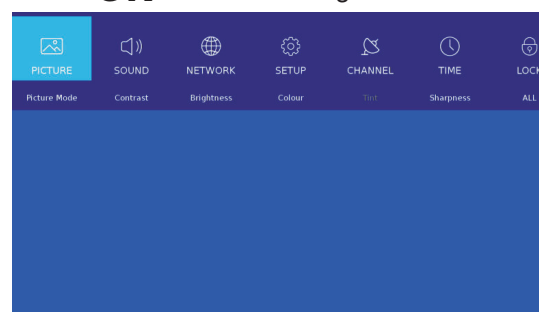

Operation

Picture

Press **[MENU]** to enter the main menu , press **[◀] / [▶]** to select picture menu .

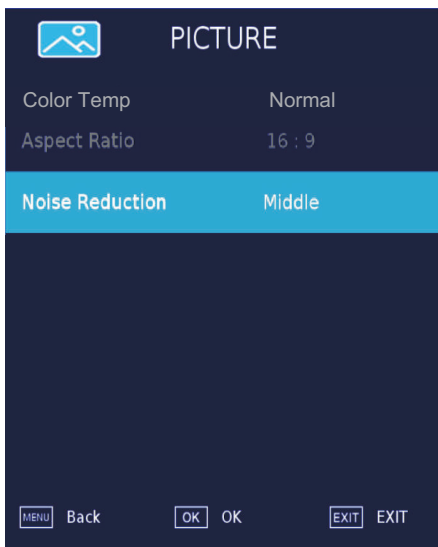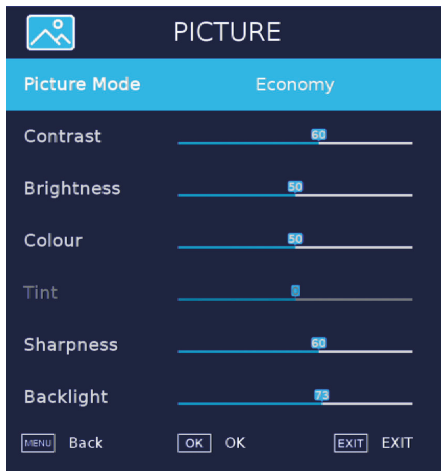

1. Press **[▼] / [▲]** to select: Picture Mode/Contrast/Brightness/Colour/ Tint/Sharpness/Backlight/Color Temperature/ Aspect Ratio/Noise Reduction.
2. Press **[◀] / [▶]** to adjust or select.

Picture Mode

Press **[▼] / [▲]** button to select Picture Mode, then press **[◀] / [▶]** button to select.

(Optional: vivid stander mild user Economy).

Note: Press **PMODE** to select Picture Mode quickly.

Standard	The default mode, to make users experience high-quality images under normal light.
Mild	Image colors more gentle to protect eyes.
Users	User-defined picture settings
Economy	Reduce screen brightness, improved contrast for energy saving.
Vivid	This mode enhance contrast and sharpness to make picture more vivid.

Contrast/ Brightness/Colour/Sharpness

Press **[▼] / [▲]** to select,and press **[◀] / [▶]** to adjust

Contrast	Adjust image contrast.
Brightness	Adjust image brightness.
Colour	Adjust image color density
Sharpness	Adjust the image edge sharpness

Colour Temp

Adjust the overall color of the image.

Press **[▼] / [▲]** to select Colour Temperature. press **[◀] / [▶]** to select.

(Optional:Cool, Normal , Warm).

Cool	Produces a gentle blue-hued image.
Normal	Produces a vivid image.
Warm	Produces a red-hued image.

Aspect Ratio

Press **[▼] / [▲]** to select Aspect Ratio, press **[◀] / [▶]** to select. (Optional:Standard,16:9,4:3,Zoom1,Zoom2).



Noise Reduction

Setting the option to eliminate image noise intensity.

Press **[▼] / [▲]** to select Noise Reduction, and press **[◀] / [▶]** to select on/off.

Sound

Press **MENU** button to display the main menu.Press **[◀] / [▶]** button to select **SOUND** in the main menu,

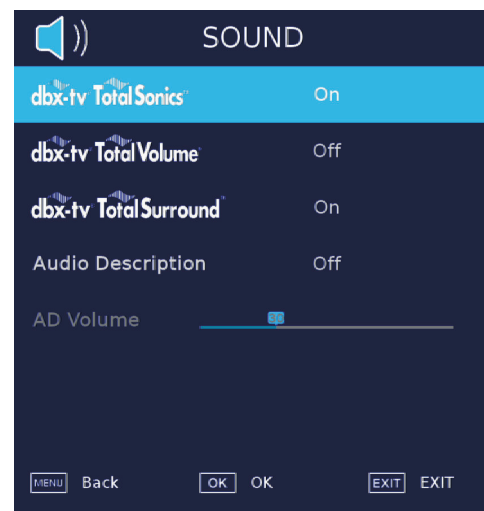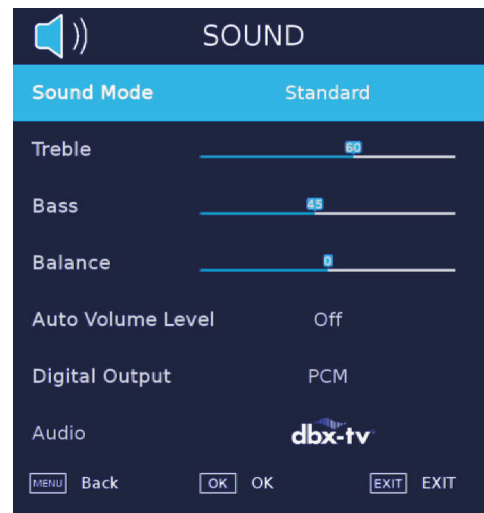

Press **▼** / **▲** to select: Sound Mode/Treble/Bass/Balance/Auto Volume Level/Surround/ Digital Output/Audio Description/AD Volume

Press **OK** / **◀** / **▶** to select or adjust.

Sound Mode

Press **▼** / **▲** button to select Sound Mode, then press **◀** / **▶** button to select. (Optional: Standard/Music/Movie/Night/Users).

Note: Press **S.MODE** to select Sound Mode quickly.

- Standard** Produces a balanced sound in all environments.
- Music** Preserves the original sound.Good for musical programs.
- Movie** Enhances treble and bass for a rich sound experience.
- Night** Enhances vocals for sports.
- Users** Select to customize sound settings.

Balance

Adjust the left and right channel output balance.

Press **▼** / **▲** button to select Balance, then press **◀** / **▶** button to adjust.

Auto Volume Level

Press **▼** / **▲** button to select Auto Volume Level, then press **◀** / **▶** button to choose ON/OFF.

When "ON" is selected, the volume will attempt to stay at a constant.

Audio Enhancement

Press **▼** / **▲** button to select Audio Enhancement, then press **◀** / **▶** button to choose off/Surround/dbx-tv .

When you select dbx-tv, the following options will show up dbx-tv Total Sonic/dbx-tv Total Volume/ dbx-tv Total Surround.

Digital Output

Press **▼** / **▲** button to select digital output, then press **◀** / **▶** to select. (Options: PCM, Auto)

Audio Description

Press **▼** / **▲** button to select Audio Description, then press **◀** / **▶** button to choose ON/OFF.


AD Volume

Press **▼** / **▲** button to select AD Volume, then press **◀** / **▶** button to adjust.

Network Menu

Press **◀** / **▶** button to select **Network** in the main menu.

Press **▼** / **▲** button to select :Network Configuration/IP Config Network info/ Network test

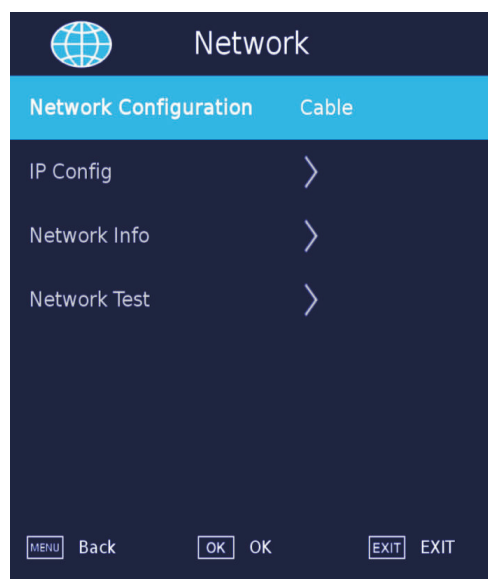


Network Configuration

Select Wifi or Cable network.

Press **▼** / **▲** / **◀** / **▶** button to select Network Configuration, then press **OK** button to confirm.

IP/Wifi Configuration

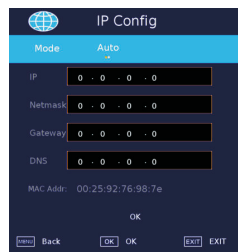

Network Info




En

Network test





Wifi Auto Search

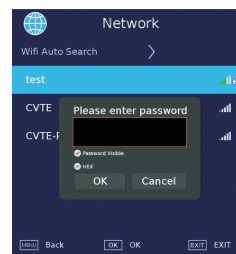


SETUP

Press **▼** / **▲** button to select :Language /Audio Language/Subtitle Language /Hearing Impaired /Blue Screen/PVR File System/First Time Installation/Software Update(USB)/Software Update(NET)/ Reset TV /HDMI CEC /HDMI Port Setting/HbbTV/Usage Mode.

Press **◀** / **▶** to set.

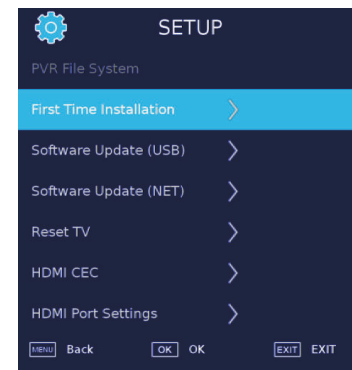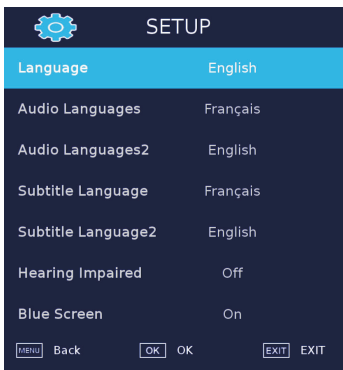

Operation

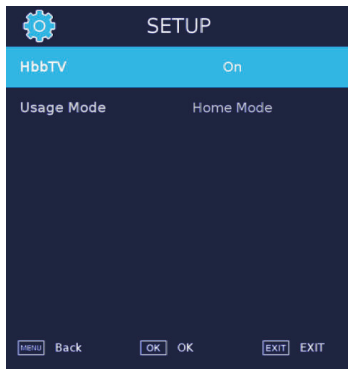

Language

Press ▼ / ▲ button to select Language. Press ◀ / ▶ to select the display language.

Audio Language

Press ▼ / ▲ button to select Audio Language. Press ◀ / ▶ to select the Audio language.

Subtitle Language

Press ▼ / ▲ button to select Subtitle Language. Press ◀ / ▶ to select the Subtitle language.

Hearing Impaired

Press ▼ / ▲ button to select Hearing Impaired. Press ◀ / ▶ to select it on or off.


Blue Screen

Press ▼ / ▲ button to select Blue Screen. Press ◀ / ▶ to select it on or off.

PVR File System

Recording the selected program.

Press ▼ / ▲ button to PVR, then press **OK** button to confirm

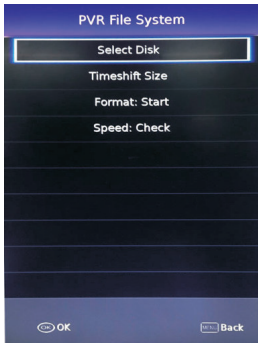


First Time Installation


Press ▼ / ▲ button to select First Time Installation, then press **OK** button to enter sub-menu.

Details can be found in page 1.

Software Update(USB)

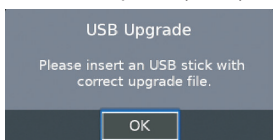


Reset TV

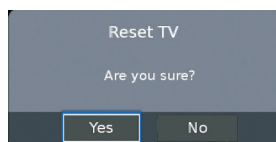

HDMI CEC



HDMI PORT SETTING

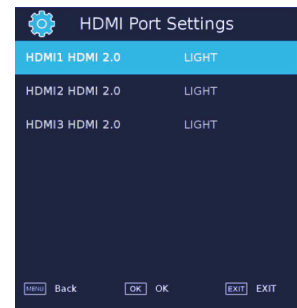

Note:when you choose HDMI 2.0 full, this HDMI can receive 2160p @60Hz 4:4:4; when you choose HDMI 2.0 light ,this HDMI can receive 2160p@60Hz 4:2:0 and the below.

HbbTV

You can select ON/OFF for HbbTV..

Usage Mode

You can select Home Mode or Shop Mode. When in Shop Mode,the following label will show up.





Please refer to the real TV specific picture

Channel

Press [▼] / [▲] button to select : DVB Antenna/Auto Scan/Analogue Manual Scan/Digital Manual Scan /Channel List/Signal Information.



Press **OK** / [◀] / [▶] to enter

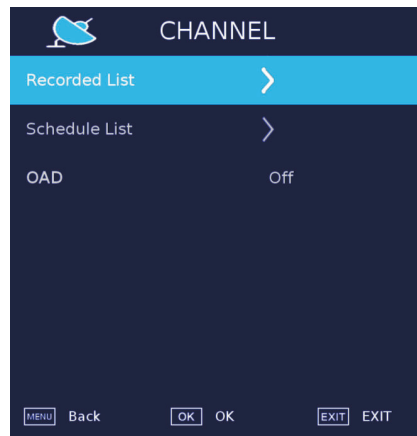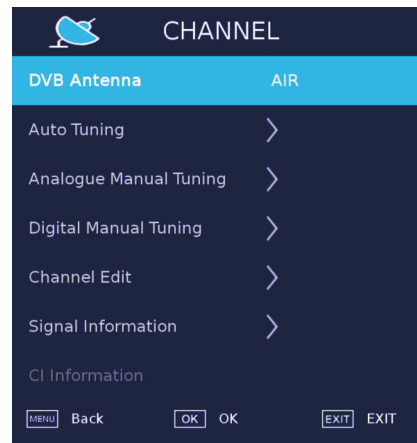

Auto Tuning




Analogue Manual Tuning

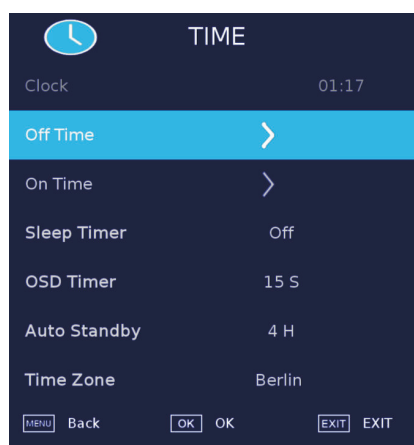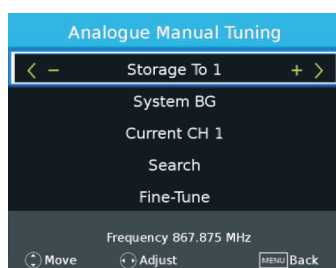


Digital Manual Tuning




Channel list

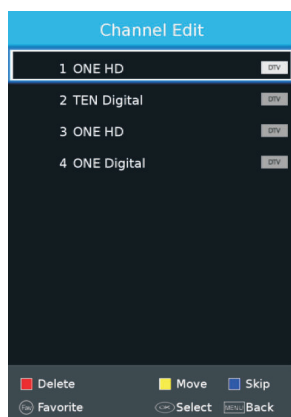

Signal Information

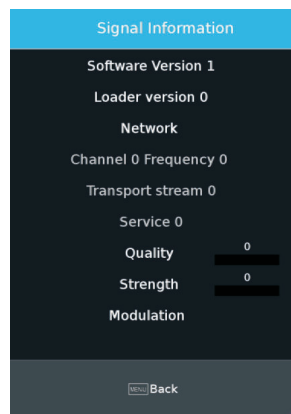

Channel List

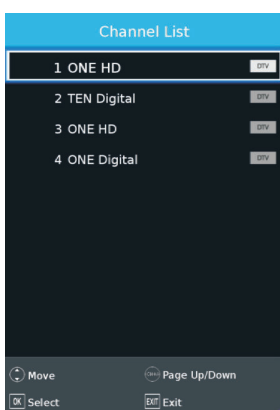


Schedule List

Time	Date	Programme Title	Channel Name


Time

Press **▼** / **▲** button to select:Off Time/On Time/Sleep Timer/OSD Timer/Auto Standby/Time Zone.
Press **◀** / **▶** to set.

Off Time

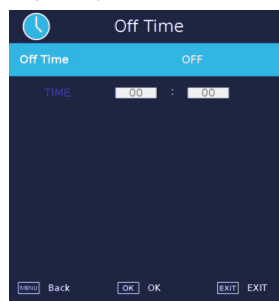

On Time

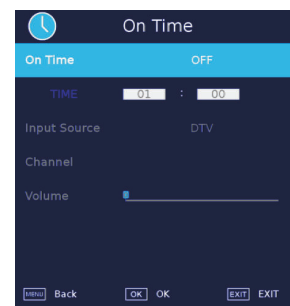

Sleep Timer

Press **▼** / **▲** button to select Sleep Timer, Press **◀** / **▶** to select. (Optional: off,10min,20min,30min,60min,90min,120min,180min,240min).

OSD Timer

Press **▼** / **▲** button to select OSD Timer, Press **◀** / **▶** to select. (Optional: Always 5s,15s,30s,60s).

Auto Standby


Press **▼** / **▲** button to select Auto Standby, Press **◀** / **▶** to select. (Optional: Off, 3H, 4H, 5H).

Time Zone


Press **▼** / **▲** button to select Time Zone, Press **◀** / **▶** to select.

LOCK

Press **▼** / **▲** button to select :System/Hotel Lock/Set Password/Channel Lock/Parental Guidance
Press **◀** / **▶** to set.

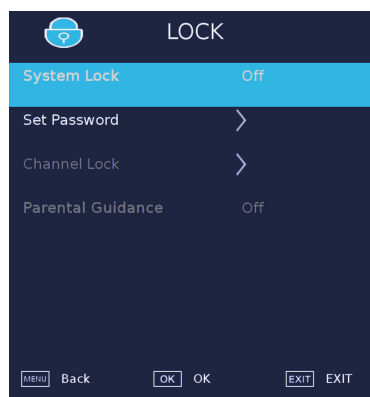


Set Password

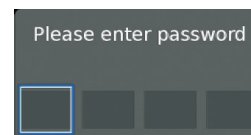

Operation

Channel Lock

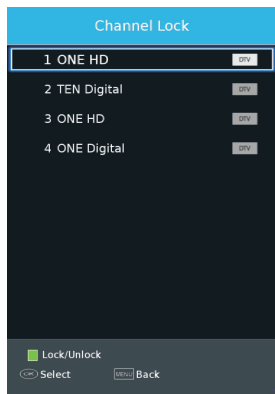



Parental Guidance

Some program may not be suitable for children, through Parental Guidance set-up, parents can shield unsuitable show automatically.

Press **▼ / ▲** button to select Parental Guidance.


Press **▼ / ▲** button to select Off, 4, 5, 6, 7... 18. (Age of children)

Note: use the function must enter a four-digit password. The factory password is 0000. If you forget the password, you can use the super password: 9443.

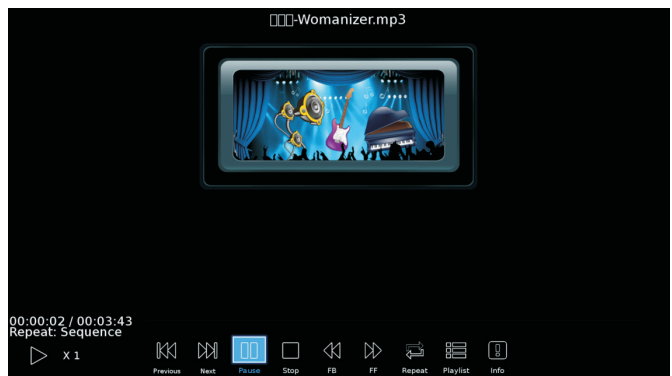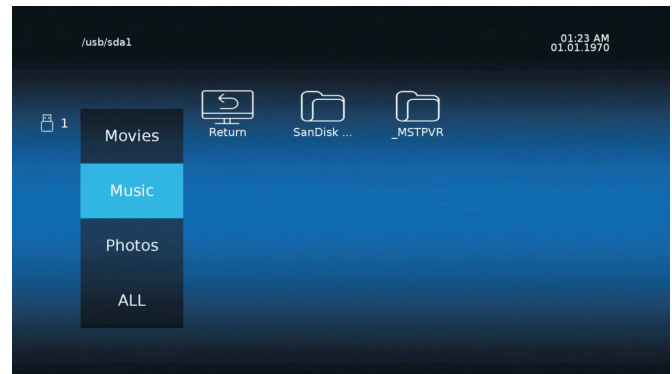


SMART MEDIA

Movie

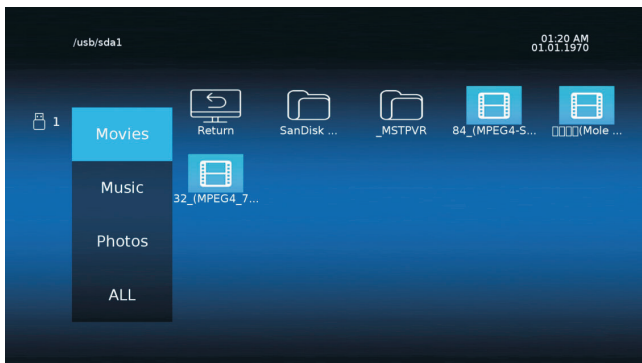

Photos

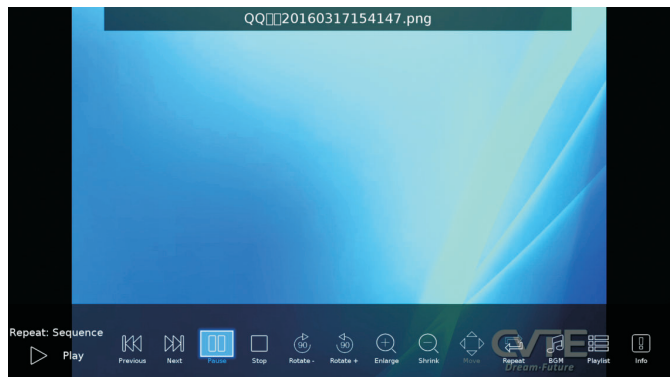


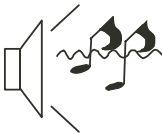

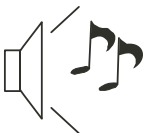





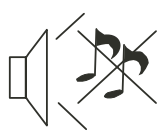

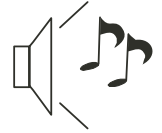
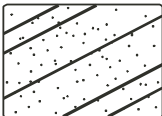
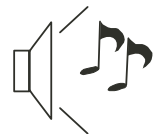

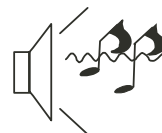


Programme Guide

Press **[GUIDE]** button to enter PROGRAMME GUIDE menu.



Music

05 Trouble shooting

Trouble phenomenon Symptom		Inspection Check
Picture	Audio	
 Snow	 Noise	antenna position, direction or connection
 Ghost	 Normal audio	antenna position, direction or connection
 Interference	 Noise	electronic equipment, car/ motorcycle, fluorescent light
 Normal Picture	 Mute	Volume (check if mute is activated or if the audio system connections are not correct)
 No picture	 Mute	Power cord is not inserted Power switch is not opened Contrast and brightness/volume setup Press standby key on the remote control for inspecting
 No colour	 Normal audio	Colour control
 Picture breaking up	 Normal audio or weak	retune channel
 No colour	 Noise	TV system
 There is black bar on top and bottom	 Normal audio	Change aspect to zoom

En

Trouble Shooting

My TV does not display the picture on my laptop / PC when connected.

Most PC's and laptops when connected with a VGA Plug (the blue 15 pin plug on your PC or laptop) require you to press some buttons on your key board to get a picture on a TV or other external display. This is usually the F7 (Dell) or F4 (HP / Samsung) or F5 (Toshiba). On laptops, you have to press the "Fn" key at the same time as the "F" key.

I have connected my PC/Laptop to the TV and get a picture but no sound. Why ?

The VGA cable only carries the video or picture information. You need to connect a separate cable connected to the earphone socket (3.5mm jack) on you PC/Laptop to the 3.5m (PC Audio IN) socket on your TV. You will need to select "PC" using the Source button on your remote. Alternatively connect your PC/Laptop using a HDMI cable if you PC/Laptop has a HDMI connector. HDMI is both audio and video.

The picture is not auto resizing when changing channels.

Check that the TV picture Aspect Ratio is set to 'Auto' on all inputs ATV, DTV, SCART, HDMI
To set the aspect ratio, (Auto, 4:3 or 16:9). Press Source button start at ATV and repeat the sequence below for all input sources ATV, DTV, SCART, HDMI as each input source is controlled separately.
Press TV Menu button
Press Right Arrow to access Picture sub menu
Press Down Arrow to select Aspect Ratio
Select Auto
Press Exit
Repeat for all input sources.

I have just plugged in a DVD player or another item into my TV and it doesn't work.

This is applicable to any item of equipment plugged to the TV

1. Turn both TV & DVD player off (plugs out of the wall socket, not standby).
2. Turn off any equipment connected to the SCART socket.
3. Disconnect the SCART plug from the TV.
4. Plug in and turn TV on
5. Plug in and turn DVD player on
6. Select HDMI from Source Menu
7. Press play on DVD player and check movie plays ok

NOTE: The SCART socket has priority over HDMI and it is important that the equipment connected to the SCART socket on the TV is switched OFF (not in standby).
Please follow this information. If the advice works and the DVD player works, the TV is OK it is just a bit confused. Probably HDMI plugs have been removed and plugged back in when the TV is switched on.
Never remove or plug in HDMI cables or any digital equipment with the equipment switched on.
Always switch off all equipment when unplugging or connecting any digital equipment.

Trouble Shooting Digital TV Problems and possible Solutions.

Picture Breaks into Pixels

A typical example of a reception problem includes the **break up of pictures** (pixilation) or the **picture freezing**, sometimes there are **clicking or squeaking** sounds or the **sound drops out** or there is **NO reception** at all.

Your picture may break into pixels due to the digital video signal dropping. The signal dropping may occur because of either problems with weak signals (see TV Aerials) or if you are connected by cable a weak cable signal. If the problem is weak signals, use an amplifier to strengthen the signal. A cable technician can help you install an inline amplifier or a pre-amplifier. This will boost your signal strength and fix the pixel problem.

If you are receiving your TV signal by satellite, check your dish has not moved following high winds, or that the signal is blocked by trees. Trees can be a problem as the TV signal can change depending if a tree between the satellite dish and satellite is in bare or in full leaf.

Missing channels

It may be that you find that there are **channels missing**, or you're receiving channels from the wrong region. Sometimes the **interactive services (red button) doesn't work**. This is usually caused by weak signal, see TV Aerials

TV Aerials

Digital terrestrial television (Freeview) comes to your TV via an aerial, The old aerial that was good for analogue TV may not work well for digital so may need upgrading. If you are getting some but not all of the digital channels on DTV (Freeview) for example you get BBC1, BBC2, Channel 4, but not ITV or Channel 5, this is usually because your aerial is a narrow band type, and needs to be changed to a wide band type.

Faulty Leads and Cables

Check your TV. Are the leads at the back - to the mains, the aerial, the set-top box, the video or DVD player or recorder properly connected? SCART leads are known to work loose over time and can result in both audio and video (picture) problems. Either left or right or both audio is missing and the colours are poor or muddy looking. Push the SCART plugs firmly in, this should fix the problem.

HDMI plugs need to be pushed in firmly; it's only the last millimetre that the contacts make. Typically the black plastic part of the HDMI plug should be very close or touching the body of the TV or component.

When plugging in any HDMI cables you may experience problems if the HDMI cables are plugged in when the TV or the other component is switched on. Always switch off both the TV and the component you are plugging in. If you have checked the plugs and sockets, switch off the TV and whatever you have plugged in to the TV and then switch them on again.

I have connected my PC to the TV. There is no sound.

If you connect your PC or Laptop to the TV using a VGA (15 pin Sub D) cable there is no audio, you need to connect a separate audio cable to the TV from the PC or laptop.

Unnatural Colours and Flesh Tones

Unnatural flesh tones and other colours could present another problem even in a new HDTV. This is due to the TV picture settings, which are optimized for a showroom environment. Fix this by changing the picture mode to natural in the picture menu. For more precision, try manually setting the colour, contrast and brightness options in the picture menu.

White Outlines

White outlines around objects and people generally appear either if the TV sharpness is set to very high, or if your television set uses some edge-enhancement processing technology. Go to the picture menu and adjust the sharpness till the white outline disappears. If edge-enhancement is enabled, try to disable it using the service menu.

Choppy Video

At times the video might become choppy. When this happens, check whether the signal is strong enough. If the signal is strong the problem is with the cable operator. If the signal strength is weak, try boosting the signal strength with the help of an amplifier.

The picture does not fill the screen

When connecting PC's or laptops to the TV, the picture may not fill the screen. Check the display settings on your PC or laptop (Windows > Start > Control Panel > Appearance and Personalization > Display settings) and select the best resolution. On your TV select:- TV Menu > Picture > Settings and then try AUTO, ZOOM1 or ZOOM2 for the best display.

USB Connection

The USB connection will work with *.jpg (photo) and *.mp3 (music) files. Please note the TV does not recognize Apple iPhone, or iPod's connected to the USB connector on the TV. The TV may play other files, but due to the multiple different file formats, there is no guarantee that these other file formats will work.

06 Specification

75" HD Digital LED LCD TV

Television picture quality:	HD Integrated digital. Screen Size: 190.5 cm Resolution 3840 x 2160 Pixels.
DTV Tuner Decoder	DVB-T/T2, DVB-C 16/32/64/128/256 QAM Modulation/ QPSK Modulation MPEG2,MPEG4,H.265
Connectivity:	3 HDMI sockets. 1 RJ45 socket. RF input socket. Component video socket. Composite socket. 3 USB port. 1 Headphone port. 1 Optical port. Supported Systems:PAL+SECAM Storage channel number: 99CH(ATV);700CH(DVB-T/T2+DVB-C) TV (RF) :75 Ω Imbalance YPbPr/HDMI Video Input:480i, 480p, 576i, 576p, 720p, 1080i, 1080p, 2160p
Sound quality:	NICAM stereo sound system . 2 x 10 watts RMS power output.
Standby Power consumption	≤0.50W
Digital features:	Digitally interactive. Digital text. Digital video broadcasting (DVB) subtitles available. Auto setup. Auto scan for new channels. Now and next programme guide. 7 day electronic programme guide (EPG). Top up TV compatible. CI slot. Audio description compatible.
Additional features:	UHF/VHF tuner;Sleep timer; Parental Rating ;Picture and text Remote control batteries required 2 x AAA (included). VESA Mount Size: 200 x 400 mm Package Size (WxHxD): 1880x215x 1160mmm Set Size (WxHxD) with Stand: 1679x1028x363mm Set Size (WxHxD) without Stand: 1679x963x68mm Package weight : 45kg Set weight with stand: 33.8kg Set weight without stand: 32.6 kg

*The part specifications of this TV set provided here are for reference only.

Diferences may occur as product technology is updated.

Design and specifications are subject to change without notice.

Haier