OKI GD-1340

for MC760/MC770/MC780/ES7460/ES7470/ES7480/MPS3537/MPS4242

SET-UP GUIDE


Warnings Points

- The unpacking and setup procedure shall be done by a qualified service technician.
- Be sure to unplug the power cable of the equipment before installing and setting up the product.
- Disconnect the ground wire after unplugging the power cable. In addition, be sure to connect the ground wire before plugging the power cable.


A Cautionary Points

- Install the equipment near an outlet. Be sure to wire the power cable securely so as to unplug it easily and not to trip over it.
- According to the equipment model, these illustrations may differ.
- The covers of this equipment have been designed so as not to be easily removed. Therefore, when using tools, be sure not to put your face and hands in the direction in which force will be applied; otherwise this could result in injury. In addition, pay attention not to deform parts by using too much force.
- When unpacking and setting up the product, be sure to wear gloves to avoid injury.

Accessories

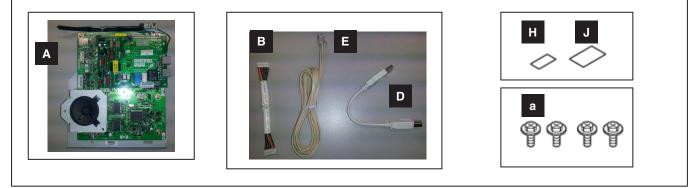

Setup

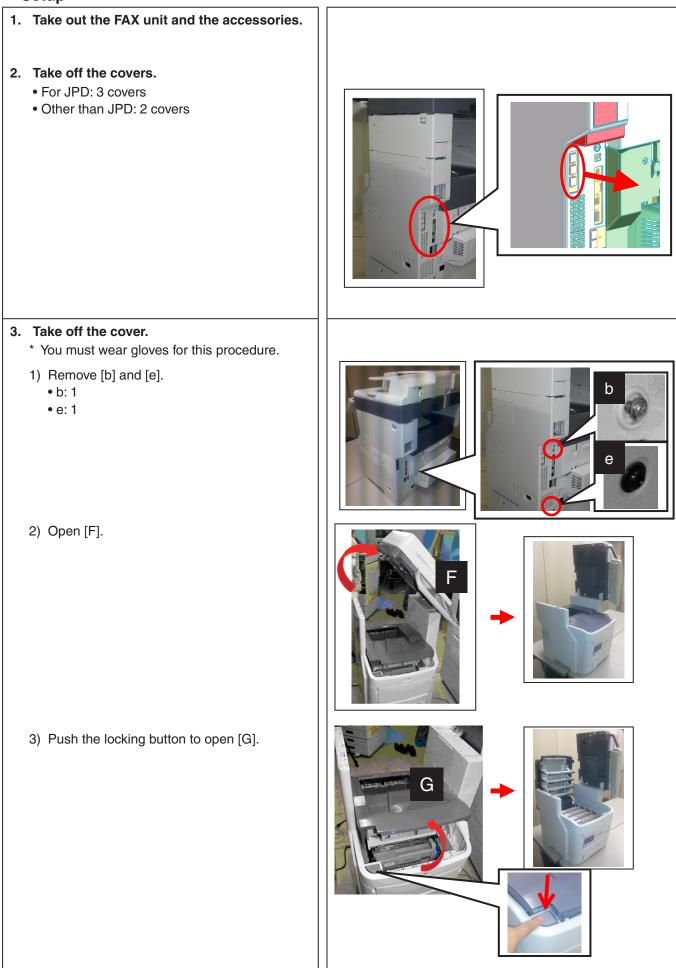



4) Remove [b].


5) Remove [e].

6) Open the covers in the order of (A) and (B).


7) Close [G].

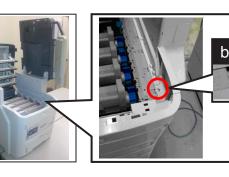

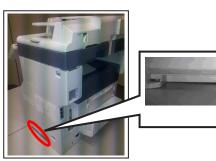

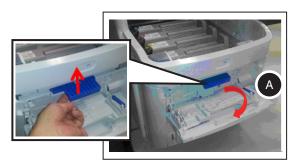



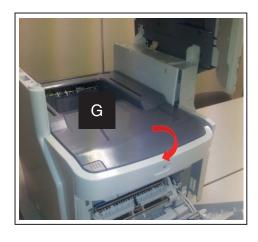

е

- 8) Release the latches (A) of the cover.A: 2
 - * As shown in the figure, insert a flathead screwdriver into the groove and push it in the direction of the arrow to release the latches.

When using tools, be sure not to put your face and hands in the direction in which force will be applied; otherwise this could result in injury.


- 9) Release the latches (B) of the cover.
 - B:2
 - * As shown in the figure, insert a flathead screwdriver into the groove and push it in the direction of the arrow to release the latches.

 
When using tools, be sure not to put your face and hands in the direction in which force will be applied; otherwise this could result in injury.

- 10) Release the latch (D) of the cover.
 - D: 1
 - * As shown in the figure, insert a flathead screwdriver into the groove and push it in the direction of the arrow to release the latches.


When using tools, be sure not to put your face and hands in the direction in which force will be applied; otherwise this could result in injury.



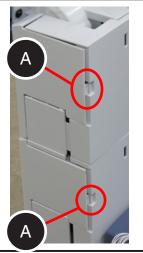





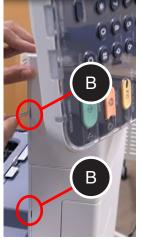











11) Closer [F].




5-9

- 12) Take off the upper side of the cover, release the latch (E) and then take off the cover.
 - E: 1 place

4. Loosen the screws and take off the cover.Screws: 15 places

5. Connect the connectors of [D] and [B] to the board.

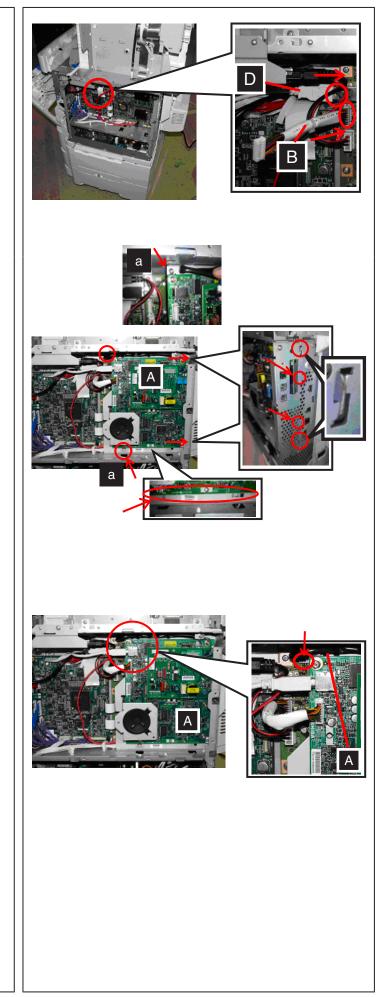


- 6. Place [A] into the attaching position and secure it with [a].
 a: 4
- When installing [A], be careful not to catch the rear side cables.

7. Connect the cable of [A] to the board.

- 8. Connect the connectors of [D] and [B] to [A].
- 9. Attach the cover and tighten the screws.• Screws: 15 places

- 10. Insert its latch (E) and then the parts indicated by the arrows as shown in the figure.
- Perform this operation with care to avoid injury. In addition, be sure not to damage the cover.

- 11. Insert the latches (A) and (B) of the cover.
 - A: 2 places
 - B: 2 places

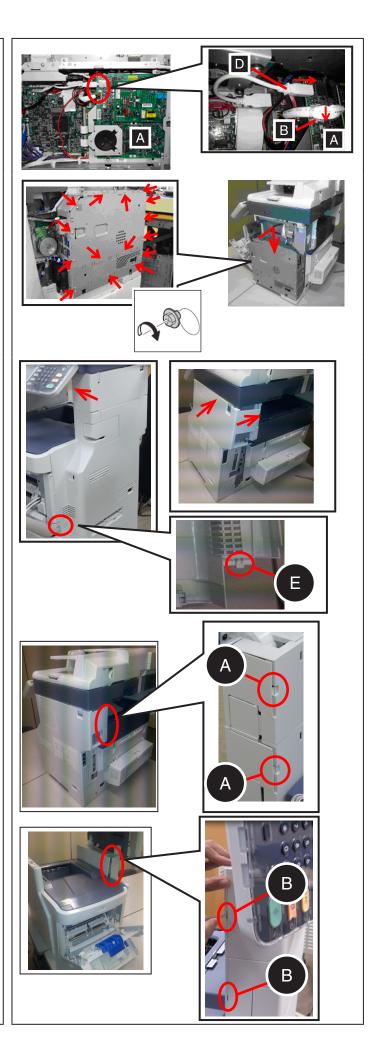


12. Open [F].



13. Insert the latch (D) of the cover.

14. Close the covers in the order of (A) and (B).

15. Push the locking button to open [G].

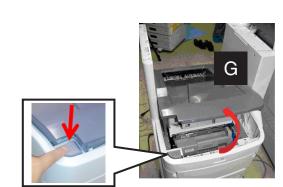


D

В

16. Attach [b].

• b: 1

17. Attach [b] and [e]. • b: 1 b • e: 1 е 18. Attach [e]. • e: 1 е 19. Close in the order of [G] and [F]. 20. Connect [E]. 0 ŝ R ÷ LINE1 Е 21. Connect the cable from the telephone. 0 1 TEL 1 R

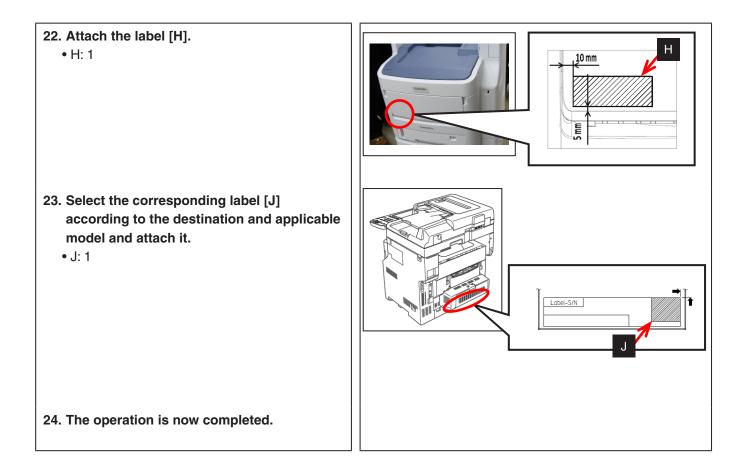

Setting Destination

1. Destination

- (1) Plug the power cable.
- (2) Turn the power ON by means of the main power switch while pressing [0] and [8] simultaneously.
- (3) $[9001] \rightarrow [START]$ button
- (4) Key in the destination number shown below and then press the [OK] button.
 - 0: Japan
 - 1: Asia/Chile/Peru/Argentina/Saudi Arabia/Singapore/Malaysia
 - 2: Australia/New Zealand 3: Hong Kong 4: U.S.A/Canada 5: Germany/Cyprus/Luxembourg/Ireland 6: England 7: Italy 8: Belgium 9: Holland 10: Finland 11: Spain 12: Austria 13: Switzerland 14: Sweden 15: Denmark 17: Portugal 16: Norway 19: Greece 20: Poland 18: France 21: Hungary 22: Czech Rep. 23: Turkey 24: South Africa 25: Taiwan 26: Russia
 - 27: Brazil
- (5) Shut down the equipment by pressing the [ON/OFF] button until a sound is audible.

Initializing Memory

2. Memory Initialization

- (1) Press the [ON/OFF] button while pressing [1] and $[^{\ast}].$
- (2) $[100] \rightarrow [START]$ button
- (3) When "ARE YOU SURE?" appears, press the [INITIALIZE] button.
- (4) After the display has changed from "TESTMODE 100" to "TEST MODE CL", shut down the equipment by pressing the [ON/OFF] button until a sound is audible.
- (5) Turn on the power again.

Setting Dial Type

3. Dial Type Selection (except Europe)

- (1) [USER FUNCTIONS] \rightarrow [ADMIN] \rightarrow [PASSWORD] \rightarrow "Admin Password" (default: 123456) \rightarrow [OK] \rightarrow [FAX] \rightarrow [INITIAL SETUP] \rightarrow Next page
- (2) Select the DIAL TYPE button.
- (3) Press [OK].