

 
Instructions



Whirlpool Sweden AB



4619 694 21631

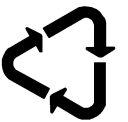




A NOTE TO YOU	PAGE
ENVIRONMENTAL HINTS	2
OVEN OVERVIEW	2
INSTALLATION	3
SAFETY PRECAUTIONS	3
ACCESSORIES	4
START PROTECTION / CHILD LOCK	5
MAINTENANCE & CLEANING	5
TROUBLE SHOOTING GUIDE	6
DATA FOR TEST HEATING PERFORMANCE	7

A NOTE TO YOU

Thank you for buying this appliance!

This appliance has everything you would expect of a superior appliance, plus the distinct style and thoughtful details, which contribute to the overall look of your home and your enjoyment of it.

 To ensure that you enjoy many years of trouble-free operation, we developed this set of instructions. They contain valuable information concerning how to operate and maintain your new appliance properly and safely.

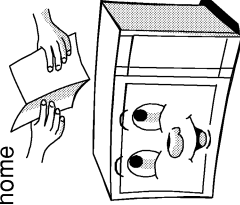

The instruction For Use that you are reading now is designed to cover several models of our microwave oven range. Therefore it may contain descriptions that may not be present on or in the particular model you have chosen to purchase. The Quick Reference Guide is designed for your model specifically.

Please keep this instruction For Use in a safe place for future reference.

ENVIRONMENTAL HINTS

Packing

The packing box may be fully recycled as confirmed by the recycling symbol. Follow local disposal regulations. Keep potentially hazardous packaging (plastic bags, polystyrene etc.) out of the reach of children.



 
Appliance

The appliance is built from reusable materials. If you decide to scrap the appliance, it must be disposed of in compliance with local waste disposal regulations. Before scrapping, cut off the mains cord so that the appliance cannot be connected to the mains.

TROUBLE SHOOTING GUIDE

Important:

If the mains cord needs replacing it should be replaced by the original mains cord, which is available via our service organisation. The mains cord may only be replaced by a trained service technician.



WARNING!
Service only to be carried out by a trained service technician. It is hazardous for anyone other than a trained person to carry out any service or repair operation which involves the removal of any cover which gives protection against exposure to microwave energy.
Do not remove any cover.

If the oven does not work, do not make a service call until you have made the following checks:

- * The Turntable and turntable support is in place.
- * The Plug is properly inserted in the wall socket.
- * The Door is properly closed.
- * Check your Fuses and ensure that there is power available.
- * Wait for ten minutes and then try to operate the oven once more.
- * Open and then close the door before you try again.

This is to avoid unnecessary calls for which you will be charged.

When calling for Service, please give the serial number and type number of the oven (see Service label). Consult your warranty booklet for further advice.

DATA FOR TEST OF HEATING PERFORMANCE

In accordance with IEC 705.

The International Electrotechnical Commission, SC. 59H, has developed a standard for comparative testing of heating performance of different microwave ovens. We recommend the following for this oven:

Test	Amount	Approx. time	Power level	Container
12.3.1	1000 g	12 min	750 W	Pyrex 3.227
12.3.2	475 g	5 ½ min	750 W	Pyrex 3.827
12.3.3	900 g	14 min	750 W	Pyrex 3.838
12.3.4	1100 g	20 min	Grill + 650 W	Pyrex 3.827
12.3.6	1200 g	23 min	Crisp	Place on crisp plate
13.3.0	500 g	13 min	Defrost/ 160 W	Place on turntable
13.3.0	500 g	2 ½ min	JET Defrost	Place on turntable

MAINTENANCE & CLEANING

Cleaning is the only maintenance normally required. It must be carried out with the microwave oven disconnected.



Do not use metal scouring pads on the inside of the oven cavity. They will scratch the surface.

At regular intervals, especially if spills have occurred, remove the turntable, the turntable support and wipe the base of the oven clean.

This oven is designed to operate with the turntable in place.

Do not operate the microwave oven when the turntable has been removed for cleaning.

Use a mild detergent, water and a soft cloth to clean the interior surfaces, front and rear of the door and the door opening.

Do not allow grease or food particles to build up around the door.

 
For stubborn stains, boil a cup of water in the oven for 2 or 3 minutes. Steam will soften the marks.

Adding some lemon juice to a cup of water, placing this on the turntable and boiling for a few minutes can eliminate odours inside the oven.


The Grill element (some models only) does not need cleaning since the intense heat will burn off any splashes, but the ceiling beneath it may need regular cleaning. This should be done with warm water, detergent and a sponge.

DISHWASHER SAFE:

Turntable support.



Glass turntable.

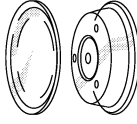 

Cover.



Crisp handle.

(some models only)

Wire rack.

(some models only)

CAREFUL CLEANING:

The Crisp-plate (some models only) should be cleaned in mild, detergent water. Heavily soiled areas can be cleaned with a scouring sponge and a mild cleanser.

Always let the crisp-plate cool off before cleaning.

Do not immerse or rinse with water while the crisp-plate is hot. Quick cooling may damage it.

Do not use steel-wool pads. This will scratch the surface.

 


⚠ WARNING!

The door seals and the door seal areas must be regularly inspected for damage. If these areas are damaged the appliance should not be operated until it has been repaired by a trained service technician. **Abrasive cleansers, steel-wool pads, gritty wash cloths, etc. can damage the control panel, and the interior and exterior oven surfaces. Use a sponge with a mild detergent or a paper towel with spray glass cleaner. Apply spray glass cleaner to a paper towel.**

Do not spray directly on the oven.

OVEN OVERVIEW

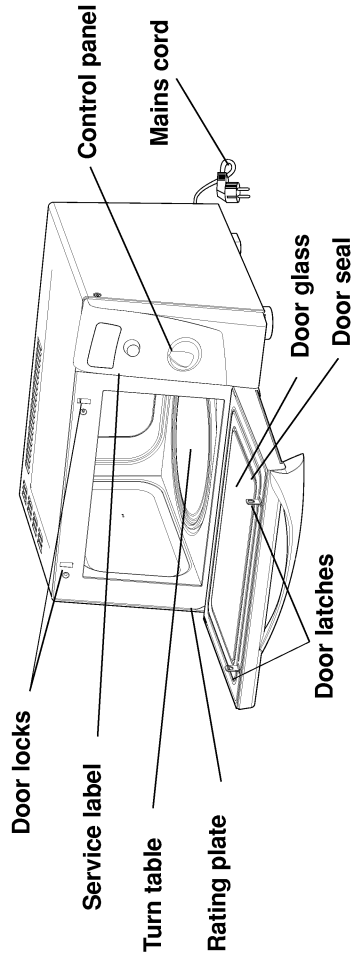

INSTALLATION

PRIOR TO CONNECTING

Check that the voltage on the rating plate corresponds to the voltage in your home.

Place the oven on a stable, even surface

that is strong enough to hold the oven and the food utensils you put in it. The control side of the unit is the heavy side. Use care when handling.



Position the oven at a distance from other heating sources. The cooling air, which is taken in by the oven, must not exceed 35°C temperature. For sufficient ventilation there must be a space of at least 15-cm above the oven. Ensure the microwave oven feet are in place and ensure the space underneath the oven is empty to allow for proper airflow. The oven can operate in an ambient temperature ranging from +5°C to +35°C.

Ensure that the appliance is not damaged. Check that the oven door closes firmly against the door support and that the internal door seal is not damaged. Empty the oven and clean the interior with a soft, damp cloth.

Do not operate this appliance if it has a damaged mains cord or plug, if it is not working properly, or if it has been damaged or dropped. Do not immerse the mains cord

or plug in water. Keep the cord away from hot surfaces. Electrical shock, fire or other hazards may result.

AFTER CONNECTING

When the appliance is first plugged in or after a power failure, the display is blank. If required, the oven can display a 24-hour digital Clock. When the Clock function is not programmed the display will remain blank until the cooking time is set.

The oven can be operated only if the oven door is firmly closed.

Poor television reception and radio interference may result if the oven is located close to a TV, radio or aerial.



The earthing of this appliance is compulsory. The manufacturer will accept no responsibility for injury to persons, animals or damage to objects arising from the non-observance of this requirement.

⚠ WARNING!
THIS APPLIANCE MUST BE EARTHED!

SAFETY PRECAUTIONS

GENERAL

This appliance is designed for domestic use only!

The appliance should not be operated without food in the oven when using microwaves. Operation in this manner is likely to damage the appliance.

The ventilation openings on the oven must not be covered. Blocking the air intake or exhaust vents may cause damage to the oven and poor cooking results.

If you practice operating the oven, put a glass of water inside. The water will absorb the microwave energy and the oven will not be damaged.

Do not store or use this appliance outdoors. Do not use this product near a kitchen sink, in a wet basement, or near a swimming pool, or similar.

Do not use the cavity for any storage purposes.

Do not heat, or use flammable materials in or near the oven. Fumes can create a fire hazard or explosion.

Do not use corrosive chemicals or vapours in this appliance. This type of oven is specifically designed to heat or cook food. It is not designed for industrial or laboratory use.

 
Do not use your microwave oven for drying textiles, paper, spices, herbs, wood, flowers, fruit or other combustible materials. Fire could result.

Do not leave the oven unattended, especially when using paper, plastic or other combustible materials in the cooking process. Paper can char or burn and some plastics can melt if used when heating foods.

Do not over-cook food. Fire could result.

If material inside / outside the oven should ignite, keep oven door closed and turn the oven off. Disconnect the power cord or shut off power at the fuse or circuit breaker panel.

Never lean on the door when the door is open. Injury could result.

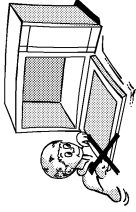

⚠ WARNING!

Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.

Remove wire twist-ties from paper or plastic bags before placing bag in the oven.



LIQUIDS

E.g. beverages or water in your microwave oven, overheating the liquid beyond boiling point can occur without evidence of bubbling. This could result in a sudden boil over of the hot liquid.



 
To prevent this possibility the following steps should be taken:

1. Avoid using straight-sided containers with narrow necks.
2. Stir the liquid before placing the container in the oven and let the teaspoon remain in the container.
3. After heating, allow standing for a short time, stirring again before carefully removing the container from the oven.

SAFETY PRECAUTIONS


CONTAINERS

Do not use your microwave oven for heating anything in airtight sealed containers. The pressure increases and may cause damage when opening or may explode.

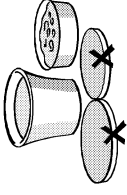

EGGS

 Do not use your microwave oven for cooking or reheating whole eggs with or without shell since they may explode.

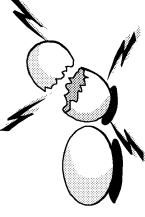

DEEP-FRYING

 
Do not use your microwave oven for deep-frying, because the oil temperature cannot be controlled.



CAREFUL

Always refer to a microwave cookbook for details. Especially, if cooking or reheating food that contains alcohol.

After heating baby food or liquids in a baby bottle or in a baby food jar, always stir and check the temperature before serving. This will ensure that the heat is evenly distributed and the risk of scalding or burns can be avoided.

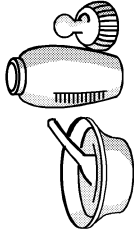

Ensure the Lid and the Teat is removed before heating!

HANDS OFF

Use hot pads or oven mitts to prevent burns, when touching containers, oven parts, and pan after cooking.

ACCESSORIES

There are a number of accessories available on the market. Before you buy, ensure they are suitable for microwave use.

When you put food and accessories in the microwave oven, ensure that they do not come in contact with the interior of the oven.

This is especially important with accessories made of metal or metal parts.

If accessories containing metal comes in contact with the oven interior, while the oven is in operation, sparking can occur and the oven could be damaged.

Always ensure that the turntable is able to turn freely before starting the oven.

Ensure that the utensils you use are oven proof and allow microwaves to pass through them before cooking.

START PROTECTION / CHILD LOCK

This automatic safety function is activated one minute after the oven has returned to "stand by mode". (The oven is in "stand by" when the 24-hour Clock is displayed, or if the Clock has not been set, when the display is blank).

The door must be opened and closed e.g. putting food into it, before the safety lock is released.

If you attempt to operate the oven without putting food into it, the display will show "door".