

# USER GUIDE

## SIXTY 2




**SAGEMCOM**

Dear Customer,

You have just acquired a Sagemcom DECT telephone. Thank you for placing your confidence in us.

This device has been manufactured with the utmost care. If you should have difficulties in operating it, we recommend that you consult this manual.

For your comfort and safety, we urge you to carefully read the paragraph « **Recommendations and safety instructions** » of the warranty card included in the pack.

 The CE label confirms that the product complies with the 1999/5/EC regulations of the European Union Parliament regarding wireless systems and telecommunications.

The declaration of compliance may be looked up on the <http://support.sagemcom.com> site or can be obtained from the following address :

**X-GEM SAS**  
9 rue de la Négresse  
64200 Biarritz - France

# Overview

<b>Discover.....</b>	<b>5</b>
<b>Your phone .....</b>	<b>5</b>
The base .....	5
The handset.....	6
The charger .....	9
<b>Installing the phone .....</b>	<b>11</b>
Replacing the batteries .....	12
Browsing principle.....	13
<b>Switch the handset off and then on again .....</b>	<b>14</b>
<b>Settings to make before use .....</b>	<b>14</b>
Menu tree structure .....	15
<b>Call... ..</b>	<b>17</b>
<b>Managing your calls .....</b>	<b>17</b>
Making a call.....	17
Ending a call.....	19
Receiving a call .....	19
Choose your line.....	20
<b>Managing several calls .....</b>	<b>21</b>
Receiving a second call .....	21
Switching from one call to the other .....	21
Ending one of the calls in progress.....	22
Talking with two contacts at the same time (3-way conference) .....	22
Making a second call .....	23
Transferring calls .....	24
<b>Options during a call .....</b>	<b>26</b>
Activate/Deactivate loudspeaker (hands-free mode) .....	26
Adjusting volume.....	27
Activating the mute mode.....	28
<b>Using additional handsets .....</b>	<b>29</b>
Calling another handset (intercom) .....	29
Intrusion .....	30

## Tracking your calls... 31

### Call logs 31

Displaying the list of all calls..... 31

Viewing the received or dialed call log..... 32

Consulting the missed call log ..... 33

### The events log 34

Checking new events..... 34

Managing incoming or outgoing calls..... 35

## Manage your contacts... 36

### Use the phonebook 36

Create an entry ..... 36

Call a contact from the phonebook..... 37

Changing an entry ..... 37

Deleting an entry ..... 37

Search for an entry ..... 38

Delete all the entries ..... 38

Speed dialing ..... 39

## Answering machine... 40

Activating/Deactivating the answering machine..... 40

### Answering machine announcements 41

Choosing your default announcement..... 41

Recording your personal announcement..... 41

Listening to your personal announcement ..... 42

Erasing your personal announcement..... 42

### Messages 43

Listening to your messages ..... 43

Managing your messages..... 44

Deleting all old messages..... 44

Querying your answering machine remotely ..... 45

## Audio adjustment... 46

Changing the ringtone..... 46

Activating/Deactivating the silent mode..... 46

Activating/Deactivating audio alerts..... 47

<b>Setting up.....</b>	<b>48</b>
<b>The phone .....</b>	<b>48</b>
Setting the date and the time.....	48
Picking up and hanging up calls automatically.....	49
Changing the display language.....	49
Adjust the brightness.....	50
Change the screen background.....	50
<b>The handset .....</b>	<b>51</b>
Associating a new handset.....	51
Customizing the handset's registration.....	53
Defining the main base for your handset.....	53
Modifying the Voice box number.....	54
Deleting the Voice box number.....	54
Handset version.....	55
Resetting the handset.....	55
<b>The base .....</b>	<b>56</b>
Changing the base code.....	56
Resetting the base.....	56
Base version.....	57
Activating emission free mode.....	57
Modifying the country.....	58
<b>The charger .....</b>	<b>59</b>
Modifying the display colour.....	59
Activating time display.....	59
<b>The line .....</b>	<b>60</b>
Change the line name.....	60
Pair the handset with a line.....	61
Mask the line number.....	61
Allow three-way communication (Intrusion).....	62
Modifying the dialing mode.....	62
Changing the flash duration.....	63
<b>Call management .....</b>	<b>64</b>
Managing your calls.....	64
<b>The list of handsets .....</b>	<b>65</b>
Manage handsets.....	65
<b>Answering machine setup .....</b>	<b>66</b>
Modify the remote enquiry code.....	66
Answering machine delay time.....	66

 
# SIXTY 2



Discover...

## Discover...

 
### Your phone

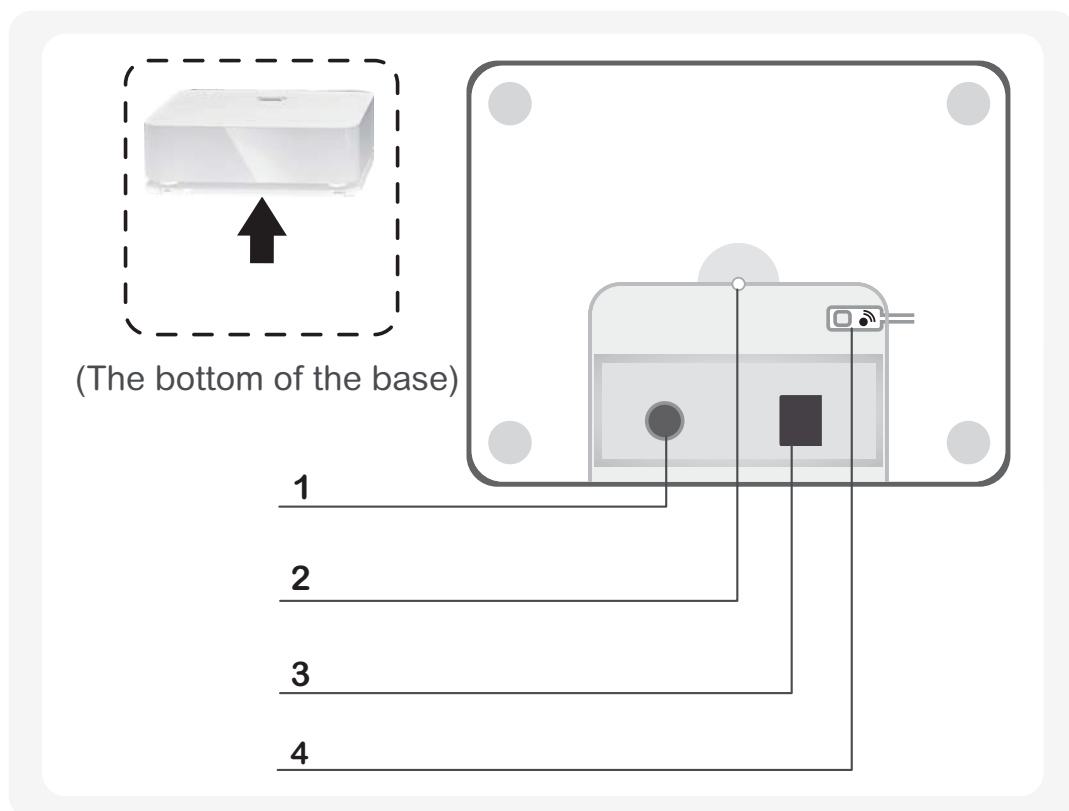







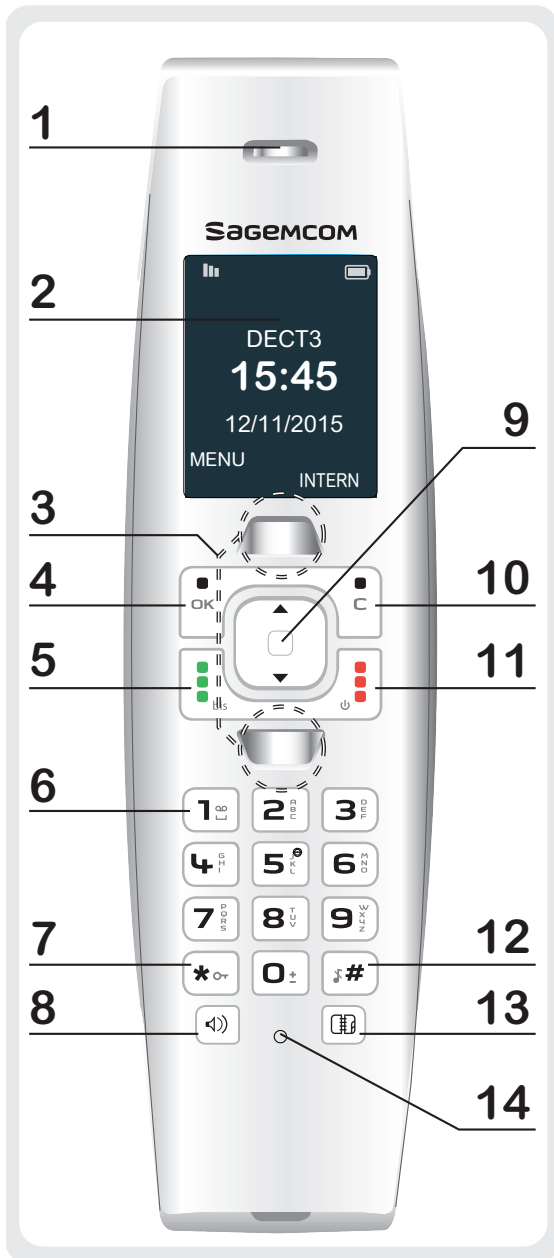

### The base



1	Power socket
2	Indicator light : <ul style="list-style-type: none"><li>• Rapid blinking : the base is in pairing mode.</li><li>• Medium blinking : searching for handsets associated with the base.</li><li>• Slow blinking : communication in progress.</li></ul>
3	Telephone socket
4	Paging button / Pairing   : <ul style="list-style-type: none"><li>• Short press : find handset (Paging).</li><li>• Long press : handset pairing mode.</li></ul>

## The handset



 
Key	Description
	<b>1</b> Earpiece
	<b>2</b> Screen
	<b>3</b> Handset charging contacts
	<b>4</b> <b>OK key</b> : Access to the main menu / Validation key
	<b>5</b> Pick-up / Access to outgoing call list (long press in standby mode)
	<b>6</b> <b>Key 1</b> : - Access to voice mail (long press in standby mode) - Access to answering machine messages (if answering machine mode is activated)
	<b>7</b> <b>* key</b> : Lock / unlock keypad (long press from home screen)
	<b>8</b> Activate / deactivate hands-free mode
	<b>9</b> Browsing through the menus
	<b>10</b> Cancel the action / Return to previous menu
	<b>11</b> Hang up (during a call) / Return to main menu / Turn off/on the handset (long press)
	<b>12</b> <b># key</b> : - Activate / deactivate the mute mode (long press during a call) - Activate / deactivate the silent mode (long press from home screen)
	<b>13</b> Access phonebook
	<b>14</b> Microphone

# SIXTY 2



## Discover...

### The screen

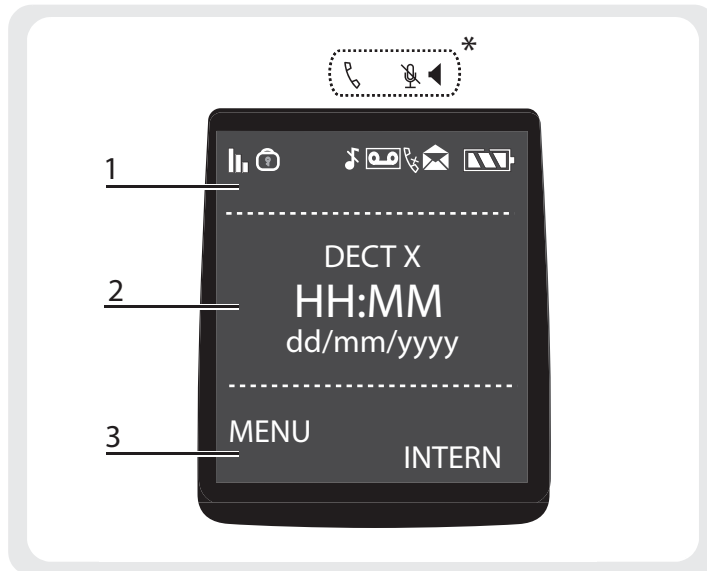In standby mode or during use, the screen indicates the current state through icons, and in particular :














\* : during a call

Legend	Description
1	<b>Status icons</b> : indicates your phone's current state.
2	<b>Information field</b> : the handset's name and number, the current time and date.
3	<b>Action icons</b> : functions associated to  and  keys.




## THE ICONS DISPLAYED

 	Battery charge condition		Silent mode activated
	<b>DECT signal :</b> blinks when the handset is out of range of the base or when the base is not supplied.		Keypad locked
	Phone in conversation mode		Voice(s) message(s) not consulted
	Microphone mute activated		Answering machine activated
	Hands-free activated		New message(s) on your answering machine
	Missed call(s)		

# SIXTY 2

Discover...

## The charger

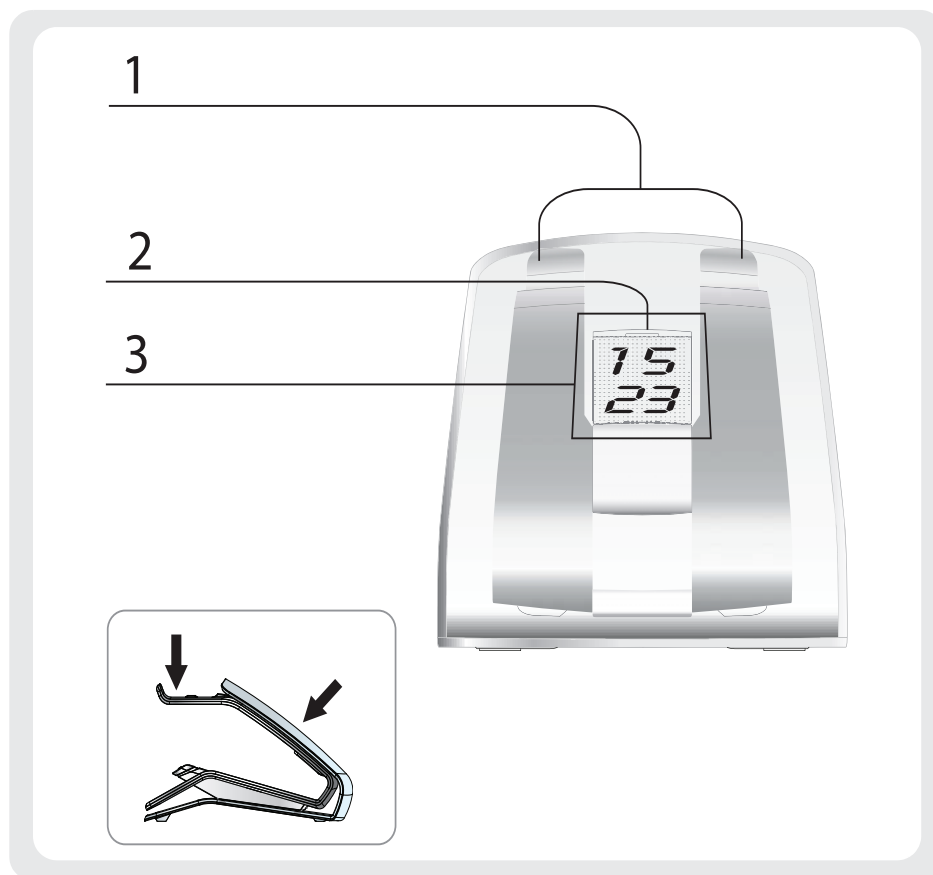

1 Charging contacts

2 **Indicator light :**  
Backlighting is red, green, or orange.

3 **Display screen :**

- the current time,
- number of messages on answering machine or voice mail.

## DISPLAY AND INDICATION BACKLIGHTING

**Note** To change the display colour of your indicator light, refer to paragraph “**Modifying the display colour**”, page 59.  
To change the time display on your screen, refer to paragraph “**Activating time display**”, page 59.

### Case 1 :

- the display colour selected is "**Variable on events**",
- time display is activated,
- the handset is placed on its charger.

Colour and display	Indication
<b>Red</b> : is permanently displayed and goes out if the handset is taken off the charger.	Reception of an unknown call.
<b>Orange</b> : is permanently displayed and goes out if the handset is taken off the charger.	Reception of a CLIP call.
<b>Green</b> : is permanently displayed and goes out if the handset is taken off the charger.	Receiving a CLIP call whose number has been entered into the directory.
<ul style="list-style-type: none"> <li>• <b>Green</b> : blinks permanently and goes out if the handset is taken off the charger.</li> <li>• Display of the current time on the screen.</li> </ul>	There are missed call(s).
<ul style="list-style-type: none"> <li>• <b>Green</b> : blinks permanently and goes out if the handset is taken off the charger.</li> <li>• Display of messages on answering machine or voice mail.</li> </ul>	There are message(s) on the answering machine or voice mail.
<ul style="list-style-type: none"> <li>• <b>Red</b> : blinks permanently and goes out if the handset is taken off the charger.</li> <li>• Display of messages on answering machine.</li> </ul>	Answering machine memory full.
<b>Green</b> : is displayed for 1s then goes out.	The handset is placed on the charger.

# SIXTY 2

## Discover...

### Case 2 :

- the display colour selected is "Red" or "Green" or "Orange",
- time display is activated.

If the handset is on or off its charger, the backlighting is set to the selected colour and the current time is displayed.

**Note** Once the permanent colour has been selected, no other effect is displayed and the charger behaves as a lamp.

 
### Case 3 :

- the display colour selected is "Off",
- time display is activated.

If the handset is on or off its charger, the backlighting is deactivated and the current time is displayed.

**Note** If time display is deactivated, neither the time nor the indication for answering machine nor for voice mail are displayed.

## Installing the phone

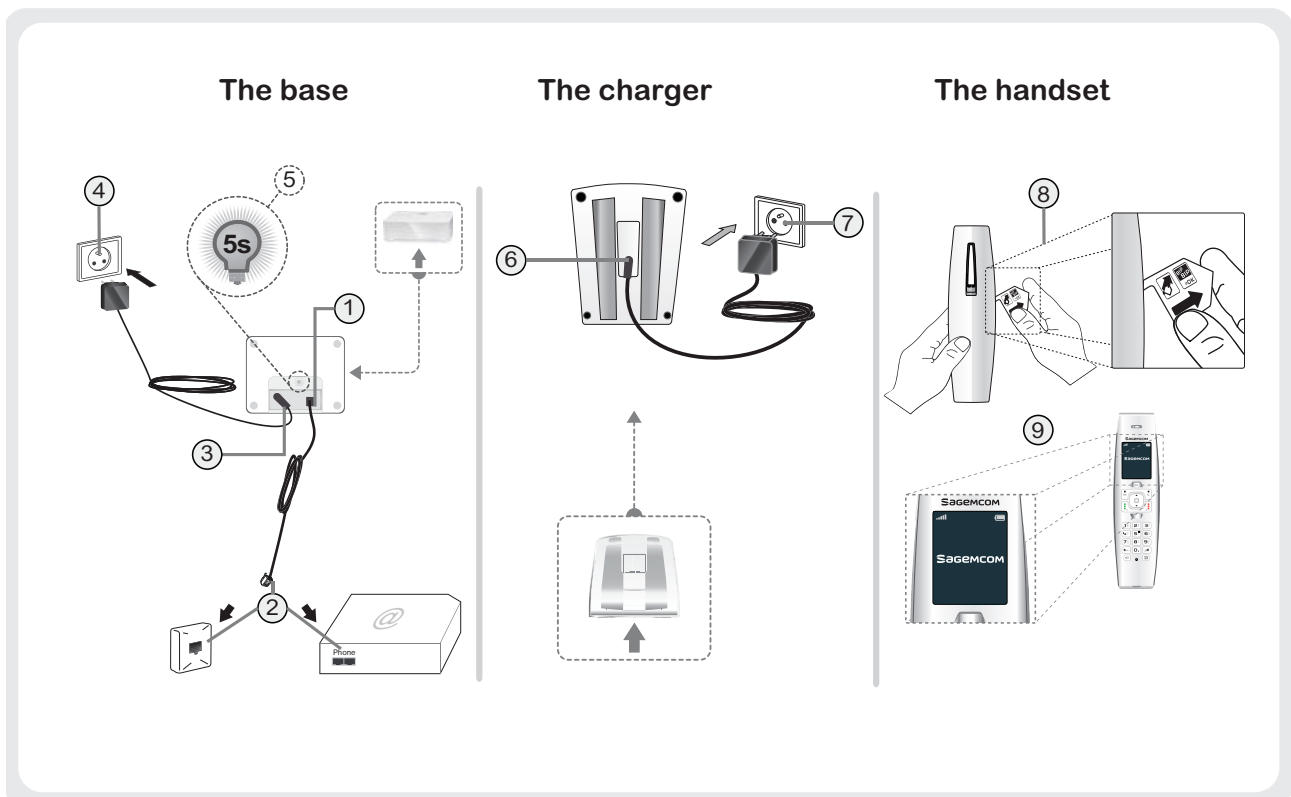


- 1 Plug the phone cable into the socket of your base.
- 2 Connect the other end of the cable with the phone wall socket or with the Gateway.
- 3 Connect the power adapter cord to the socket on the bottom of the base.

- 4 Connect the other end of the cable with the power wall socket.
- 5 The indicator on the base lights during 5 seconds.
- 6 Connect the power supply unit to the charger.
- 7 Plug in the other end of the power supply unit to the mains.
- 8 Remove the tab.
- 9 The handset screen comes on. The message "SAGEMCOM" appears on the screen.

**Note** To ensure optimum charging, leave the handset on the base for at least 10 hours before using the phone for the first time.

**Note** If your handset battery is empty leave the handset in the charging unit for at least 4 minutes.

## Replacing the batteries

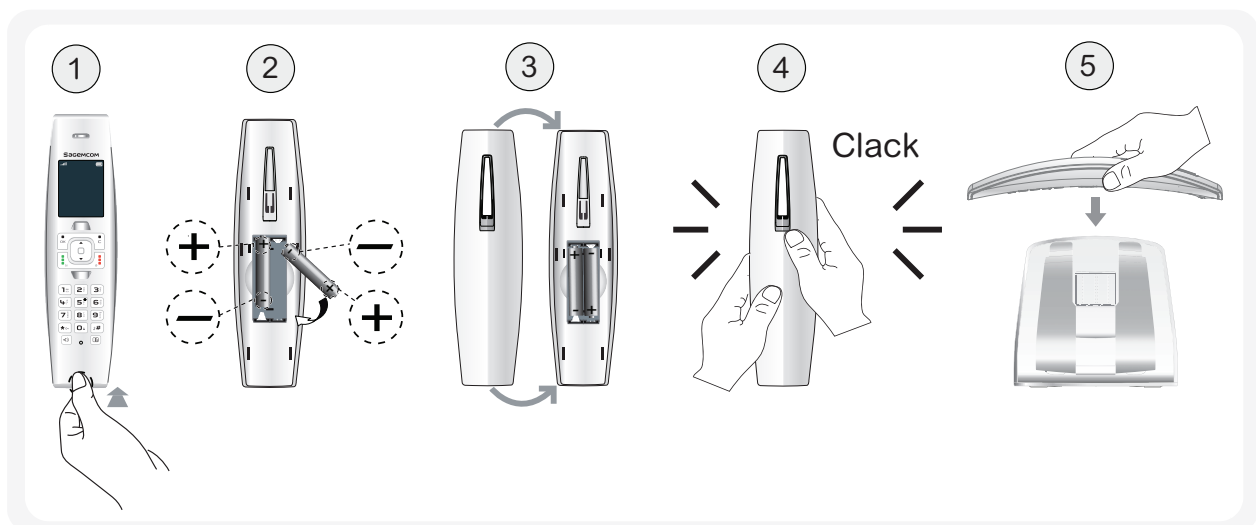 






- 1 Remove the battery compartment cover.
- 2 Insert the new batteries one by one in compliance with the polarity of the batteries.
- 3 Replace the battery compartment cover.
- 4 Press the cover gently. The "Click" sound indicates that the cover is in the locked position.
- 5 Place the handset on its charger.








# SIXTY 2

## Discover...

### Browsing principle









To browse through menus, use the browser keys  and the keys  and  :

Key	Corresponds to... (throughout the manual)
	▲ : select the previous menu (or setting).
	▼ : select the next menu (or setting).

 
- 1 Press **MENU**  .  
The main menu is displayed on the screen.
- 2 Press the top  (▲) or the bottom  (▼) of the navigation key  to select the desired function.
- 3 Select your choice / Enter the menu by pressing the **Select**  key.
- 4 Cancel your choice / Exit the displayed menu :
  - either by pressing the **Back**  key : return to previous menu.
  - or by pressing the  key : the home screen is displayed.




#### DETAILED BROWSER EXAMPLE: CHANGING THE RING TONE OF EXTERNAL CALLS

##### MENU > **Audio**

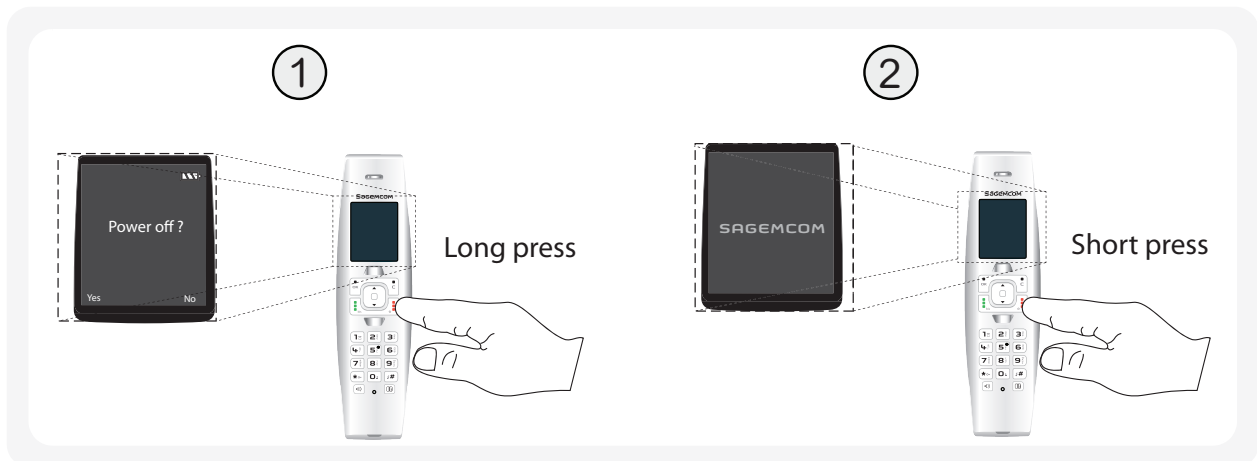


- 1 Press **MENU**  .
- 2 Press the top  (▲) or the bottom  (▼) of the navigation key  until the menu **Audio** is displayed.
- 3 Enter the **Audio** menu by pressing **Select**  .
- 4 Select **External ringtone** using the ▲ or ▼ keys.
- 5 Press **Select**  .
- 6 Scroll down the pre-recorded sounds and press **Select**  .
- 7 Adjust the volume of the ring tone using the ▲ or ▼ keys and press **Select**  .  
The action is confirmed by the "OK" indication.

## Switch the handset off and then on again



- 1 To turn off the handset, hold down the red  key.  
The "Power off ?" message is displayed on the screen. Press **Yes**  to confirm.
- 2 To turn on your handset, press the red  key. The "SAGEMCOM" message is displayed on the screen.

## Settings to make before use

 
 
 
 
- When starting up the first time, the Language menu is displayed.
- Select the language to be used using the ▲ or ▼ keys and validate using the  key.
- The Country menu is displayed.
- Select the country using the ▲ or ▼ keys and validate using the  key.
- The date and time setting menu is displayed.
- Enter the right date and time and validate using the  key.  
The message "OK" is displayed on the screen.

**Important** After setting date and time, place the handset on the charger to synchronise the display.

# SIXTY 2

Discover...

## Menu tree structure

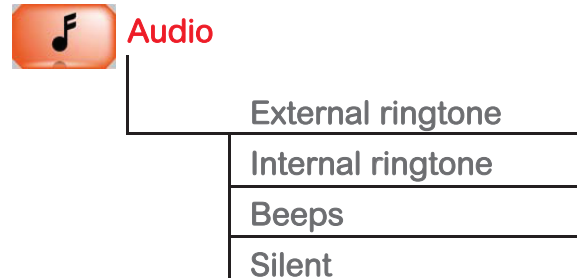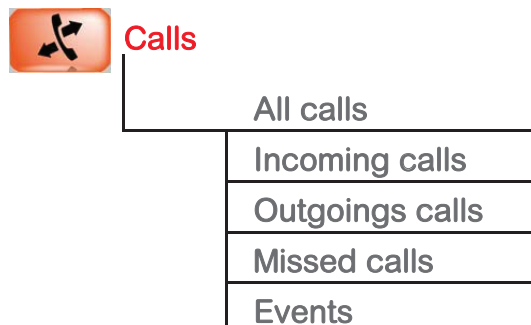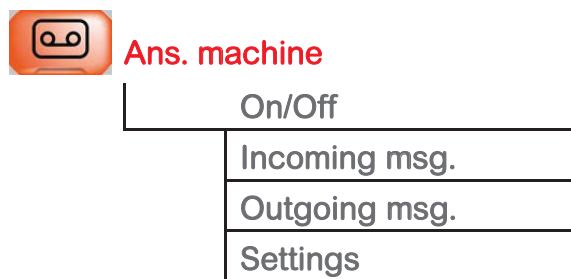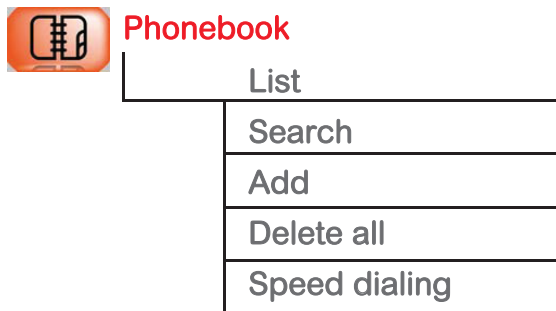

### Options

- During a call
  - Second call
  - Intercom
  - Calls
  - Phonebook
  - Select call line
  - Press R

*Tree structure continued on next page*





## Settings

Settings	Date/Time	
	Auto hang/pick up	
	Language	
	Display	
Advanced settings	Set handset	Registration
		Person.registration
		Base priority
		Voicebox number
		Handset version
		Reset handset
	Set base	Change code
		Reset base
		Base version
		Emission free mode
		Country
	Set charger	Display color
		Settings
	Set line	Line name
		Associated handset
		Configuration
		Dial mode
		Flash time
	Select call line	
	Handsets' list	

# SIXTY 2

Call...


## Call...

### Managing your calls

 
#### Making a call


##### METHOD 1 (PRE-DIALING)



- 1 Pick up the handset.
- 2 Dial your contact's number.
- 3 Press the green  key.

## METHOD 2 (POST-DIALING)

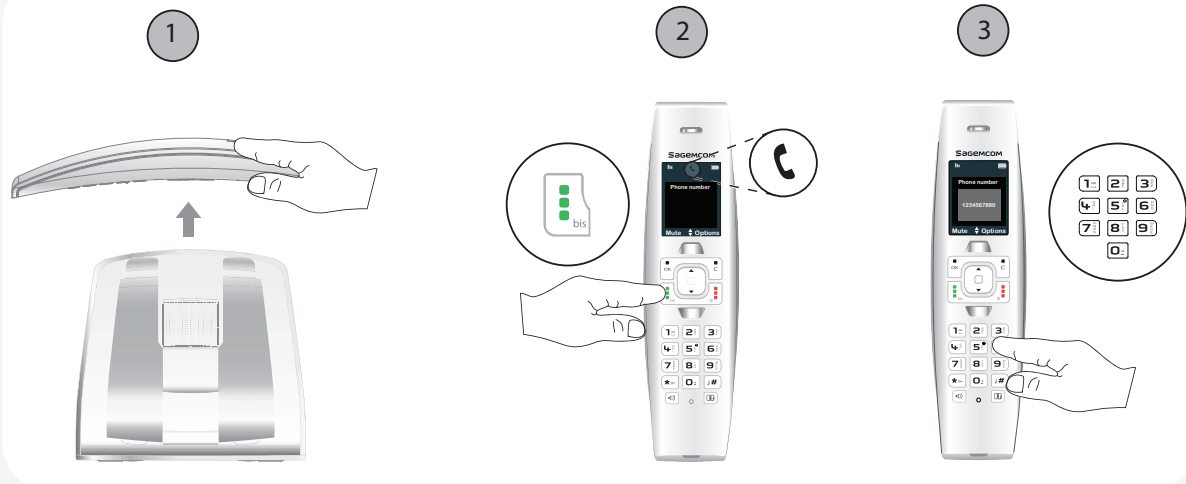



- 1 Pick up the handset.
- 2 Press the green  key.
- 3 Dial your contact's number.

# SIXTY 2

 Call...

## Ending a call

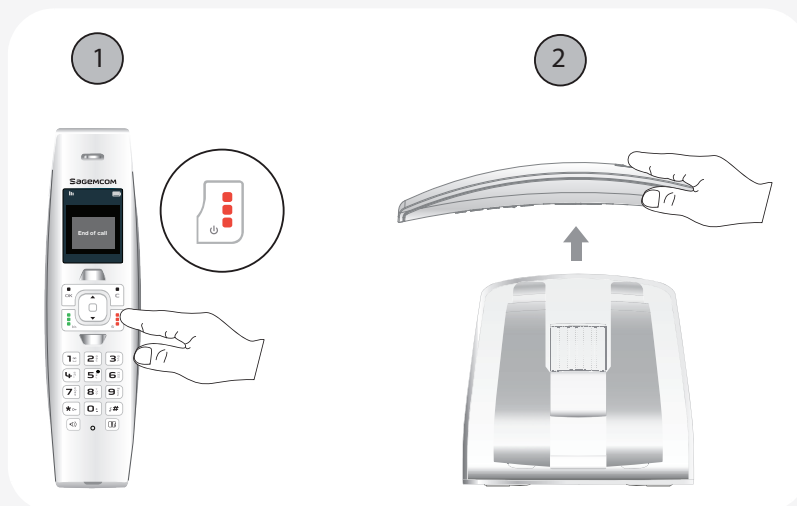

- 1 At the end of the call, press the red  key.
- 2 Put the handset back on its charger.

## Receiving a call


IF THE «AUTO PICKUP» IS ACTIVATED



Pick up the handset.

## IF THE «AUTO PICKUP» IS DEACTIVATED



- 1 Pick up the handset.
- 2 Press the green  key.

## Choose your line

This menu allows you to select the line on which you want to make a second outgoing call (subject to availability of service).

- 1 During a call, press **Options**.
- 2 Select **Select call line** and press **Select**.
- 3 Select your line using the keys **▲** or **▼**.
- 4 Press **Select**. The action is confirmed by the "OK" indication.

# SIXTY 2

Call...


## Managing several calls

Your phone allows you to manage several calls (subject to availability of service) when you are already in a call.

### Receiving a second call

During a call, a beep indicates the arrival of a second call.  
The contact details of the second caller are displayed on the screen.

**Case 1** : Answer the new call and put the current call on hold.

- Press the green  key.  
The first caller is put on hold and you can speak with the new caller.

**Case 2** : Answer the new call and end the current call.

- Press **Replace**.  
The call with your first caller is ended. You can speak with the new caller.

**Note** To reject a second call, press **Release all**.

### Switching from one call to the other

During a conversation press **Switch**. The current call is put on hold in order to take the call that was previously on hold.


## Ending one of the calls in progress


### Options > End active call

During a conversation :

- Press **Options**.
- Choose the option **End active call** using the ▲ or ▼ keys.
- Press **Select**.  
The current call is ended and you resume the previous call.

- OR -


- Press the red  key to end the current call.

**Note** During the call you can hang up both calls by pressing the red  key for a long time.

## Talking with two contacts at the same time (3-way conference)

### Options > 3-part conference

During a double call :

- Press **Options**.
- Choose the option **3-part conference** using the ▲ or ▼ keys.
- Press **Select**.
- You can then talk with the 2 contacts at the same time and " **3-part conference**" is displayed on the screen.
- To end the conference call, press the  key.



# SIXTY 2

Call...

## Making a second call

### Options > Second call

During a conversation :

 
- Press **Options**.
  - Choose the option **Second call** using the ▲ or ▼ keys.
  - Dial the number using the keypad and press **Call**.
- OR -
- Select the number for the person you want to call in the phonebook by pressing , and then press .

The second called number appears on the screen.

**A** : the number and/or name of the current call.

**B** : the number and/or the name of the waiting call.

**C** : the call time.

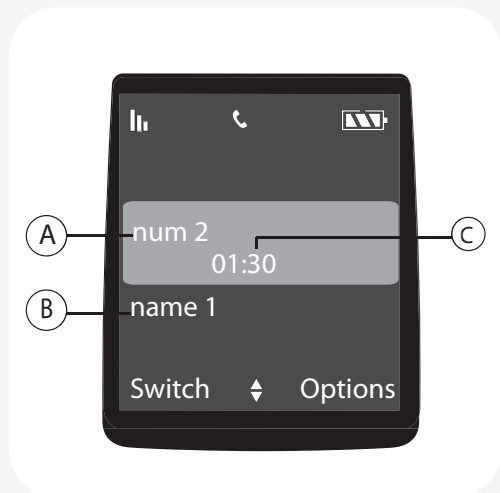



## Transferring calls

During a call, you can transfer it to another handset. This function can be used as long as two handsets have been registered to the same base.

Options > Intercom

### UNANNOUNCED TRANSFER

This function allows you to transfer the current call directly to another device.

Steps	Calling handset	Called handset
1	Press <b>Options</b> .	
2	Choose the option <b>Intercom</b> .	
3	Press <b>Select</b> .	
4	Select the handset (or all handsets) to call.	
5	Press <b>Call</b> .	
6		Rings: internal call.
7	Press <b>Trans..</b>	
8	Hangs up automatically.	Rings: external call. Take the call.


**Note** At the 5<sup>th</sup> step you can cancel the transfer of the call. To do this, select **Cancel** and then validate.

# SIXTY 2

## Call...




### ANNOUNCED TRANSFER

This function allows you to transfer the current call to another device once it has been picked up.

Steps	Calling handset	Called handset
1	Press <b>Options</b> .	
2	Choose the option <b>Intercom</b> .	
3	Press <b>Select</b> .	
4	Select the handset (or all handsets) to call.	
5	Press <b>Call</b> .	
6		Rings : internal call.
7		Press the  key to accept the internal call.
8	The external call is put on hold.	
9	Press <b>Trans..</b>	
10	Hangs up automatically. The external call is transferred.	Communicating with the external caller.

Dual incoming call management can also be done via the option **Press R** :

#### Options > Press R


- Accepting a second incoming call (unknown call) : **Press R**.
- Making a second call during communication : **Press R** + recipient number.
- Switching from one call to the other : **Press R** + .
- Ending a call and switching to the call on hold : **Press R** + .
- Setting up a 3 way-call : **Press R** + .


## Options during a call


You can use the following options during a call :

### Activate/Deactivate loudspeaker (hands-free mode)



During the call you can activate the hands-free mode by pressing the  key.

The icon  is displayed on the screen.

To deactivate the hands-free mode, press the  key again.

 
The icon  disappears.

**Note** When your battery charging icon displays the minimum, the hands-free mode is unavailable until the next charging cycle. The hands-free mode is optimized for speaking at 50 cm from the handset.

# SIXTY 2

Call...

## Adjusting volume

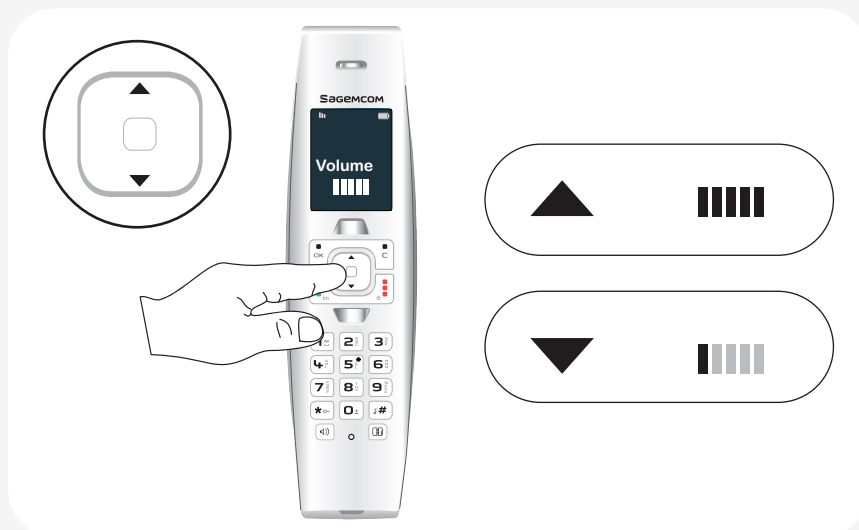

During a call you can increase or decrease the volume of the handset by pressing the ▲ or ▼ keys on the browser.


A bar graph makes it possible to adjust the volume according to 5 levels.

## Activating the mute mode

During a call, you can switch to mute mode and your handset's microphone will be muted and your contact will no longer hear you.

TO ACTIVATE THE MUTE MODE :

- During a conversation, press **Mute**.

The icon  is displayed at the top of the screen.



TO DEACTIVATE THE MUTE MODE :

- Press **Unmute**.  
Your contact will hear you again.

KEYBOARD SHORTCUT:

During a conversation, press and hold the  key to activate/deactivate the mute mode.

# SIXTY 2

Call...

## Using additional handsets

You can associate additional handsets with your phone. You can then make and receive outside calls or calls between these handsets.

**Note** You first have to pair the handsets with the base.  
For further details, refer to the section “**Associating a new handset**”, page 51.

### Calling another handset (intercom)



- 1 Press **INTERN**.
- 2 Select the handset (or all handsets) you want to call using the **▲** or **▼** keys.
- 3 Press **Call**. The selected handset rings.

## Intrusion

This function allows another paired handset to join a call in progress on another handset.

- You have a call in progress.
- Press and hold the green  key from another paired handset.

The handset displays "**Local conference**" and there is an externally initiated 3 way conference set-up.

**Note** To activate/deactivate the intrusion, refer to section "**Allow three-way communication (Intrusion)**", page 62.

# SIXTY 2

## Tracking your calls...

# Tracking your calls...


## Call logs


Logs are lists of numbers or events received or sent by your phone. Depending on your phone provider and the options of your contract, the following information may be accessed in the call logs:

- the date and time of the call.
- the contact's name and/or number.

**Note** The numbers stored in the call log are prefixed by a symbol :

 : List of incoming calls,

 : List of outgoing calls,

 : List of missed calls.

## Displaying the list of all calls

Menu > **Calls**

- Press **Select**.
- Select **All calls**, then press **Select**.
- The last call is displayed with its date and time, its status (incoming, outgoing, missed), name and/or number.
- Scroll through the numbers stored in the list using the ▲ or ▼ keys.
- Select the call you wish to view and press **Details**.
- The following information is displayed :
  - the call status (incoming/outgoing/missed),
  - the contact's name,
  - the contact's number,
  - the call date,
  - the call time.
- Press **Back** to return to the previous menu.



### Viewing the received or dialed call log

**Note** Unknown calls are included in the received call log.


#### Menu > **Calls**

- Press **Select**.
- Select **Incoming calls**, (or **Outgoings calls**) then press **Select**.
- The last received call (or dialed number) is then displayed first.
- The other calls are displayed using the keys ▲ or ▼.
- Select the call you wish to view and press **Details**.
- The following information is displayed :
  - the call status (incoming/outgoing/missed),
  - the contact's name,
  - the contact's number,
  - the call date,
  - the call time.

# SIXTY 2

## Tracking your calls...

### Consulting the missed call log

The  icon is displayed if there are one or more new missed calls which have not been reviewed yet.


**Note** Once the missed call log has been viewed, the icon disappears from all handsets.

#### Menu > **Calls**

- Press **Select**.
- Select **Missed calls**, then press **Select**.
- The latest missed call is displayed.
- Scroll through the numbers stored in the list using the ▲ or ▼ keys.
- Select the call you wish to view and press on **Details**.
- The following information is displayed :
  - the call status (received/sent/missed),
  - the contact's name,
  - the contact's number,
  - the call date,
  - the call time.
- Press **Back** to return to the previous menu.

 
## The events log

Note

The  icon is displayed if there is one or more voice mail messages.

### Checking new events

A summary screen for the number of events that occurred in your absence is displayed :

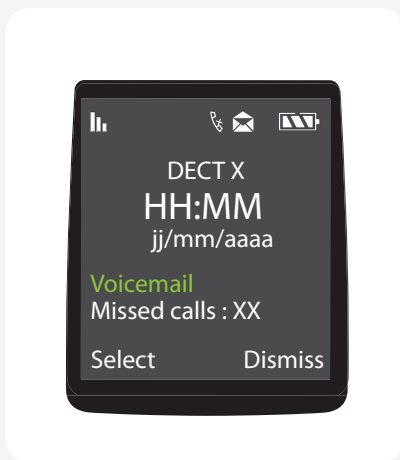

- the operator messages,
- the number of missed calls.

Menu > **Calls**

- Press **Select**.
- Select **Events** then press **Select**.
- Select **Missed** or **Voicemail** using the keys ▲ or ▼ and press **Details**. The event appears on the screen.

# SIXTY 2

## Tracking your calls...


### Managing incoming or outgoing calls

Menu > **Calls**

- Press **Select**.
- Select **All calls** or **Outgoings calls** or **Incoming calls** or **Missed calls** then press **Select**.
- The list of calls (incoming/outgoing/missed) is displayed.
- Select the desired call and press **Details**.
- Press **Options** for the actions you can perform :
  - **Call** : call the displayed number,
  - **Delete** : delete the stored number,
  - **Store** : save the number in your phonebook,
  - **Delete all** : delete all the numbers in the list.



# Manage your contacts...

## Use the phonebook

You can save up to 250 entries (24 digits and 16 characters) in the phonebook. You can also directly access the list of phonebook entries using the  key. When browsing through the phonebook, the handset displays in the right top corner the number of the current entry and the total number of available entries.

### Create an entry

Menu > **Phonebook**

- Press **Select**.
- Select **Add** and press **Select**.
- Specify the required information by confirming at each step. To move between the input fields, use ▲ and ▼ keys.
- **Last name** : enter your contact's name,
- **First name** : enter your contact's first name,
- **Number** : enter the phone number(s) in the corresponding box (Home, Mobile and Work).
- Select from one of the 6 available ring tones using the  or  keys to uniquely identify this contact.
- After making the settings, select **Save changes ?** using the ▲ or ▼ keys and press **Store**.

**Note** To enter a letter, press and hold the required key until the letter is displayed on the screen or press the related key quickly until the character required is shown.

# SIXTY 2

## Manage your contacts...


### Call a contact from the phonebook

Menu > **Phonebook**

- Press **Select**.
- Select **List** or **Search** and press **Select**.
- Select an entry and press **Options**.
- Select **Call** and press **Select**.


### Changing an entry

Menu > **Phonebook**

- Press **Select**.
- Select **List** or **Search** and press **Select**.
- Select an entry and press **Options**.
- Select **Edit** and press **Select**.
- Change the last name, first name and/or phone number by deleting characters using the  key and/or the ring tone.
- After making the settings, select **Save changes ?** using the **▲** or **▼** keys and press **Store**.

### Deleting an entry

Menu > **Phonebook**

- Press **Select**.
- Select **List** or **Search** and press **Select**.
- Select an entry and press **Options**.
- Select **Delete** and press **Select**.
- For the question **Delete ?**, press **Yes**  to confirm the deletion of the entry.


### Search for an entry

Menu > **Phonebook**

- Press **Select**.
- Select **Search** and press **Select**.
- To look up a **Last name**, enter the first letter of the name, the entire name, or part of the name and press **Select**.
- Once the list is displayed, you can also directly enter the first few letters of the name sought.

### Delete all the entries

Menu > **Phonebook**

- Press **Select**.
- Select **Delete all** and press **Select**.
- For the question **Delete all ?**, press **Yes**  to confirm the deletion of all entries.

# SIXTY 2

## Manage your contacts...

### Speed dialing

This function allows you to assign a keyboard shortcut to a contact in your phonebook.

**Note** To call your contact, press and hold the key assigned to the number and the number is automatically dialed.

#### Menu > **Phonebook**

- Press **Select**.
- Select **Speed dialing** and press **Select**.
- Using the keys ▲ or ▼, select the number of the key to which you want to link your contact (0 ~ 9).
- Press **Edit**.
- Select **Edit** and press **Select**.
- Press **Phonebook**, select the contact you want to assign a keypad shortcut. Press **Select**.
- You can also directly enter the number of your choice.
- Once the number is entered, press **Select**.  
To exit the menu, press **Back** 3 times in succession.



# Answering machine...

**Note** When your answering machine's memory is full, the answering machine turns off. You have to read your messages and delete some to free up memory space.  
The recording capacity of your handset is 40 minutes. The maximum duration of each message is 2 minutes.

## Activating/Deactivating the answering machine

When the answering machine is activated, the  icon is displayed.

**Menu > Ans. machine**

- Press **Select**.
- Select **On/Off** using the ▲ or ▼ keys and press **Select**.
- Select **"On"** or **"Off"** using the ▲ or ▼ keys to activate or deactivate your answering machine then press **Select**.  
The action is confirmed by the **"OK"** indication.

# SIXTY 2

## Answering machine...

### Answering machine announcements

**Note** If you have not saved a personal announcement, the answering machine will automatically use the pre-recorded announcement in the specific language of your country.


#### Choosing your default announcement

Menu > **Ans. machine**

- Press **Select**.
- Select **Outgoing msg.** using the ▲ or ▼ keys and press **Select**.
- Select the language to be used with the keys ▲ or ▼ keys and press **Select**.
- Select **Select** using the ▲ or ▼ keys and press **Select**.  
The action is confirmed by the "OK" indication.

#### Recording your personal announcement

Menu > **Ans. machine**

- Press **Select**.
- Select **Outgoing msg.** using the ▲ or ▼ keys and press **Select**.
- Select **Personal** using the ▲ or ▼ keys and press **Select**.
- Select **Record** using the ▲ or ▼ keys and press **Select**.
- Clearly state your announcement.
- Press **Stop**, to stop the recording of the announcement.
- The message **Save changes ?** is displayed, press **Yes**  key.  
The recorded announcement is played.

If you make a mistake while recording the message, repeat the operations described above until you are satisfied with your message.

**Note** The recording of a new message will automatically replace the previous message.

## Listening to your personal announcement

Menu > **Ans. machine**

- Press **Select**.
- Select **Outgoing msg.** using the ▲ or ▼ keys and press **Select**.
- Select **Personal** using the ▲ or ▼ keys and press **Select**.
- Select **Play** using the ▲ or ▼ keys and press **Select**.  
The currently used announcement is played.  
When the personal announcement has finished, your answering machine returns to the previous menu.

**Note** You can also listen to the default announcement in the desired language from those available.

## Erasing your personal announcement

Menu > **Ans. machine**

- Press **Select**.
- Select **Outgoing msg.** using the ▲ or ▼ keys and press **Select**.
- Select **Personal** using the ▲ or ▼ keys and press **Select**.
- Select **Delete** using the ▲ or ▼ keys and press **Select**.  
The action is confirmed by the "OK" indication.


**Note** If you have erased your personal message, the answering machine will use the pre-recorded message.

# SIXTY 2

## Answering machine...

### Messages

 
#### Listening to your messages

If you have received new messages, the icon  lights up in green and the message "New messages : X" scrolls on the screen.

X : the number of messages on the answering machine

#### Menu > Ans. machine

- Press **Select**.
- Select **Incoming msg.** using the **▲** or **▼** keys and press **Select**.
- Select **New** using the **▲** or **▼** keys and press **Select**.

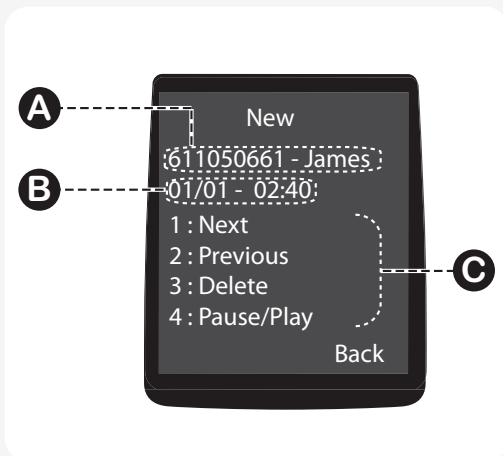

A : your correspondent 's name or number.

B : date time of recording of the message.

C : control keys while reading messages.





The messages are read in chronological order (from oldest to newest).

At the end of the last message, the answering machine will stop automatically.

**Note** You can also listen to your old messages by selecting "Old" instead of "New".


## Managing your messages

When playing back messages, press the following buttons :

Key	Action
	Go on to the next message.
	Return to the previous message.
	Delete the message being read.
	- Stop playback of the messages. - Replay the current message.

## Deleting all old messages

Menu > **Ans. machine**

- Press **Select**.
- Select **Incoming msg.** using the ▲ or ▼ keys and press **Select**.
- Select **Delete old** using the ▲ or ▼ keys and press **Select**.
- The message "**Delete ?**" is displayed, press **Yes**  to confirm the deletion of all old messages.

# SIXTY 2

## Answering machine...

### Querying your answering machine remotely

This function allows you to check your voice messages and change your answering machine settings even when you are not at home.

To remotely access your answering machine :

- Dial your phone number.
- Wait for the answering machine to come on.
- While listening to your announcement press the \* key and enter your remote access code.

**Note** By default, the remote enquiry code is 0000. This code must be modified so that remote access is activated. To modify the remote enquiry code refer to paragraph “**Modify the remote enquiry code**”, page 66.

- A beep will indicate access to the answering machine, any unread messages will be automatically played back.
- At the end of playback, a new beep will sound to let you know that the answer machine is ready.

You can perform the following operations :

Key	Action
5	Play messages / Stop playing messages
3	Delete the message being played
0	Pause/Continue playing back
*	Return to the start of the message (1 press) Return to the previous message (2 presses)
#	Go on to the next message
9	Activate / Deactivate the answering machine

# Audio adjustment...

## Changing the ringtone

You can change the ring of :



- outside calls,
- calls between handsets (intercom).

**Menu > Audio**



- Press **Select**.
- Select **External ringtone** to change the ringing tone for external calls.
- OR -
- Select **Internal ringtone** to change the ringing tone for internal calls.
- Scroll through the pre-recorded ringing tones and press **Select**.
- Adjust the ringtone volume using the ▲ or ▼ keys and press **Select**.

## Activating/Deactivating the silent mode

In silent mode, the telephone ringer and keypad beeps are muted.

**Note** The  key can also be used to activate/deactivate the silent mode.  
If the silent mode is active the  icon is displayed.

**Menu > Audio**

- Press **Select**.
- Select **Silent** to change the silent mode, then press **Select**.
- The message " **Disable silent mode ?** " or " **Activate silent mode ?** " is displayed on the screen.
  - Press **Yes**  to confirm the question.
  - Press **No**  to reject the question.

# SIXTY 2

## Audio adjustment...

### Activating/Deactivating audio alerts

Audio alerts refer to :

- pressing the keypad keys,
- putting the handset on the charger,
- low battery alert,
- others (error alerts).

**Note** The activated function is marked by the symbol  .

#### Menu > Audio

- Press **Select**.
- Select **Beeps** to change the audio alerts, then press **Select**.
- Select **Keypad** and press the **On/Off** key to activate or deactivate the keypad beeps.
- OR -
- Select **Charger** and press the **On/Off** key to activate or deactivate the beep when the handset is placed on the charger.
- OR -
- Select **Battery low** and press the **On/Off** key to activate or deactivate the low battery warning.
- OR -
- Select **Others** and press the **On/Off** key to activate or deactivate the error alerts.
- After making the settings, select **Save changes ?** using the ▲ or ▼ keys then press **Store**.  
The action is confirmed by the "OK" indication.




# Setting up...

## The phone

### Setting the date and the time

Menu > **Settings**

- Press **Select**.
- Select **Settings** using the ▲ or ▼ keys and press **Select**.
- Select **Date/Time** using the ▲ or ▼ keys and press **Select**.
- The date and time setting screen is displayed, press **Edit**.
- Set the clock mode (automatic or manual) with **On/Off** key.
- Press the key ▼ and then enter the date in MM/DD/YY format.
- Press the key ▼ and then enter the time in HH:MM format.
- Confirm your entry by pressing **Select**.
- The message "**Save changes ?**" is displayed.
- Confirm by pressing  key.

The action is confirmed by the "**OK**" indication.

**Note** If the Auto is activated (checked), it is not possible to change the date and time displayed on the handset.

# SIXTY 2

## Setting up...

### Picking up and hanging up calls automatically

Menu > **Settings**

- Press **Select**.
- Select **Settings** using the ▲ or ▼ keys and press **Select**.
- Select **Auto hang/pick up** using the ▲ or ▼ keys and press **Select**.
- Select **Auto hangup** or **Auto pickup** using the ▲ or ▼ keys.
- Set the status (activated or deactivated) with the **On/Off** key.
- Select "**Save changes ?**" using the ▲ or ▼ keys and press **Store**.  
The action is confirmed by the "OK" indication.

### Changing the display language

Menu > **Settings**

- Press **Select**.
- Select **Settings** using the ▲ or ▼ keys and press **Select**.
- Select **Language** using the ▲ or ▼ keys and press **Select**.
- Select the language to be used with the keys ▲ or ▼ and press **Select**.
- The action is confirmed by the "OK" indication if the choice of language is English.

# SIXTY 2

## Setting up...

### Adjust the brightness

Menu > **Settings**

- Press **Select**.
- Select **Settings** using the ▲ or ▼ keys and press **Select**.
- Select **Display** using the ▲ or ▼ keys and press **Select**.
- Select **Brightness** using the ▲ or ▼ keys and press **Select**.
- A bar graph is used to adjust the brightness according to 8 levels.
- Select the level you want using the keys ▲ or ▼ .  
The brightness is directly visible on the screen.
- Press **Select**. The action is confirmed by the "OK" indication.

### Change the screen background

This menu allows you to change your handset's screen background image.

Menu > **Settings**

- Press **Select** .
- Select **Settings** using the ▲ or ▼ keys and press **Select**.
- Select **Display** using the ▲ or ▼ keys and press **Select**.
- Select **Wallpaper** using the ▲ or ▼ keys and press **Select**.
- Select a background screen from the ones offered using the keys ▲ or ▼ .  
The image is displayed on the screen.
- Press **Select** to display the image as background.  
The action is confirmed by the "OK" indication.

# SIXTY 2

## Setting up...


### The handset

#### Associating a new handset

You can associate other handsets with your base telephone. You then have to pair them so they are recognised.


##### FROM THE BASE :

To put your base in pairing mode :

- Press the button  on the rear face of the base, until the light starts blinking.
- The base remains in pairing mode for one minute.

##### FROM THE HANDSET :

**Case 1** : the handset displays "**Please register**".

- Press  key.
- The handset displays : "**Put the base in registration & press OK**".
- Press **OK**.
- The message "**Search**" is displayed.
- Once the base is detected, its name is displayed on the handset screen.
- Press **Yes** to confirm.
- The message "**Registration in progress**" is displayed.
- The message "**Registered**" is displayed.  
You then automatically exit the pairing mode.

# SIXTY 2

## Setting up...

### Case 2 :

#### Menu > **Settings**

- Press **Select**.
- Select **Advanced settings** using the ▲ or ▼ keys and press **Select**.
- Select **Set handset** using the ▲ or ▼ keys and press **Select**.
- Select **Registration** then press **Select**.
- The handset displays : "**Put the base in registration & press OK**".
- Place your base in pairing mode (see previous paragraph).
- On the handset, press **OK**.
- The message "**Search**" is displayed.
- Once the base is detected, its name is displayed on the handset screen.
- Press **Yes** to confirm.
- The message "**Registration in progress**" is displayed.
- The message "**Registered**" is displayed.  
You then automatically exit the pairing mode.

**Note** The standard pairing of a new handset is automatic if the default pin number (0000) has not been changed. Otherwise a message **Enter code** prompts you to enter the new PIN number. If an error occurs, the message **Registration failed** is displayed prompting you to repeat the whole procedure.

## Customizing the handset's registration

You can personalise the following information :


- the name of your base,
- the registration number of your handset.

Menu > **Settings**

FROM THE HANDSET :

- 1 Press **Select**.
- 2 Select **Advanced settings** using the ▲ or ▼ keys and press **Select**.
- 3 Select **Set handset** using the ▲ or ▼ keys and press **Select**.
- 4 Select **Person.registration** then press **Select**.
- 5 Select the base number and confirm.
- 6 Enter the new base name and confirm.
- 7 Enter the base code.

FROM THE BASE :

- 8 Press the pairing button  for a few seconds.  
On the base: the light blinks and the base is in paired mode.  
Once the handset is registered, you automatically quit pairing mode.

## Defining the main base for your handset

This function allows you to specify the priority base to be used for making calls.

**Note** Only if you have paired the same handset on several bases.

Menu > **Settings**

- Press **Select**.
- Select **Advanced settings** using the ▲ or ▼ keys and press **Select**.
- Select **Set handset** using the ▲ or ▼ keys and press **Select**.
- Select **Base priority** using the ▲ or ▼ keys and press **Select**.
- Select the base that the handset should use first and press **Select**.  
The action is confirmed by the "OK" indication.

# SIXTY 2

## Setting up...

### Modifying the Voice box number

If you have subscribed to your operator's voice mail service, calls received while you are absent will be redirected to the voice mail on your telephone line.

**Note** If you do not know the number of your voice mail, ask your operator for it.

#### Menu > **Settings**

- Press **Select**.
- Select **Advanced settings** using the ▲ or ▼ keys and press **Select**.
- Select **Set handset** using the ▲ or ▼ keys and press **Select**.
- Select **Voicebox number** using the ▲ or ▼ keys and press **Select**.
- Select **Edit** using the ▲ or ▼ keys and press **Select**.
- Deleting the Voice box number.  
The action is confirmed by the "OK" indication.

### Deleting the Voice box number

#### Menu > **Settings**

- Press **Select**.
- Select **Advanced settings** using the ▲ or ▼ keys and press **Select**.
- Select **Set handset** using the ▲ or ▼ keys and press **Select**.
- Select **Voicebox number** using the ▲ or ▼ keys and press **Select**.
- Select **Delete** using the ▲ or ▼ keys and press **Select**.
- The message "**Delete ?**" is displayed.
- Press **Yes** to confirm.  
The action is confirmed by the "OK" indication.

# SIXTY 2

## Setting up...

### Handset version

Menu > **Settings**

- Press **Select**.
- Select **Advanced settings** using the ▲ or ▼ keys and press **Select**.
- Select **Set handset** using the ▲ or ▼ keys and press **Select**.
- Select **Handset version** using the ▲ or ▼ keys and press **Select**.  
The software and EEPROM version of the **SIXTY 2** handset is displayed on the screen.

### Resetting the handset

When you reset your handset, all the settings are returned to their initial values (factory settings), except for the phonebook.

Menu > **Settings**

- Press **Select**.
- Select **Advanced settings** using the ▲ or ▼ keys and press **Select**.
- Select **Set handset** using the ▲ or ▼ keys and press **Select**.
- Select **Reset handset** using the ▲ or ▼ keys and press **Select**.
- On a confirmation request "**Reset handset ?**", press **Yes**.



# SIXTY 2

## Setting up...

### The base

#### Changing the base code

Your base station code (default setting 0000) is required to access certain security functions. This must contain 4 digits.

Menu > **Settings**

- Press **Select**.
  - Select **Advanced settings** using the ▲ or ▼ keys and press **Select**.
  - Select **Set base** using the ▲ or ▼ keys and press **Select**.
  - Select **Change code** using the ▲ or ▼ keys and press **Select**.
  - At the "Old code" prompt, enter the old 4-digit code and then confirm by pressing **Select**.
  - At the "New code" prompt, enter the new 4-digit code and then confirm by pressing **Select**.
  - At the "Confirm code" prompt, enter the new code again and then confirm by pressing **Select**.
- The action is confirmed by the "OK" indication.

#### Resetting the base

When you reset your base, all the settings are returned to their initial values (factory settings), except for the phonebook.

Menu > **Settings**

- Press **Select**.
  - Select **Advanced settings** using the ▲ or ▼ keys and press **Select**.
  - Select **Set base** using the ▲ or ▼ keys and press **Select**.
  - Select **Reset base** using the ▲ or ▼ keys and press **Select**.
  - On a confirmation request "Reset base?", press **Yes**.
- The action is confirmed by the "OK" indication.

# SIXTY 2

## Setting up...

### Base version

#### Menu > Settings

- Press **Select**.
- Select **Advanced settings** using the ▲ or ▼ keys and press **Select**.
- Select **Set base** using the ▲ or ▼ keys and press **Select**.
- Select **Base version** using the ▲ or ▼ keys and press **Select**.
- The following information is displayed :
  - base software version,
  - EEPROM version,
  - base hardware version.

### Activating emission free mode

There is a **Emission free mode** on your handset. It controls the radio transmission power needed according to how far away your base is.

If emission free mode is activated it means that neither base nor handset do emit any signal until it is resumed by any action from the line or handset.

#### Menu > Settings

- Press **Select**.
- Select **Advanced settings** using the ▲ or ▼ keys and press **Select**.
- Select **Set base** using the ▲ or ▼ keys and press **Select**.
- Select **Emission free mode** using the ▲ or ▼ keys and press **Select**.
- Set the status (activated or deactivated) with the **On/Off** key.
- Select **Save changes ?** using the ▲ or ▼ keys and press **Store**.  
The action is confirmed by the "OK" indication.

# SIXTY 2

## Setting up...

### Modifying the country

Country choice allows specific settings for different countries to be modified but does not change the language in the **Settings**.

#### Menu > **Settings**

- Press **Select**.
- Select **Advanced settings** using the ▲ or ▼ keys and press **Select**.
- Select **Set base** using the ▲ or ▼ keys and press **Select**.
- Select **Country** using the ▲ or ▼ keys and press **Select**.
- A list of countries is available. Select the country in which you are using your phone and press **Select**.  
The action is confirmed by the "OK" indication.

# SIXTY 2

## Setting up...

### The charger

**Note** The updated settings of the charger from the menu **Set charger** becomes effective as soon as the handset is put back to the charger.

#### Modifying the display colour

With this menu you can change the display colour of your charger.

##### Menu > **Settings**

- Press **Select**.
- Select **Advanced settings** using the ▲ or ▼ keys and press **Select**.
- Select **Set charger** using the ▲ or ▼ keys and press **Select**.
- Select **Display color** using the ▲ or ▼ keys and press **Select**.
- A list of colours is available. Select the desired colour then press **Select**.  
The action is confirmed by the "OK" indication.

#### Activating time display

With this menu you can activate the time display on your charger display screen.

##### Menu > **Settings**

- Press **Select**.
- Select **Advanced settings** using the ▲ or ▼ keys and press **Select**.
- Select **Set charger** using the ▲ or ▼ keys and press **Select**.
- Select **Settings** using the ▲ or ▼ keys and press **Select**.
- Set the status (activated or deactivated) with the **On/Off** key.
- Select **Save changes ?** using the ▲ or ▼ keys and press **Store**.  
The action is confirmed by the "OK" indication.

# SIXTY 2

## Setting up...

### The line

This menu allows you to change the settings of the lines on the base.

**Important** We do not recommend that you change line settings without first contacting your operator, as this may result in your phone line being disconnected.

#### Change the line name

Menu > **Settings**

- Press **Select**.
- Select **Advanced settings** using the ▲ or ▼ keys and press **Select**.
- Select **Set line** using the ▲ or ▼ keys and press **Select**.
- Select **Line name** using the ▲ or ▼ keys and press **Select**.
- Press **Edit** to change the line name using the alphanumeric keys.
- Enter your line name by successively pressing the corresponding keys, press **Select**.

The action is confirmed by the "OK" indication.

# SIXTY 2

## Setting up...

### Pair the handset with a line

This menu allows you to display the list of handsets paired with the line used.

Note The activated function is marked by the symbol  .

#### Menu > Settings

- Press **Select**.
- Select **Advanced settings** using the ▲ or ▼ keys and press **Select**.
- Select **Set line** using the ▲ or ▼ keys and press **Select**.
- Select **Associated handset** using the ▲ or ▼ keys and press **Select**.
- Enter the base code and press **Select**.
- The list of paired handsets is displayed on the screen.
- Select the desired handset using the ▲ or ▼ keys.
- Press **On/Off** key to pair/unpair the handset with/from the line used (the paired handset is then unpaired and vice versa).
- Select **Save changes ?** using the ▲ or ▼ keys and press **Store**.  
The action is confirmed by the "OK" indication.

### Mask the line number

This function when activated, hides your line number.

Note The activated function is marked by the symbol  .

#### Menu > Settings

- Press **Select**.
- Select **Advanced settings** using the ▲ or ▼ keys and press **Select**.
- Select **Set line** using the ▲ or ▼ keys and press **Select**.
- Select **Configuration** using the ▲ or ▼ keys and press **Select**.
- Select **Hide number** using the ▲ or ▼ keys.
- Change the status using the key **On/Off** and press **OK**.
- Select **Save changes ?** using the ▲ or ▼ keys and press **Store**.  
The action is confirmed by the "OK" indication.

# SIXTY 2

## Setting up...

### Allow three-way communication (Intrusion)

This intrusion function allows or prohibits a second handset registered on the same base to share an ongoing conversation. If the intrusion mode is activated, you will then be able to share a call in process with another handset.

#### Menu > **Settings**

- Press **Select**.
- Select **Advanced settings** using the ▲ or ▼ keys and press **Select**.
- Select **Set line** using the ▲ or ▼ keys and press **Select**.
- Select **Configuration** using the ▲ or ▼ keys and press **Select**.
- Select **Intrusion** using the ▲ or ▼ keys.
- Change the status using the key **On/Off** and press **Select**.
- Select **Save changes ?** using the ▲ or ▼ keys and press **Store**.  
The action is confirmed by the "OK" indication.

### Modifying the dialing mode

You can use the dialing system based on **voice frequency** or **pulse**.

#### Menu > **Settings**

- Press **Select**.
- Select **Advanced settings** using the ▲ or ▼ keys and press **Select**.
- Select **Set line** using the ▲ or ▼ keys and press **Select**.
- Select **Dial mode** using the ▲ or ▼ keys and press **Select**.
- Select **Edit** using the ▲ or ▼ keys and press **Select**.
- Select the desired type of dialing with the keys ▲ or ▼ and press **Select**.  
The action is confirmed by the "OK" indication.

**Note** To verify the type of dialing used, select **View**.

### Changing the flash duration

You can configure the flash duration if you use your phone abroad or on private PABX network, you may need to modify the flash duration in order to use your telephone correctly with regard to the following functionalities: outgoing 2nd call, incoming 2nd call and 3 way conference.

Please contact your service provider to obtain the correct flash duration and then modify it by doing the following.

#### Menu > **Settings**

- Press **Select**.
- Select **Advanced settings** using the ▲ or ▼ keys and press **Select**.
- Select **Set line** using the ▲ or ▼ keys and press **Select**.
- Select **Flash time** using the ▲ or ▼ keys and press **Select**.
- Select **Edit** using the ▲ or ▼ keys and press **Select**.
- Select the appropriate flash duration using the ▲ or ▼ key and press **Select**. The action is confirmed by the "OK" indication.

**Note** To verify the type of flash duration used, select **View**.

Flash duration (MS)	Country
100	Spain, United Kingdom, Italy, Switzerland, Austria, Netherlands, Poland, Ireland, Hungary, Slovenia, Romania, Slovakia, Czech Republic and Sweden
120	Belgium
250	Germany, France, Greece, Portugal, Croatia, Serbia, Montenegro, Bosnia and Macedonia
600	Bulgaria



# SIXTY 2

Setting up...

## Call management

This menu allows you to select the line on which you want to make your outgoing call.

### Managing your calls

Menu > **Settings**

- Press **Select**.
- Select **Advanced settings** using the ▲ or ▼ keys and press **Select**.
- Select **Select call line** using the ▲ or ▼ keys and press **Select**.
- The list of lines available is displayed on the screen.
- Select your line using the keys ▲ or ▼ and press **Select**.  
The action is confirmed by the "OK" indication.

## The list of handsets

This menu displays the list of handsets registered on the same base.

### Manage handsets

Menu > **Settings**

- Press **Select**.
- Select **Advanced settings** using the ▲ or ▼ keys and press **Select**.
- Select **Handsets' list** using the ▲ or ▼ keys and press **Select**.
- The list of handsets registered on the base is displayed on the screen.
- Select the desired handset using the keys ▲ or ▼ and press **Options**.
- You can perform the following actions :

#### Changing the handset name : " Edit "

Change the handset name using the alphanumeric keys. Press **Clear** to delete unwanted characters. Press **Select**.

#### Call the handset : " Call "

Call the selected handset.

#### Remove the handset : " Delete "

Remove the handset's registration.

At the confirmation prompt "**Delete handset ?**" press **Yes**.  
The action is confirmed by the "**OK**" indication.

#### Intercept the call : "Interception"

Authorise a DECT earpiece, previously registered with the base, to intercept a call.  
The message "**Enter code** " is displayed. Enter the base PIN code (0000 by default), press **Select**.

Then select **On** or **Off** and press **Select**.

The action is confirmed by the "**OK**" indication.

# SIXTY 2

## Setting up...

### Answering machine setup

#### Modify the remote enquiry code

Your answering machine can be consulted remotely. With this function you can read your messages and consult your answering machine from any other telephone outside your home.

**Note** The default code is 0000. This code must be modified for remote access to be activated.

Menu > **Ans. machine**

- Press **Select**.
- Select **Settings** using the ▲ or ▼ keys and press **Select**.
- Select **Remote access** using the ▲ or ▼ keys and press **Select**.
- Enter the base code (0000 by default) using the keys on the keypad. Press **Select**.
- Enter the new remote enquiry code, press **Select**.
- Enter the new remote enquiry code a second time, press **Select** to confirm. The action is confirmed by the "OK" indication.

#### Answering machine delay time

With this setting you set the time in seconds before your answering machine operates.

You can increase the time before your answering machine operates to give yourself more time to come to the phone.

Menu > **Ans. machine**

- Press **Select**.
- Select **Settings** using the ▲ or ▼ keys and press **Select**.
- Select **Time to pickup** using the ▲ or ▼ keys and press **Select**.
- Enter the desired time in seconds. Press **Select**. The action is confirmed by the "OK" indication.

