

# **Panasonic<sup>®</sup>**

## **OPERATING INSTRUCTIONS**



### **TX-55C320B**

**COLOUR TELEVISION WITH REMOTE CONTROL**

## Contents

Safety Information .....	3
Markings on the Product.....	3
Maintenance .....	4
Assembling / Removing the pedestal .....	5
When using the wall-hanging bracket.....	5
Environmental Information.....	5
Features .....	6
Accessories Included.....	6
Standby Notifications.....	6
TV Control Buttons & Operation .....	6
Inserting the Batteries into the Remote .....	7
Connect Power .....	7
Antenna Connection.....	7
Notification.....	7
Specification .....	8
Remote Control .....	9
Connections.....	10
Switching On/Off.....	11
First Time Installation.....	11
Media Playback via USB Input .....	11
Media Browser Menu.....	12
CEC and CEC RC Passthrough.....	12
TV Menu Contents.....	13
General TV Operation .....	17
Using the Channel List .....	17
Configuring Parental Settings.....	17
Electronic Programme Guide (EPG) .....	17
Teletext Services .....	18
Software Upgrade.....	18
Troubleshooting & Tips.....	19
PC Input Typical Display Modes.....	19
AV and HDMI Signal Compatibility .....	20
Supported Video File Formats for USB Mode .....	21
Supported Picture File Formats for USB Mode .....	21
Supported Audio File Formats for USB Mode .....	22
Supported Subtitle File Formats for USB Mode .....	23
Supported DVI Resolutions .....	24
Connectivity.....	25
Audio Video Sharing.....	27
Nero MediaHome Installation .....	27
Internet Portal .....	28
Internet Browser .....	29
Important Instruction.....	30

## Safety Information

	<b>CAUTION</b> RISK OF ELECTRIC SHOCK DO NOT OPEN	
<b>CAUTION:</b> TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.		

### Don't operate your TV in extreme ambient conditions as this may cause damage to your TV.



In extreme weather (storms, lightning) and long inactivity periods (going on holiday) disconnect the TV set from the mains. The mains plug is used to disconnect TV set from the mains and therefore it must remain readily operable.




This sign is present wherever there is very important information on operation and maintenance of the appliance in the literature accompanying it.

**Note:** Follow the on screen instructions for operating the related features.








### IMPORTANT - Please read these instructions fully before installing or operating

#### **WARNING:** Never let people (including children) with reduced physical, sensory or mental capabilities or lack of experience and / or knowledge use electrical devices unsupervised.

- For ventilation purposes, leave a free space of at least 10 cm all around the set.
- **Do not** block ventilation holes.
- **Do not** place the TV on sloping or unstable surfaces, the TV may tip over.
- Use this device in moderate climates.
- The power cord plug should be easily accessible. **Do not** place the TV, furniture, etc. on the power cord. A damaged power cord/plug can cause fire or give you an electric shock. Handle the power cord by the plug, **do not** unplug the TV by pulling the power cord. Never touch the power cord/plug with wet hands as this could cause a short circuit or electric shock. Never make a knot in the power cord or tie it with other cords. When damaged it must be replaced, this should only be done by qualified personnel.
- **Do not** use this TV in a humid or damp environment. Do not expose the TV to liquids. In case the cabinet contacts any liquids unplug the TV immediately and have it checked by qualified personnel before operating it any further.
- **Do not** expose the TV to direct sunlight, open flames or place it near intense heat sources such as electric heaters. 
- Listening in excessive volumes from earphones and headphones may cause hearing loss.

- Ensure that no open flame sources, such as lit candles, are placed on top of the TV.
- To prevent injuries, this TV must be securely attached to a wall by carefully following the instructions (if the option is available).
- Occasionally, a few non-active pixels may appear on the screen as a fixed blue, green or red point. Please note that this does not affect the performance of your product. Take care not to scratch the screen with fingernails or other hard objects.
- Before cleaning, unplug the TV from the wall socket. Only use a soft, dry cloth while cleaning.

 Warning	Serious injury or death risk
 Risk of electric shock	Dangerous voltage risk
 Caution	Injury or property damage risk
 Important	Operating the system correctly
 Notice	Additional notes marked

### Markings on the Product

The following symbols are used **on the product** as a marker for restrictions and precautions and safety instructions. Each explanation shall be considered where the product bears related marking only. Note such information for security reasons.



**Class II Equipment:** This appliance is designed in such a way that it does not require a safety connection to electrical earth.



**Class II Equipment With Functional Earthing:** This appliance is designed in such a way that it does not require a safety connection to electrical earth, the earth connection is used for functional purposes.



**Protective Earth Connection:** The marked terminal is intended for connection of the protective earthing conductor associated with the supply wiring.



**Hazardous Live Terminal:** The marked terminal(s) is/are hazardous live under normal operating conditions.



**Caution, See Operating Instructions:** The marked area(s) contain(s) user replaceable coin or button cell batteries.



**Class 1 Laser Product:** This product contains Class 1 laser source that is safe under reasonably foreseeable conditions of operation.

### **WARNING**

Do not ingest the battery, Chemical Burn Hazard

(The accessories supplied with or) This product may contain a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.

Keep new and used batteries away from children.

If the battery compartment does not close securely, stop using the product and keep it away from children.

If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

### **WARNING**

Never place a television set in an unstable location. A television set may fall, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as;

- Using cabinets or stands recommended by the manufacturer of the television set.
- Only using furniture that can safely support the television set.
- Ensuring the television set is not overhanging the edge of the supporting furniture.
- Not placing the television set on all furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television set to a suitable support.
- Educating children about the dangers of climbing on furniture to reach the television set or its controls.

If your existing television set is being retained and relocated, the same considerations as above should be applied.

### **Maintenance**

**First, remove the mains plug from the mains socket.**

### **Display panel, Cabinet, Pedestal**

#### **Regular care:**

Gently wipe the surface of the display panel, cabinet, or pedestal by using a soft cloth to remove dirt or fingerprints.

#### **For stubborn dirt:**

1. First clean the dust from the surface.
2. Dampen a soft cloth with clean water or diluted neutral detergent (1 part detergent to 100 parts water).
3. Wring out the cloth firmly. (Please note, do not let liquid enter the TV inside as it may lead to product failure.)
4. Carefully wipe moisten and wipe away the stubborn dirt.
5. Finally, wipe away all the moisture.

#### **Caution**

Do not use a hard cloth or rub the surface too hard, otherwise this may cause scratches on the surface.

- Take care not to subject the surfaces to insect repellent, solvent, thinner or other volatile substances. This may degrade surface quality or cause peeling of the paint.
- The surface of the display panel is specially treated and may be easily damaged. Take care not to tap or scratch the surface with your fingernail or other hard objects.
- Do not allow the cabinet and pedestal to make contact with a rubber or PVC substance for a long time. This may degrade surface quality.

### **Mains plug**

Wipe the mains plug with a dry cloth at regular intervals.

Moisture and dust may cause fire or electrical shock.

## Assembling / Removing the pedestal


### Preparations

Take out the pedestal(s) and the TV from the packing case and put the TV onto a work table with the screen panel down on the clean and soft cloth (blanket, etc.)


- Use a flat and firm table bigger than the TV.
- Do not hold the screen panel part.
- Make sure not to scratch or break the TV.

### Assembling the pedestal

1. Place the stand(s) on the stand mounting pattern(s) on the rear side of the TV.

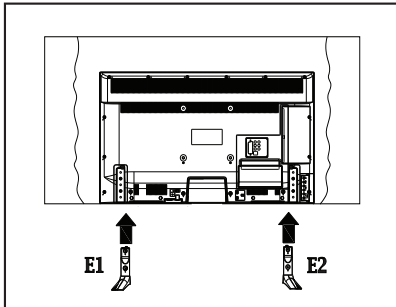

2. Insert the screws (M4 x 12) provided and tighten them gently until the stand is properly fitted.

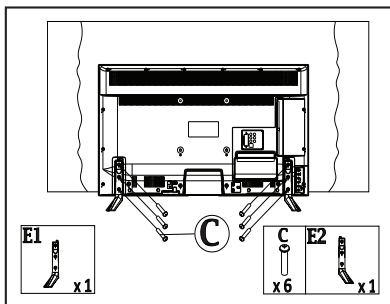

### Removing the pedestal from the TV

Be sure to remove the pedestal in the following way when using the wall-hanging bracket or repacking the TV.


- Put the TV onto a work table with the screen panel down on the clean and soft cloth. Leave the stand(s) protruding over the edge of the surface.
- Unscrew the screws that fixing the stand(s).
- Remove the stand(s).

## When using the wall-hanging bracket

Please contact your local Panasonic dealer to purchase the recommended wall-hanging bracket.


Holes for wall-hanging bracket installation;

### Rear of the TV

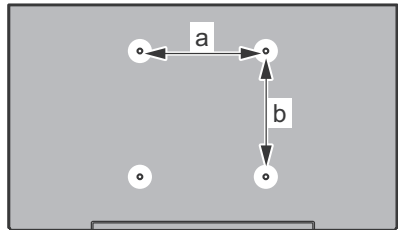

a (mm)	400
b (mm)	400

### View from the side

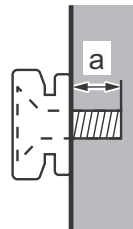

Depth of screw (a)	min. (mm)	5
	max. (mm)	10
Diameter	M6	

*Note:* The screws for fixing the TV onto the wall-hanging bracket are not supplied with the TV.

## Environmental Information

This television is designed to be environment friendly. To reduce energy consumption, you can follow these steps:

If you set the **Energy Saving** to **Minimum**, **Medium**, **Maximum** or **Auto** the TV will reduce the energy consumption accordingly. If you like to set the **Backlight** to a fixed value set as **Custom** and adjust the **Backlight** (located under the **Energy Saving** setting) manually using Left or Right buttons on the remote. Set as **Off** to turn this setting off.

*Note:* Available **Energy Saving** options may differ depending on the selected **Mode** in the **Picture** menu.

The **Energy Saving** settings can be found in the **Picture** menu. Note that some picture settings will be unavailable to be changed.

If pressed Right button while **Auto** option is selected or Left button while **Custom** option is selected, “**Screen will be off in 15 seconds.**” message will be displayed on the screen. Select **Proceed** and press **OK** to turn the screen off immediately. If you don't press any button, the screen will be off in 15 seconds. Press any button on the remote or on the TV to turn the screen on again.

**Note:** **Screen Off** option is not available if the Mode is set to **Game**.

When the TV is not in use, please switch off or disconnect the TV from the mains plug. This will also reduce energy consumption.

## Features

- Remote controlled colour TV
- Fully integrated digital terrestrial/cable TV (DVB-T2/C)
- HDMI inputs to connect other devices with HDMI sockets
- USB input
- OSD menu system
- Scart socket for external devices (such as DVD Players, PVR, video games, etc.)
- Stereo sound system
- Teletext
- Headphone connection
- Automatic programming system
- Manual tuning
- Automatic power down after up to eight hours.
- Sleep timer
- Child lock
- Automatic sound mute when no transmission.
- NTSC playback
- AVL (Automatic Volume Limiting)
- PLL (Frequency Search)
- PC input
- Game Mode (Optional)
- Picture off function
- Ethernet (LAN) for Internet connectivity and service
- 802.11n built in WIFI Support
- Audio Video Sharing

## Accessories Included


- Remote Control
- Batteries: 2 x AAA
- Instruction Book
- Detachable stand
- Stand mounting screws (M4 x 12)

## Standby Notifications

If the TV does not receive any input signal (e.g. from an aerial or HDMI source) for 5 minutes, it will go into standby. When you next switch-on, the following message will be displayed: “**TV switched to stand-by mode automatically because there was no signal for a long time.**” Press **OK** to continue.

If the TV is on and it isn't being operated for a while it will go into standby. When you next switch-on, the following message will be displayed: “**TV switched to stand-by mode automatically because no operation was made for a long time.**” Press **OK** to continue.

## TV Control Buttons & Operation

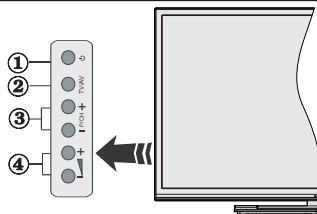

1. Standby/On button
2. Source button
3. Programme +/- buttons
4. Volume +/- buttons

Press the Volume +/- buttons simultaneously to view main menu and use Programme +/- buttons to navigate and Volume +/- buttons to change value.

**Note:** The position of the control buttons may differ depending on the model.

### Operation with the Remote Control

Press the **Menu** button on your remote control to display main menu screen. Use the directional buttons to select a menu tab and press **OK** to enter. Use the directional buttons again to select or set an item. Press **Return/Back** or **Menu** button to quit a menu screen.

### Input Selection

Once you have connected external systems to your TV, you can switch to different input sources. Press the **Source** button on your remote control consecutively to select the different sources.

### Changing Channels and Volume

You can change the channel and adjust the volume by using the **Volume +/-** and **Programme +/-** buttons on the remote.

### Inserting the Batteries into the Remote

Remove the back cover to reveal the battery compartment. Insert two size **AAA** batteries. Make sure the (+) and (-) signs match (observe correct polarity). Do not mix old and new batteries. Replace only with same or equivalent type. Place the cover back on.



 
### Connect Power

**IMPORTANT:** The TV set is designed to operate on **220-240V AC, 50 Hz** socket. After unpacking, allow the TV set to reach the ambient room temperature before you connect the set to the mains. Plug the power cable to the mains socket outlet.

### Antenna Connection

Connect the aerial or cable TV plug to the **AERIAL INPUT (ANT-TV)** socket located on the rear bottom side of the TV.

### Rear bottom side of the TV



### Notification

#### TRADEMARK ACKNOWLEDGMENT

The terms HDMI and High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.



Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.



YouTube and the YouTube logo are trademarks of Google Inc.

### Disposal of Old Equipment and Batteries

#### Only for European Union and countries with recycling systems



These symbols on the products, packaging, and/or accompanying documents mean that used electrical and electronic products and batteries must not be mixed with general household waste.

For proper treatment, recovery and recycling of old products and batteries, please take them to applicable collection points in accordance with your national legislation.

By disposing of them correctly, you will help to save valuable resources and prevent any potential negative effects on human health and the environment.

For more information about collection and recycling, please contact your local municipality.

Penalties may be applicable for incorrect disposal of this waste, in accordance with national legislation.

#### Note for the battery symbol (bottom symbol):



This symbol might be used in combination with a chemical symbol. In this case it complies with the requirement set by the Directive for the chemical involved.



Authorized Representative:

Panasonic Testing Centre

Panasonic Marketing Europe GmbH

Winsbergring 15, 22525 Hamburg, Germany

Web Site: <http://www.panasonic.com>

## Sales and Support Information

### Customer Communication Centre

- For customers within the UK: **0344 844 3899**
- For customers within Ireland: **01289 8333**
- Monday - Friday 9:00am - 5:00pm, (Excluding public holidays).
- For further support on your product, please visit our website: **www.panasonic.co.uk**

### Direct Sales at Panasonic UK

- Order accessory and consumable items for your product with ease and confidence by phoning our Customer Communications Centre Monday - Friday 9:00am - 5:00pm, (Excluding public holidays).
- Or go on line through our Internet Accessory ordering application at **www.pas-europe.com**.
- Most major credit and debit cards accepted.
- All enquiries transactions and distribution facilities are provided directly by Panasonic UK.
- It couldn't be simpler!
- Also available through our Internet is direct shopping for a wide range of finished products. Take a browse on our website for further details.

## Specification

<b>TV Broadcasting</b>	PAL BG/DK/II' SECAM BG/DK
<b>Receiving Channels</b>	VHF (BAND I/III) - UHF (BAND U) - HYPERBAND
<b>Digital Reception</b>	Fully integrated digital terrestrial-cable TV (DVB-T-C) (DVB-T2 compliant)
<b>Number of Preset Channels</b>	1.000
<b>Channel Indicator</b>	On Screen Display
<b>RF Aerial Input</b>	75 Ohm (unbalanced)
<b>Operating Voltage</b>	220-240V AC, 50Hz.
<b>Audio</b>	A2 Stereo+Nicam Stereo
<b>Headphone</b>	3.5 mm mini stereo jack
<b>Audio Output Power (WRMS.) (10% THD)</b>	2 x 10 W
<b>Power Consumption (W)</b>	140 W
<b>Weight (Kg)</b>	22 Kg
<b>TV Dimensions DxLxH (with foot) (mm)</b>	292 x 1240 x 789
<b>TV Dimensions DxLxH (without foot) (mm)</b>	38/47 x 1240 x 716
<b>Display</b>	16/9 55"
<b>Operation temperature and operation humidity</b>	0°C up to 40°C, 85% humidity max

## Wireless LAN Specifications

### Frequency Range

**USA:** 2.400 ~ 2.483GHz, 5.15 ~ 5.35GHz, 5.47 ~ 5.725GHz, 5.725 ~ 5.85GHz

**Europe:** 2.400 ~ 2.483GHz, 5.15 ~ 5.35GHz, 5.47 ~ 5.725GHz

**Japan:** 2.400 ~ 2.497GHz, 5.15 ~ 5.35GHz, 5.47 ~ 5.725GHz

**China:** 2.400 ~ 2.483GHz, 5.725 ~ 5.85GHz

### Standard

IEEE 802.11.a/b/g/n


### Host Interface

USB 2.0

### Security

WEP 64/128, WPA, WPA2, TKIP, AES, WAPI



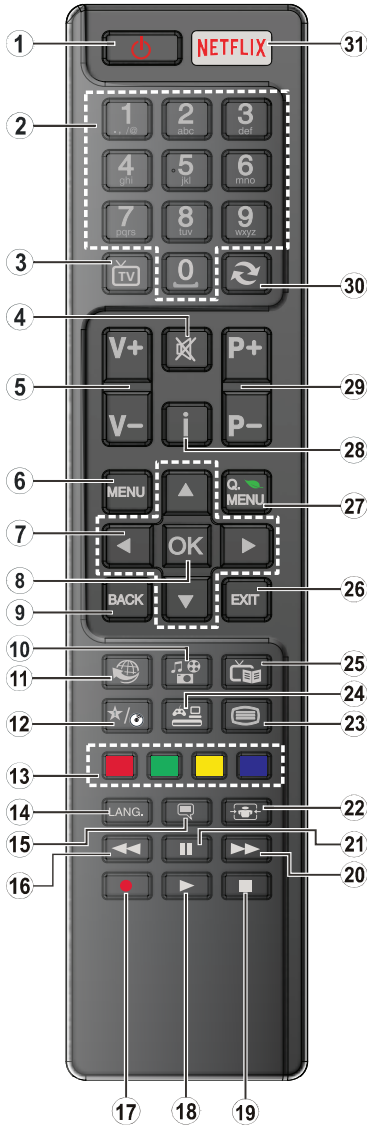







 























 








1. **Standby:** Switches On / Off the TV
2. **Numeric buttons:** Switches the channel, enters a number or a letter in the text box on the screen.
3. **TV:** Displays channel list / Switches to TV Source
4. **Mute:** Completely turns off the volume of the TV
5. **Volume +/-**
6. **Menu:** Displays TV menu
7. **Directional buttons:** Helps navigate menus, content etc. and displays the subpages in TXT mode when pressed Right or Left
8. **OK:** Confirms user selections, holds the page (in TXT mode), views channel list (DTV mode)
9. **Back/Return:** Returns to previous screen, opens index page (in TXT mode)
10. **Media player:** Opens the media player screen
11. **Internet:** Opens the portal page, where you can reach many web based applications
12. **My button (\*)**
13. **Coloured Buttons:** Follow the on-screen instructions for coloured button functions
14. **Language:** Switches between sound modes (analogue TV), displays and changes audio/subtitle language (digital TV, where available)
15. **Subtitles:** Turns subtitles on and off (where available)
16. **Rapid reverse:** Moves frames backwards in media such as movies
17. No function
18. **Play:** Starts to play selected media
19. **Stop:** Stops the media being played
20. **Rapid advance:** Moves frames forward in media such as movies
21. **Pause:** Pauses the media being played
22. **Screen:** Changes the aspect ratio of the screen
23. **Text:** Displays teletext (where available), press again to superimpose the teletext over a normal broadcast picture (mix)
24. **Source:** Shows all available broadcast and content sources
25. **EPG (Electronic programme guide):** Displays the electronic programme guide
26. **Exit:** Closes and exits from displayed menus or returns to previous screen
27. **Quick Menu:** Displays a list of menus for quick access
28. **Info:** Displays information about on-screen content, shows hidden information (reveal - in TXT mode)
29. **Programme +/-**
30. **Swap:** Quickly cycles between previous and current channels or sources
31. **Netflix:** Launches the Netflix application, if this feature is supported by your TV

## (\*) MY BUTTON:


This button may have a default function depending on the model. However you can set a special function to this button by pressing on it for five seconds when on a desired source or channel. A confirmation message will be displayed on the screen. Now MY BUTTON is associated with the selected function.

Note that if you perform **First Time Installation**, MY BUTTON will return to its default function.

# Connections

Connector	Type	Cables	Device
	Scart Connection (back)		
<b>YPBPR</b>  Pr  Pb  Y / Video	YPbPr Video Connection (back)	 YPbPr Connection Cable	
	HDMI Connection (bottom&side)		
	VGA Connection (bottom)		
<b>AUDIO IN</b>  	PC/YPbPr/ Back AV Audio Connection (back)	 YPbPr/PC Audio Cable	
	SPDIF (Optical Out) Connection (bottom)		
<b>BACK AV</b>  Pr  Pb  L  Y / Video	Back AV (Audio/Video) Connection (back)	 Audio Video Cable	
<b>HEADPHONE</b> 	Headphone Connection (side)		
	USB Connection (back&side)		
	CI Connection (side)		
<b>LAN</b> 	Ethernet Connection (bottom)	 LAN / Ethernet Cable	
	Subwoofer Connection (back)		

**NOTE:** When connecting a device via the YPbPr or Back AV inputs, you must use the connection cables to enable connection. See the illustrations on the left side. | To enable PC/YPbPr audio, you will need to use the Back Audio inputs with a YPbPr/PC audio cable for audio connection. | If an external device is connected via the SCART socket, the TV will automatically switch to AV mode. | When receiving DTV channels (Mpeg4 H.264) or while in Media Player mode, output will not be available via the scart socket. | When using the wall mounting kit (available from third party in the market, if not supplied), we recommend that you plug all your cables into the back of the TV before mounting on the wall. | Insert or remove the CI module only when the TV is SWITCHED OFF. You should refer to the module instruction manual for details of the settings. | The/Each USB input of your TV supports devices up to 500mA. Connecting devices that have current value above 500mA may damage your TV. | By connecting an HDMI cable to your TV, you have to use only a shielded HDMI cable to guarantee a sufficient immunity against parasitic frequency radiation.

 If you want to connect a device to the TV, make sure that both the TV and the device are turned off before making any connection. After the connection is done, you can turn on the units and use them.

## Switching On/Off

### To Switch the TV On

Connect the power cord to a power source such as a wall socket (220-240V AC, 50 Hz).

To switch on the TV from standby mode either:

- Press the **Standby** button, **Programme +/-** or a numeric button on the remote control.
- Press the **Standby** button or **Programme +/-** on the TV.

The TV will then switch on.

### To Switch the TV Off

Press the **Standby** button on the remote control or press the **Standby** button on the TV, then the TV switches into standby mode.

### To power down the TV completely, unplug the power cord from the mains socket.

**Note:** When the TV is switched into standby mode, the standby LED can blink to indicate that features such as Standby Search, Over Air Download or Timer is active. The LED can also blink when you switch on the TV from standby mode.

## First Time Installation

When turned on for the first time, the language selection screen is displayed. Select the desired language and press **OK**.

On the next screen, set your preferences using the directional buttons.

**Note:** Depending on the **Country** selection you may be asked to set and confirm a PIN at this point. The selected PIN cannot be 0000. You have to enter it if you are asked to enter a PIN for any menu operation later.

### About Selecting Broadcast Type

**Aerial:** If **Aerial** broadcast search option is turned on, the TV will search for digital terrestrial broadcasts after other initial settings are completed.

**Cable:** If **Cable** broadcast search option is turned on, the TV will search for digital cable broadcasts after other initial settings are completed. According to your other preferences a confirmation message may be displayed before starting to search. Select **YES** and press **OK** to proceed. To cancel operation, select **NO** and press **OK**. You can select **Network** or set values such as **Frequency**, **Network ID** and **Search Step**. When finished, press **OK** button.

**Note:** Searching duration will change depending on the selected **Search Step**.

**Analogue:** If **Analogue** broadcast search option is turned on, the TV will search for analogue broadcasts after other initial settings are completed.

Additionally you can set a broadcast type as your favourite one. Priority will be given to the selected broadcast type during the search process and the

channels of it will be listed on the top of the Channel List. When finished, press **OK** to continue.

You can activate **Store Mode** option at this point. This option will configure your TV's settings for store environment. This option is intended only for store use. It is recommended to select **Home Mode** for home use. This option will be available in **Setup>More** menu and can be turned off/on later.

Press **OK** button on the remote control to continue and the **Network Settings** menu will be displayed. Please refer to **Connectivity** section to configure a wired or a wireless connection. After the settings are completed press **OK** button to continue. To skip to the next step without doing anything press the **Rapid advance** button on the remote.

After the initial settings are completed TV will start to search for available broadcasts of the selected broadcast types.

After all the available stations are stored, scan results will be displayed. Press **OK** to continue. The **Edit Channel List** menu will be displayed next. You can edit the channel list according to your preferences or press the **Menu** button to quit and watch TV.

While the search continues a message may appear, asking whether you want to sort channels according to the LCN(\*). Select **Yes** and press **OK** to confirm.

(\* LCN is the Logical Channel Number system that organizes available broadcasts in accordance with a recognizable channel number sequence (if available).

**Note:** Do not turn off the TV while initializing first time installation. Note that, some options may not be available depending on the country selection.

## Media Playback via USB Input

You can connect 2.5" and 3.5" inch (hdd with external power supply) external hard disk drives or USB memory stick to your TV by using the USB inputs of the TV.

**IMPORTANT!** Back up the files on your storage devices before connecting them to the TV. Manufacturer will not be responsible for any file damage or data loss. Certain types of USB devices (e.g. MP3 Players) or USB hard disk drives/memory sticks may not be compatible with this TV. The TV supports FAT32 and NTFS disk formatting.

While formatting USB hard drives which have more than 1TB (Tera Byte) storage space you may experience some problems in the formatting process.

Wait a little while before each plugging and unplugging as the player may still be reading files. Failure to do so may cause physical damage to the USB player and the USB device itself. Do not pull out your drive while playing a file.






You can use USB hubs with your TV's USB inputs. External power supplied USB hubs are recommended in such a case.

It is recommended to use the TV's USB input(s) directly, if you are going to connect a USB hard disk.

**Note:** When viewing image files the **Media Player** menu can only display 1000 image files stored on the connected USB device.

### Media Browser Menu

You can play photo, music and movie files stored on a USB disk by connecting it to your TV. Connect a USB disk to one of the USB inputs located on the side of the TV. Pressing the **Menu** button while in the **Media Player** mode will access the **Picture**, **Sound** and **Setup** menu options. Pressing the **Menu** button again will exit from this screen. You can set your **Media Player** preferences by using the **Setup** menu.

Loop/Shuffle Mode Operation	
Start playback with the <b>Play</b> button and activate 	All files in the list will be continuously played in original order
Start playback with the <b>OK</b> button and activate 	The same file will be played continuously (repeat)
Start playback with the <b>Play</b> button and activate 	All files in the list will be played once in random order
Start playback with the <b>Play</b> button and activate  	All files in the list will be continuously played in the same random order.

### CEC and CEC RC Passthrough

This function allows to control the CEC-enabled devices, that are connected through HDMI ports by using the remote control of the TV.

The **CEC** option in the **Setup>More** menu should be set as **Enabled** at first. Press the **Source** button and select the HDMI input of the connected CEC device from the **Sources List** menu. When new CEC source device is connected, it will be listed in source menu with its own name instead of the connected HDMI ports name (such as DVD Player, Recorder 1 etc.).

The TV remote is automatically able to perform the main functions after the connected HDMI source has been selected.

To terminate this operation and control the TV via the remote again, press **Quick Menu** button on the remote, highlight the **CEC RC Passthrough** and set as **Off** by pressing Left or Right button. This feature can also be enabled or disabled under the **Setup>More** menu.

The TV supports also ARC (Audio Return Channel) feature. This feature is an audio link meant to replace other cables between the TV and the audio system (A/V receiver or speaker system).

When ARC is active, TV does not mute its other audio outputs automatically. So you need to decrease TV volume to zero manually, if you want to hear audio from connected audio device only (same as other optical or co-axial digital audio outputs). If you want to change connected device's volume level, you should select that device from the source list. In that case volume control keys are directed to connected audio device.

**Note:** ARC is supported only via the HDMI3 input.

### System Audio Control

Allows an Audio Amplifier/Receiver to be used with the TV. The volume can be controlled using the remote control of the TV. To activate this feature set the **Speakers** option in the **Setup>More** menu as **Amplifier**. The TV speakers will be muted and the sound of the watched source will be provided from the connected sound system.

**Note:** The audio device should support System Audio Control feature and **CEC** option should be set as **Enabled**.

## TV Menu Contents

Picture Menu Contents	
<b>Mode</b>	You can change the picture mode to suit your preference or requirements. Picture mode can be set to one of these options: <b>Cinema</b> , <b>Game</b> , <b>Sports</b> , <b>Dynamic</b> and <b>Natural</b> .
<b>Contrast</b>	Adjusts the light and dark values on the screen.
<b>Brightness</b>	Adjusts the brightness values on the screen.
<b>Sharpness</b>	Sets the sharpness value for the objects displayed on the screen.
<b>Colour</b>	Sets the colour value, adjusting the colours.
<b>Energy Saving</b>	For setting the <b>Energy Saving</b> to <b>Custom</b> , <b>Minimum</b> , <b>Medium</b> , <b>Maximum</b> , <b>Auto</b> , <b>Picture Off</b> or <b>Off</b> . <i>Note: Available options may differ depending on the selected Mode.</i>
<b>Backlight</b>	This setting controls the backlight level. The backlight function will be inactive if the <b>Energy Saving</b> is set to an option other than <b>Custom</b> .
<b>Advanced Settings</b>	
<b>Dynamic Contrast</b>	You can change the dynamic contrast ratio to desired value.
<b>Noise Reduction</b>	If the signal is weak and the picture is noisy, use the <b>Noise Reduction</b> setting to reduce the amount of noise.
<b>Colour Temp</b>	Sets the desired colour temperature value. <b>Cool</b> , <b>Normal</b> , <b>Warm</b> and <b>Custom</b> options are available.
<b>White Point</b>	If the <b>Colour Temp</b> option is set as <b>Custom</b> , this setting will be available. Increase the 'warmth' or 'coolness' of the picture by pressing Left or Right buttons.
<b>Picture Zoom</b>	Sets the desired image size format.
<b>Film Mode</b>	Films are recorded at a different number of frames per second to normal television programmes. Turn this feature on when you are watching films to see the fast motion scenes clearly.
<b>Skin Tone</b>	Skin tone can be changed between -5 and 5.
<b>Colour Shift</b>	Adjust the desired colour tone.
<b>HDMI Full Range</b>	While watching from a HDMI source, this feature will be visible. You can use this feature to enhance blackness in the picture.
<b>PC Position</b>	
<b>Autoposition</b>	Automatically optimizes the display. Press OK to optimize.
<b>H Position</b>	This item shifts the image horizontally to the right hand side or left hand side of the screen.
<b>V Position</b>	This item shifts the image vertically towards the top or bottom of the screen.
<b>Dot Clock</b>	Dot Clock adjustments correct the interference that appear as vertical banding in dot intensive presentations like spreadsheets or paragraphs or text in smaller fonts.
<b>Phase</b>	Depending on the input source(computer etc.) you may see a hazy or noisy picture on the screen. You can use phase to get a clearer picture by trial and error.
<b>Reset</b>	Resets the picture settings to factory default settings (except <b>Game</b> mode).
<i>While in VGA (PC) mode, some items in <b>Picture</b> menu will be unavailable. Instead, VGA mode settings will be added to the <b>Picture Settings</b> while in PC mode.</i>	

Sound Menu Contents	
<b>Volume</b>	Adjusts the volume level.
<b>Equalizer</b>	Selects the equalizer mode. Custom settings can be made only when in <b>User</b> mode.
<b>Balance</b>	Adjusts whether the sound comes from the left or right speaker.
<b>Headphone</b>	Sets headphone volume. Please ensure before using headphones that the headphone volume is set to a low level, to prevent damage to your hearing.
<b>Sound Mode</b>	You can select a sound mode (If the viewed channel supports).
<b>AVL (Automatic Volume Limiting)</b>	Sets the sound to obtain fixed output level between programmes.
<b>Headphone/Lineout</b>	When you connect an external amplifier to your TV using the headphone jack, you can select this option as <b>Lineout</b> . If you have connected headphones to the TV, set this option as <b>Headphone</b> . Please ensure before using headphones that this menu item is set to <b>Headphone</b> . If it is set to <b>Lineout</b> , the output from the headphone socket will be set to maximum which could damage your hearing.
<b>Dynamic Bass</b>	Enables or disables the Dynamic Bass.
<b>Digital Out</b>	Sets digital out audio type.

Setup Menu Contents	
<b>Conditional Access</b>	Controls conditional access modules when available.
<b>Language</b>	You may set a different language depending on the broadcaster and the country.
<b>Parental</b>	Enter correct password to change parental settings. You can easily adjust <b>Menu Lock</b> , <b>Maturity Lock</b> (may not be available depending on the country selection in the <b>First Time Installation</b> ) and <b>Child Lock</b> in this menu. You can also set a new <b>PIN</b> or change the <b>Default CICAM PIN</b> using the related options. <i>Note: Default PIN can be set to 0000 or 1234. If you have defined the PIN(is requested depending on the country selection) during the <b>First Time Installation</b> use the PIN that you have defined.</i>
<b>Timers</b>	Sets sleep timer to turn off the TV after a certain time. Sets timers for selected programmes.
<b>Date/Time</b>	Sets date and time.
<b>Sources</b>	Enables or disables selected source options.
<b>Network Settings</b>	Displays network settings.
<b>Accessibility</b>	Displays accessibility options of the TV.
<b>Hard of Hearing</b>	Enables any special feature sent from the broadcaster.
<b>Audio Description</b>	A narration track will be played for the blind or visually impaired audience. Press <b>OK</b> to see all available <b>Audio Description</b> menu options. This feature is available only if the broadcaster supports it.
<b>Netflix</b>	If this feature is supported by your TV, you can view your ESN(*) number and deactivate Netflix. <i>(*) ESN number is a unique ID number for Netflix, created especially to identify your TV.</i>
<b>More</b>	Displays other setting options of the TV.
<b>Menu Timeout</b>	Changes timeout duration for menu screens.
<b>Software Upgrade</b>	Ensures that your TV has the latest firmware. Press <b>OK</b> to see the menu options.
<b>Application Version</b>	Displays current software version.
<b>Subtitle Mode</b>	This option is used to select which subtitle mode will be on the screen ( <b>DVB</b> subtitle / <b>Teletext</b> subtitle) if both is available. Default value is <b>DVB</b> subtitle. This feature is available only for the country option of Norway.
<b>Auto TV OFF</b>	Sets the desired time for the TV to automatically go into standby mode when not being operated.
<b>Store Mode</b>	Select this mode for store display purposes. Whilst <b>Store Mode</b> is enabled, some items in the TV menu may not be available.
<b>Audio Video Sharing</b>	<b>Audio Video Sharing</b> feature allows you to share files stored on your smartphone or tablet pc. If you have a compatible smartphone or tablet pc and the appropriate software is installed, you can share/play photos on your TV. See instructions of your sharing software for more information. <b>Audio Video Sharing</b> mode will not be available with internet portal feature.

<b>Power Up Mode</b>	This setting configures the power up mode preference. <b>Last State</b> and <b>Standby</b> options are available.
<b>Virtual Remote</b>	Enable or disable the virtual remote feature.
<b>CEC</b>	With this setting you can enable and disable CEC functionality completely. Press Left or Right button to enable or disable the feature.
<b>CEC Auto Power On</b>	This function allows the connected HDMI-CEC compatible device to turn on the TV and switch to its input source automatically. Press <b>Left</b> or <b>Right</b> button to enable or disable the feature.
<b>Speakers</b>	To hear the TV audio from the connected compatible audio device set as <b>Amplifier</b> . You can use the remote control of the TV to control the volume of the audio device.

## Install and Retune Menu Contents

<b>Automatic channel scan (Retune)</b>	Displays automatic tuning options. <b>Digital Aerial:</b> Searches and stores aerial DVB stations. <b>Digital Cable:</b> Searches and stores cable DVB stations. <b>Analogue:</b> Searches and stores analogue stations.
<b>Manual channel scan</b>	This feature can be used for direct broadcast entry.
<b>Network channel scan</b>	Searches for the linked channels in the broadcast system. <b>Digital Aerial:</b> Searches for aerial network channels. <b>Digital Cable:</b> Searches for cable network channels.
<b>Analogue fine tune</b>	You can use this setting for fine tuning analogue channels. This feature is not available if no analogue channels are stored.
<b>Installation Settings</b>	Displays installation settings menu. <b>Standby Search (Optional):</b> Your TV will search for new or missing channels while in standby. Any new found broadcasts will be shown.
<b>Clear Service List</b>	Use this setting to clear channels stored. This setting is visible only when the <b>Country</b> option is set to Denmark, Sweden, Norway or Finland.
<b>Select Active Network</b>	This setting allows you to select only the broadcasts within the selected network to be listed in the channel list. This feature is available only for the country option of Norway.
<b>First time installation</b>	Deletes all stored channels and settings, resets TV to factory settings.



## General TV Operation

### Using the Channel List

The TV sorts all stored stations in the **Channel List**. You can edit this channel list, set favourites or set active stations to be listed by using the **Channel List** options. Press the **OK/TV** button to open the **Channel List**. You can filter the listed channels by pressing the **Blue** button or open the **Edit Channel List** menu by pressing the **Green** button in order to make advanced changes in the current list.

### Managing the Favourite Lists

You can create four different lists of your favourite channels. Enter the **Channel List** in the main menu or press the **Green** button while the **Channel List** is displayed on the screen in order to open the **Edit Channel List** menu. Select the desired channel on the list. You can make multiple choices by pressing the **Yellow** button. Then press the **OK** button to open the **Channel Edit Options** menu and select **Add/Remove Favourites** option. Press the **OK** button again. Set the desired list option to **On**. The selected channel/s will be added to the list. In order to remove a channel or channels from a favourite list follow the same steps and set the desired list option to **Off**.

You can use the **Filter** function in the **Edit Channel List** menu to filter the channels in the **Channel list** permanently according to your preferences. Using this **Filter** option, you can set one of your four favourite lists to be displayed everytime the **Channel list** is opened. The filtering function in the **Channel list** menu will only filter the currently displayed **Channel list** in order to find a channel and tune in to it. This changes will not remain the next time the **Channel list** is opened.

### Configuring Parental Settings

The **Parental Settings** menu options can be used to prohibit users from viewing of certain programmes, channels and using of menus. These settings are located in the **Setup>Parental** menu.

To display parental lock menu options, a PIN number should be entered. After coding the correct PIN number, **Parental Settings** menu will be displayed.

**Menu Lock:** This setting enables or disables access to all menus or installation menus of the TV.

**Guidance:** This setting enables or disables access some of the MHEG applications. Disabled applications can be released by entering the right PIN.

**Internet Lock:** If this option is set to **OFF**, the open browser application in the portal will be disabled. Set to **ON** to release the application again.

**Set PIN:** Defines a new PIN number.

**Default CICAM PIN:** This option will appear as greyed out if no CI module is inserted into the CI slot of the

TV. You can change the default PIN of the CI CAM using this option.

**Note:** *Default PIN can be set to 0000 or 1234. If you have defined the PIN(is requested depending on the country selection) during the **First Time Installation** use the PIN that you have defined.*

*Some options may not be available depending on the country selection in the **First Time Installation**.*

### Electronic Programme Guide (EPG)

Some channels send information about their broadcast schedules. Press the **Epg** button to view the **Programme Guide** menu.

There are 3 different types of schedule layouts available, **Timeline Schedule**, **List Schedule** and **Now/Next Schedule**. To switch between them follow the instructions on the bottom of the screen.

#### Timeline Schedule

**Zoom (Yellow button):** Press the **Yellow** button to see events in a wider time interval.

**Filter (Blue button):** Views filtering options.

**Select Genre (Subtitles button):** Displays **Select Genre** menu. Using this feature, you can search the programme guide database in accordance with the genre. Info available in the programme guide will be searched and results matching your criteria will be highlighted.

**Options (OK button):** Displays event options.

**Event Details (Info button):** Displays detailed information about selected events.

**Next/Prev Day (Programme +/- buttons):** Displays the events of previous or next day.

**Search (Text button):** Displays **Guide Search** menu.

**Now (Swap button):** Displays current event of the highlighted channel.

#### List Schedule(\*)

*(\*) In this layout option, only the events of the highlighted channel will be listed.*

**Prev. Time Slice (Red button):** Displays the events of previous time slice.

**Next/Prev Day (Programme +/- buttons):** Displays the events of previous or next day.

**Event Details (Info button):** Displays detailed information about selected events.

**Filter (Text button):** Views filtering options.

**Next Time Slice (Green button):** Displays the events of next time slice.

**Options (OK button):** Displays event options.

#### Now/Next Schedule

**Navigate (Directional buttons):** Press the **Directional buttons** to navigate through the channels and events.

**Options (OK button):** Displays event options.

**Event Details (Info button):** Displays detailed information about selected events.

**Filter (Blue button):** Views filtering options.

## Event Options

Use the directional buttons to highlight an event and press **OK** button to display **Event Options** menu. The following options are available.

**Select Channel:** Using this option, you can switch to the selected channel.

**Set Timer on Event / Delete Timer on Event:** After you have selected an event in the EPG menu, press the **OK** button. Select **Set Timer on Event** option and press the **OK** button. You can set a timer for future events. To cancel an already set timer, highlight that event and press the **OK** button. Then select **Delete Timer on Event** option. The timer will be cancelled.

*Notes: You cannot switch to any other channel or source while there is an active timer on the current channel.*

*It is not possible to set timer for two or more individual events at the same time interval.*

## Teletext Services

Press the **Text** button to enter. Press again to activate mix mode, which allows you to see the teletext page and the TV broadcast at the same time. Press once more to exit. If available, sections in the teletext pages will become colour-coded and can be selected by pressing the coloured buttons. Follow the instructions displayed on the screen.

### Digital Teletext

Press the **Text** button to view digital teletext information. Operate it with the coloured buttons, cursor buttons and the **OK** button. The operation method may differ depending on the contents of the digital teletext. Follow the instructions displayed on the digital teletext screen. When the **Text** button is pressed again, the TV returns to television broadcast.

### BBC Connected Red Button (CRB)

While watching BBC channels, press the **Red** button to access digital TV services provided by the BBC. Under the tab '**Featured**' highlight **Connected Red Button** and press **OK** to start the service. On the opening page you can access to BBC's main services such as BBC iPlayer, BBC News, BBC Sport and many others. There are also links to the home pages of the related applications available. Use the navigation buttons on the TV's remote control to move through the application. Press **Exit** button to close and exit.

## Software Upgrade

Your TV is capable of finding and updating the firmware automatically via the broadcast signal or via Internet.

### Software upgrade search via user interface

On the main menu select **Setup** and press the **OK** button. **Setup Menu** will be displayed. Then select **More** and press the **OK** button. Navigate to **Software upgrade** and press the **OK** button. In **Upgrade options** menu select **Scan for upgrade** and press **OK** button to check for a new software upgrade.

If a new upgrade is found, it starts to download the upgrade. After the download is completed confirm the question asking about rebooting the TV by pressing the **OK** to continue with the reboot operation.

### 3 AM search and upgrade mode

Your TV will search for new upgrades at 3:00 o'clock if **Automatic scanning** option in the **Upgrade options** menu is set to **Enabled** and if the TV is connected to an aerial signal or to Internet. If a new software is found and downloaded successfully, it will be installed at the next power on.

*Note: Do not unplug the power cord while led is blinking during the reboot process. If the TV fails to come on after the upgrade, unplug, wait for two minutes then plug it back in.*

### Tv will not turn on

Make sure the power cord is plugged in securely to wall outlet. Check if batteries are exhausted. Press the Power button on the TV.

### Poor picture

- Check if you have selected the correct TV system.
- Low signal level can cause picture distortion. Please check antenna access.
- Check if you have entered the correct channel frequency if you have done manual tuning.
- The picture quality may degrade when two devices are connected to the TV at the same time. In such a case, disconnect one of the devices.

### No picture

- This means your TV is not receiving any transmission. Make sure the correct source has been selected.
- Is the antenna connected properly?
- Is the antenna cable damaged?
- Are suitable plugs used to connect the antenna?
- If you are in doubt, consult your dealer.

### No sound

- Check if the TV is muted. Press the **Mute** button or increase the volume to check.
- Sound may be coming from only one speaker. Check the balance settings from **Sound** menu.

### Remote control - no operation

- The batteries may be exhausted. Replace the batteries.

### Input sources - can not be selected

- If you cannot select an input source, it is possible that no device is connected. If not;
- Check the AV cables and connections if you are trying to switch to the input source dedicated to the connected device.

The following table is an illustration of some of the typical video display modes. Your TV may not support all resolutions.

Index	Resolution	Frequency
1	640x350	85Hz
2	640x400	70Hz
3	640x480	60Hz
4	640x480	66Hz
5	640x480	72Hz
6	640x480	75Hz
7	640x480	85Hz
8	800x600	56Hz
9	800x600	60Hz
10	800x600	70Hz
11	800x600	72Hz
12	800x600	75Hz
13	800x600	85Hz
14	832x624	75Hz
15	1024x768	60Hz
16	1024x768	66Hz
17	1024x768	70Hz
18	1024x768	72Hz
19	1024x768	75Hz
20	1024x768	85Hz
21	1152x864	60Hz
22	1152x864	70Hz
23	1152x864	75Hz
24	1152x864	85Hz
25	1152x870	75Hz
26	1280x768	60Hz
27	1360x768	60Hz
28	1280x768	75Hz
29	1280x768	85Hz
30	1280x960	60Hz
31	1280x960	75Hz
32	1280x960	85Hz
33	1280x1024	60Hz
34	1280x1024	75Hz
35	1280x1024	85Hz
36	1400x1050	60Hz
37	1400x1050	75Hz
38	1400x1050	85Hz
39	1440x900	60Hz
40	1440x900	75Hz
41	1600x1200	60Hz
42	1680x1050	60Hz
43	1920x1080	60Hz
44	1920x1200	60Hz

## AV and HDMI Signal Compatibility

Source	Supported Signals	Available	
<b>EXT (SCART)</b>	PAL	O	
	SECAM	O	
	NTSC4.43	O	
	NTSC3.58	O	
	RGB 50/60		
<b>Side AV</b>	PAL	O	
	SECAM	O	
	NTSC4.43	O	
	NTSC3.58		
	S-VIDEO 50Hz (PAL)		
	S-VIDEO 60Hz (NTSC)		
<b>YPbPr</b>	480i, 480p	60Hz	O
	576i, 576p	50Hz	O
	720p	50Hz,60Hz	O
	1080i	50Hz,60Hz	O
<b>HDMI</b>	480i, 480p	60Hz	O
	576i, 576p	50Hz	O
	720p	50Hz,60Hz	O
	1080i	50Hz,60Hz	O
	1080p	24Hz, 25Hz, 30Hz, 50Hz, 60Hz	O

(X: Not Available, O: Available)

In some cases a signal on the TV may not be displayed properly. The problem may be an inconsistency with standards from the source equipment (DVD, Set-top box, etc. ). If you do experience such a problem please contact your dealer and also the manufacturer of the source equipment.

## Supported Video File Formats for USB Mode

Extension	Video Codec	SPEC (Resolution) & Bit Rate
.dat, vob	MPEG1/2	1080P@30fps - 40 Mbps
.mpg, .mpeg	MPEG1/2, MPEG4	
.ts, .trp, .tp	MPEG1/2, H.264, AVS, MVC	<b>H.264:</b> 1080Px2@30fps - 62.5 Mbps, 1080P@60fps - 62.5 Mbps <b>MVC:</b> 1080P@30fps - 62.5 Mbps <b>Other:</b> 1080P@30fps - 40Mbps
.mp4, .mov, .3gpp, .3gp	MPEG1/2, MPEG4, H.263, H.264, Motion JPEG	<b>H.264:</b> 1080Px2@30fps - 62.5 Mbps, 1080P@60fps - 62.5 Mbps <b>Motion JPEG:</b> 640x480@30fps - 10 Mbps <b>Other:</b> 1080P@30fps - 40 Mbps
.avi	MPEG1/2, MPEG4, Sorenson H.263, H.263, H.264, WMV3, Motion JPEG	
.mkv	MPEG1/2, MPEG4, H.263, H.264, WMV3, Motion JPEG	
.asf	Sorenson H.263, H.264, WMV3, Motion JPEG	
.flv	WMV3	1080P@30fps - 40 Mbps
.swf	RV30/RV40	1080P@30fps - 40 Mbps
.wmv		

## Supported Picture File Formats for USB Mode

Image	Photo	Resolution (width x height)	Remark
JPEG	Base-line	15360x8640	The limitation of max resolution depends on DRAM size
	Progressive	1024x768	
PNG	non-interlace	9600x6400	
	interlace	1200x800	
BMP		9600x6400	

## Supported Audio File Formats for USB Mode

Extension	Audio Codec	Bit Rate	Sample rate
.mp3,	MPEG1/2 Layer1	32Kbps ~ 448Kbps	16KHz ~ 48KHz
	MPEG1/2 Layer2	8Kbps ~ 384Kbps	
	MPEG1/2 Layer3	8Kbps ~ 320Kbps	
.avi	MPEG1/2 Layer1	32Kbps ~ 448Kbps	16KHz ~ 48KHz
	MPEG1/2 Layer2	8Kbps ~ 384Kbps	
	MPEG1/2 Layer3	8Kbps ~ 320Kbps	
	AC3	32Kbps ~ 640Kbps	32KHz, 44.1KHz, 48KHz
	AAC, HEAAC		8KHz ~ 48KHz
	WMA	128bps ~ 320Kbps	8KHz ~ 48KHz
	WMA 10 Pro M0	< 192kbps	48KHz
	WMA 10 Pro M1	< 384kbps	48KHz
	WMA 10 Pro M2	< 768kbps	96KHz
	LPCM	64Kbps ~ 1.5Mbps	8KHz ~ 48KHz
.asf	IMA-ADPCM, MS-ADPCM	384Kbps	8KHz ~ 48KHz
	G711 A/mu-law	64Kbps ~ 128Kbps	8KHz
	MPEG1/2 Layer1	32Kbps ~ 448Kbps	16KHz ~ 48KHz
	MPEG1/2 Layer2	8Kbps ~ 384Kbps	
	MPEG1/2 Layer3	8Kbps ~ 320Kbps	
	WMA	128bps ~ 320Kbps	8KHz ~ 48KHz
	WMA 10 Pro M0	< 192kbps	48KHz
	WMA 10 Pro M1	< 384kbps	48KHz
	WMA 10 Pro M2	< 768kbps	96KHz
	.mkv, .mka	LPCM	64Kbps ~ 1.5Mbps
VORBIS			Up to 48KHz
MPEG1/2 Layer1		32Kbps ~ 448Kbps	16KHz ~ 48KHz
MPEG1/2 Layer2		8Kbps ~ 384Kbps	
MPEG1/2 Layer3		8Kbps ~ 320Kbps	
AC3		32Kbps ~ 640Kbps	32KHz, 44.1KHz, 48KHz
AAC, HEAAC			8KHz ~ 48KHz
WMA		128bps ~ 320Kbps	8KHz ~ 48KHz
WMA 10 Pro M0		< 192kbps	48KHz
WMA 10 Pro M1		< 384kbps	48KHz
WMA 10 Pro M2		< 768kbps	96KHz
IMA-ADPCM, MS-ADPCM		384Kbps	8KHz ~ 48KHz
G711 A/mu-law	64Kbps ~ 128Kbps	8KHz	
FLAC	< 1.6Mbps	8KHz ~ 96KHz	
.ts, .trp, .tp, .dat, .vob, .mpg, .mpeg	LPCM	64Kbps ~ 1.5Mbps	8KHz ~ 48KHz
	AAC, HEAAC		8KHz ~ 48KHz
	EAC3	32Kbps ~ 6Mbps	32KHz, 44.1KHz, 48KHz
	AC3	32Kbps ~ 640Kbps	32KHz, 44.1KHz, 48KHz
	MPEG1/2 Layer3	8Kbps ~ 320Kbps	16KHz ~ 48KHz
	MPEG1/2 Layer2	8Kbps ~ 384Kbps	
	MPEG1/2 Layer1	32Kbps ~ 448Kbps	

Extension	Audio Codec	Bit Rate	Sample rate
.wav	MPEG1/2 Layer1	32Kbps ~ 448Kbps	16KHz ~ 48KHz
	MPEG1/2 Layer2	8Kbps ~ 384Kbps	
	MPEG1/2 Layer3	8Kbps ~ 320Kbps	
	LPCM	64Kbps ~ 1.5Mbps	8KHz ~ 48KHz
	IMA-ADPCM, MS-ADPCM	384Kbps	8KHz ~ 48KHz
	G711 A/mu-law	64Kbps ~ 128Kbps	8KHz
.3gpp, .3gp, .mp4, .mov, .m4a	MPEG1/2 Layer3	8Kbps ~ 320Kbps	16KHz ~ 48KHz
	AC3	32Kbps ~ 640Kbps	32KHz, 44.1KHz, 48KHz
	EAC3	32Kbps ~ 6Mbps	32KHz, 44.1KHz, 48KHz
	AAC, HEAAC		8KHz ~ 48KHz
	VORBIS		Up to 48KHz
	LPCM	64Kbps ~ 1.5Mbps	8KHz ~ 48KHz
	IMA-ADPCM, MS-ADPCM	384Kbps	8KHz ~ 48KHz
	G711 A/mu-law	64Kbps ~ 128Kbps	8KHz
.flv	MPEG1/2 Layer3	8Kbps ~ 320Kbps	16KHz ~ 48KHz
	AAC, HEAAC		8KHz ~ 48KHz
.ac3	AC3	32Kbps ~ 640Kbps	32KHz, 44.1KHz, 48KHz
	AAC, HEAAC		8KHz ~ 48KHz
.swf	MPEG1/2 Layer3	8Kbps ~ 320Kbps	16KHz ~ 48KHz
.ec3	EAC3	32Kbps ~ 6Mbps	32KHz, 44.1KHz, 48KHz
.rm, .rmvb, .ra	AAC, HEAAC		8KHz ~ 48KHz
	LBR (cook)	6Kbps ~ 128Kbps	8KHz, 11.025KHz, 22.05KHz, 44.1KHz
.wma, .wmv	WMA	128bps ~ 320Kbps	8KHz ~ 48KHz
	WMA 10 Pro M0	< 192kbps	48KHz
	WMA 10 Pro M1	< 384kbps	48KHz
	WMA 10 Pro M2	< 768kbps	96KHz
.webm	VORBIS		Up to 48KHz

### Supported Subtitle File Formats for USB Mode

Internal Subtitles		
Extension	Container	Subtitle Code
dat, mpg, mpeg, vob	MPG, MPEG	DVD Subtitle
ts, trp, tp	TS	DVB Subtitle
mp4	MP4	DVD Subtitle UTF-8 Plain Text
mkv	MKV	ASS SSA UTF-8 Plain Text VobSub DVD Subtitle

External Subtitles		
Extension	Subtitle Parser	Remark
.srt	Subrip	
.ssa/ .ass	SubStation Alpha	
.smi	SAMI	
.sub	SubViewer MicroDVD DVDSubsubtitleSystem Subldx (VobSub)	SubViewer 1.0 & 2.0 Only
.txt	TMPlayer	

## Supported DVI Resolutions

When connecting devices to your TV's connectors by using DVI converter cable(DVI to HDMI cable - not supplied), you can refer to the following resolution information.

	56Hz	60Hz	66Hz	70Hz	72Hz	75Hz
640x400				<input checked="" type="checkbox"/>		
640x480		<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>		<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
800x600	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>		<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
832x624						<input checked="" type="checkbox"/>
1024x768		<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
1152x864		<input checked="" type="checkbox"/>		<input checked="" type="checkbox"/>		<input checked="" type="checkbox"/>
1152x870						<input checked="" type="checkbox"/>
1280x768		<input checked="" type="checkbox"/>				<input checked="" type="checkbox"/>
1360x768		<input checked="" type="checkbox"/>				
1280x960		<input checked="" type="checkbox"/>				<input checked="" type="checkbox"/>
1280x1024		<input checked="" type="checkbox"/>				<input checked="" type="checkbox"/>
1400x1050		<input checked="" type="checkbox"/>				<input checked="" type="checkbox"/>
1440x900		<input checked="" type="checkbox"/>				<input checked="" type="checkbox"/>
1600x1200		<input checked="" type="checkbox"/>				
1680x1050		<input checked="" type="checkbox"/>				
1920x1080		<input checked="" type="checkbox"/>				
1920x1200		<input checked="" type="checkbox"/>				




# Connectivity

## Wired Connectivity

### To Connect to a Wired Network


- You must have a modem/router connected to an active broadband connection.
- Ensure that Nero Media Home software is installed to your PC (for Audio Video Sharing function). See “**Nero Media Home Installation**” section.
- Connect your PC to your modem/router. This can be a wired or wireless connection.
- Connect your TV to your modem/router via an ethernet cable. There is a LAN port at the rear (back) of your TV.

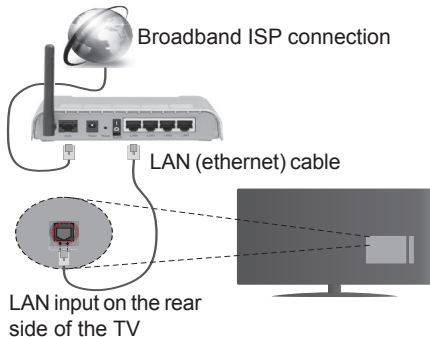

- To access and play shared files, you must select the **Media Player**. Press the **Menu** button and select **Media Player**. Press **OK** to continue. Select the desired file type and press **OK**. You must always use the **Media Player** screen to access and play shared network files.
- PC/HDD/Media Player or any other devices that are compatible should be used with a wired connection for higher playback quality.

To configure wired settings please refer to the **Network Settings** section in the **Setup Menu**.

- You might be able to connect your TV to your LAN depending on your network's configuration. In such a case, use an ethernet cable to connect your TV directly to the network wall outlet.

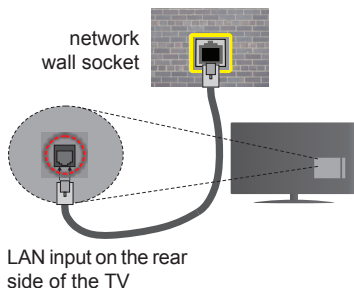

## Configuring Wired Device Settings

### Network Type

The **Network Type** can be selected as **Wired Device**, **Wireless Device** or **Disabled**, in accordance with the active connection to the TV set. Select this as **Wired Device** if you are connecting via an ethernet.

### Internet Speed Test

Highlight **Internet Speed Test** and press the **OK** button. TV will check the internet connection bandwidth and display the result when complete.

### Advanced Settings

Highlight **Advanced Settings** and press the **OK** button. On the next screen you can change the IP and DNS settings of the TV. Highlight the desired one and press **Left** or **Right** button to change the setting from **Automatic** to **Manual**. Now you can enter the **Manual IP** and / or **Manual DNS** values. Select the related item in the drop down menu and enter the new values using the numeric buttons of the remote. Press the **OK** button to save settings when complete.


## Wireless Connectivity

### To Connect to a Wireless Network

The TV cannot connect to the networks with a hidden SSID. To make your modem's SSID visible, you should change your SSID settings via the modem's software.

To connect to a wireless LAN, you should perform the following steps:

1. Ensure that Nero Media Home software is installed to your PC (for Audio Video Sharing function).
2. To configure your wireless settings please refer to the **Network Settings** section in the **Setup Menu**.

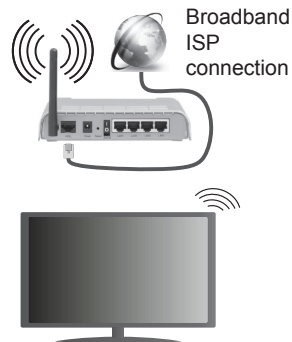

A Wireless-N router (IEEE 802.11a/b/g/n) with simultaneous 2.4 and 5 GHz bands is designed to increase bandwidth. These are optimized for smoother and faster HD video streaming, file transfers and wireless gaming.

- Use a LAN connection for quicker file sharing between other devices like computers.
- The frequency and channel differ depending on the area.
- The transmission speed differs depending on the distance and number of obstructions between the transmission products, the configuration of these products, the radio wave conditions, the line traffic and the products that you use. The transmission may also be cut off or may get disconnected depending on the radio wave conditions, DECT phones or any other WiFi 11b appliances. The standard values of the transmission speed are the theoretical maximum values for the wireless standards. They are not the actual speeds of data transmission.
- The location where the transmission is most effective differs depending on the usage environment.
- The Wireless feature of the TV supports 802.11 a,b,g & n type modems. It is highly recommended that you should use the IEEE 802.11n communication protocol in order to avoid any possible problems while watching videos.
- You must change your modem's SSID when there are any other modems around with the same SSID. You can encounter connection problems otherwise. Use a wired connection if you experience problems with a wireless connection.

## Configuring Wireless Device Settings

Open the **Network Settings** menu and select **Network Type** as **Wireless Device** to start connection process.

The TV will scan the wireless networks automatically. A list of available networks will be displayed. Please select your desired network from the list.

**Note:** If the modem supports N mode, you should set N mode settings.

If the selected network is protected with a password, please enter the correct key by using the virtual keyboard. You can use this keyboard via the directional buttons and the **OK** button on the remote control.

Wait until the IP address is shown on the screen.

This means that the connection is now established. To disconnect from a wireless network, highlight **Network Type** and press Left or Right buttons to set as **Disabled**.


Highlight **Internet Speed Test** and press the **OK** button to check your internet connection speed. Highlight **Advanced Settings** and press the **OK** button to open the advanced setting menu. Use directional and numeric buttons to set. Press the **OK** button to save settings when complete.

## Other Information

The status of the connection will be displayed as **Connected** or **Not Connected** and the current IP address, if a connection is established.

## Connecting to your mobile device via WiFi

- If your mobile device has WiFi feature, you can connect it to your TV via a router, in order to access the content in your device. For this, your mobile device must have an appropriate sharing software.
- Connect to your router following the steps stated above in the **Wireless Connectivity** section.
- Afterwards, engage your mobile device with the router and then activate the sharing software on your mobile device. Then, select files that you want to share with your TV.
- If the connection is established correctly, you will be able to access the shared files from your mobile device via the **Media Player** of your TV.
- Enter the **Media Player** menu and the playback device selection OSD will be displayed. Select your mobile device and press the **OK** button to continue.
- If available, you can download a virtual remote controller application from the server of your mobile device application provider.

 **Note:** This feature may not be supported on all mobile devices.

## Connectivity Troubleshooting

### Wireless Network Not Available

- Ensure that any firewalls of your network allow the TV wireless connection.
- Try searching for wireless networks again, using the **Network Settings** menu screen.

If the wireless network does not function properly, try using the wired network in your home. Refer to the **Wired Connectivity** section for more information on the process.

If the TV does not function using the wired connection, check the modem (router). If the router does not have a problem, check the internet connection of your modem.

### Connection is Slow

See the instruction book of your wireless modem to get information on the internal service area, connection speed, signal quality and other settings. You need to have a high speed connection for your modem.

### Distruption during playback or slow reactions

You could try the following in such a case:

Keep at least three meters distance from microwave ovens, mobile telephones, bluetooth devices or any other Wi-Fi compatible devices. Try changing the active channel on the WLAN router.

## Internet Connection Not Available / Audio Video Sharing Not Working

If the MAC address (a unique identifier number) of your PC or modem has been permanently registered, it is possible that your TV might not connect to the internet. In such a case, the MAC address is authenticated each time when you connect to the internet. This is a precaution against unauthorized access. Since your TV has its own MAC address, your internet service provider cannot validate the MAC address of your TV. For this reason, your TV cannot connect to the internet. Contact your internet service provider and request information on how to connect a different device, such as your TV, to the internet.

It is also possible that the connection may not be available due to a firewall problem. If you think this causes your problem, contact your internet service provider. A firewall might be the reason of a connectivity and discovery problem while using the TV in Audio Video Sharing mode or while browsing via Audio Video Sharing feature.

### Invalid Domain

Ensure that you have already logged on to your PC with an authorized username/password and also ensure that your domain is active, prior to sharing any files in your media server program on your PC. If the domain is invalid, this might cause problems while browsing files in Audio Video Sharing mode.

### Using Audio Video Sharing Network Service

Audio Video Sharing feature uses a standard that eases the viewing process of digital electronics and makes them more convenient to use on a home network.

This standard allows you to view and play photos, music and videos stored in the media server connected to your home network.

### 1. Nero Media Home Installation

The Audio Video Sharing feature cannot be used if the server programme is not installed onto your PC. Please prepare your PC with the Nero Media Home programme. For more information about the installation, please refer to the “**Nero Media Home Installation**” section.

### 2. Connect to a Wired or Wireless Network

See the **Wired/Wireless Connectivity** chapters for detailed configuration information.

### 3. Play Shared Files via Media Player

Select **Media Player** by using the **Left** or **Right** buttons from the main menu and press **OK**. The media browser will then be displayed.

## Audio Video Sharing

Audio Video Sharing support is only available in the **Media Player Folder** mode. To enable folder mode, go to the **Setup** tab in the main media browser screen and press **OK**. Highlight **View Style** and set to **Folder** using the **Left** or **Right** buttons. Select the desired media type and press **OK**.

If sharing configurations are set properly, **Device Selection** screen will be displayed after selecting the desired media type. If available networks are found, they will be listed on this screen. Select media server or network that you want to connect to using the Up or Down buttons and press **OK**. If you want to refresh the device list, press the **Green** button. You can press **Menu** to exit.

If you select the media type as **Videos** and choose a device from the selection menu. Then select the folder with video files in it on the next screen and all the available video files will be listed.

To play other media types from this screen, you must go back to main **Media Player** screen and select the media type as desired and then perform the network selection again. Refer to the **Media Player** menu section for further information on file playback.

Subtitle files do not work if you watch videos from your network through Audio Video Sharing feature.

You can connect only one television to the same network. If a problem occurs with the network, please switch your television off at the wall socket and back on again. Trick mode and jump are not supported with the Audio Video Sharing feature.

***Note:** There may be some PC's which may not be able to utilize the Audio Video Sharing feature due to administrator and security settings (such as business PC's).*

*For best home network streaming with this TV, the Nero software should be installed.*

### Nero MediaHome Installation

**To install Nero MediaHome, please proceed as follows:**

***Note:** To use Audio Video Sharing feature, this software should be installed to your PC.*

1. Enter the link below completely in the address-bar of your web browser.  
<http://www.nero.com/mediahome-tv>
2. Click the **Download** button on the opening page. The installation file will be downloaded onto your PC.
3. After the download is completed, double click on the installation file to start the installation. The installation wizard will guide you through the installation process.
4. The prerequisites screen will be displayed first. The installation wizard checks the availability of required third-party software on your PC.

If applications are missing they are listed and must be installed before continuing installation.

5. Click the **Install** button. The integrated serial will be displayed. Please do not change the displayed serial.
6. Click the **Next** button. The License Conditions (EULA) screen will be displayed. Please read the license agreement carefully and select the appropriate check box if you agree to the terms of the agreement. Installation is not possible without this agreement.
7. Click the **Next** button. On the next screen you can set your installation preferences.
8. Click the **Install** button. The installation begins and finishes automatically. A progress bar will indicate the state of the installation process.
9. Click the **Finish** button. The installation is completed. You will be directed to the web site of the nero software.
10. A shortcut is now placed on your desktop.

**Congratulations!** You successfully installed Nero MediaHome on your PC.

Run Nero MediaHome by double clicking on the shortcut icon.

### Internet Portal

Portal feature adds your TV a feature that allows you to connect a server on the Internet and view the content provided by this server over your Internet connection. Portal feature allows you to view the music, video, clip or web content with defined short-cuts. Whether you can view this content without interruption depends on the connection speed provided by your internet service provider.

Press the **Internet** button on your remote control to open internet portal page. You will see icons of the available applications and services on the portal screen. Use the directional buttons on your remote to select the desired one. You may view the desired content by pressing **OK** after selecting. Press **Back/Return** button to return back to the previous screen.

Moreover, you can access some features using the short-cut feature defined for the coloured or numeric buttons of your remote.

Press the **Exit** button to quit the Internet portal mode.

### PIP Window

Current source content will be displayed in the PIP window, if you switch to portal mode while on any active source.

If you switch to portal mode while watching TV channels, current programme will be displayed in the PIP window.

**Notes:**

*Possible application dependent problems may be caused by the content service provider.*

*Portal service content and the interface may be changed at any time without prior notice.*

*Third party internet services may change, be discontinued or restricted at any time.*

### iPlayer Application

You can access BBC iPlayer using your TV. Select BBC iPlayer application among the portal options.

Press the **OK** button on your remote control to start the BBC iPlayer application.

**Note:** *Broadband internet connection (minimum 2mbps) is required for high quality viewing.*

### Playing a Programme via iPlayer

Select a programme and press **OK** button. The programme playback will begin.

You can press the **Pause** button to pause playback. Press the **Play** button to resume the playback.

Use the **Stop** button to stop the playback.

Press the **Exit** button to exit iPlayer. Press the **Return/Back** button for going back to the previous screen.

**Note:** *"Episode is unavailable" message may be displayed on the screen if a problem occurs during the playback.*

### Searching a Programme


Highlight the **Search** tab using the navigation buttons and press the **OK** button. Use the virtual keyboard to type the letters. Select letters and press the **OK** button. When finished, highlight **Search** option and press the **OK** button.

# Internet Browser



To use the internet browser, please select the internet browser logo from the portal section.




(\*)The appearance of the browser logo may change

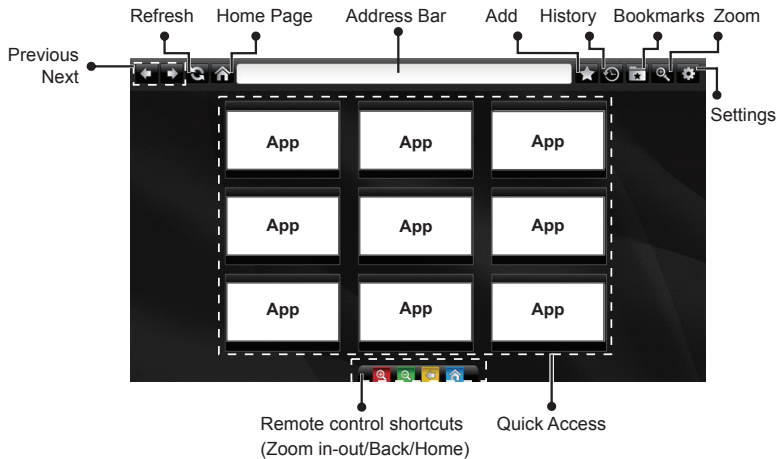


- To navigate the web browser, use the arrow buttons on the remote control. Press **OK** to continue.
- Predefined web sites and logos will be displayed on the browser's access page (see image above). To add a desired website to the quick access links, whilst you are on the site you wish to add, hover the cursor over the **Add** icon and click (or press the **OK** button). Then click on the **Quick Access** icon.
- If you want to add bookmarks, hover the cursor over the **Bookmarks** icon and click whilst the desired website is on the screen.
- There are various ways to search or visit websites using the web browser.
- When you hover the cursor down to the middle of the screen, the shortcuts assigned to the coloured buttons of the remote control will appear. You can zoom in/out, go back to previous page or go to home page using these shortcuts by clicking on them or pressing the related coloured button on the remote.
- You can clear cookies or clear all browser data from the settings menu.
- Your TV is compatible with USB mice. Plug your mouse or wireless mouse adaptor into the USB input of your TV.
- To view your browsing history, click on the history icon. You can also clear your browsing history from here.

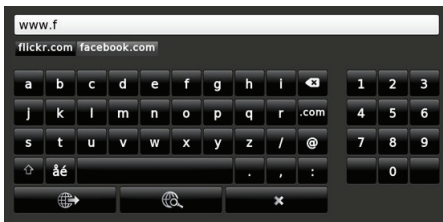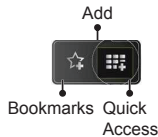

Enter the address of a website(URL) into the address bar and click on the  button to visit.

Enter keyword/s into the address bar and click on the  button to search for the related websites.

Click on the links to visit the related websites.

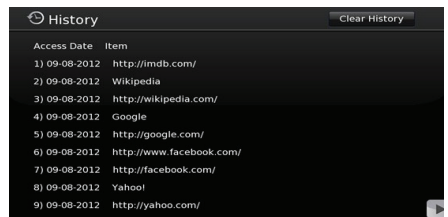


- The browser does not support multiple tabs.
- Some web pages include flash content. These are not supported by the browser.
- Your TV does not support any download processes from the internet via the browser.

## Important Instruction

For your own safety read following instruction carefully before attempting to connect this unit to the mains supply.

### MAINS (AC) OPERATION

The wires in the mains lead are coloured in accordance with the following code :

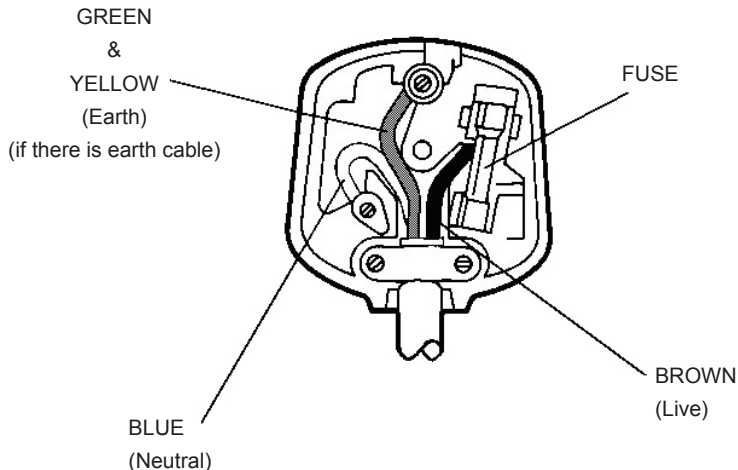

### IMPORTANT

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured green and yellow must be connected to the terminal which is marked with the letter E, or by the earth symbol, or coloured green or green and yellow.

The wire which is coloured blue or black must be connected to the terminal which is marked with the letter N or coloured Black.

The wire which is coloured brown or red must be connected to the terminal which is marked with the letter L or coloured Red.

For continued protection against risk of fire, replace only with same type and rating of fuse (ASTA approved 5A 250VAC fuse).

### CAUTION

TO PREVENT ELECTRIC SHOCK DISCONNECT FROM THE MAINS BEFORE REMOVING COVER. NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

### SAFETY PRECAUTION

THIS EQUIPMENT MUST BE DISCONNECTED FROM THE MAINS WHEN NOT IN USE. DO NOT ALLOW THIS UNIT TO BE EXPOSED TO RAIN OR MOISTURE.

## **A Product fiche**

<b>B</b> Supplier	<b>Panasonic Corporation</b>
<b>C</b> Model ID	<b>TX-55C320B</b>
<b>D</b> Energy efficiency class	A+
<b>E</b> Visible screen size (diagonal)	139 cm / 55 inches
<b>F</b> On mode average power consumption	86 W
<b>G</b> Annual energy consumption *1	125 kWh
<b>H</b> Standby power consumption *2	0,50 W
<b>I</b> Off mode power consumption	0,01
<b>J</b> Screen resolution	1920 x 1080

**K** \*1: Energy consumption XYZ kWh per year, based on the power consumption of the television operating 4 hours per day for 365 days.

The actual energy consumption will depend on how the television is used.

**L** \*2: when the TV is turned off with the remote control and no function is active.

**M** For the information of rated power consumption, refer to the label on the TV back cover.

<b>Deutsch</b>	<b>A</b> Produktdatenblatt <b>B</b> Lieferanten <b>C</b> Sichtbare Bildschirmdiagonalen <b>D</b> Leistungsaufnahme im Ein-Zustand <b>E</b> Energieverbrauch XYZ kWh/Jahr, auf der Grundlage eines täglich viertündigen Betriebs, des Fernsehgerätes an 365 Tagen. Der tatsächliche Energieverbrauch hängt von der Art der Nutzung des Fernsehgerätes ab. <b>F</b> Wenn der Fernseher mit der Fernbedienung ausgeschaltet wird und keine Funktion aktiviert ist <b>G</b> Weitere Informationen zur Nennleistungsaufnahme siehe Aufkleber auf der hinteren Abdeckung des Fernsehers.	<b>G</b> Jährlicher Energieverbrauch <b>H</b> Leistungsaufnahme im Bereitschafts-Zustand <b>I</b> Leistungsaufnahme im Aus-Zustand <b>J</b> Bildschirmauflösung <b>K</b> Energieverbrauch XYZ kWh/Jahr, auf der Grundlage eines täglich viertündigen Betriebs, des Fernsehgerätes an 365 Tagen. Der tatsächliche Energieverbrauch hängt von der Art der Nutzung des Fernsehgerätes ab. <b>L</b> Wenn der Fernseher mit der Fernbedienung ausgeschaltet wird und keine Funktion aktiviert ist <b>M</b> Weitere Informationen zur Nennleistungsaufnahme siehe Aufkleber auf der hinteren Abdeckung des Fernsehers.
<b>Nederlands</b>	<b>A</b> Productkaart <b>B</b> Leverancier <b>C</b> Zichtbare scherm-diagonaal <b>D</b> Energie-efficiëntieklasse <b>E</b> Levensduur scherm-diagonaal <b>F</b> Elektriciteitsverbruik in de gebruiktoestand <b>G</b> Energieverbruik XYZ kWh per jaar, gebaseerd op het elektriciteitsverbruik van de televisie waarmee deze gegevens 365 dagen 4 uur per dag aanstaat. Het feitelijk elektriciteitsverbruik is afhankelijk van de manier waarop de televisie wordt gebruikt. <b>H</b> Als de tv is uitgeschakeld met de afstandsbediening en er geen functies actief zijn <b>I</b> Raadpleeg het etiket aan de achterkant van de tv voor informatie over het nominale elektriciteitsverbruik.	<b>G</b> Jaarlijks energieverbruik <b>H</b> Elektriciteitsverbruik in de slaapstand <b>I</b> Elektriciteitsverbruik in de uitstand <b>J</b> Schermresolutie <b>K</b> Energieverbruik XYZ kWh per jaar, gebaseerd op het elektriciteitsverbruik van de televisie waarmee deze gegevens 365 dagen 4 uur per dag aanstaat. Het feitelijk elektriciteitsverbruik is afhankelijk van de manier waarop de televisie wordt gebruikt. <b>L</b> Als de tv is uitgeschakeld met de afstandsbediening en er geen functies actief zijn <b>M</b> Raadpleeg het etiket aan de achterkant van de tv voor informatie over het nominale elektriciteitsverbruik.
<b>Italiano</b>	<b>A</b> Scheda prodotto <b>B</b> Fornitore <b>C</b> Diagonale dello schermo visibile <b>D</b> Consumo di energia in modo spento <b>E</b> Consumo di energia in modo acceso <b>F</b> Consumo di energia XYZ kWh/anno, calcolato sulla base del consumo di un televisore in funzione per 4 ore al giorno per 365 giorni. Il consumo effettivo di energia dipende dall'utilizzo reale del televisore. <b>G</b> Quando il televisore viene spento con il telecomando e non sono attive funzioni <b>H</b> Per le informazioni sul consumo di energia nominale, fare riferimento all'etichetta sul coperchio posteriore del televisore.	<b>G</b> Consumo annuo di energia <b>H</b> Consumo di energia in modo stand-by <b>I</b> Consumo di energia in modo spento <b>J</b> Risoluzione dello schermo <b>K</b> Consumo di energia XYZ kWh/anno, calcolato sulla base del consumo di un televisore in funzione per 4 ore al giorno per 365 giorni. Il consumo effettivo di energia dipende dall'utilizzo reale del televisore. <b>L</b> Quando il televisore viene spento con il telecomando e non sono attive funzioni <b>M</b> Per le informazioni sul consumo di energia nominale, fare riferimento all'etichetta sul coperchio posteriore del televisore.
<b>Français</b>	<b>A</b> Fiche produit <b>B</b> Fournisseur <b>C</b> Diagonale de l'écran visible <b>D</b> Consommation d'énergie de mode marche <b>E</b> Consommation d'énergie de mode veille <b>F</b> Consommation fonctionnant quatre heures par jour pendant trois cent soixante-cinq jours. La consommation réelle dépend des conditions d'utilisation du téléviseur. <b>G</b> Lorsque le téléviseur est éteint à l'aide de la télécommande et qu'aucune fonction n'est active. <b>H</b> La consommation nominale est indiquée sur l'étiquette apposée sur la partie arrière du téléviseur.	<b>G</b> Consommation d'énergie annuelle <b>H</b> Consommation électrique en mode veille <b>I</b> Consommation électrique en mode arrêt <b>J</b> Résolution de l'écran <b>K</b> Consommation d'énergie de "XYZ" kWh par an, sur la base de la consommation électrique d'un téléviseur fonctionnant quatre heures par jour pendant trois cent soixante-cinq jours. La consommation réelle dépend des conditions d'utilisation du téléviseur. <b>L</b> Lorsque le téléviseur est éteint à l'aide de la télécommande et qu'aucune fonction n'est active. <b>M</b> La consommation nominale est indiquée sur l'étiquette apposée sur la partie arrière du téléviseur.
<b>Lietuvių k.</b>	<b>A</b> Gaminio kortelė <b>B</b> Tieklejas <b>C</b> Matoma ekrano įstrižainė <b>D</b> Energijos sunaudojimas įjungus gaminį <b>E</b> Energijos sunaudojimas per metus nurodomas atsižvelgus į tai, kiek energijos sunaudojama televizoriui veikiant 4 valandas per dieną 365 dienas iš eilės. Faktinį energijos sunaudojimą lemia tai, kiek laiko bus naudojamas televizorius. <b>F</b> Įjungus televizorių nuotoliniu valdymu įrenginiu, kai neveikia įjunkia funkcija <b>G</b> Informacija apie vardinį energijos suvartojimą, žr. etiketėlę ant televizoriaus galinio gaubto. <b>H</b> Fichia de produs <b>I</b> Furnecodor <b>J</b> Diagonala vizibilu de ecran <b>K</b> Consumo de energia de XYZ kWh per an, pe baza de consumo de putinta, de televizor la functional 4 horas per dia duranta 365 zile. Consumo de energie real dependea de modul cum a fost utilizat. <b>L</b> Quando o televizor este desligado com o telecomando e quando não está activada qualquer função <b>M</b> Para obter informações, sobre o consumo de potência nominal, consulte a etiqueta na tampa traseira do televisor.	<b>G</b> Metinis energijos sunaudojimas <b>H</b> Energijos sunaudojimas budėjimo režimu <b>I</b> Energijos sunaudojimas įjungus gaminį <b>J</b> Ekrano skiriamoji geba <b>K</b> Energijos sunaudojimas per metus nurodomas atsižvelgus į tai, kiek energijos sunaudojama televizoriui veikiant 4 valandas per dieną 365 dienas iš eilės. Faktinį energijos sunaudojimą lemia tai, kiek laiko bus naudojamas televizorius. <b>L</b> Įjungus televizorių nuotoliniu valdymu įrenginiu, kai neveikia įjunkia funkcija <b>M</b> Informacija apie vardinį energijos suvartojimą, žr. etiketėlę ant televizoriaus galinio gaubto.
<b>Português</b>	<b>A</b> Ficha de produto <b>B</b> Fornecedor <b>C</b> Diagonale de eficiência energética <b>D</b> Consumo, em termos de potência, em estado de vigília <b>E</b> Consumo, em termos de potência, em estado de desactivação <b>F</b> Resolução do ecrã <b>G</b> Consumo de energia de XYZ kWh por ano, baseado no consumo, do televisor a funcionar 4 horas por dia durante 365 dias. O consumo de energia real dependerá do modo como o televisor é utilizado. <b>L</b> Quando o televisor é desligado com o telecomando e quando não está activada qualquer função <b>M</b> Para obter informações, sobre o consumo de potência nominal, consulte a etiqueta na tampa traseira do televisor.	<b>G</b> Consumo de energia anual <b>H</b> Consumo, em termos de potência, em estado de vigília <b>I</b> Consumo, em termos de potência, em estado de desactivação <b>J</b> Resolução do ecrã <b>K</b> Consumo de energia de XYZ kWh por ano, baseado no consumo, do televisor a funcionar 4 horas por dia durante 365 dias. O consumo de energia real dependerá do modo como o televisor é utilizado. <b>L</b> Quando o televisor é desligado com o telecomando e quando não está activada qualquer função <b>M</b> Para obter informações, sobre o consumo de potência nominal, consulte a etiqueta na tampa traseira do televisor.

<b>Español</b>	<b>A</b> Ficha de producto <b>B</b> Proveedor <b>C</b> Diagonal visible de la pantalla <b>D</b> Consumo de electricidad en modo apagado <b>E</b> Consumo de energía: XYZ kWh al año, suponiendo cuatro horas de funcionamiento diario durante 365 días. El consumo efectivo dependerá de las condiciones reales de uso de la televisión. <b>F</b> Cuando el TV se apaga con el mando a distancia y no existe ninguna función activa <b>G</b> Para información sobre el consumo de potencia nominal consulte la etiqueta en la cubierta trasera del televisor. <b>H</b> Información sobre el modelo <b>I</b> Información sobre el consumo de potencia nominal consulte la etiqueta en la cubierta trasera del televisor. <b>J</b> Información sobre el consumo de potencia nominal consulte la etiqueta en la cubierta trasera del televisor. <b>K</b> Información sobre el consumo de potencia nominal consulte la etiqueta en la cubierta trasera del televisor. <b>L</b> Información sobre el consumo de potencia nominal consulte la etiqueta en la cubierta trasera del televisor. <b>M</b> Información sobre el consumo de potencia nominal consulte la etiqueta en la cubierta trasera del televisor.	<b>G</b> Consumo de energía anual <b>H</b> Consumo de electricidad en espera <b>I</b> Consumo de electricidad en modo apagado <b>J</b> Resolución de la pantalla <b>K</b> Consumo de energía: XYZ kWh al año, suponiendo cuatro horas de funcionamiento diario durante 365 días. El consumo efectivo dependerá de las condiciones reales de uso de la televisión. <b>L</b> cuando el TV se apaga con el mando a distancia y no existe ninguna función activa <b>M</b> Para información sobre el consumo de potencia nominal consulte la etiqueta en la cubierta trasera del televisor.
<b>Svenska</b>	<b>A</b> Informationsblad <b>B</b> Leverantör <b>C</b> Synlig skärm-diagonal <b>D</b> Effektförbrukning i friläge <b>E</b> Effektförbrukning i påläge <b>F</b> Skärmupplösning <b>G</b> Informationsblad <b>H</b> Modellbeteckning <b>I</b> Effektförbrukning i standbyläge <b>J</b> Effektförbrukning i friläge <b>K</b> Skärmupplösning <b>L</b> När TV:n är avslagen via fjärrkontrollen och ingen funktion är aktiv <b>M</b> För information om nominell effektförbrukning, se etiketten på TV:s baksida.	<b>G</b> Arligt energiförbrukning <b>H</b> Effektförbrukning i standbyläge <b>I</b> Effektförbrukning i friläge <b>J</b> Skärmupplösning <b>K</b> Skärmupplösning <b>L</b> när TV:n är avslagen via fjärrkontrollen och ingen funktion är aktiv <b>M</b> För information om nominell effektförbrukning, se etiketten på TV:s baksida.
<b>Norsk</b>	<b>A</b> Produktinfo <b>B</b> Leverandør <b>C</b> Synlig skjerm-diagonal <b>D</b> Strømførbruk i på-modus <b>E</b> Strømførbruk i av-modus <b>F</b> Strømførbruk i på-modus <b>G</b> Strømførbruk i av-modus <b>H</b> Strømførbruk i på-modus <b>I</b> Strømførbruk i av-modus <b>J</b> Strømførbruk i på-modus <b>K</b> Strømførbruk i av-modus <b>L</b> når TV-en er skrudd av med fjernkontrollen og ingen funksjon er aktiv <b>M</b> For informasjon om nominell effekt, se etiketten på TV-bakdekselet.	<b>G</b> Arligt energiförbrukning <b>H</b> Strømförbruk i standby-modus <b>I</b> Strømförbruk i av-modus <b>J</b> Strømförbruk i på-modus <b>K</b> Strømförbruk i på-modus <b>L</b> når TV-en er skrudd av med fjernkontrollen og ingen funksjon er aktiv <b>M</b> For informasjon om nominell effekt, se etiketten på TV-bakdekselet.
<b>Suomi</b>	<b>A</b> Tuoteseloste <b>B</b> Tavarantimittaja <b>C</b> Näkyvästi olevan kuvapinnan lävistäjä <b>D</b> Tehonkulutus päälle-tykytetään -tilassa <b>E</b> Tehonkulutus päälle-tykytetään -tilassa <b>F</b> Tehonkulutus päälle-tykytetään -tilassa <b>G</b> Tehonkulutus päälle-tykytetään -tilassa <b>H</b> Tehonkulutus päälle-tykytetään -tilassa <b>I</b> Tehonkulutus päälle-tykytetään -tilassa <b>J</b> Tehonkulutus päälle-tykytetään -tilassa <b>K</b> Tehonkulutus päälle-tykytetään -tilassa <b>L</b> Kun TV on sammutettu kauko-ohjauksella ja mikään toiminto ei ole käytössä <b>M</b> Tietoja nimellisestä virrankulutuksesta on kyltissä televisioon takakannessa.	<b>G</b> Vuotuinen energiankulutus <b>H</b> Valmiustilan energiankulutus <b>I</b> Tehonkulutus pois päältä -tilassa <b>J</b> Tehonkulutus pois päältä -tilassa <b>K</b> Tehonkulutus pois päältä -tilassa <b>L</b> Kun TV on sammutettu kauko-ohjauksella ja mikään toiminto ei ole käytössä <b>M</b> Tietoja nimellisestä virrankulutuksesta on kyltissä televisioon takakannessa.
<b>Magyar</b>	<b>A</b> Termékinformáció <b>B</b> Beszállító <b>C</b> Látható képfelület nagysága <b>D</b> Bekapcsolás utáni energiaterheltség <b>E</b> Bekapcsolás utáni energiaterheltség <b>F</b> Bekapcsolás utáni energiaterheltség <b>G</b> Bekapcsolás utáni energiaterheltség <b>H</b> Bekapcsolás utáni energiaterheltség <b>I</b> Bekapcsolás utáni energiaterheltség <b>J</b> Bekapcsolás utáni energiaterheltség <b>K</b> Bekapcsolás utáni energiaterheltség <b>L</b> Amikor a TV-t a távirányítóból kikapcsolják ki, és nincs aktiv funkció <b>M</b> További információért a névelés energiaterhelzéssel kapcsolatban olvasson a TV hátulő burkolatán található címkét.	<b>G</b> Éves energiaterheltség <b>H</b> Készenléti üzemi energiaterheltség <b>I</b> Kikapcsolás utáni energiaterheltség <b>J</b> Kikapcsolás utáni energiaterheltség <b>K</b> Kikapcsolás utáni energiaterheltség <b>L</b> Amikor a TV-t a távirányítóból kikapcsolják ki, és nincs aktiv funkció <b>M</b> További információért a névelés energiaterhelzéssel kapcsolatban olvasson a TV hátulő burkolatán található címkét.
<b>Cesky</b>	<b>A</b> Informační list výrobku <b>B</b> Dodavatel <b>C</b> Viditelná úhlopříčka obrazovky <b>D</b> Tržda energetické účinnosti <b>E</b> Tržda energetické účinnosti <b>F</b> Tržda energetické účinnosti <b>G</b> Tržda energetické účinnosti <b>H</b> Tržda energetické účinnosti <b>I</b> Tržda energetické účinnosti <b>J</b> Tržda energetické účinnosti <b>K</b> Tržda energetické účinnosti <b>L</b> Když je televizor vypnutý dálkovým ovladačem a není aktivní žádná funkce <b>M</b> Informace o jmenovitém příkonu najdete na štítku na zadním krytu televizoru.	<b>G</b> Roční spotřeba elektrické energie <b>H</b> Spotřeba elektrické energie v pohotovostním režimu <b>I</b> Spotřeba elektrické energie ve vypnutém stavu <b>J</b> Spotřeba elektrické energie v zapnutém stavu <b>K</b> Spotřeba elektrické energie XYZ kWh za rok vzhledem ke spotřebě elektrické energie televizoru při průměrné době používání 4 hodiny denně po dobu 365 dní. Skutečná spotřeba elektrické energie závisí na způsobu použití televizního přijímače. <b>L</b> Když je televizor vypnutý dálkovým ovladačem a není aktivní žádná funkce <b>M</b> Informace o jmenovitém příkonu najdete na štítku na zadním krytu televizoru.



<b>Dansk</b>	<b>A</b> Datablad <b>B</b> Leverandør <b>C</b> Energiefektivitetsklasse <b>D</b> Synlig skærm diagonal <b>E</b> Effektivbrugeret i stand tilstand <b>F</b> Effektivbrugeret i stand tilstand <b>G</b> Energibrug ved XYZ kWh om året, beregnet som fjernsynets effektfaktor, hvis det er tændt 4 timer om dagen i 365 dage. Det taktiske energibrug vil være på, hvorvidt fjernsynet bruges. <b>L</b> På fjernsynet er slukket med fjernbetjeningen og ingen funktioner er aktive <b>M</b> For oplysninger om nominelt strømforbrug henvises til mærkaten på fjernsynets bagbeholdning.	<b>G</b> Arligt energiforbrug <b>H</b> Effektivbrugeret i standbytilstand <b>I</b> Effektivbrugeret i slukket tilstand <b>J</b> Skærmopløsning
<b>Български</b>	<b>A</b> Продуктова фиш <b>B</b> Доставчик <b>C</b> Клас на енергийна ефективност <b>D</b> Видим диагонал на екрана <b>E</b> Консумация на енергия в режим „изключен“ <b>F</b> Консумация на енергия XYZ kWh годишно, изчислена на базата на 4 работни часа дневно при 365 дни. Действително консумираната енергия ще зависи от начина на употреба на телевизора. <b>G</b> Когато телевизорът е изключен от дистанционното управление и няма активна функция <b>L</b> За информация за номиналната консумация на енергия вижте етикета върху задния капак на телевизора. <b>M</b> За информацията за номиналния стръмforbrug henvises til mærkaten på fjernsynets bagbeholdning.	<b>G</b> Годинашна консумация на енергия <b>H</b> Консумация на енергия в режим „в готовност“ <b>I</b> Консумация на енергия в режим „изключен“ <b>J</b> Консумация на енергия XYZ kWh годишно, изчислена на базата на 4 работни часа дневно при 365 дни. Действителна способност на екрана <b>F</b> Разделителна способност на екрана <b>K</b> Активност на енергия XYZ kWh годишно, изчислена на базата на 4 работни часа дневно при 365 дни. Действителна консумираната енергия ще зависи от начина на употреба на телевизора. <b>L</b> Когато телевизорът е изключен от дистанционното управление и няма активна функция <b>M</b> За информацията за номиналната консумация на енергия вижте етикета върху задния капак на телевизора.
<b>Română</b>	<b>A</b> Fișa produsului <b>B</b> Furnizor <b>C</b> Clasa de eficiență energetică <b>D</b> Diagonala vizibilă a ecranului <b>E</b> Puterea consumată în modul activ <b>F</b> Puterea consumată în modul activ <b>G</b> Consumul de energie de XYZ kWh pe an, pe baza puterii consumate de aparatul TV atunci când este în funcțiune 4 ore pe zi timp de 365 de zile; consumul real de energie, depinde de condițiile de utilizare a aparatului TV. <b>L</b> Când televizorul este oprit cu telecomanda și nu este activă nicio funcție <b>M</b> Pentru informații privind consumul nominal de energie, consultați eticheta de pe capacul posterior al televizorului.	<b>G</b> Referință model <b>H</b> Puterea consumată de energie <b>I</b> Puterea consumată în modul standby <b>J</b> Puterea consumată în modul oprit <b>K</b> Rezoluție ecran <b>L</b> Rezoluție ecran <b>M</b> Puterea consumată în modul oprit
<b>Latviešu valodā</b>	<b>A</b> Produkta speciālā zīme <b>B</b> Piegādātājs <b>C</b> Energoefektivitātes klase <b>D</b> Ekrāna redzamās daļas izmērs pa diagonāli <b>F</b> Aktīva režīma elektroenerģijas patēriņš <b>G</b> Enerģijas patēriņš XYZ kWh gadā, ņemot vērā televizora elektroenerģijas patēriņu, darbojoties 365 dienās, četrās stundās dienā. Faktiskais enerģijas patēriņš bus atkarīgs no tā, kā televizors tiks izmantots. <b>L</b> Kad televizors ir izslēgts ar tālvadības pultī un nedarbojas neviena funkcija <b>M</b> Minimālās strāvas patēriņš norādīts eņķēta televizora korpusa aizmugurē.	<b>G</b> Ikgadējais enerģijas patēriņš <b>H</b> Gatavības režīma elektroenerģijas patēriņš <b>I</b> Izslēgtā režīma elektroenerģijas patēriņš <b>J</b> Ekrāna izšķirtspēja <b>K</b> Enerģijas patēriņš XYZ kWh gadā, ņemot vērā televizora elektroenerģijas patēriņu, darbojoties 365 dienās, četrās stundās dienā. Faktiskais enerģijas patēriņš bus atkarīgs no tā, kā televizors tiks izmantots. <b>L</b> Kad televizors ir izslēgts ar tālvadības pultī un nedarbojas neviena funkcija <b>M</b> Minimālās strāvas patēriņš norādīts eņķēta televizora korpusa aizmugurē.
<b>Polski</b>	<b>A</b> Karta produktu <b>B</b> Dostawca <b>C</b> Przekłnita widzalna ekranu <b>F</b> Zużycie energii w trybie wiązczenia <b>G</b> Zużycie energii XYZ kWh/rok na podstawie zużycia energii przez telewizor działający 4 godziny dziennie przez 365 dni. Rzeczywiste zużycie energii zależy od sposobu użytkowania telewizora. <b>L</b> Wyłączenie telewizora za pomocą pilota i brak aktywnych funkcji. <b>M</b> Informacje na temat znamionowego poboru mocy znajdują się na etykiecie na tyłnej obudowie telewizora.	<b>C</b> Rozczne zużycie energii <b>D</b> Rozczne zużycie energii w trybie czuwania <b>E</b> Przekłnita widzalna ekranu <b>F</b> Zużycie energii w trybie wiązczenia <b>G</b> Rozczne zużycie energii XYZ kWh/rok na podstawie zużycia energii przez telewizor działający 4 godziny dziennie przez 365 dni. Rzeczywiste zużycie energii zależy od sposobu użytkowania telewizora. <b>L</b> Wyłączenie telewizora za pomocą pilota i brak aktywnych funkcji. <b>M</b> Informacje na temat znamionowego poboru mocy znajdują się na etykiecie na tyłnej obudowie telewizora.
<b>Srpski</b>	<b>A</b> Lista sa podacima za proizvod <b>B</b> Dobavljač <b>C</b> Veličina veličina ekrana (dijagonalna) <b>F</b> Veličina veličina ekrana (dijagonalna) <b>G</b> Godišnja potrošnja struje napajanja <b>K</b> Potražnja struje od XYZ kWh na godišnjem nivou zasnovana je na potražnji televizora koji je uključen 4 sata dnevno 365 dana godišnje. Stvarna potrošnja struje zavisiće o načinu korišćenja televizora. <b>L</b> Kada je televizor isključen pomoću daljinskog upravljača i kada nije aktivna nijedna funkcija informacije o nazivnoj potražnji struje potražnje na nalepnici na poleđini televizora.	<b>G</b> Godišnja potrošnja struje napajanja <b>H</b> Potražnja struje u stanju pripravnosti <b>I</b> Potražnja u režimu isključenog napajanja <b>J</b> Rezolucija ekrana <b>K</b> Potražnja struje od XYZ kWh na godišnjem nivou zasnovana je na potražnji televizora koji je uključen 4 sata dnevno 365 dana godišnje. Stvarna potrošnja struje zavisiće o načinu korišćenja televizora. <b>L</b> Kada je televizor isključen pomoću daljinskog upravljača i kada nije aktivna nijedna funkcija informacije o nazivnoj potražnji struje potražnje na nalepnici na poleđini televizora.

<b>Ελληνικά</b>	<b>A</b> Δελτίο προϊόντος <b>B</b> Προμηθεύτης <b>C</b> Οπτική διαστάση οθόνης <b>D</b> Κατάσταση οθόνης <b>E</b> Κατάσταση οθόνης <b>F</b> Κατάσταση οθόνης <b>G</b> Κατάσταση οθόνης <b>H</b> Κατάσταση οθόνης <b>I</b> Κατάσταση οθόνης <b>J</b> Κατάσταση οθόνης <b>K</b> Κατάσταση οθόνης <b>L</b> Όταν η τηλεόραση είναι απενεργοποιημένη από το τηλεχειριστήριο και δεν υπάρχουν ενεργές λειτουργίες, να υπάρχει επί 365 ημέρες η παραγωγή καταπόλησης ενέργειας εξοπλισμού που τον ρυθμίζει στην κατάσταση της τηλεόρασης. <b>M</b> Για τις πληροφορίες αναφορικά με την κατάσταση της τηλεόρασης.	<b>G</b> Ετήσια κατάσταση ενέργειας <b>H</b> Κατάσταση οθόνης σε κατάσταση αναμονής <b>I</b> Κατάσταση οθόνης σε κατάσταση εκτός λειτουργίας <b>J</b> Κατάσταση οθόνης <b>K</b> Κατάσταση οθόνης <b>L</b> Όταν η τηλεόραση είναι απενεργοποιημένη από το τηλεχειριστήριο και δεν υπάρχουν ενεργές λειτουργίες, να υπάρχει επί 365 ημέρες η παραγωγή καταπόλησης ενέργειας εξοπλισμού που τον ρυθμίζει στην κατάσταση της τηλεόρασης. <b>M</b> Για τις πληροφορίες αναφορικά με την κατάσταση της τηλεόρασης.
<b>Türkçe</b>	<b>A</b> Ürün fiş <b>B</b> Tedarikçi <b>C</b> Görülebilir ekran köşegeni <b>D</b> Ekran çözünürlüğü <b>E</b> 365 gün boyunca, gündüz 4 saat çalıştırıldığında televizyonun tükettiği güç referans alınarak yılda XYZ kWh enerji tüketimi. <b>F</b> Güncel enerji tüketimi televizyonun nasıl kullanıldığını bağlı olarak. <b>G</b> Televizyon uzaktan kumanda ile kapatıldığında ve aktif fonksiyon yokken <b>L</b> Nominal güç tüketim bilgisi için televizyonun arka kapakındaki etikete bakın. <b>M</b> Nominal güç tüketim bilgisi için televizyonun arka kapakındaki etikete bakın.	<b>G</b> Yıllık enerji tüketimi <b>H</b> Beklenmedik güç tüketimi <b>I</b> Kapalı moda güç tüketimi <b>J</b> Ekran çözünürlüğü <b>K</b> 365 gün boyunca, gündüz 4 saat çalıştırıldığında televizyonun tükettiği güç referans alınarak yılda XYZ kWh enerji tüketimi. <b>L</b> Televizyon uzaktan kumanda ile kapatıldığında ve aktif fonksiyon yokken <b>M</b> Nominal güç tüketim bilgisi için televizyonun arka kapakındaki etikete bakın.
<b>Hrvatski</b>	<b>A</b> Podatkovni list proizvoda <b>B</b> Dobavljač <b>C</b> Dijagonala vidljivog zaslona <b>D</b> Razred energetske učinkovitosti <b>E</b> Dijagonala vidljivog zaslona <b>F</b> Utrošak energije pri uključenoj <b>G</b> Utrošak energije iznosi XYZ kWh godišnje na temelju utroška energije televizora koji radi četiri sata dnevno 365 dana u godini. Stvarni utrošak energije ovisit će o tome kako se upotrebljava televizor. <b>L</b> kada se televizor isključuje daljinskim upravljačem i nijedna funkcija nije aktivna <b>M</b> Za informacije o nazivnoj snazi pogledajte nalepnicu na stražnjem pokrovu televizora.	<b>G</b> Godišnji utrošak energije <b>H</b> Utrošak energije pri isključenosti <b>I</b> Utrošak energije pri uključenoj <b>J</b> Različovite zaslona <b>K</b> Utrošak energije iznosi XYZ kWh godišnje na temelju utroška energije televizora koji radi četiri sata dnevno 365 dana u godini. Stvarni utrošak energije ovisit će o tome kako se upotrebljava televizor. <b>L</b> kada se televizor isključuje daljinskim upravljačem i nijedna funkcija nije aktivna <b>M</b> Za informacije o nazivnoj snazi pogledajte nalepnicu na stražnjem pokrovu televizora.
<b>Slovensky</b>	<b>A</b> Opis výrobku <b>B</b> Dodávateľ <b>C</b> Uhol prierečka viditeľnej časti obrazovky <b>D</b> Spotreba elektrickej energie v režime vypnutia <b>E</b> Spotreba elektrickej energie v režime zapnutia <b>F</b> Spotreba elektrickej energie XYZ kWh za rok na základe spotreby elektrickej energie televízora, ktorý je v činnosti 4 hodiny denne počas 365 dní. Skutočná spotreba energie závisí od toho, ako sa televízor používa. <b>G</b> Keď je televízor vypnutý diaľkovým ovládačom a nie je aktivná žiadna funkcia <b>L</b> Údaje o menovitom príkone sú uvedené na štítku na zadnom krytie televízora. <b>M</b> Údaje o menovitom príkone sú uvedené na štítku na zadnom krytie televízora.	<b>G</b> Ročná spotreba elektrickej energie <b>H</b> Spotreba elektrickej energie v pohotovostnom režime <b>I</b> Spotreba elektrickej energie v režime vypnutia <b>J</b> Spotreba elektrickej energie XYZ kWh za rok na základe spotreby elektrickej energie televízora, ktorý je v činnosti 4 hodiny denne počas 365 dní. Skutočná spotreba energie závisí od toho, ako sa televízor používa. <b>L</b> Údaje o menovitom príkone sú uvedené na štítku na zadnom krytie televízora. <b>M</b> Údaje o menovitom príkone sú uvedené na štítku na zadnom krytie televízora.
<b>Eesti</b>	<b>A</b> Toote kirjeldus <b>B</b> Tarbijaja <b>C</b> Ekraani nähtava osa diagonaal <b>D</b> Ekraani resolutsioon <b>E</b> Sisseulitud seisundi elektritarbimine <b>F</b> Ekraani resolutsioon <b>G</b> Energiatarbimine XYZ kWh aastas, eeldusel et televisori töötab neli tundi päevas ja 365 päeva aastas. <b>H</b> Energiatarbimine oleneb televisori kasutusviisist. <b>I</b> Kõik energiatarbimispiduliga välja lülitatud ning ükski funktsioon ei tööta. <b>L</b> Nimivõimsustarve alase teabe leiab teletarbijaga tagakattel olevalt štiltelt. <b>M</b> Nimivõimsustarve alase teabe leiab teletarbijaga tagakattel olevalt štiltelt.	<b>G</b> Aastane energiatarbimine <b>H</b> Ooteseisundi elektritarbimine <b>I</b> Väljalülitatud seisundi elektritarbimine <b>J</b> Ekraani resolutsioon <b>K</b> Energiatarbimine XYZ kWh aastas, eeldusel et televisori töötab neli tundi päevas ja 365 päeva aastas. <b>L</b> Kõik energiatarbimispiduliga välja lülitatud ning ükski funktsioon ei tööta. <b>M</b> Nimivõimsustarve alase teabe leiab teletarbijaga tagakattel olevalt štiltelt.



50311325