

Panasonic

Digital Cordless Answering System

 
Model No. **KX-TCD320FX**

Quick Guide

Please read the operating instructions for further details.


Controls

Handset

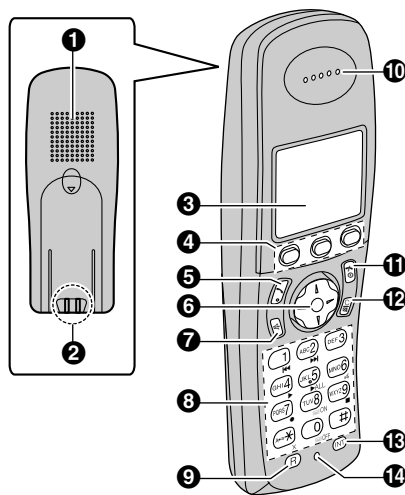

- 1 Speaker**
- 2 Charge contact**
- 3 Display**
- 4 Soft keys**
- 5 [↵] (Talk)**
- 6 Navigator key**
 - [▲][▼]: To search for the desired item in menus.
 - [▶]: To select the desired item or move the cursor to the right.
 - [◀]: To return to the previous screen or move the cursor to the left.
- 7 [☎] (Speakerphone)**
- 8 Dial keypad**
 - The icons printed below the dial keys shown in the illustration (▶, ☎, ■ etc.) indicate answering system operations.
- 9 [R] (Recall)**
- 10 Receiver**
- 11 [⏻] (Off/Power)**
- 12 [C/⊗] (Clear/Mute)**
- 13 [INT] (Intercom)**
- 14 Microphone**

 Base unit

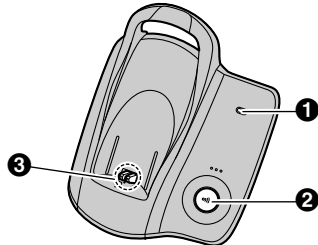
 





 


 



 
 






- ❶ Answer on indicator
- ❷ [••] (Page)
- ❸ Charge contact

Displays







Display icons

Various icons appear on the handset display to indicate the current status of the unit.

<p>  Within range of a base unit <ul style="list-style-type: none"> • When flashing: Handset is searching for base unit. (out of range of base unit, handset is not registered to base unit, no power on base unit) </p> <p>  Handset is accessing base unit. (intercom, paging, changing base unit settings, etc.) </p> <p>  Handset is on an outside call. </p> <p>  Call bar is on. </p> <p>  Missed call (Caller ID subscribers only) </p> <p>  Answering system is on and/or new messages have been recorded. </p> <p>  Answering system is full. </p> <p>  Answering system will answer calls with a greeting message and caller message will not be recorded. </p> <p>  Batteries are charging. </p>	<p>  Battery strength </p> <p>  Alarm is on. </p> <p>  Voice enhancer is set to high or low tone. </p> <p>  Ringer volume is off. </p> <p>  Night mode is on. </p> <p>  [2] Handset number: The left icon shows handset 2 example. </p> <p>  - 2 - Base unit number: The left icon shows base unit 2 example. </p> <p>  New SMS message received (SMS users only) </p> <p>  Your written SMS message is over 160 characters. (SMS users only) </p> <p>  SMS memory is full. (SMS users only) </p> <p>  IN USE Line is being used by another handset. </p>
---	--

 Menu icons


When in standby mode, pressing the middle soft key reveals the handset's main menu. From here you can access various features and settings.

- | | |
|--|--|
|  Caller List |  Handset Setup |
|  SMS (Short Message Service) |  Base Unit Setup |
|  Answer System |  Display Setup |







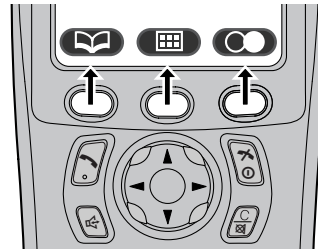 





Soft keys

The handset features 3 soft keys. By pressing a soft key, you can select the feature or operation indicated by the soft key icon shown directly above it.

- Pressing the left, middle, or right soft key selects the leftmost, centre, or rightmost soft key icon respectively.
- The icons shown will vary depending on how you are using the unit.




Soft key icons

- | | |
|--|---|
|  Returns to the previous screen. |  Turns the key lock feature off. |
|  Displays the main menu. |  Displayed when adding or editing a phonebook entry, or when writing an SMS message. |
|  Accepts the current selection. |  Stops recording or playback. |
|  Displays a previously dialed phone number. |  Inserts a dialling pause. |
|  Opens the phonebook and switches between handset phonebook and shared phonebook. |  Erases the selected item. |
|  Displays the phonebook search menu. |  Displayed when the soft key has no function. |

Connections

 When the AC adaptor is connected, a short beep will be heard. If it is not heard, check the connections.

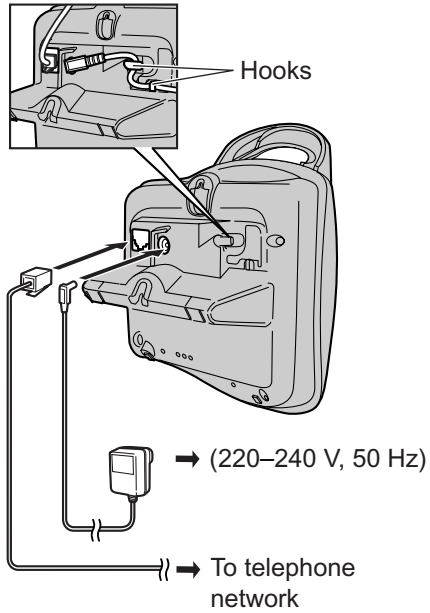

Important:


- Use only the AC adaptor and telephone line cord supplied with this unit.

Note:

- Never install telephone wiring during a lightning storm.
- The AC adaptor must remain connected at all times. (It is normal for the adaptor to feel warm during use.)

Battery installation

Insert the batteries negative (⊖) terminal first. Close the handset cover. **Place the handset on the base unit for about 7 hours before initial use.**

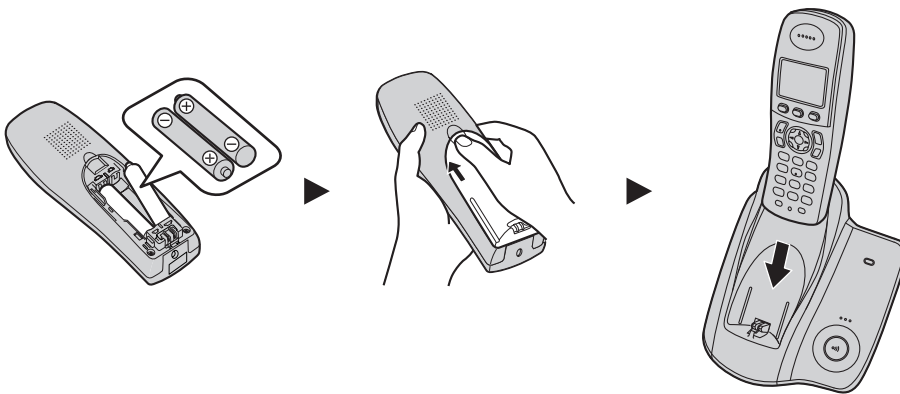


Note:

- Use only rechargeable batteries.

Screen saver mode

The backlight will turn off completely after 1 minute of inactivity if the handset is not on the base unit. Only essential icons and the date and time will be displayed, and they will occasionally change position in order to preserve the life of the display.

Example:

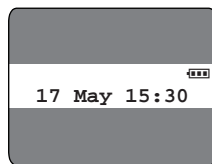

To use the handset when it is in screen saver mode, first press **[*0]** to turn the display on again.

Turning the power on

Press **[*0]** for about 1 second.

Setting the date and time

- 1 Press **[1234]** (middle soft key).
- 2 Select **[5]**, then press **[OK]**.
- 3 Select "Time Settings", then press **[OK]**.
- 4 Select "Set Date & Time", then press **[OK]**.
- 5 Enter the current day, month and year by selecting 2 digits for each.
- 6 Enter the current hour and minute by selecting 2 digits for each.
 - You can select "AM", "PM" or 24-hour time entry by pressing **[*]** repeatedly.
- 7 Press **[OK]**.
- 8 Press **[*0]**.

Basic operations

Feature	Operation
To turn the power off	Press [*0] for about 2 seconds.
To make a call	Dial the phone number, then press [↵] .
To turn on the speakerphone	Press [☎] .
To hang up	Press [*0] .
To adjust the receiver or speaker volume	Press [▲] or [▼] while talking.
To redial the last number dialled	Press [↶] (right soft key), then press [↵] .

Feature	Operation
To make a call using the redial list	Press (right soft key). Press [] or [] repeatedly to select the desired number, then press [].
To answer a call	Press [].
To mute your voice during a call	Press [C/ⓧ]. To return to the conversation, press [C/ⓧ] again.
To store a name and phone number in the handset phonebook	Press (left soft key), , select “ New Entry ”, then press OK . Enter the party’s name (16 characters max.), then press OK . Enter the party’s phone number (24 digits max.), then press OK . Select the desired category for the entry, then press OK . Select “ Save ”, then press OK . Press [] . <ul style="list-style-type: none"> • To enter a name, see the character table in the operating instructions.
To make a call using the handset phonebook	Press (left soft key). Press [] or [] repeatedly to display the desired entry, then press [].
To adjust the handset ringer volume	Press (middle soft key). Select , then press OK . Select “ Ringer Setup ”, then press OK . Select “ Ringer Volume ”, then press OK . Press [] or [] repeatedly to select the desired volume. Press OK , then press [] .
To change the ringtone used by the handset for outside calls	Press (middle soft key). Select , then press OK . Select “ Ringer Setup ”, then press OK . Select “ Ext. Ringtone ”, then press OK . Select the desired ringtone, then press OK . Press [] .
To select the dialling mode	Press (middle soft key). Select , then press OK . Enter “0000” (default base unit PIN). Select “ Call Options ”, then press OK . Select “ Dial Mode ”, then press OK . Select the desired setting, then press OK . Press [] .

Answering system

Feature	Operation
To turn the answering system on/off	Press (middle soft key). Select , then press OK . Select “ Answer On ” or “ Answer Off ”, then press OK . Press [] .
To listen to new/all messages	Press (middle soft key). Select , then press OK . Select “ Play New Msg. ” or “ Play All Msg. ”, then press OK .