

Panasonic

Operating Instructions


Digital Cordless Phone

Model No. **KX-TG8200FX**

KX-TG8202FX

Digital Cordless Answering System

Model No. **KX-TG8220FX**

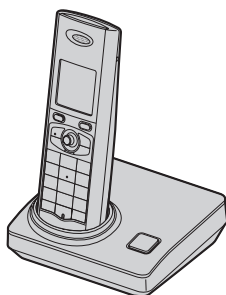

KX-TG8200

SMS

This unit is compatible with Caller ID and SMS. To use these features, you must subscribe to the appropriate service of your service provider/telephone company.

Charge the batteries for about 7 hours before initial use.

This unit is designed to be used in Czech, Slovakia, and central Europe. To use this unit in your country, first change the unit's region setting to match your country (page 26). Change the unit's display language as needed (page 13).

(For Czech and Slovakia)

This cordless telephone is possible to use according to General licence No.: VO-R/8/08.2005-23 (for Czech), VPR-7/2001 (for Slovakia).

Please read these operating instructions before using the unit and save them for future reference.

Table of Contents

Preparation	
Introduction	3
Accessory information	4
Important information	5
Controls	7
Displays	8
Connections	10
Battery installation and replacement	11
Battery charge	11
Screen saver mode	12
Turning the power on/off	12
Setting up the unit before use	13
☎ Making/Answering Calls	
Making calls	15
Answering calls	16
Useful features during a call	16
📖 Phonebook	
Handset phonebook	18
📱 Handset Settings	
Handset settings	21
Special instructions for time settings	23
Special instructions for ringer setup	23
📶 Base Unit Settings	
Base unit settings	25
Special instructions for call options	26
📞 Caller ID Service	
Using Caller ID service	28
Caller list	29
Voice mail service	30
✉ SMS (Short Message Service)	
Using SMS	31
Turning SMS on/off	31
Storing SMS message centre numbers	31
Sending a message	32
Receiving a message	33
SMS settings	33
📞 Answering System Features	
Answering system	35
Turning the answering system on/off	35
Greeting message	35
Listening to messages	36
Direct command operation using the handset	37
Remote operation	37
Answering system settings	38
Multi-unit Operation	
Operating additional units	40
Registering a handset to a base unit	40
Intercom between handsets	42
Transferring calls between handsets, conference calls	42
Copying phonebook entries	43
Useful Information	
Character entry	44
Error messages	47
Troubleshooting	48
Specifications	53
Declaration of conformity form (For Czech and Slovakia)	54
Index	
Index	55

Preparation

Introduction

Thank you for purchasing a new Panasonic digital cordless phone.

For your future reference

Attach or keep original receipt to assist with any repair under warranty.

Serial No. (found on the bottom of the base unit)
Date of purchase
Name and address of dealer

Note:

- In the event of problems, you should contact your equipment supplier in the first instance.



Declaration of Conformity:

- Panasonic Communications Co., Ltd. declares that this equipment is in compliance with the essential requirements and other relevant provisions of Radio & Telecommunications Terminal Equipment (R&TTE) Directive 1999/5/EC. Declarations of Conformity for the relevant Panasonic products described in this manual are available for download by visiting:
<http://www.doc.panasonic.de>

Contact:

Panasonic Services Europe, a Division of Panasonic Marketing Europe GmbH
Panasonic Testing Centre, Winsbergring 15, 22525 Hamburg, Germany

Your phone

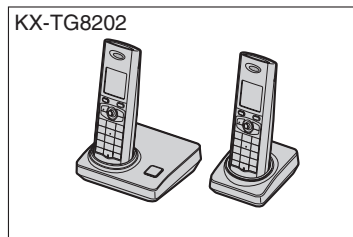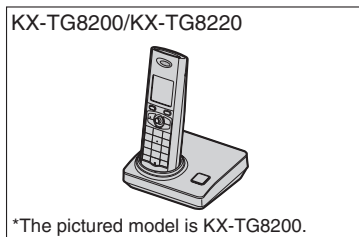


Preparation

Accessory information

Supplied accessories

No.	Accessory items	Quantity	
		KX-TG8200 KX-TG8220	KX-TG8202
①	AC adaptor for base unit (Part No. PQLV207CE)	1	1
②	Telephone line cord	1	1
③	Rechargeable batteries AAA (R03) size (Part No. HHR-55AAAB)	2	4
④	Handset cover*1	1	2
⑤	Charger (Part No. PQLV30056Z)	—	1
⑥	AC adaptor for charger (Part No. PQLV209CE)	—	1

 
*1 The handset cover comes attached to the handset.



Additional/replacement accessories

Please contact your nearest Panasonic dealer for sales information.

No.	Model No.	Description
①	KX-TGA820FX	Additional Digital Cordless Handset
②	KX-TCA828EX	Belt Clip
③	KX-TCA94EX	Headset
④	KX-A272	DECT repeater

 

Note:

- When replacing the batteries, use only 2 rechargeable AAA (R03) size nickel metal hydride (Ni-MH) batteries. We recommend using Panasonic rechargeable batteries (Model No. P03P).
- Replacement batteries may have a different capacity from that of the supplied batteries.

Preparation**Important information****General**

- Use only the AC adaptor supplied with this product, noted on page 4.
- Do not connect the AC adaptor to any AC outlet other than a standard 220–240 V AC outlet.
- This product is unable to make calls when:
 - the portable handset battery(ies) need recharging or have failed.
 - there is a power failure.
 - the key lock feature is turned on.
- Do not open the base unit, charger, or handset other than to replace the battery(ies).
- This product should not be used near emergency/intensive care medical equipment and should not be used by people with pacemakers.
- Care should be taken that objects do not fall onto, and liquids are not spilled into, the product. Do not subject this product to excessive smoke, dust, mechanical vibration or shock.

Environment

- Do not use this product near water.
- This product should be kept away from heat sources such as radiators, cookers, etc. It should also not be placed in rooms where the temperature is less than 5 °C or greater than 40 °C.

Warning:

- To prevent the risk of electrical shock, do not expose this product to rain or any other type of moisture.
- Unplug this product from power outlets if it emits smoke, an abnormal smell, or makes unusual noise. These conditions can cause fire or electric

shock. Confirm that smoke has stopped emitting and contact an authorised service centre.

- Do not spill liquids (detergents, cleansers, etc.) onto the telephone line cord plug, or allow it to become wet at all. This may cause a fire. If the telephone line cord plug becomes wet, immediately pull it from the telephone wall jack, and do not use.
- Do not place or use this product near automatically controlled devices such as automatic doors and fire alarms. Radio waves emitted from this product may cause such devices to malfunction resulting in an accident.
- Regularly remove any dust, etc. from the AC adaptor/power plug by pulling it from the power outlet, then wiping with a dry cloth. Accumulated dust may cause an insulation defect from moisture, etc. resulting in a fire.
- Do not damage the power cord/plug. This may cause a short circuit, electric shock, and/or fire.
- Do not touch the plug with wet hands.
- The AC adaptor is used as the main disconnect device. Ensure that the AC outlet is installed near the product and is easily accessible.

Battery caution

- We recommend using the battery(ies) noted on page 4. **Use only rechargeable battery(ies).**
- Do not mix old and new batteries.
- Do not dispose of the battery(ies) in a fire, as they may explode. Check with local waste management codes for special disposal instructions.
- Do not open or mutilate the battery(ies). Released electrolyte from the battery(ies) is corrosive and may cause burns or injury to the eyes

Preparation

or skin. The electrolyte may be toxic if swallowed.

- Exercise care when handling the battery(ies). Do not allow conductive materials such as rings, bracelets or keys to touch the battery(ies), otherwise a short circuit may cause the battery(ies) and/or the conductive material to overheat and cause burns.
- Charge the battery(ies) provided with or identified for use with this product only in accordance with the instructions and limitations specified in this manual.
- Only use a compatible base unit (or charger) to charge the battery(ies). Do not tamper with the base unit (or charger). Failure to follow these instructions may cause the battery(ies) to swell or explode.

Notice for product disposal, transfer, or return

- This product can store your private/confidential information. To protect your privacy/confidentiality, we recommend that you erase the information such as phonebook or caller list entries from the memory before you dispose, transfer or return the product.

Information on Disposal for Users of Waste Electrical & Electronic Equipment (private households)



This symbol on the products and/or accompanying documents means that used electrical and electronic products should not be mixed with general household waste. For proper treatment, recovery and recycling, please take

these products to designated collection points, where they will be accepted on a free of charge basis. Alternatively, in some countries you may be able to return your products to your local retailer upon the purchase of an equivalent new product.

Disposing of this product correctly will help to save valuable resources and prevent any potential negative effects on human health and the environment which could otherwise arise from inappropriate waste handling. Please contact your local authority for further details of your nearest designated collection point.

Penalties may be applicable for incorrect disposal of this waste, in accordance with national legislation.

For business users in the European Union

If you wish to discard electrical and electronic equipment, please contact your dealer or supplier for further information.

Information on Disposal in other Countries outside the European Union

This symbol is only valid in the European Union.

If you wish to discard this product, please contact your local authorities or dealer and ask for the correct method of disposal.


Routine care

- **To clean the product, use a dry soft cloth. The outer surface of the product can be scratched by wiping or rubbing with a hard cloth.**
- Do not use benzine, thinner, or any abrasive powder.

Preparation


Controls

Base unit (KX-TG8200/KX-TG8202)

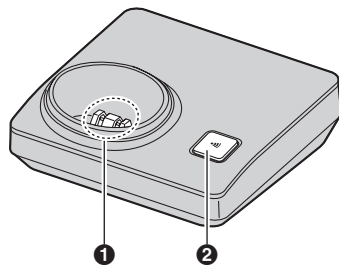


- 1 Charge contacts
- 2 [⏪] (Page)

Base unit (KX-TG8220)

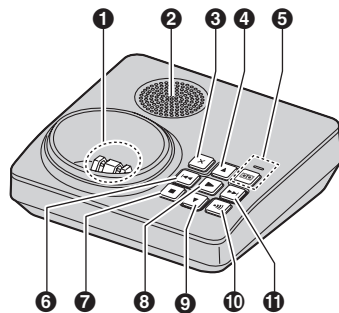

- 1 Charge contacts
- 2 Speaker
- 3 [X] (Erase)
- 4 [▲] (Volume: up)
- 5 [📞] (Answer on)/
Answer on indicator
- 6 [↶] (Repeat)
- 7 [■] (Stop)
- 8 [▶] (Play)/Message indicator
- 9 [▼] (Volume: down)
- 10 [⏪] (Page)
- 11 [↷] (Skip)


Handset

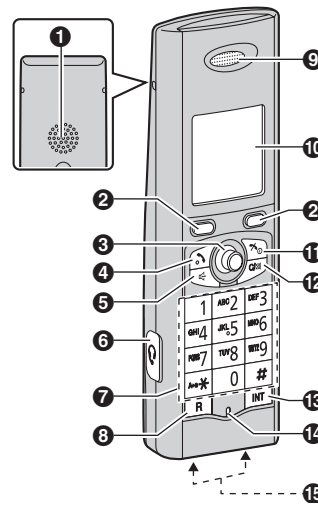

- 1 Speaker
- 2 Soft keys
- 3 Joystick
- 4 [📞] (Talk)
- 5 [📞] (Speakerphone)
- 6 Headset jack
- 7 Dial keypad
- 8 [R] (Recall)
- 9 Receiver
- 10 Display
- 11 [🔌] (Off/Power)
- 12 [C/🔇] (Clear/Mute)
- 13 [INT] (Intercom)
- 14 Microphone
- 15 Charge contacts

Using the joystick

 Push the joystick up, down, left, or right to navigate through menus and to select.



Preparation

Note:


- When selecting menu or the desired item, these operating instructions use the following indication.

Example: [▲]/[▼]: “OFF”

Push the joystick up or down to select the words in quotations.


Adjusting the receiver or speaker volume

Push the joystick up or down while on a call.

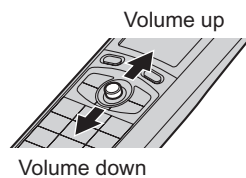

Soft keys

The handset features 2 soft keys and a joystick. By pressing a soft key, or by pressing the centre of the joystick, you can select the feature shown directly above it on the display.

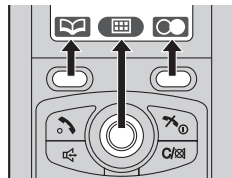

Displays

Display icons

Icon	Meaning
	Within range of a base unit <ul style="list-style-type: none"> • When flashing: Handset is searching for base unit. (page 48)
	Handset is accessing base unit. (intercom, paging, changing base unit settings, etc.)
	Handset is on an outside call.
	Missed call* ¹ (page 28)
	<ul style="list-style-type: none"> • When displayed next to the battery icon: Answering system is on.*² (page 35) • When displayed with a number: New messages have been recorded.*² (page 36)
	Answering system is full.* ²
	Answering system answers calls with a greeting message and caller messages are not recorded.* ² (page 39)
	Battery level
	Alarm is on. (page 23)
	Voice enhancer is set. (page 16)
	Call privacy mode is on. (page 17)
	Ringer volume is off. (page 21)

Preparation

Icon	Meaning
	Night mode is on. (page 23)
[1]	Handset number (standby display setting, page 21)
-1-	Base unit number (standby display setting, page 21)
	New SMS message received ^{*3} (page 33)
	Your written SMS message is over 160 characters. ^{*3} (page 32)
	SMS memory is full. ^{*3}
IN USE	<ul style="list-style-type: none"> Line is being used by another handset for calling, registration, etc. Answering system is being used by another handset or the base unit.^{*2}

*1 Caller ID subscribers only
 *2 KX-TG8220
 *3 SMS users only

Menu icons

When in standby mode, pressing down on the centre of the joystick reveals the handset's main menu. From here you can access various features and settings.

Icon	Feature
	Caller List
	SMS (Short Message Service)
	Time Settings ^{*1}

Icon	Feature
	Answer System ^{*2}
	Handset Setup
	Base Unit Setup
	Display Setup

*1 KX-TG8200/KX-TG8202
 *2 KX-TG8220

Soft key icons

Icon	Action
	Returns to the previous screen.
	Displays the menu.
OK	Accepts the current selection.
	Displays a previously dialled phone number.
	Opens the handset phonebook.
	Displays the phonebook search menu.
	Turns the key lock feature off. (page 17)
1/A/?	Selects a character entry mode.
	Stops recording or playback the greeting message. ^{*1}
	Stops playback a message. ^{*1}
P	Inserts a dialling pause. (page 15)
X	Erases the selected item.
	No function


Preparation

*1 KX-TG8220

Connections

Connect the telephone line cord until it clicks into the base unit and telephone line jack (1). Connect the AC adaptor cord (2) by pressing the plug firmly (3).


Base unit

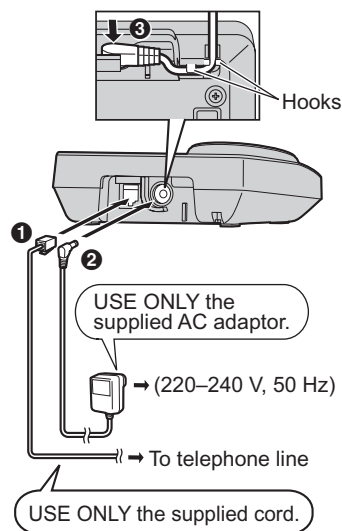

Important:

- If you use a telephone line cord which is not supplied, the unit may not work properly.

Charger (KX-TG8202)

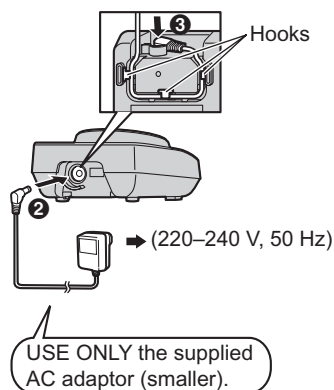

Note:

- Never install telephone wiring during a lightning storm.
- The AC adaptor must remain connected at all times. (It is normal for the adaptor to feel warm during use.)
- The AC adaptor should be connected to a vertically oriented or floor-mounted AC outlet. Do not connect the AC adaptor to a ceiling-mounted AC outlet, as the weight of the adaptor may cause it to become disconnected.
- The unit will not work during a power failure. We recommend you connect a standard telephone on the same line for power protection.

Location


- For maximum distance and noise-free operation, place your base unit:
 - away from electrical appliances such as TVs, radios, personal computers, or other phones.
 - in a convenient, high, and central location.

Battery installation and replacement

Important:


- Use only the supplied rechargeable batteries noted on page 4, 5.
- USE ONLY rechargeable Ni-MH batteries AAA (R03) size.
- Do NOT use Alkaline/Manganese/Ni-Cd batteries.
- Ensure correct polarities (+, -) when installing the batteries.
- Wipe the battery ends (+, -) with a dry cloth.
- When installing the batteries, avoid touching the battery ends (+, -) or the unit contacts.
- When replacing batteries, we recommend using the Panasonic rechargeable batteries noted on page 4, 5.

- 1 Press the notch on the handset cover firmly and slide it in the direction of the arrow.

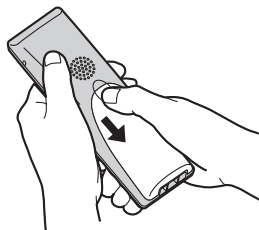


Preparation

- 2 Insert the batteries negative (-) end first. Close the handset cover.

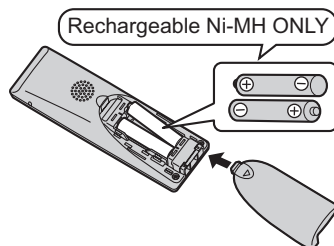

Note:

- When replacing batteries, remove the old batteries.

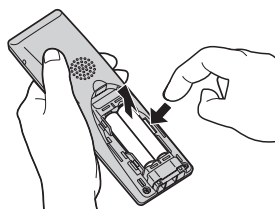


Battery charge

Place the handset on the base unit or charger for about 7 hours before initial use.

When charging, "Charging" will be displayed.

When the batteries are fully charged, "Charge Completed" will be displayed.

Preparation

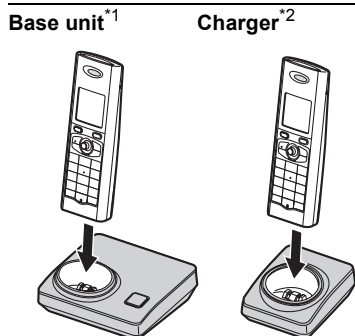

*1 The pictured model is KX-TG8200.
*2 KX-TG8202

Note:

- It is normal for the handset to feel warm during charging.
- If you want to use the unit immediately, charge the batteries for at least 15 minutes.
- Clean the charge contacts of the handset, base unit, and charger with a soft, dry cloth once a month. Clean more often if the unit is subject to the exposure of grease, dust, or high humidity.

Battery level

Battery icon	Battery level
	High
	Medium
	Low <ul style="list-style-type: none"> • When flashing: Needs to be charged.

Panasonic Ni-MH battery performance (supplied batteries)

Operation	Operating time
In continuous use	12 hours max.

Operation	Operating time
In continuous standby mode	150 hours max.

Note:

- It is normal for batteries not to reach full capacity at the initial charge. Maximum battery performance is reached after a few complete cycles of charge/discharge (use).
- Actual battery performance depends on a combination of how often the handset is in use and how often it is not in use (standby).
- Even after the handset is fully charged, the handset can be left on the base unit or charger without any ill effect on the batteries.
- The battery level may not be displayed correctly after you replace the batteries. In this case, place the handset on the base unit or charger and let it charge for at least 7 hours.

Screen saver mode

The backlight will turn off completely after 1 minute of inactivity if the handset is not on the base unit or charger. Press [**⏏**] to turn the display on again.

Turning the power on/off

Power on

Press [**⏏**] for about 1 second.

Preparation

Power off

Press **[*][*]** for about 2 seconds.

Setting up the unit before use

Region settings

You can set the unit to use settings that match your country (page 26). The display language and other settings will change accordingly.

Note:

- The display language only changes (to the selected country's default setting) for the handset used to select the region setting. You must change the display language for all other handsets separately.

Display language

16 display languages are available.

You can select "Deutsch", "English", "Magyar", "Polski", "Slovenčina", "Čeština", "Hrvatski", "Slovenscina", "Eesti", "LIETUVIŠKAI", "Latviešu", "Română", "БЪЛГАРСКИ", "Srpski", "МАКЕДОНСКИ", or "Shqip".

- 1 **[*][*]** → **[*]**
- 2 Select **[*]** by pushing the joystick in any direction. → **OK**
- 3 Push the joystick up or down to select "Display Setup". → **OK**
- 4 Push the joystick up or down to select "Select Language". → **OK**

- 5 Push the joystick up or down to select the desired language. → **OK** → **[*][*]**

Note:

- If you select a language you cannot read: **[*][*]** → **[*]** → **[*]** → **OK** → Push the joystick down 2 times. → **OK** → Push the joystick down 3 times. → **OK** → **[▲]/[▼]**: Select the desired language. → **OK** → **[*][*]**

Dialling mode (tone/pulse)

Change the dialling mode depending on your telephone line service.

"Tone": Select when you have a touch-tone service.

"Pulse": Select when you have rotary/pulse service.

- 1 **[*]** (centre of joystick)
- 2 Select **[*]** by pushing the joystick in any direction. → **OK**
- 3 Push the joystick up or down to select "Call Options". → **OK**
- 4 Push the joystick up or down to select "Dial Mode". → **OK**
- 5 Push the joystick up or down to select the desired setting. → **OK** → **[*][*]**

Date and time

- 1 **[*]** (centre of joystick)
- 2 Select **[*]** by pushing the joystick in any direction. → **OK**
- 3 Push the joystick up or down to select "Time Settings". → **OK**
- 4 Push the joystick up or down to select "Set Date & Time". → **OK**
- 5 Enter the current date, month, and year.

Preparation

Example: 17 May, 2007
[1][7] [0][5] [0][7]

6 Enter the current hour and minute.

Example: 3:30 PM

[0][3] [3][0] → Press [*] until
"03:30 PM" is displayed.

7 **OK** → [**↶**⊙]

Note:

- To correct a digit, use the joystick to move the cursor to the digit, then make the correction.
- The date and time may be incorrect after a power failure. In this case, set the date and time again.

↶ Making/Answering Calls

Making calls

- 1 Lift the handset and dial the phone number.
 - To correct a digit, press [C/⊗].
- 2 [↶]
- 3 When finished talking, press [↶⊗] or place the handset on the base unit or charger.

Speakerphone

- 1 During a conversation, press [⊗] to turn on the speakerphone.
 - Speak alternately with the caller.
- 2 When finished talking, press [↶⊗].

Note:

- For best performance, use the speakerphone in a quiet environment.
- To switch back to the receiver, press [↶].

Adjusting the receiver or speaker volume

Push the joystick up or down while on a call.

Making a call using the redial list

The last 10 phone numbers dialed are stored in the redial list (each 24 digits max.).

- 1 [⊗] (right soft key)
- 2 [▲]/[▼]: Select the desired number.
- 3 [↶]/[⊗]
 - If [⊗] is pressed and the other party's line is engaged, the unit will automatically redial multiple times. To cancel, press [↶⊗].

Editing/erasing/storing

- 1 [⊗] (right soft key)
- 2 [▲]/[▼]: Select the desired number. → [⊗]
- 3 Proceed with the desired operation.
 - **Editing a number before calling it:**
 - [▲]/[▼]: "Edit and Call" → [⊗] → Use the joystick to move the cursor. → Edit the number. → [↶]
 - **Erasing numbers:**
 - [▲]/[▼]: "Erase" or "Erase All" → [⊗] → [▲]/[▼]: "Yes" → [⊗] → [↶⊗]
 - **Storing a number into the handset phonebook:**
 - [▲]/[▼]: "Add Phonebook" → [⊗] → Enter a name (16 characters max.; page 44). → [⊗] → Edit the phone number if necessary. → [⊗] → [▲]/[▼]: Select the desired category (page 18). → [⊗] → [▲]/[▼]: "Save" → [⊗] → [↶⊗]

Note:

- When editing:
 - To erase a number, place the cursor on the number, then press [C/⊗].
 - To insert a number, place the cursor to the right of where you want to insert the number, then press the appropriate dial key.

Pause (for PBX/long distance service users)

A pause is sometimes required when making calls using a PBX or long distance service.

Example: If you have to dial [0] before dialling outside numbers manually, you will probably need to pause after dialling [0] until you hear a dial tone.

↩ Making/Answering Calls

- 1 [0] → **P**
- 2 Dial the phone number. → [↩]

Note:

- A 3 second pause is inserted each time **P** is pressed. Repeat as needed to create longer pauses.

Answering calls

- 1 Lift the handset and press [↩] or [📞] when the unit rings.
 - You can also answer the call by pressing any dial key from [0] to [9], [*], or [#]. (**Any key answer feature**)
- 2 When finished talking, press [📞] or place the handset on the base unit or charger.

Auto talk feature

You can answer calls simply by lifting the handset off the base unit or charger. You do not need to press [↩]. To turn this feature on, see page 22.

Adjusting the handset ringer volume when receiving a call

Push the joystick up or down.

Handset locator

Using this feature, you can locate the handset if it has been misplaced.

- 1 Press [📞] on the base unit.
- 2 To stop paging, press [📞] on the base unit or press [📞] on the handset.

Useful features during a call

Mute

While mute is turned on, you will be able to hear the other party, but the other party will not be able to hear you. To mute your voice, press [C/🔇].

- To return to the conversation, press [C/🔇] again.

R button

Pressing [R] allows you to use special features of your host PBX such as transferring an extension call, or accessing optional telephone services.

Note:

- To change the recall time, see page 25.

Temporary tone dialling (for rotary/pulse service users)

You can temporarily switch the dialling mode to tone when you need to access touch-tone services (e.g., telephone banking services).

- 1 Make a call.
- 2 Press [*] when prompted to enter your code or PIN, then press the appropriate dial keys.

Note:

- The dialling mode will return to pulse when you hang up.

Voice enhancer

You can change the tone quality of the receiver while you are on a call.

- 1 Press [🔊] during a call.
- 2 [▲]/[▼]: "Voice Enhancer" → **OK**

↩ Making/Answering Calls

- 3** [▲]/[▼]: “High Tone” or “Low Tone” → **OK**
- 📞 is displayed.

Key lock

The handset can be locked so that no calls or settings can be made. Incoming calls can be answered, but all other functions are disabled while key lock is on.

To turn key lock on, press **📞** (centre of joystick) for about 3 seconds.

- 📞 is displayed.
- To turn key lock off, press **📞** (centre of joystick) for about 3 seconds.

Note:

- Calls to emergency numbers cannot be made until key lock is turned off.

Recording a telephone conversation (KX-TG8220)

Important:

- Before recording a conversation, you should inform the other party that the conversation will be recorded.

- 1 Press **📞** during an outside call.
- 2 [▲]/[▼]: “Record Call” → **OK**
- 3 To stop recording, press **📞**.

Note:

- To listen to the recorded conversation, see page 36.

Call share

A 2nd handset can join an existing outside call.

To join the conversation, press [↩] or [↪] when the other handset is on an outside call.

Note:

- A 2nd handset cannot join an outside call that is being recorded (page 17).

Call privacy

Call privacy allows you to prevent other users from joining your conversations with outside callers. To allow other users to join your conversations, leave this feature off. The default setting is “off”.

- 1 Press **📞** during an outside call.
- 2 [▲]/[▼]: “Privacy” → **OK**
- 3 [▲]/[▼]: “On” or “Off” → **OK**
 - When this feature is turned on, 📞 is displayed.

Note:

- This feature will turn off after you hang up the call.

Phonebook

Handset phonebook

The handset phonebook allows you to make calls without having to dial manually. You can add 200 names and phone numbers, assign each handset phonebook entry to the desired category.

Adding entries

- 1 (left soft key) →
- 2 **[▲]/[▼]**: “New Entry” → **OK**
- 3 Enter the party’s name (16 characters max.; page 44). → **OK**
- 4 Enter the party’s phone number (24 digits max.). → **OK**
- 5 **[▲]/[▼]**: Select the desired category. → **OK**
- 6 **[▲]/[▼]**: “Save” → **OK** →

Categories

Categories can help you find entries in the handset phonebook quickly and easily. When adding an entry to the handset phonebook you can assign it to the desired category. You can change the names of categories assigned for handset phonebook entries (“Friends”, “Family”, etc.) and then search for handset phonebook entries by category. Additional category features are available for Caller ID subscribers (page 28).

Changing category names

- 1 (left soft key) →
- 2 **[▲]/[▼]**: “Category” → **OK**
- 3 **[▲]/[▼]**: Select the desired category. → **OK**

- 4 **[▲]/[▼]**: “Category Name” → **OK**
- 5 Edit the name (10 characters max.; page 44). → **OK** →

Finding and calling a handset phonebook entry

Scrolling through all entries

- 1 (left soft key)
- 2 **[▲]/[▼]**: Select the desired entry.
- 3

Searching by first character (index search)

- 1 (left soft key)
- 2 Press the dial key (**[0]** to **[9]**) which contains the character you are searching for (page 44).
 - Press the same dial key repeatedly to display the first entry corresponding to each letter located on that dial key.
 - If there is no entry corresponding to the letter you selected, the next entry will be displayed.
 - To change the character entry mode:
 - **[▲]/[▼]**: “Index Search” → **OK** → **[▲]/[▼]**: Select the character entry mode. → **OK**
- 3 **[▲]/[▼]**: Scroll through the phonebook if necessary.
- 4

Searching by category

- 1 (left soft key) →
- 2 **[▲]/[▼]**: “Category Search” → **OK**

Phonebook

- 3 **[▲]/[▼]**: Select the category you want to search. → **OK**
 - If you select “All”, the unit will end the category search.
- 4 **[▲]/[▼]**: Scroll through the phonebook if necessary.
- 5 **[↶]**

Editing entries

- 1 Find the desired entry (page 18). → **[F4]**
- 2 **[▲]/[▼]**: “Edit” → **OK**
- 3 Edit the name if necessary (16 characters max.; page 44). → **OK**
- 4 Edit the phone number if necessary (24 digits max.). → **OK**
- 5 **[▲]/[▼]**: Select the desired category. → **OK**
- 6 **[▲]/[▼]**: “Save” → **OK** → **[↵]**

Erasing entries

Erasing an entry

- 1 Find the desired entry (page 18). → **[F4]**
- 2 **[▲]/[▼]**: “Erase” → **OK**
- 3 **[▲]/[▼]**: “Yes” → **OK** → **[↵]**

Erasing all entries

- 1 **[F3]** (left soft key) → **[F4]**
- 2 **[▲]/[▼]**: “Erase All” → **OK**
- 3 **[▲]/[▼]**: “Yes” → **OK**
- 4 **[▲]/[▼]**: “Yes” → **OK** → **[↵]**

One touch dial

Assigning an entry in the handset phonebook to a one touch dial key

Dial keys **[1]** to **[9]** can each be used as a one touch dial key, allowing you to dial a number from the handset phonebook by simply pressing a dial key.

- 1 Find the desired entry (page 18). → **[F4]**
- 2 **[▲]/[▼]**: “One Touch Dial” → **OK**
- 3 **[▲]/[▼]**: Select the desired dial key number. → **OK**
 - When the dial key is already used as a one touch dial key, “*” is displayed next to the dial key number. If you select this dial key, you can overwrite the previous assignment.
- 4 **[▲]/[▼]**: “Save” → **OK** → **[↵]**

Making a call using a one touch dial key

- 1 Press and hold the desired one touch dial key (**[1]** to **[9]**).
 - You can view other one touch dial assignments by pushing the joystick up or down.
- 2 **[↶]**


Cancelling a one touch dial assignment

- 1 Press and hold the desired one touch dial key (**[1]** to **[9]**). → **[F4]**
- 2 **[▲]/[▼]**: “Erase” → **OK**
- 3 **[▲]/[▼]**: “Yes” → **OK** → **[↵]**

Phonebook

Chain dial

This feature allows you to dial phone numbers in the handset phonebook while you are on a call. This feature can be used, for example, to dial a calling card access number or bank account PIN that you have stored in the handset phonebook, without having to dial manually.



- 1 While on a call, press .
- 2 **[▲]/[▼]**: Select the desired entry.
- 3 Press **OK** to dial the number.

Note:

- If you are using this phone in pulse dialling mode, you may need to press **[*]** to change the dialling mode to tone before chain dialling. When adding entries to the handset phonebook, we recommend adding **[*]** to the beginning of phone numbers you wish to chain dial (page 18).

Handset settings

To customise the handset:

- 1  (centre of joystick)
- 2 Select  by pushing the joystick in any direction. → **OK**
- 3 Push the joystick up or down to select the desired item in the handset settings menu. → **OK**
- 4 Push the joystick up or down to select the desired item in the sub-menu. → **OK**
 - In some cases, you may need to select from a second sub-menu. → **OK**
- 5 Push the joystick up or down to select the desired setting then press **OK**.
 - This step may vary depending on the feature being programmed.
 - To exit the operation, press [**⏏**].

Note:

- The current item or setting is highlighted on the display.

Menu	Sub-menu	Sub-menu 2 Details (default setting)	
Time Settings	Set Date & Time	page 13	
	Alarm	page 23	
Ringer Setup	Ringer Volume	For handset (Maximum) ¹	
	Ext. Ringtone (External ringtone)	For outside calls ("Ringtone 1") ^{2, 3}	
	Night Mode	Start/End (23:00/06:00):	page 23
		On/Off ("Off"):	page 23
		Ring Delay ("60 sec."):	page 24
Select Category	page 24		
Display Setup	Wallpaper	("Wallpaper1")	
	Display Colour	("Colour1")	
	Standby Display	("Off") ⁴	
	Select Language	("English") ⁵ : page 13	
	Contrast	("Contrast 3")	
Registration	Register H.set (Register handset)	page 40	
Select Base	—	("Auto"): page 41	

Handset Settings

Menu	Sub-menu	Sub-menu 2 Details (default setting)
Other Options	Keytones	("On")
	Auto Talk	("Off"): page 16

*1 When the ringer volume is turned off, \mathcal{R} is displayed and the handset does not ring for outside calls.

However even when the ringer volume is turned off, the handset rings:

- at the minimum level for alarm and intercom calls
- at the maximum level for paging

*2 If you select one of the melody ringtones, the ringtone will continue to sound for several seconds if the caller hangs up before you answer. You may hear a dial tone or no one on the line when you answer a call.

*3 The preset melodies in this product are used with permission of © 2006 Copyrights Vision Inc.

*4 "Off": Displays the current date and time only.

"Handset Number": Displays the handset number such as "[1]".

"Base Number": Displays the base unit number such as "-1-".

*5 The default display language will be as follows if you select the following regional codes when changing the unit's region setting (page 26):

"Other" = "English"


 
"Česká republika" = "Čeština"

"Slovensko" = "Slovenčina"

Special instructions for time settings

Alarm

 
An alarm will sound for 3 minutes at the set time once or daily. Set the date and time beforehand (page 13).

- 1  (centre of joystick) →  → **OK**
- 2 **[▲]/[▼]**: “Time Settings” → **OK**
- 3 **[▲]/[▼]**: “Alarm” → **OK** 2 times
- 4 **[▲]/[▼]**: Select an alarm mode. → **OK**

“Off”
Turns alarm off. Press **OK** again, then press **[*][0]** to finish.

“Once”
The alarm sounds once at the set time. Enter the desired date and month.

“Daily”
An alarm sounds daily at the set time.

- 5 Enter the desired hour and minute. → **OK**
- 6 **[▲]/[▼]**: Select the desired ringtone. → **OK**
- 7 **[▲]/[▼]**: “Save” → **OK** → **[*][0]**
 - When the alarm is set,  is displayed.

Note:

- To stop the alarm, press any dial key.
- When in talk or intercom mode, the alarm will not sound until the call has ended.
- If you select “Once”, the setting will change to “Off” after the alarm sounds.

Special instructions for ringer setup

Night mode


 
Night mode allows you to select a block of time during which the handset will not ring for outside calls. This feature is useful for times when you do not want to be disturbed, for example, while sleeping.

Using the handset phonebook’s category feature (page 18), you can also select categories of callers whose calls will override night mode and ring the handset (Caller ID subscribers only). Set the date and time beforehand (page 13).


 
Note:

- We recommend turning the base unit ringer off (page 25) in addition to turning the night mode feature on (KX-TG8220).


Setting the start and end time

- 1  (centre of joystick) →  → **OK**
- 2 **[▲]/[▼]**: “Ringer Setup” → **OK**
- 3 **[▲]/[▼]**: “Night Mode” → **OK**
- 4 **[▲]/[▼]**: “Start/End” → **OK**
- 5 Enter the desired hour and minute you wish to start this feature.
- 6 Enter the desired hour and minute you wish to end this feature.
- 7 **OK** → **[*][0]**

Turning night mode on/off



- 1  (centre of joystick) →  → **OK**
- 2 **[▲]/[▼]**: “Ringer Setup” → **OK**
- 3 **[▲]/[▼]**: “Night Mode” → **OK**

Handset Settings

- 4 [▲]/[▼]: "On/Off" → **OK**
- 5 [▲]/[▼]: "On" or "Off" → **OK**
→ [**7**⓪]
 - When the night mode is set,  is displayed.

Setting the ring delay



This setting allows the handset to ring during night mode if the caller waits long enough. After the selected amount of time passes, the handset will ring. If you select "No Ringing", the handset will not ring during night mode.

- 1  (centre of joystick) →  → **OK**
- 2 [▲]/[▼]: "Ringer Setup" → **OK**
- 3 [▲]/[▼]: "Night Mode" → **OK**
- 4 [▲]/[▼]: "Ring Delay" → **OK**
- 5 [▲]/[▼]: Select the desired setting.
→ **OK** → [**7**⓪]

Note:



- When the answering system answers the call, this feature does not work (KX-TG8220).

Selecting categories to bypass night mode

- 1  (centre of joystick) →  → **OK**
- 2 [▲]/[▼]: "Ringer Setup" → **OK**
- 3 [▲]/[▼]: "Night Mode" → **OK**
- 4 [▲]/[▼]: "Select Category" → **OK**
- 5 Press the desired category numbers. → **OK**
 - The selected category number will flash.
 - To cancel a selected category number, press the number again. The number will stop flashing.
- 6 [**7**⓪]

Base unit settings

To customise the base unit using the handset:

- 1  (centre of joystick)
- 2 Select  by pushing the joystick in any direction. → **OK**
- 3 Push the joystick up or down to select the desired item in the base unit settings menu. → **OK**
- 4 Push the joystick up or down to select the desired item in the sub-menu. → **OK**
- 5 Push the joystick up or down to select the desired setting then press **OK**.
 - This step may vary depending on the feature being programmed.
 - To exit the operation, press [**⏏**].

Note:

- The current item or setting is highlighted on the display.

Menu	Sub-menu	Details (default setting)
Ringer Volume ^{*1}	—	For base unit (<i>Medium</i>)
Call Options	Dial Mode	("Tone"): page 13
	Recall/Flash	Recall time ^{*2} ("600 msec." ^{*3})
	Call Restrict	page 26
Other Options	Base Unit PIN	Change base unit PIN ("0000"). ^{*4} – Enter the current 4-digit base unit PIN. ^{*5} – Enter the new 4-digit base unit PIN. → OK → [⏏]
	Repeater Mode	("Off"): page 42
	Country	Change the unit's region setting ("Other"): page 26

*1 KX-TG8220

*2 Change the recall time, if necessary, depending on the requirements of your service provider/telephone company or PBX.

*3 When using the unit in Czech/Slovakia, select "100 msec." as the recall time. If you change the unit's region setting/reset the base unit, the recall time will be reset to the default setting. In this case, select "100 msec." again.

*4 If you change the PIN, please make note of your new PIN. The unit will not reveal the PIN to you.



*5 If you forget your PIN, consult your nearest Panasonic service centre.

Base Unit Settings

Special instructions for call options



Setting call restriction

You can restrict selected handsets from dialling certain numbers. You can assign up to 6 phone numbers to be restricted, and select which handsets will be restricted. Storing area codes here will prevent the restricted handsets from dialling any phone number in that area code.

- 1  (centre of joystick) →  → **OK**
- 2 **[▲]/[▼]**: "Call Options" → **OK**
- 3 **[▲]/[▼]**: "Call Restrict" → **OK**
- 4 Enter the base unit PIN (default: "0000").
 - If you forget your PIN, consult your nearest Panasonic service centre.
- 5 Set which handsets will be restricted by pressing the desired handset number.
 - All the registered handset numbers will be displayed.
 - Flashing numbers indicate call restriction is turned on for the corresponding handset.
 - To turn call restriction off for a handset, press the number again. The number will stop flashing.
- 6 **OK**
- 7 **[▲]/[▼]**: Select a memory location. → **OK**
- 8 Enter the phone number or area code to be restricted (8 digits max.). → **OK** → **[*0]**

- To erase a restricted number, press **[C/ⓧ]**.

Changing the unit's region setting/Resetting the base unit

- 1  (centre of joystick) →  → **OK**
- 2 **[▲]/[▼]**: "Other Options" → **OK**
- 3 **[▲]/[▼]**: "Country" → **OK**
- 4 **[▲]/[▼]**: Select the desired country. → **OK**

"Other" = countries except Czech and Slovakia

 
"Česká republika" = Czech

"Slovensko" = Slovakia

- 5 **[▲]/[▼]**: "Yes" → **OK** → **[*0]**

Note:



- The following items will be deleted or reset to their default settings:
 - Settings listed on page 25, 33, 38
 - All SMS messages
 - Caller list
- The following items will be retained:
 - Date and time
 - Repeater mode
 - Recordings, including your greeting message, caller messages, and recorded conversations (KX-TG8220)
- If you select the desired country in step 4, the following default settings will be changed for the selected country's default settings:
 - Language (page 21)
 - Language used for answering system announcements (KX-TG8220)
- According to your country selection in step 4, the answering system

 
 
 
 


Base Unit Settings



announcement language changes as follows:

- "Other" = English
 - "Česká republika" = Czech
 - "Slovensko" = Slovakia
- After changing the unit's region setting/resetting the base unit,  will flash on the handset momentarily. This is normal. The handset can be used once  stops flashing.



Caller ID Service

Using Caller ID service

Important:

- This unit is Caller ID compatible. To use Caller ID features (such as displaying caller phone numbers), you must subscribe to Caller ID service. Consult your service provider/telephone company for details.

Caller ID features

When an outside call is received, the caller's phone number will be displayed.

- Phone numbers of the last 50 callers will be logged in the caller list.
- While listening to a message recorded by the answering system using the handset, you can call back the caller without having to dial the phone number (KX-TG8220; page 37).
- When caller information is received and it matches a phone number stored in the unit's phonebook:
 - The stored name will be displayed and logged in the caller list.
 - The handset will use the display colour and ringtone assigned to the caller's category.
- If the unit is connected to a PBX system, you may not receive the caller information.
- When the caller dialed from an area which does not provide Caller ID service, "Out of Area" will be displayed.
- When the caller requested not to send caller information, either no information or "Private Caller" will be displayed.

Missed calls

If a call is not answered, the unit treats the call as a missed call. → and the

number of missed calls are shown on the display. This lets you know if you should view the caller list to see who called while you were out.

Category features for handset phonebook

Categories can help you identify who is calling by using different ringtones and display colours for different categories of callers. When adding an entry to the handset phonebook you can assign it to the desired category (page 18). When a call is received from a caller assigned to a category, the category's display colour and ringtone you selected are used.

Changing category ringtones

If you select "Ext. Ringtone", the unit will use the external ringtone you set on page 21 when calls from this category are received. The default setting is "Ext. Ringtone".

- 1 [M] (left soft key) → [M]
- 2 [▲]/[▼]: "Category" → OK
- 3 [▲]/[▼]: Select a category. → OK
- 4 [▲]/[▼]: Select the current setting of the category ringtone. → OK
- 5 [▲]/[▼]: Select the desired ringtone. → OK → [X] [O]

Changing category display colours

If you select "Display Colour", the unit will use the display colour you set on page 21 when calls from this category are received. The default setting is "Display Colour".

- 1 [M] (left soft key) → [M]
- 2 [▲]/[▼]: "Category" → OK
- 3 [▲]/[▼]: Select a category. → OK
- 4 [▲]/[▼]: Select the current setting of the category colour. → OK

Caller ID Service

- 5 **[▲]/[▼]**: Select the desired colour.
→ **OK** → **[↶⊙]**

Caller list

Viewing the caller list and calling back

- 1 **[⊞]** (centre of joystick) → **↶** → **OK**
- 2 Push the joystick down to search from the most recent call, or push the joystick up to search from the oldest call.
 - If the item has already been viewed or answered, “✓” is displayed, even if it was viewed or answered using another handset.
 - To erase the item, press **✕**. → **[▲]/[▼]**: “Yes” → **OK**

- 3 **[↶]**

Editing a caller's phone number before calling back

- 1 **[⊞]** (centre of joystick) → **↶** → **OK**
- 2 **[▲]/[▼]**: Select the desired entry.
→ **[⊞]**
- 3 **[▲]/[▼]**: “Edit and Call” → **OK**
- 4 Edit the number.
 - Press dial key (**[0]** to **[9]**) to add, **[C/✕]** to delete.

- 5 **[↶]**

Erasing caller information

- 1 **[⊞]** (centre of joystick) → **↶** → **OK**
- 2 **[▲]/[▼]**: Select the desired entry.
→ **[⊞]**

- 3 **[▲]/[▼]**: “Erase” or “Erase All”
→ **OK**

- 4 **[▲]/[▼]**: “Yes” → **OK** → **[↶⊙]**

Storing caller information into the handset phonebook

- 1 **[⊞]** (centre of joystick) → **↶** → **OK**
- 2 **[▲]/[▼]**: Select the desired entry.
→ **[⊞]**
- 3 **[▲]/[▼]**: “Add Phonebook” → **OK**
- 4 Continue from step 3, “Adding entries”, page 18.



Caller ID Service

 
 
 
 


Voice mail service

Voice mail is an automatic answering service offered by your service provider/telephone company. If you subscribe to this service, your service provider/telephone company's voice mail system will answer calls for you when you are unavailable to answer the phone or when your line is busy. Messages are recorded by your service provider/telephone company, not your telephone. Please consult your service provider/telephone company for details of this service.

Note:

- To use the voice mail service provided by your service provider/telephone company rather than the unit's answering system, turn off the answering system (page 35). For details, see page 39 (KX-TG8220).



✉ SMS (Short Message Service)

Using SMS

SMS allows you to send and receive text messages between other fixed-line and mobile phones that support compatible SMS networks and features.

Important:



- To use SMS features, you must:
 - subscribe to Caller ID and/or appropriate service
 - confirm SMS is turned on
 - confirm the correct message centre numbers are stored

Consult your service provider/telephone company for details and availability.

Note:

- A total of 47 messages (at 160 characters/message) can be saved. Total number may be more than 47 if length of messages is less than 160 characters/message.
- If the unit is connected to a PBX system, you may not be able to use SMS features.



Turning SMS on/off

- 1  (centre of joystick) →  → **OK**
- 2 **[▲]/[▼]**: “Settings” → **OK**
- 3 **[▲]/[▼]**: “SMS On/Off” → **OK**
- 4 **[▲]/[▼]**: “On” or “Off” → **OK** → **[↶⊙]**

Storing SMS message centre numbers

SMS message centre telephone numbers must be stored in order to send and receive SMS messages. Consult your service provider/telephone company for more information.

- If you change the unit’s region setting/reset the base unit, the stored message centre numbers will be deleted (page 26). In this case, store the numbers again.

- 1  (centre of joystick) →  → **OK**
- 2 **[▲]/[▼]**: “Settings” → **OK**
- 3 **[▲]/[▼]**: “Message Centre1” or “Message Centre2” → **OK**
- 4 Edit the number as necessary. → **OK**
- 5 **[▲]/[▼]**: “Save” → **OK** → **[↶⊙]**



Note:

- For PBX users:
 - You need to add the PBX line access number and a dialling pause to the beginning of the Message Centre 1 phone number.
 - If you only use the Message Centre 1 phone number for SMS, store the Message Centre 1 phone number as is (without adding a line access number or dialling pause) to Message Centre 2.

✉ SMS (Short Message Service)

 
Sending a message

Writing and sending a new message



- 1  (centre of joystick) → ✉ → **OK**
- 2 **[▲]/[▼]**: "Create" → **OK**
 - If "▲Use Last Text?" is displayed, you can use the text from the last message you created by pushing the joystick up.
- 3 Enter the message (page 44). → **OK**
- 4 Enter the destination phone number (20 digits max.). → **OK**
 - **Using the redial list:**
Press **OK** repeatedly to select the phone number. → **OK** 2 times
 - **Using the caller list:**
[▲]/[▼]: Select the party. → **OK** 2 times
 - **Using the handset phonebook:**
 → **[▲]/[▼]**: Select the handset phonebook entry. → **OK** 2 times
- 5 To save the message, select "Yes". → **OK**
- 6 To send the message, press **OK**.
 - To cancel sending, press **[✕]**.

Note:



- This unit supports SMS messages of up to 612 characters, however, the maximum number of characters you can send or receive may be limited by your SMS service provider/telephone company. Consult your SMS service provider/telephone company for details.

- If your message contains over 160 characters, the message is a long message and  is displayed. Your service provider/telephone company may treat long messages differently from other messages. Consult your service provider/telephone company for details.
- If your phone is connected to a PBX, store the PBX line access number (page 34).


Sending a saved message

- 1  (centre of joystick) → ✉ → **OK**
- 2 **[▲]/[▼]**: "Send List" → **OK**
- 3 To read a saved message, push the joystick up or down to select the message. → **OK**
- 4 To send the message, press . → **[▲]/[▼]**: "Send" → **OK**
- 5 Press and hold **[C/✕]** to erase all numbers.
- 6 Continue from step 4, "Writing and sending a new message", page 32.

Editing and sending a saved message

- 1  (centre of joystick) → ✉ → **OK**
- 2 **[▲]/[▼]**: "Send List" → **OK**
- 3 **[▲]/[▼]**: Select a message. → **OK**
- 4  → **[▲]/[▼]**: "Edit Message" → **OK**
- 5 Continue from step 3, "Writing and sending a new message", page 32.

Erasing saved messages

- 1  (centre of joystick) → ✉ → **OK**
- 2 **[▲]/[▼]**: "Send List" → **OK**

✉ SMS (Short Message Service)

- 3 **[▲]/[▼]**: Select a message. → **OK**
- 4 **[☐]** → **[▲]/[▼]**: “Erase” or “Erase All” → **OK**
- 5 **[▲]/[▼]**: “Yes” → **OK** → **[✕/○]**

Receiving a message

When an SMS message is received:

- “Receiving SMS Message” is displayed
- a tone is heard (if the handset ringer is turned on)
- **✉** is displayed with the total number of new (unread) SMS messages

Reading a received message

- 1 **[☐]** (centre of joystick) → **✉** → **OK**
- 2 **[▲]/[▼]**: “Receive List” → **OK**
- 3 **[▲]/[▼]**: Select a message.
 - Messages which have already been read are indicated by a “✓”, even if they were read using another handset.
 - To erase a message, press **[✕]**. → **[▲]/[▼]**: “Yes” → **OK**
- 4 Press **OK** to read the message content.

Note:

- To call the message sender, press **[☎]** or **[☎]**.

Replying to a message

- 1 While reading a received message, press **[☐]**.
- 2 **[▲]/[▼]**: “Reply” → **OK**
- 3 Enter a message (page 44). → **OK**
- 4 Edit the destination phone number and/or press **OK**.

- 5 Continue from step 5, “Writing and sending a new message”, page 32.

Editing/forwarding a message

- 1 While reading a received message, press **[☐]**.
- 2 **[▲]/[▼]**: “Edit Message” → **OK**
- 3 Continue from step 3, “Writing and sending a new message”, page 32.

Erasing received messages

- 1 While reading a received message, press **[☐]**.
- 2 **[▲]/[▼]**: “Erase” or “Erase All” → **OK**
- 3 **[▲]/[▼]**: “Yes” → **OK** → **[✕/○]**

Storing the sender's number in the handset phonebook

- 1 While reading a received message, press **[☐]**.
- 2 **[▲]/[▼]**: “Add Phonebook” → **OK**
- 3 Continue from step 3, “Adding entries”, page 18.

Editing the sender's number before calling back

- 1 While reading a received message, press **[☐]**.
- 2 **[▲]/[▼]**: “Edit and Call” → **OK**
- 3 Edit the number. → **[☎]**

SMS settings

If the base unit is reset to its default settings (page 26), the following SMS-related settings will be reset. The


 
✉ **SMS (Short Message Service)**

contents of the receive and send lists will be erased.

Setting (default setting)	Page
SMS on/off (Off)	31
Message Centre 1	31
Message Centre 2	31
PBX line access number (Off)	34

Storing the PBX line access number (for PBX users only)

Store your PBX line access number (4 digits max.) so that SMS messages are sent properly. When sending SMS messages to entries in the handset phonebook or redial list, the PBX line access number will be deleted.

- 1  (centre of joystick) →  → **OK**
- 2 **[▲]/[▼]**: "Settings" → **OK**
- 3 **[▲]/[▼]**: "PBX Access No." → **OK**
- 4 **[▲]/[▼]**: "On" → **OK**
- 5 Enter your PBX line access code and a dialling pause, if necessary.
→ **OK**
- 6 **[▲]/[▼]**: "Save" → **OK** → **[*]0**

Answering System Features

Answering system

Available for:
KX-TG8220

The answering system can answer and record calls for you when you are unavailable to answer the phone. You can also record phone conversations (page 17).

Important:

- Only 1 person can access the answering system (listen to messages, record a greeting message, etc.) at a time.
- When callers leave messages, the unit records the date and time of each message. Make sure the date and time have been set (page 13).

Memory capacity

The total recording capacity (including your greeting message, caller messages, and recorded conversations) is about 40 minutes. A maximum of 64 messages can be recorded.

Note:

- If message memory becomes full:
 - “Answer Sys. Full” is shown on the handset display
 - [▶] on the base unit flashes rapidly

Turning the answering system on/off

Using the base unit

Press [☎] to turn on/off the answering system.

- When the answering system is turned on, the answer on indicator lights up.

Using the handset

- 1 [☎] (centre of joystick) → [☎] → **OK**
- 2 [▲]/[▼]: “Answer On” or “Answer Off” → **OK** → [⏏]

Note:

- When the answering system is turned on, [☎] is displayed next to the battery icon.

Greeting message

When the unit answers a call, callers are greeted by a greeting message.

Recording a greeting message

You can record your own greeting message (50 seconds max.).



- 1 [☎] (centre of joystick) → [☎] → **OK**
- 2 [▲]/[▼]: “Record Greeting” → **OK**
 - Hold the handset about 20 cm away and speak clearly into the microphone.
- 3 Press [⏏] to stop recording.
- 4 [⏏]

Using a pre-recorded greeting message

If you erase or do not record your own greeting message, the unit plays a pre-recorded greeting message for callers and asks them to leave messages. If the message recording time (page 39) is set to “Greeting Only”, caller messages will not be recorded and the unit will play a different pre-recorded greeting message asking callers to call again.



Answering System Features

Playing back the greeting message

- 1  (centre of joystick) →  → **OK**
- 2 **[▲]/[▼]**: "Play Greeting" → **OK** → **[X]**

Erasing the greeting message


If you erase your own greeting message, the unit will play a pre-recorded greeting message for callers.

- 1  (centre of joystick) →  → **OK**
- 2 **[▲]/[▼]**: "Erase Message" → **OK**
- 3 **[▲]/[▼]**: "Erase Greeting" → **OK**
- 4 **[▲]/[▼]**: "Yes" → **OK** → **[X]**

Listening to messages

Listening to new/all messages

When you have new messages:

- **[▶]** on the base unit flashes
-  is displayed on the handset with the total number of new messages

Note:



- When **[▶]** on the base unit flashes rapidly, the message memory is full ("Memory capacity", page 35).

Using the base unit

Press **[▶]**.

- If new messages have been recorded, the base unit plays back new messages.
- If there are no new messages, the base unit plays back all messages.

Using the handset

- 1  (centre of joystick) →  → **OK**
- 2 **[▲]/[▼]**: "Play New Msg." or "Play All Msg." → **OK**

Operations during playback

■ To adjust the speaker volume:

- for the base unit, press **[▲]** or **[▼]**
- for the handset, push the joystick up or down

■ To repeat a message:

- for the base unit, press **[◀▶]**
- for the handset, push the joystick left

If pressed within the first 5 seconds of a message, the previous message will be played.

■ To skip a message:

- for the base unit, press **[▶▶]**
- for the handset, push the joystick right

■ To stop a message:

- for the base unit, press **[■]**
- for the handset, press **[■]**

■ To erase a message:



- for the base unit, press **[X]**
- for the handset, press **[X]** → **[▲]/[▼]**: "Yes" → **OK**

Erasing all messages

Using the base unit

Press **[X]** 2 times.

Using the handset

- 1  (centre of joystick) →  → **OK**
- 2 **[▲]/[▼]**: "Erase Message" → **OK**
- 3 **[▲]/[▼]**: "Erase All" → **OK**

Answering System Features

4 [▲]/[▼]: "Yes" → OK → [✕] [0]

Calling back (Caller ID subscribers only)

If caller information was received for the call, you can call the caller back while listening to a message.

- 1 Press [M] during playback.
- 2 [▲]/[▼]: "Call Back" → OK

Editing the number before calling back

- 1 Press [M] during playback.
- 2 [▲]/[▼]: "Edit and Call" → OK
- 3 Edit the number. → OK

Direct command operation using the handset

You can operate the answering system by pressing dial keys, rather than navigating through the menus.

To use the following commands:

[M] (centre of joystick) → [M] → OK

Key	Operation
[1]	Repeat message (during playback) ^{*1}
[2]	Skip message (during playback)
[3]	Enter the "Settings" menu
[4]	Play new messages
[5]	Play all messages
[6]	Play greeting message
[7][6]	Record greeting message
[8]	Turn answering system on

Key	Operation
[9]	Stop (recording, playback)
[0]	Turn answering system off
[*][4]	Erase currently playing message
[*][5]	Erase all messages
[*][6]	Erase greeting message

*1 If pressed within the first 5 seconds of a message, the previous message will be played.

Remote operation

Using a touch-tone phone, you can call your phone number from outside and access the unit to listen to messages or change answering system settings.

Important:

- In order to operate the answering system remotely, you must first turn on remote operation by setting a remote access code. This code must be entered each time you operate the answering system remotely.

Turning remote operation on

A 3-digit remote access code must be entered when operating the answering system remotely. This code prevents unauthorised parties from listening to your messages remotely.

- 1 [M] (centre of joystick) → [M] → OK
- 2 [▲]/[▼]: "Settings" → OK
- 3 [▲]/[▼]: "Remote Code" → OK
- 4 To turn on remote operation, enter a 3-digit remote access code.
 - To turn off remote operation, press [*].
- 5 OK → [✕] [0]

Answering System Features

Using the answering system remotely

- 1 Dial your phone number from a touch-tone phone.
- 2 After the greeting message starts, enter your remote access code.
 - The unit will announce the number of new messages.
- 3 Enter remote commands.

Note:

- You can hang up at any time.

Remote commands

Key	Operation
[1]	Repeat message (during playback) ^{*1}
[2]	Skip message (during playback)
[4]	Play new messages
[5]	Play all messages
[6]	Play greeting message
[7]	Record greeting message
[9]	Stop (recording, playback)
[0]	Turn answering system off
[*][4]	Erase currently playing message
[*][5]	Erase all messages
[*][6]	Erase greeting message (during greeting message playback)
[*][#]	End remote operation (or hang up)

*1 If pressed within the first 5 seconds of a message, the previous message will be played.

Turning on the answering system remotely

If the answering system is off, you can turn it on remotely.

- 1 Dial your phone number from a touch-tone phone.
- 2 Let the phone ring 9 times.
 - A long beep will be heard.
- 3 Enter your remote access code within 10 seconds after the long beep.
 - The greeting message is played back.
 - You can hang up, or enter your remote access code again and begin remote operation.

Answering system settings

If the base unit is reset to its default settings (page 26), the following answering system-related settings will be reset.



Setting (default setting)	Page
Answering system on/off (Answer On)	35
Remote access code (—)	37
Number of rings (4 Rings)	39
Caller's recording time (3 Minutes)	39
Call screening (On)	39

Answering System Features

Number of rings

You can change the number of times the phone rings before the unit answers calls. You can select 2 to 6 rings, or "Auto".

"Auto": The unit answers after 2 rings when new messages have been recorded, and after 5 rings when there are no new messages. If you call your phone from outside to listen to new messages (page 38), you will know that there are no new messages when the phone rings for the 3rd time. You can then hang up without being charged for the call.

- 1  (centre of joystick) →  → **OK**
- 2 **[▲]/[▼]**: "Settings" → **OK**
- 3 **[▲]/[▼]**: "Number of Rings" → **OK**
- 4 **[▲]/[▼]**: Select the desired setting. → **OK** → **[↶⊙]**

For voice mail service subscribers



Please note the following:

- To receive messages correctly with your voice mail service, we recommend that you do not use the unit's answering system. Make sure that the answering system is turned off (page 35).
- If you would rather use the unit's answering system than the voice mail service provided by your service provider/telephone company, ask your service provider/telephone company to deactivate your voice mail service. If your service provider/telephone company cannot do this, set this unit's "Number of Rings" setting so that this unit's answering system answers calls before your service provider/telephone company's voice mail service tries to answer your calls.

It is necessary to check the number of rings required to activate the voice mail service provided by your service provider/telephone company before changing this setting.



Caller's recording time

You can change the maximum message recording time allotted to each caller, or set the unit to greet callers but not record messages.

- 1  (centre of joystick) →  → **OK**
- 2 **[▲]/[▼]**: "Settings" → **OK**
- 3 **[▲]/[▼]**: "Recording Time" → **OK**
- 4 **[▲]/[▼]**: Select the desired setting. → **OK** → **[↶⊙]**

Call screening

While a caller is leaving a message, you can screen the call through the handset speaker.

- 1  (centre of joystick) →  → **OK**
- 2 **[▲]/[▼]**: "Settings" → **OK**
- 3 **[▲]/[▼]**: "Call Screening" → **OK**
- 4 **[▲]/[▼]**: "On" or "Off" → **OK** → **[↶⊙]**

Multi-unit Operation

Operating additional units

Additional handsets

Up to 6 handsets can be registered to a single base unit.

Important:

- The additional handset model recommended for use with this unit is noted on page 4. If other model handset is used, certain operations (handset settings, base unit settings, etc.) may not be available.
- Additional handsets will give you the freedom to, for example, have an intercom call with another handset while a third handset is on an outside call.

Additional base units



 
 
 
 
Handsets can be registered to up to 4 base units, allowing you to add additional base units and extend the area in which your handset(s) can be used. If a handset moves out of range of its base unit when "Auto" is selected on base unit selection (page 41), it will look for another base unit to make or receive calls. A base unit and the handsets it communicates with is called a "radio cell".

Note:

- Calls will be disconnected when the handset moves from one radio cell to another.

Registering a handset to a base unit

The supplied handset and base unit are pre-registered. When you purchase an additional handset, refer to the additional handset's installation manual for registration. If for some reason the handset is not registered to the base unit (for example, ∇ flashes even when the handset is near the base unit), register the handset.



- 1  (centre of joystick) →  → **OK**
- 2 \uparrow / \downarrow : "Registration" → **OK**
- 3 \uparrow / \downarrow : "Register H.set" → **OK**
- 4 \uparrow / \downarrow : Select a base unit number. → **OK**
 - This number is used by the handset as a reference only.
- 5 Proceed with the operation for your model.
 - **KX-TG8200/KX-TG8202**
Press and hold  on the base unit for about 5 seconds. (No registration tone)
 - **KX-TG8220**
Press and hold  on the base unit for about 5 seconds, until the registration tone sounds.
 - If all registered handsets start ringing, press  to stop, then repeat this step.
 - After pressing , the rest of this procedure must be completed within 90 seconds.
- 6 Wait until "Enter Base PIN" is displayed. → Enter the base unit PIN (default: "0000"). → **OK**

Multi-unit Operation

- If you forget your PIN, consult your nearest Panasonic service centre.
- When the handset has been registered successfully, Ψ will stop flashing. If the key tone is turned on (page 22), a confirmation tone will be heard.



Selecting a base unit

When "Auto" is selected, the handset will automatically use any available base unit it is registered to. When a specific base unit is selected, the handset will make and receive calls using that base unit only. If the handset is out of range of that base unit, no calls can be made.

- 1  (centre of joystick) →  → **OK**
- 2 **[▲]/[▼]**: "Select Base" → **OK**
- 3 **[▲]/[▼]**: Select the desired base unit number, or "Auto". → **OK**
 - The handset starts searching for the base unit.

Deregistering a handset



A handset can cancel its own registration (or the registration of another handset) that is stored in the base unit. This will allow the base unit to "forget" the handset.

- 1  (centre of joystick) →  → **OK**
- 2 Enter "335".
- 3 **[▲]/[▼]**: "Deregistration" → **OK**
 - The numbers of all handsets registered to the base unit are displayed.
- 4 Select the handset(s) you want to cancel, by pressing the desired handset number. → **OK**

- The selected handset number(s) will flash.
 - To cancel a selected handset number, press the number again. The number will stop flashing.
- 5 **[▲]/[▼]**: "Yes" → **OK**
 - A long beep will sound as each handset number disappears.
 - The handset does not beep when cancelling its own registration.
 - 6 **[✕]**

Cancelling a base unit

A handset can cancel a base unit that it is registered to. This allows the handset to "forget" the base unit.

- 1  (centre of joystick) →  → **OK**
- 2 **[▲]/[▼]**: "Registration" → **OK**
- 3 Enter "335".
- 4 **[▲]/[▼]**: "Cancel Base" → **OK**
- 5 Select the base unit(s) you want to cancel, by pressing the desired base unit number. → **OK**
 - The selected base unit number(s) will flash.
 - To cancel a selected base unit number, press the number again. The number will stop flashing.
- 6 **[▲]/[▼]**: "Yes" → **OK** → **[✕]**

Note:

- To register the handset to another base unit or to the same base unit again, see page 40.

Increasing the range of the base unit



You can increase the signal range of the base unit by using a DECT repeater. Please use only the Panasonic DECT repeater noted on page 4. Consult your Panasonic dealer for details.

Multi-unit Operation



Important:

- Before registering the repeater to this base unit, you must turn the repeater mode on.
- Do not use more than one repeater at a time.

Setting the repeater mode

- 1  (centre of joystick) →  → **OK**
- 2 **[▲]/[▼]**: "Other Options" → **OK**
- 3 **[▲]/[▼]**: "Repeater Mode" → **OK**
- 4 **[▲]/[▼]**: "On" or "Off" → **OK** → **[*0]**

Note:

- After turning repeater mode on or off,  will flash on the handset momentarily. This is normal. The handset can be used once  stops flashing.

Intercom between handsets

Intercom calls can be made between handsets in the same radio cell.

Example: When handset 1 calls handset 2

- 1 **Handset 1:**
[INT] → Press **[2]** (desired handset number).
- 2 **Handset 2:**
[↶]
- 3 When finished talking, press **[*0]**.


Transferring calls between handsets, conference calls

Outside calls can be transferred between 2 people in the same radio cell. 2 people in the same radio cell can have a conference call with an outside party.

Example: When handset 1 transfers a call to handset 2

- 1 **Handset 1:**
During an outside call, press **[INT]**.
→ Press **[2]** (desired handset number).
 - The outside call will be put on hold.
 - If there is no answer, press **[INT]** to return to the outside call.
- 2 **Handset 2:**
[↶]
 - Handset 2 can talk with handset 1.
- 3 **Handset 1:**
To complete the call transfer, press **[*0]**.
To establish a conference call, press **[3]**.

Transferring a call without speaking to the other handset user

- 1 During an outside call, press **[INT]**.
→ Press the desired handset number.
 -  flashes to indicate the outside call is on hold.
- 2 **[*0]**
 - The outside call rings at the other handset.

Multi-unit Operation**Note:**

- If the other handset user does not answer the call within 1 minute, the call will ring at your handset again.


Copying phonebook entries

You can copy handset phonebook entries to the handset phonebook of another compatible Panasonic handset.



Note:

- Category settings for phonebook entries are not copied.

Copying one entry

- 1 Find the desired handset phonebook entry (page 18). → 
- 2 **[▲]/[▼]**: "Copy" → **OK**
- 3 Enter the handset number you wish to send the handset phonebook entry to.
 - When an entry has been copied, "Completed" is displayed.
 - To continue copying another entry:
[▲]/[▼]: "Yes" → **OK** → Find the desired handset phonebook entry. → **OK**
- 4 **[📞]**

Copying all entries

- 1  (left soft key) → 
- 2 **[▲]/[▼]**: "Copy All" → **OK**
- 3 Enter the handset number you wish to send the handset phonebook entry to.
 - When all entries have been copied, "Completed" is displayed.

Useful Information

Character entry

The dial keys are used to enter characters and numbers. Each dial key has multiple characters assigned to it. The available character entry modes are Alphabet (ABC), Numeric (0-9), Greek (ABΓ), Extended 1 (AÄÅ), Extended 2 (ŠŠš), and Cyrillic (АБВ). For SMS messages, Alphabet (ABC), Numeric (0-9), Greek (ABΓ), and Extended (AÄÅ) modes are available. When in these entry modes except Numeric, you can select which character is entered by pressing a dial key repeatedly.

- Use the joystick to move the cursor.
- Press dial keys to enter characters and numbers.
- Press **[C/⌫]** to erase the character or number highlighted by the cursor. Press and hold **[C/⌫]** to erase all characters or numbers.
- Press **[*]** to switch between uppercase and lowercase.
- To enter another character located on the same dial key, push the joystick right to move the cursor to the next space, then press the appropriate dial key.

Character entry modes

Several character entry modes can be used when entering text. The characters that can be entered depend on the entry mode.

Characters available in each character entry mode

When the unit displays the character entry screen:

1/A/? (right soft key) → **[▲]/[▼]**: Select a character entry mode. → **OK**

Note:

- For character entry when writing SMS messages, see page 46.

Alphabet character table (ABC)

0	1	ABC 2	DEF 3	GHI 4	JKL 5	MNO 6	PQRS 7	TUV 8	WXYZ 9
Space	Space #	A B C	D E F	G H I	J K L	M N O	P Q R S	T U V	W X Y Z
0	& ' () *	2	3	4	5	6	7	8	9
	, - . / 1	a b c	d e f	g h i	j k l	m n o	p q r s	t u v	w x y z
		2	3	4	5	6	7	8	9

Numeric entry table (0-9)

0	1	ABC 2	DEF 3	GHI 4	JKL 5	MNO 6	PQRS 7	TUV 8	WXYZ 9
0	1	2	3	4	5	6	7	8	9

Useful Information

Greek character table (ΑΒΓ)

0	1	ABC2	DEF3	GHI4	JKL5	MNO6	PQRS7	TUV8	WXYZ9
Space 0	Space # & ' () * , - . / 1	Α Β Γ 2	Δ Ε Ζ 3	Η Θ Ι 4	Κ Λ Μ 5	Ν Ξ Ο 6	Π Ρ Σ 7	Τ Υ Φ 8	Χ Ψ Ω Ξ 9

Extended 1 character table (ΑĂĂ)

0	1	ABC2	DEF3	GHI4	JKL5	MNO6	PQRS7	TUV8	WXYZ9
Space 0	Space # & ' () * , - . / 1	Α Ă Ǻ Ă Ǻ Ǻ Ǻ Æ Β Ç Ç 2	Δ Ε Ę É Ę Ę Ë Ę 3	Γ Ğ Η Ι Ĩ Ĩ Ī Ī Ī 4	Κ Λ Μ 5	Ν Ń Ņ Ō Ő Ó Ô Ö Õ ø 6	Π Ρ Ś Ş 7	Τ Ů Ű Ú Ū Ŭ Ŭ Ů 8	Χ Ψ Χ Υ ŷ Ζ 9
		a à á â ä å â æ b ç ç 2	d e è é ê ë ë ě 3	g ģ h i ĩ ĭ ī ī ī 4	j k l 5	m n ñ o ö ó ô õ ö ø 6	p q r s ş 7	t u ù ú ũ ŭ ŭ Ů 8	w ŷ x y ŷ z 9

- The following are used for both uppercase and lowercase: ø Ś Ű ŷ

Extended 2 character table (ŚŠŠ)

0	1	ABC2	DEF3	GHI4	JKL5	MNO6	PQRS7	TUV8	WXYZ9
Space 0	Space # & ' () * , - . / 1	Α Ă Ǻ Ǻ Β C Ç Ç 2	Δ Ę E É Ę Ę Ë Ę 3	Γ Ğ Η Ι Ĩ Ĩ Ī Ī Ī 4	Κ Λ Ł Ł Ł 5	Μ Ń Ņ Ō Ő Ó Ô Ö Õ ø 6	Π Ρ Ś Ş 7	Τ Ů Ű Ú Ū Ŭ Ŭ Ů 8	Χ Ψ Χ Υ ŷ Ζ Ž 9
		a á á Ǻ b c Ç Ç 2	d ě e é Ę Ę ë ě 3	g ģ h i ĩ ĭ ī ī ī 4	j k l ł ł ł 5	m n ñ o ö ó ô õ ö ø 6	p q r ś ş 7	t t u Ů ú ũ ŭ ŭ Ů 8	w x y ŷ ŷ z ž ž ž 9

- The following are used for both uppercase and lowercase:

Ǻ Ć Ć Ę Ł Ł Ĺ Ń Ŕ Ś Ś ů ŷ ž ž ž

Cyrillic character table (АБВ)

0	1	ABC2	DEF3	GHI4	JKL5	MNO6	PQRS7	TUV8	WXYZ9
Space 0 Г Є І Ї ŷ	Space # & ' () * , - . / 1	А Б В Г 2	Д Е Ж З 3	И Й К Л 4	М Н О П 5	Р С Т У 6	Ф Х Ц Ч 7	Ш Щ Ъ Ы 8	Ь Э Ю Я 9

Useful Information

When writing SMS messages

Alphabet character table (ABC)

0	1	ABC 2	DEF 3	GHI 4	JKL 5	MNO 6	PQRS 7	TUV 8	WXYZ 9
Space 0	Space . @ / : ; * # + - 1 " ' , ! i ? ¿ _ € £ \$ ¥ () [] { } & % \ ^ ~ < > = □ §	A B C 2	D E F 3	G H I 4	J K L 5	M N O 6	P Q R S 7	T U V 8	W X Y Z 9
		a b c 2	d e f 3	g h i 4	j k l 5	m n o 6	p q r s 7	t u v 8	w x y z 9

Numeric entry table (0-9)

0	1	ABC 2	DEF 3	GHI 4	JKL 5	MNO 6	PQRS 7	TUV 8	WXYZ 9
0	1	2	3	4	5	6	7	8	9

Greek character table (ABΓ)

0	1	ABC 2	DEF 3	GHI 4	JKL 5	MNO 6	PQRS 7	TUV 8	WXYZ 9
Space 0	Space . @ / : ; * # + - 1 " ' , ! i ? ¿ _ € £ \$ ¥ () [] { } & % \ ^ ~ < > = □ §	A B Γ 2	Δ E Z 3	H Θ I 4	K Λ M 5	N Ξ O 6	Π Ρ Σ 7	T Υ Φ 8	X Ψ Ω 9

Extended character table (AÄÅ)

0	1	ABC 2	DEF 3	GHI 4	JKL 5	MNO 6	PQRS 7	TUV 8	WXYZ 9
Space 0	Space . @ / : ; * # + - 1 " ' , ! i ? ¿ _ € £ \$ ¥ () [] { } & % \ ^ ~ < > = □ §	A Á Ä Â Ã Ä Å Æ B C Ç 2	D E È É Ê Ë Ë F 3	G Ğ H I Ì Í Î Ï 4	J K L 5	M N Ñ O Ö Ø ø 6	P Q R S Ş ß 7	T U Ù Ú Û Ü Û V 8	W X Y Z 9
		a à á â ã ä å æ b c ç 2	d e è é ê ë ë f 3	g ğ h i ì í î ï 4	j k l 5	m n ñ o ö ø ø 6	p q r s ş ß 7	t u ù ú û ü ü v 8	w x y z 9

• The following are used for both uppercase and lowercase: ø Ş

Useful Information**Error messages**

Error message	Cause & solution
Answer Sys. Full *1	<ul style="list-style-type: none"> • Erase unnecessary messages (page 36).
Error *1	<ul style="list-style-type: none"> • Recording was too short. Try again.
Failed	<ul style="list-style-type: none"> • Phonebook copy failed. Confirm the other handset (the receiver) is in standby mode and try again.
Incomplete	<ul style="list-style-type: none"> • The receiver's phonebook memory is full. Erase the unnecessary phonebook entries from the other handset (the receiver) and try again.
Invalid Number	<ul style="list-style-type: none"> • You tried to send an SMS message to a phone number saved in the handset phonebook, caller list, or redial list that is over 20 digits long.
Memory Full	<ul style="list-style-type: none"> • The handset's phonebook memory is full. Erase unnecessary entries (page 19). • Message memory becomes full. Erase unnecessary messages (page 36). *1
No link to base. Move closer to base, try again.	<ul style="list-style-type: none"> • The handset has lost communication with the base unit. Move closer to the base unit and try again. • Unplug the base unit's AC adaptor to reset the unit. Reconnect the adaptor and try again. • The handset's registration may have been cancelled. Re-register the handset (page 40).
SMS Full	<ul style="list-style-type: none"> • Erase unnecessary messages (page 32, 33).
You must first subscribe to Caller ID.	<ul style="list-style-type: none"> • You must subscribe to Caller ID service. Once you receive caller information after subscribing to Caller ID service, this message will not be displayed.

*1 KX-TG8220

Useful Information



Troubleshooting

If you still have difficulties after following the instructions in this section, disconnect the base unit AC adaptor and turn off the handset, then reconnect the base unit AC adaptor and turn on the handset.


 


Telephone

Problem	Cause & solution
<p>☒ is flashing.</p>	<ul style="list-style-type: none"> ● The handset is not registered to the base unit. Register it (page 40). ● The handset is too far from the base unit. Move closer. ● The base unit AC adaptor is not connected. Check the connections. ● You are using the handset or base unit in an area with high electrical interference. Place the handset and base unit away from interference sources, such as antennas and mobile phones.
<p>The handset display is blank.</p>	<ul style="list-style-type: none"> ● The handset is in screen saver mode (page 12). Press [☒] to activate the handset display again. ● The handset is not turned on. Turn the power on (page 12).
<p>The handset will not turn on.</p>	<ul style="list-style-type: none"> ● Make sure that the batteries are installed correctly (page 11). ● Fully charge the batteries (page 11). ● Clean the charge contacts and charge again (page 12).
<p>I have changed the display language to a language I cannot read.</p>	<ul style="list-style-type: none"> ● Change the display language (page 13).

Useful Information

Problem	Cause & solution
I cannot make or receive calls.	<ul style="list-style-type: none"> ● The base unit AC adaptor or telephone line cord is not connected. Check the connections. ● If you are using a splitter to connect the unit, remove the splitter and connect the unit to the wall socket directly. If the unit operates properly, check the splitter. ● Disconnect the base unit from the telephone line and connect the line to a known working telephone. If the working telephone operates properly, contact our service personnel to have the unit repaired. If the working telephone does not operate properly, contact your service provider/telephone company. ● The dialling mode setting is incorrect. Set to “Tone” or “Pulse” as needed (page 13). ● You dialled a call restricted number (page 26). ● The key lock feature is turned on. Turn it off (page 17).
The unit does not ring.	<ul style="list-style-type: none"> ● The ringer volume is turned off. Adjust the ringer volume (page 21, 25). ● The night mode feature is turned on. Turn it off (page 23).
The batteries should be charging but the battery icon does not change.	<ul style="list-style-type: none"> ● Clean the charge contacts and charge again (page 12).
A busy tone is heard when [] is pressed.	<ul style="list-style-type: none"> ● The handset is too far from the base unit. Move closer and try again. ● Another handset is in use or the answering system is being used. Wait and try again later.
Static is heard, sound cuts in and out. Interference from other electrical units.	<ul style="list-style-type: none"> ● Place the handset and the base unit away from other electrical appliances. ● Move closer to the base unit. ● Your unit is connected to a telephone line with DSL service (page 52).
Noise is heard during a call.	<ul style="list-style-type: none"> ● You are using the handset or base unit in an area with high electrical interference. Place the handset and base unit away from interference sources, such as antennas and mobile phones.
The handset/base unit stops working while being used.	<ul style="list-style-type: none"> ● Disconnect the base unit AC adaptor and turn off the handset. Connect the base unit AC adaptor, turn on the handset and try again.
The handset beeps intermittently and/or  flashes.	<ul style="list-style-type: none"> ● Fully charge the batteries (page 11).

Useful Information

Problem	Cause & solution
I fully charged the batteries, but  still flashes.	<ul style="list-style-type: none"> • Clean the charge contacts and charge again (page 12). • It is time to replace the batteries (page 11).
I fully charged the batteries, but the operating time seems to be short.	<ul style="list-style-type: none"> • Wipe the battery ends (+, -) and the unit contacts with a dry cloth.
Caller information is not displayed.	<ul style="list-style-type: none"> • You need to subscribe to Caller ID service. Consult your service provider/telephone company for details. • Your unit is connected to a telephone line with DSL service (page 52).
I cannot register a handset to a base unit.	<ul style="list-style-type: none"> • The maximum number of base units (4) are already registered to the handset. Cancel unused base unit registrations from the handset (page 41). • The maximum number of handsets (6) are already registered to the base unit. Cancel unused handset registrations from the base unit (page 41). • You entered the wrong PIN. If you forget your PIN, consult your nearest Panasonic service centre. • Place the handset and the base unit away from other electrical appliances.
I do not know how to erase  (Missed call) from the display.	<ul style="list-style-type: none"> • There are unviewed missed calls remaining. View them using the following method. <ol style="list-style-type: none"> 1  (centre of joystick) →  → OK 2 Push the joystick down to search from the most recent call, or push the joystick up to search from the oldest call.

SMS (Short Message Service)

Problem	Cause & solution
I cannot send or receive SMS messages.	<ul style="list-style-type: none"> • You have not subscribed to the appropriate service. Consult your service provider/telephone company. • The SMS message centre number(s) are not stored or are incorrect. Store the correct numbers (page 31). • Message transmission was interrupted. Wait until the message has been sent before using other telephone functions. • Your unit is connected to a telephone line with DSL service (page 52).

Useful Information

Problem	Cause & solution
The SMS message centre number is logged in the caller list and the message is not received.	<ul style="list-style-type: none"> Someone tried to send you a message while SMS is turned off. Turn it on (page 31).
"FD" is displayed.	<ul style="list-style-type: none"> The unit could not connect to the SMS message centre. Confirm that the correct SMS message centre numbers are stored (page 31). Confirm that SMS is turned on (page 31).
"FE" is displayed.	<ul style="list-style-type: none"> An error occurred while sending the message. Try again.
"E0" is displayed.	<ul style="list-style-type: none"> Your phone number is permanently withheld or you have not subscribed to the appropriate service. Consult your service provider/telephone company.
"✓" is not displayed after I read a message.	<ul style="list-style-type: none"> When an error code ("FD", "FE", or "E0") is displayed, "✓" will not be displayed even if you have read the message.

Answering system (KX-TG8220)

Problem	Cause & solution
The unit does not record new messages.	<ul style="list-style-type: none"> The answering system is turned off. Turn it on (page 35). The recording time is set to "Greeting Only". Select "1 Minute" or "3 Minutes" (page 39). If you subscribe to the voice mail service, messages are recorded by your service provider/telephone company not your telephone. Change the unit's "Number of Rings" setting or consult your service provider/telephone company (page 39).
I cannot operate the answering system with the handset.	<ul style="list-style-type: none"> The base unit or another handset is being used. Wait for the other user to finish. A caller is leaving a message. Wait for the caller to finish. The handset is too far from the base unit. Move closer.
When I try to operate the answering system with the base unit, the answer on indicator on the base unit flashes for a few seconds and I cannot operate the answering system.	<ul style="list-style-type: none"> Another handset is being used. Wait for the other user to finish. A caller is leaving a message. Wait for the caller to finish.

Useful Information

Problem	Cause & solution
I cannot operate the answering system remotely.	<ul style="list-style-type: none">• You are entering the wrong remote access code. If you forget the remote access code, store a new remote access code (page 37).• Press each key firmly.• The answering system is turned off. Turn it on (page 38).• You are using a rotary/pulse telephone. Try again using a touch-tone phone.
While recording a greeting message or listening to messages, the unit rings and recording stops.	<ul style="list-style-type: none">• A call is being received. Answer the call and try again later.

For DSL users

We recommend connecting a filter (contact your DSL service provider) to the telephone line between the base unit and the telephone line jack.

Useful Information

Specifications

- **Standard:**
DECT (Digital Enhanced Cordless Telecommunications),
GAP (Generic Access Profile)
- **Number of channels:**
120 Duplex Channels
- **Frequency range:**
1.88 GHz to 1.90 GHz
- **Duplex procedure:**
TDMA (Time Division Multiple Access)
- **Channel spacing:**
1,728 kHz
- **Bit rate:**
1,152 kbit/s
- **Modulation:**
GFSK (Gaussian Frequency Shift Keying)
- **RF transmission power:**
Approx. 250 mW
- **Voice coding:**
ADPCM 32 kbit/s
- **Power source:**
220–240 V, 50 Hz
- **Power consumption**
Base unit^{*1}:
Standby: Approx. 2.1 W
Maximum: Approx. 6.0 W
Base unit^{*2}:
Standby: Approx. 2.2 W
Maximum: Approx. 6.1 W
Charger^{*3}:
Standby: Approx. 1.0 W
Maximum: Approx. 5.4 W
- **Operating conditions:**
5 °C–40 °C, 20 %–80 % relative air humidity (dry)
- **Dimensions:**
Base unit: Approx. 44 mm × 116 mm × 113 mm

- Handset:** Approx. 143 mm × 47 mm × 32 mm
- Charger^{*3}:** Approx. 46 mm × 77 mm × 87 mm
- **Mass (weight):**
Base unit^{*1}: Approx. 170 g
Base unit^{*2}: Approx. 190 g
Handset: Approx. 120 g
Charger^{*3}: Approx. 70 g

*1 KX-TG8200/KX-TG8202
*2 KX-TG8220
*3 KX-TG8202

- Note:**
- Specifications are subject to change.
 - The illustrations used in these operating instructions may differ slightly from the actual product.

Useful Information

Declaration of conformity form (For Czech and Slovakia)

Panasonic

Panasonic Communications Co., Ltd.
1-62, 4-chome, Minoshima, Hakata-ku, Fukuoka 812-8531 Japan

Declaration of Conformity 013538

Document No. PCTP-070047-1

(Issuer's name & address)

Panasonic Communications Co., Ltd.
Hakata-ku, Fukuoka, Japan

(Object of the declaration)

(Product) : Digital Enhanced Cordless Telephone
(Trade Name) : Panasonic
(Model Nr.) :
KX-TG8220E, KX-TG8220G, KX-TG8220FR, KX-TG8220FX, KX-TG8220JT, KX-TG8220PD
KX-TG8220NL, KX-TG8222E, KX-TG8222G
KX-TG8200E, KX-TG8200G, KX-TG8200FR, KX-TG8200FX, KX-TG8200SP, KX-TG8200JT,
KX-TG8200PD, KX-TG8200NL, KX-TG8200GR, KX-TG8200NE, KX-TG8200HG, KX-TG8200CX,
KX-TG8200TR, KX-TG8200SL, KX-TG8202E, KX-TG8202FX,
KX-TGA820E, KX-TGA820EX, KX-TGA820FX, KX-TGA820CX
AC Adaptor : PQLV207E, PQLV207CE, PQLV209E, PQLV209CE
Charger Unit : PQLV30056ZA
(Country of Origin): China

The object of the declaration described above is in conformity with the requirements of the following EU legislations and harmonized standards:

(Council Directive) : 1999/5/EC
(Harmonized Standards) : EN301 489-01 V1.6.1 (09-2005),
EN301 489-06 V.1.2.1 (08-2002), EN60950-1: 2001;
EN301 406 V1.5.1 (07-2003), EN50385: 2002, EN 50360: 2001

Signed for and on behalf of :

Printed Name : Toshiaki Sakiyama
Title : Assistant Director
Date of issue : 28th June, 2007

Contact:

 
Panasonic Services Europe
a Division of Panasonic Marketing Europe GmbH
Panasonic Testing Centre
Winsbergring 15, 22525 Hamburg, Germany

(Signature) : Hans-Joachim Habeck
(Printed Name) : Hans-Joachim Habeck
(Date) : 29.06.07

The object of the declaration described above <Object of the declaration> is in conformity with the requirements of the following EU legislations <1999/5/EC> and harmonized standards <Harmonized standards>.

Index

- A** Additional base units: 40
- Additional handsets: 40
- Alarm: 23
- Answering calls: 16
- Answering system: 35
 - Listening to messages: 36
 - Remote operation: 37
 - Settings: 38
 - Turning on/off: 35
- Auto talk: 16, 22
- B** Base unit
 - Cancelling: 41
 - Selecting: 41
 - Settings: 25
- Battery: 11, 12
- C** Caller ID service: 28
- Call privacy: 17
- Call restriction: 26
- Call share: 17
- Category: 18
 - Display colours: 28
 - Ringtones: 28
- Chain dial: 20
- Character entry: 44
- Conference calls: 42
- D** Date and time: 13
- Dialling mode: 13
- Display
 - Colour: 21
 - Contrast: 21
 - Icons: 8
 - Language: 13
 - Standby mode: 21
 - Wallpaper: 21
- H** Handset
 - Deregistering: 41
 - Locator: 16
 - Registration: 40
 - Settings: 21
- I** Intercom: 42
- K** Key lock: 17
- Keytones: 22
- M** Making calls: 15
- Missed calls: 28
- Mute: 16
- N** Night mode
 - Handset: 23
- O** One touch dial: 19
- P** Pause: 15
- Phonebook
 - Handset phonebook: 18
- Phonebook copy: 43
- PIN: 25
- Power on/off: 12
- R** Recall: 16, 25
- Recording
 - Greeting message: 35
 - Telephone conversations: 17
- Redialling: 15
- Region setting: 26
- Registration: 40
- Repeater: 41
- Ringtone: 21
- S** SMS feature: 31
- Speakerphone: 15
- T** Temporary tone dialling: 16
- Transfer calls: 42
- V** Voice enhancer: 16
- Voice mail: 30
- Volume
 - Receiver: 8, 15
 - Ringer (Base unit): 25
 - Ringer (Handset): 21
 - Speaker: 8, 15



CE0470

1999/5/EC

■ **Czech**
Sales Department
Panasonic Czech Republic, s.r.o.
Thámova 289/13 (Palác Karlín)
186 00 Praha 8
telefon: +420-236 032 511
centrální fax: +420-236 032 411
e-mail: panasonic.praha@eu.panasonic.com
e-mail: servis.praha@eu.panasonic.com
aktuální info na www.panasonic.cz

■ **Slovakia**
Sales Department
Panasonic Slovakia, spol. s r.o.
Štúrova 11, 811 02 Bratislava,
Slovenská republika
Tel. číslo: +421-2-5292-1423
Fax: +421-2-5292-1411
web: www.panasonic.sk

Panasonic Communications Co., Ltd.

1-62, 4-chome, Minoshima, Hakata-ku, Fukuoka 812-8531, Japan

Copyright:

This material is copyrighted by Panasonic Communications Co., Ltd., and may be reproduced for internal use only. All other reproduction, in whole or in part, is prohibited without the written consent of Panasonic Communications Co., Ltd.

© 2007 Panasonic Communications Co., Ltd. All Rights Reserved.



TG8200FX



PQQX16102ZA CC0707PS0

FX-2/3

