

6 REMOTE CONTROL UNIT

 
The DRA-F100 comes with a system remote control unit (RC-848).

Inserting the batteries


NOTES:

- Use R6P (AA) batteries in this remote control unit.
- Replace the batteries with new ones approximately once each year, though this depends on how frequently the remote control unit is used.
- Replace the batteries with new ones earlier if the remote control unit does not operate even from a short distance.
- Insert the batteries in the proper + and - direction, following the marks in the battery compartment.
- Remove the batteries when not using the remote control unit for extended periods of time.
- To avoid damage and leakage:
 - Do not use a new battery with an old one.
 - Do not use two different types of batteries.
 - Do not short-circuit, take apart, heat or dispose of batteries in flames.
- If the batteries should leak, carefully wipe the fluid out of the battery compartment, then insert new batteries.

- ① Open the battery compartment cover on the back of the remote control unit.

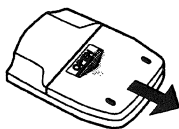

 - ② Insert the two R6P (AA) batteries, following the + and - marks in the battery compartment.

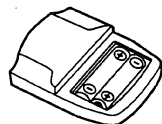


- ③ Close the cover of the battery compartment



Using the Remote Control Unit

Cautions on Use

 - The remote control unit may not operate if the remote sensor is exposed to direct sunlight or the strong light from a lighting fixture, or if there is an obstacle between the remote control unit and the remote sensor.
- Do not press buttons on the remote control unit and on the set at the same time. Doing so could result in malfunction.
- If the remote control unit is pointed away from the remote sensor during continuous operations (such as when turning the volume up or down), the operation will stop. If this happens, point the remote control unit at the remote sensor and press the button again.

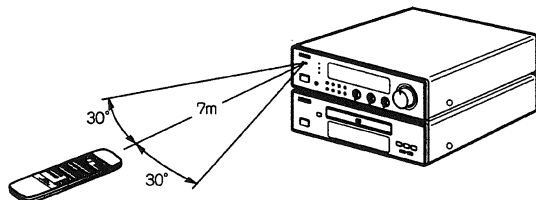

- The remote sensor is located on the receiver. Point the remote control unit at the remote sensor as shown on the diagram when operating it. The remote control unit will operate from a direct distance of approximately 7 meters, but this distance will be shortened if obstacles are present or if operated at an angle. (The remote control unit will operate at an angle of up to 30° in either direction.)

Remote Control Unit Part Names and Functions

MD operation buttons

- ▶ **(play) button**
Press this button to start playback.
- **(stop) button**
Press this button to stop playback.
- ◀◀ and ▶▶ **(automatic search buttons)**
Use these buttons to search for the beginning of the desired track.

POWER operation switch

Use this switch to turn on the power of the entire system or set the power to the standby mode.

SLEEP button

Press this button to set the sleep timer.

Number buttons

Press these buttons after pressing the TUNER button to recall preset stations.

When playing a CD, press these buttons after pressing the DIRECT or PROGRAM button to specify the desired track.

PRESET buttons

Use these buttons to recall preset stations on the tuner.

When the PRESET UP or DOWN button on the remote control unit is pressed while in the standby mode, the power turns on and the receiver begins operating.

BAND (AM/FM) selector button
TUNING buttons
MEMO button

Cassette deck operation buttons

- **(stop) button**
Press this button to stop the tape.
- ▶ **(forward play) button**
Press this to start playback or recording in the forward direction.
- ◀ **(reverse play) button**
Press this to start playback or recording in the reverse direction.

CD operation buttons

- **(stop) button**
Press this button to stop playback.
- ▶ **(play) button**
Press this button to start playback.
- ◀◀ and ▶▶ **(automatic search buttons)**
Use these buttons to search for the beginning of the desired track.

FUNCTION selector button

Press this button to switch the input (function).
The input changes in the following order each time this button is pressed: CD, TAPE, TUNER, PHONO, MD, AUX.

TUNER button

Press this button to switch the function to the tuner and to recall preset stations from the remote control unit using the number buttons.

VOLUME buttons

Use these to adjust the volume. The volume increases when the ▲ button is pressed and decreases when the ▼ button is pressed.

Cassette deck operation buttons

- **REC/REC MUTE button**
To start recording from the stop mode, press this button, then press ▶.

When this button is pressed during the recording, a blank section of approximately 5 seconds is created, after which the recording standby mode is set.

- ◀◀ **(rewind) button**
Press this button to rewind the tape.

Press this button during playback to set the music search mode (to find the beginning of selections).

- ▶▶ **(fast-forward) button**
Press this button to fast-forward the tape.

Press this button during playback to set the music search mode (to find the beginning of selections).

- **RESET button**
Press this button to reset the tape counter to "000000".

EON button

Press this button to turn EON mode ON and OFF.
The mode changes as follows each time the button is pressed.

```

OFF → EON TA → EON PTY → EON TA → EON PTY
    
```

PANEL button

This button is used to select the panel mode.

Press this button when receiving RDS stations to select the frequency, PS, PTY or RT display. The display mode changes as follows each time the button is pressed.

```

PS → PTY → Frequency → RT
    
```

Note that this button will not function if the reception is poor.

RDS button

Use this button to automatically tune to stations using the radio data system.

```

 
OFF → RDS → PTY → TP
    
```

PTY button

Press this button after selecting "PTY" with the RDS button to select one of the 15 program types.

CT button

Use this to correct the time of the clock on the DRA-F 100. Press this button when the time service of an RDS station is being properly received.

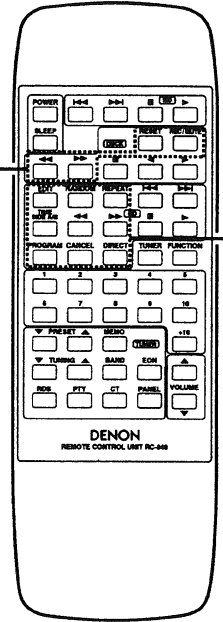

CD player operation buttons

- **DIRECT button**
Press this button for direct search on the CD player.
- ◀◀ and ▶▶ **(manual search) buttons**
Press these buttons during playback to move quickly forward or backward.
- **REPEAT button**
Press this button for repeat playback.
- **RANDOM button**
Press this button to play the tracks in random order.
- **PROGRAM button**
Press this button for programmed playback on the CD player.
- **CANCEL button**
Press this button to clear the last track from the program.
- **EDIT button**
Press this button for edited recording on a tape, dividing the tracks onto sides A and B according to the length of the tape.
- **TIME/SIDE A/B button**
• **TIME**
Press this button during the play or pause mode to switch the time display.
Normally the elapsed time for the track currently playing is displayed. When this button is pressed, the display switches to the remaining time for that track, the total remaining time on the disc, then back to the elapsed time per track.
During programmed playback, the total remaining time display indicates the total remaining time of the programmed tracks.
- **SIDE A/B**
Press this button during the editing operation to switch the display between sides A and B of the tape.
- The TIME/SIDE A/B button functions as the SIDE A/B button when it is pressed after the EDIT button is pressed and the tracks have been divided between sides A and B and before the play or pause button is pressed (before the recording mode is set).

The TIME/SIDE A/B button functions as the TIME button when it is pressed during the play, pause, or edited recording modes.