

# Rowenta®

**GUIDE DE PRISE EN MAIN RAPIDE**

**QUICK START GUIDE**

**GUÍA DE CONSULTA RÁPIDA**

**GUIDA RAPIDA**

**GUIA DE CONSULTA RÁPIDA**

**KORTE HANDLEIDING**

**KURZANLEITUNG**

**RYCHLÝ NÁVOD K OBSLUZE**

**RYCHLÝ NÁVOD NA OBSLUHU**

**GYORS HASZNÁLATBAVÉTELI ÚTMUTATÓ**

**GHID DE INIȚIERE RAPIDĂ**

**KRATKO PŮKOVODĚTVO ZA UPOTREBA**

**VODIČ ZA BRZI POČETAK**

**VODIČ ZA BRZI POČETAK**

**VODNIK ZA HITRI ZAGON**

**UPUTSTVO ZA BRZI POČETAK**



FR

EN

ES

IT

PT

NL

DE

CS

SK

HU

RO

BG

HR

SR

SL

 
BS

## EXTREM' AIR MOTION


[www.rowenta.com](http://www.rowenta.com)

# 1 MISE EN MARCHÉ


**1** Installation de la station.

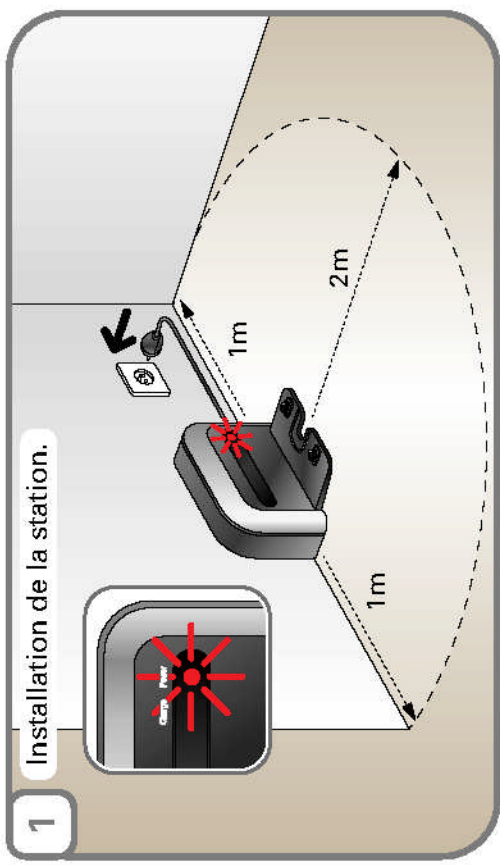

 
**2** Installation correcte / Installation incorrecte

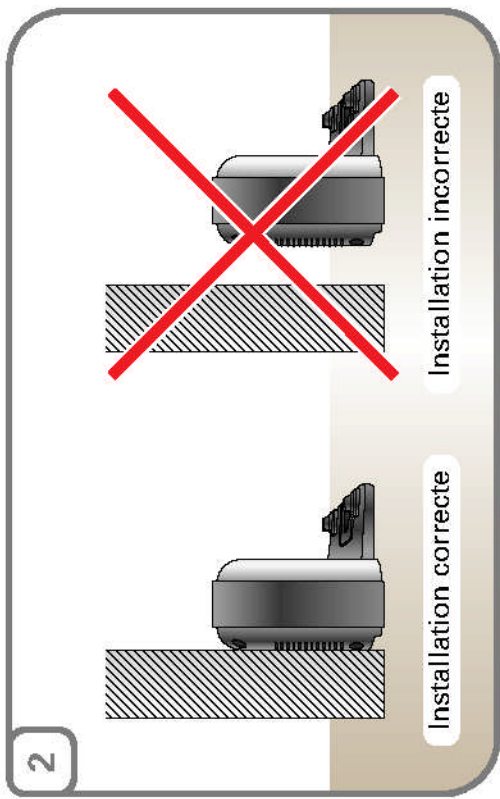

 
**3** Appuyez sur le bouton POWER du robot.

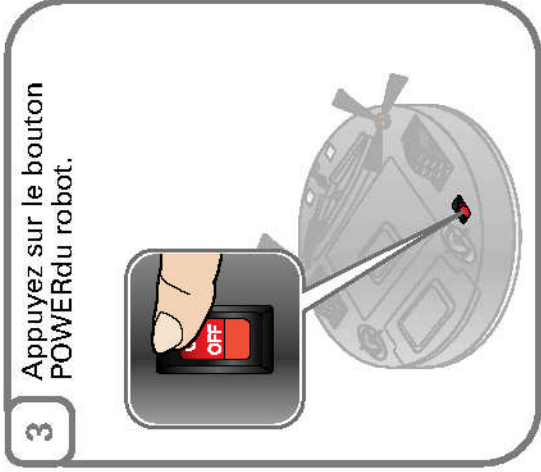

 **4** Appuyez sur le bouton CHARGE du robot / de la télécommande.

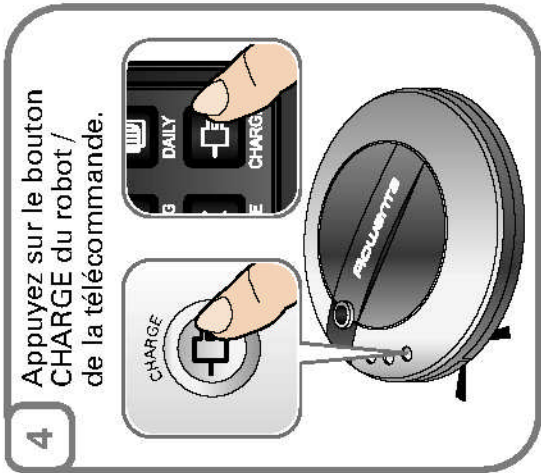

**5**

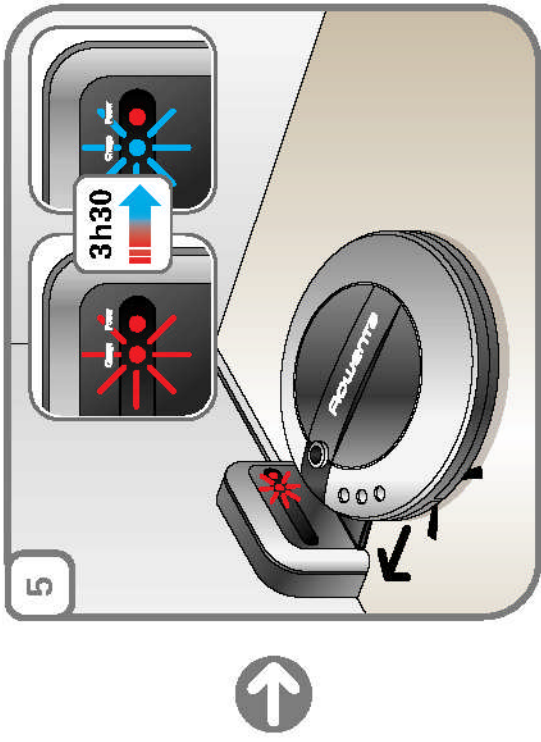 


## 2 MODES DE NETTOYAGE


FR

### 4 modes de nettoyage au choix (selon modèle)

 
1 **Mode Smart**

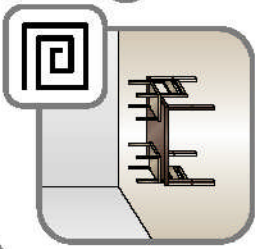


→

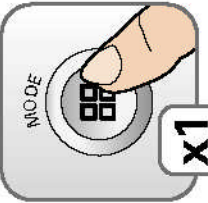 


x1




2 **Mode Random**



 
→

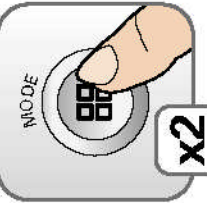


x2




3 **Mode Spot**



 
→

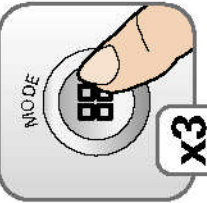



x3

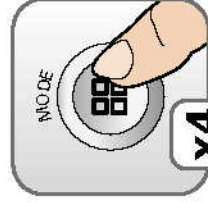 


4 **Mode Manuel**





x4

 5

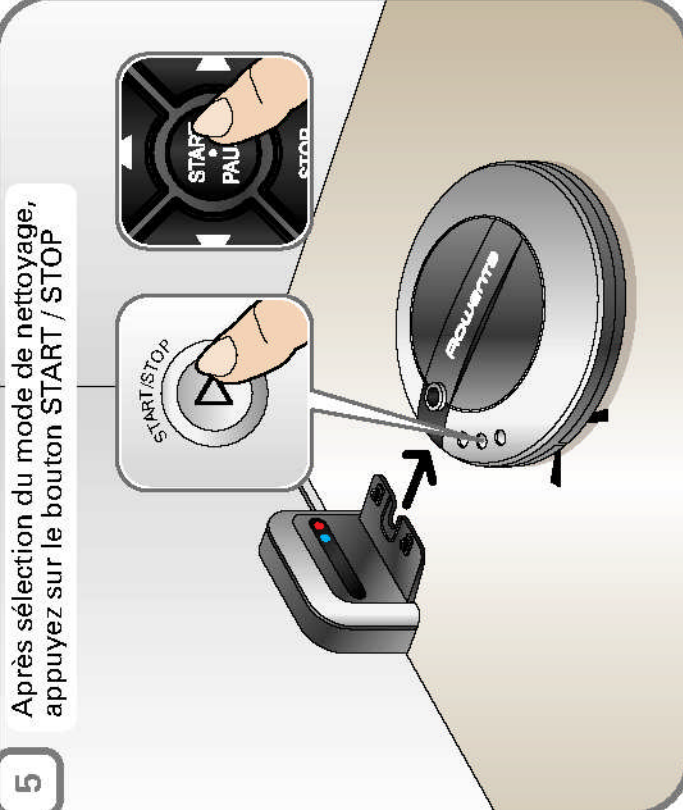

Après sélection du mode de nettoyage, appuyez sur le bouton START / STOP


### 3
 
## PROGRAMMER UN NETTOYAGE

Exemple : il est 12:00 PM. Lancer un nettoyage à 3:00 PM.


### A. Régler l'horloge du robot

1. Permet d'entrer l'heure actuelle.
2. Ces boutons font augmenter ou diminuer l'heure.
3. Permet de valider l'heure actuelle.

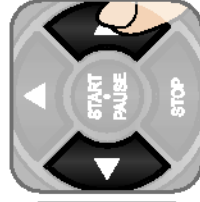

### B. Programmer le nettoyage

 1. Activez la programmation du nettoyage.
2. Ces boutons font augmenter ou diminuer l'heure.
3. Permet de valider l'heure du nettoyage.
4. Permet de régler le niveau de puissance.
5. Le nettoyage est programmé à 03:00 PM.

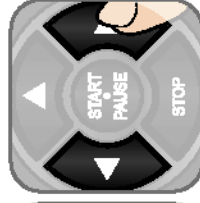

### C. Programmer le nettoyage quotidien



 
Permet d'activer le nettoyage quotidien.




FR

# 4 NETTOYAGE DU ROBOT


## A. Vidage du bac à poussières

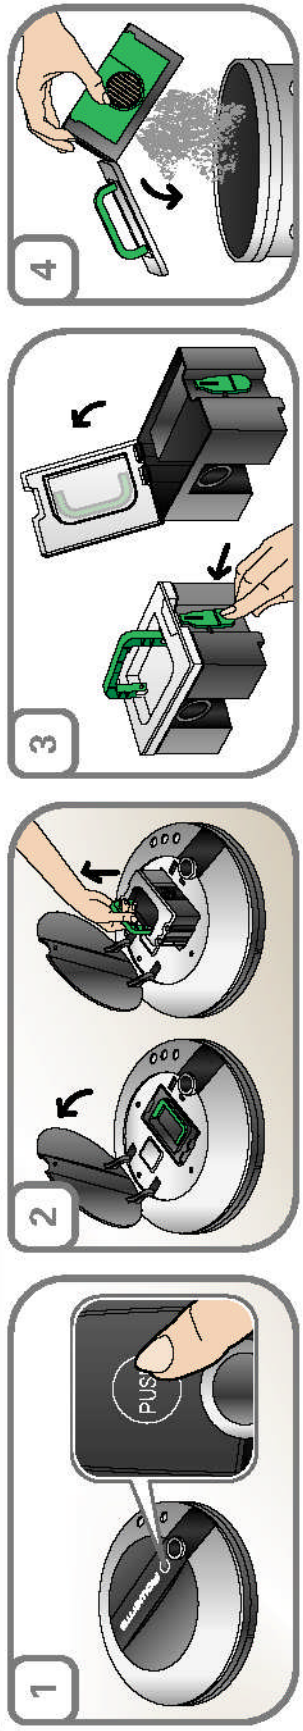


## B. Nettoyage du filtre mousse

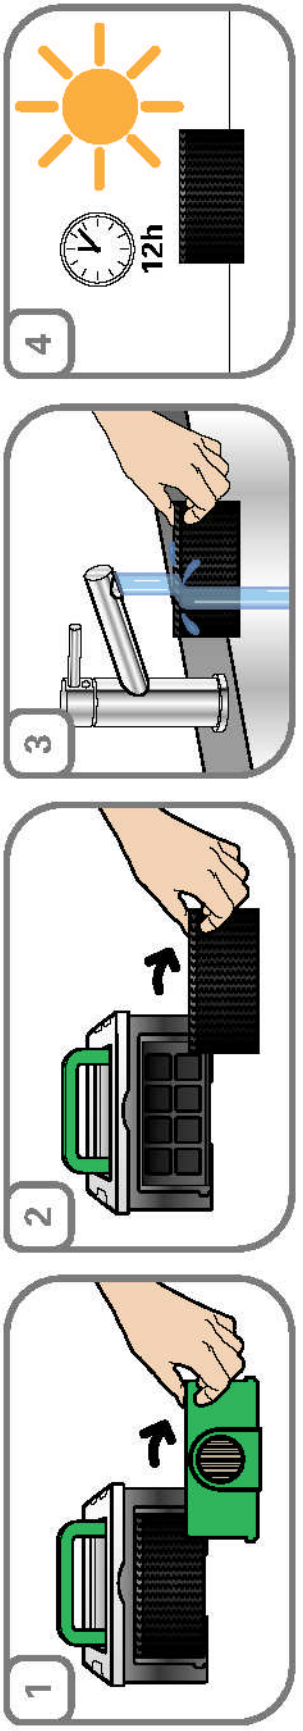 

## C. Nettoyage du filtre (H)epa

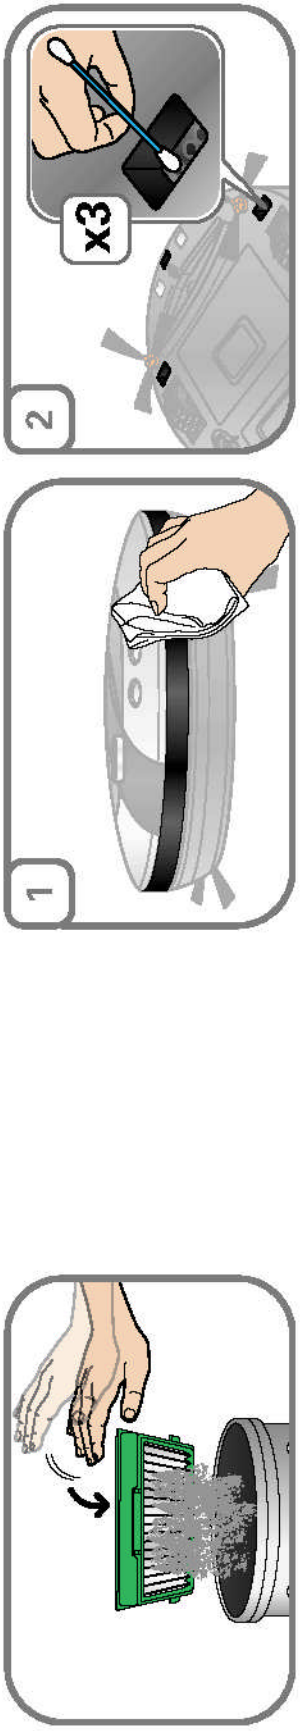 


## D. Nettoyage des capteurs

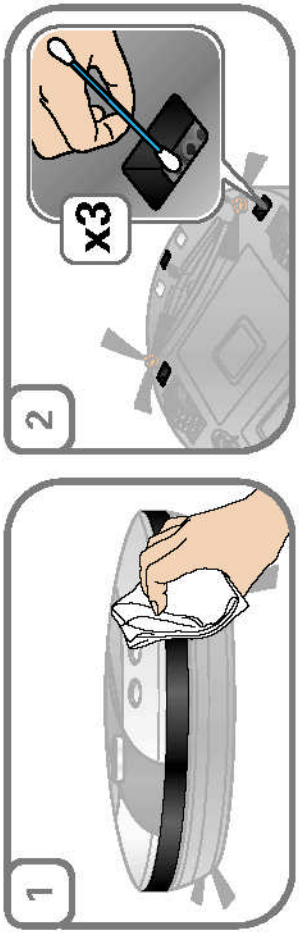 

x3

# 1 GETTING STARTED

 
**1** Installing the station

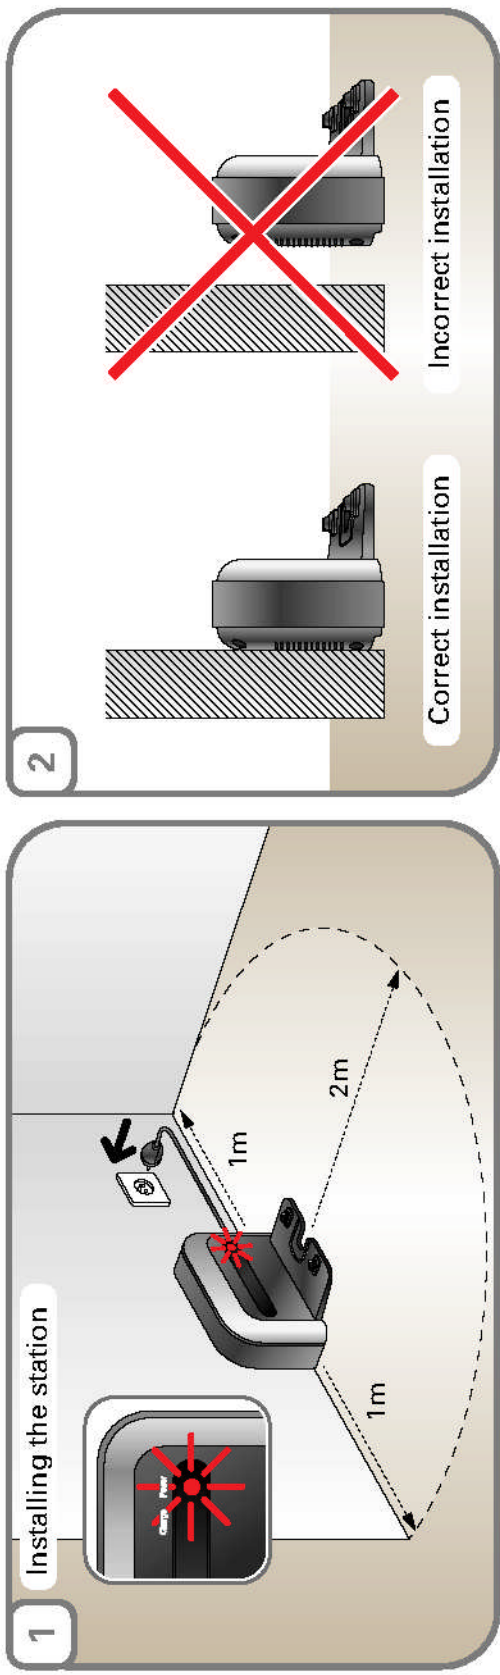


Correct installation

Incorrect installation


 
**3** Press the POWER button on the robot

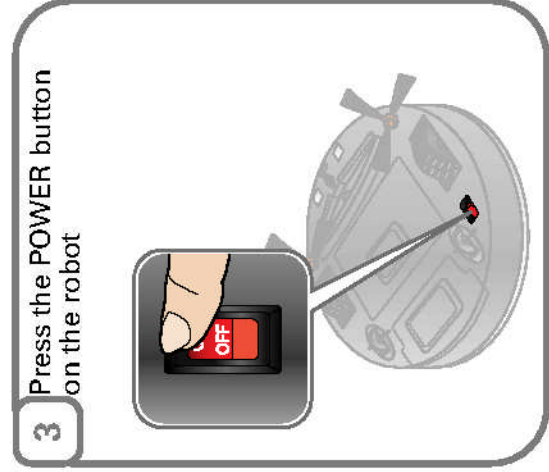

 **4** Press the CHARGE button on the robot/remote control

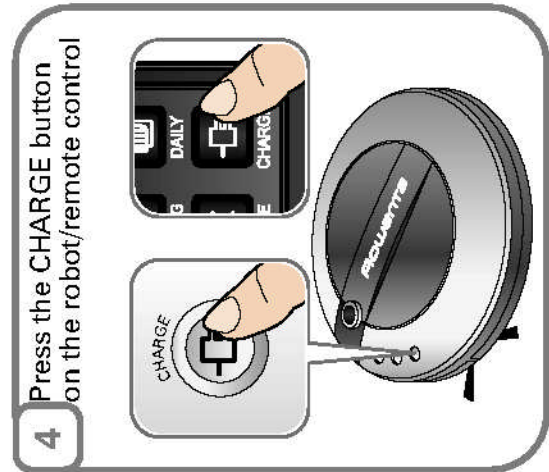

**5**

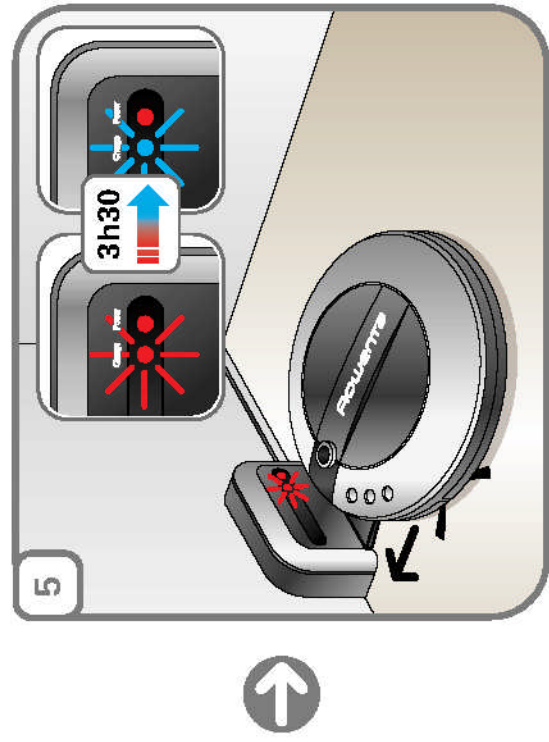  

## 2 CLEANING MODES

4 cleaning modes to choose from (depending on model).

EN

1 Smart Mode

x1

2 Random Mode

x2

3 Spot Mode

x3

4 Manual Mode

x4

5 After selecting the cleaning mode, press the START/STOP button



 
### 3

## PROGRAMMING CLEANING

Example: it is 12:30 PM. Start cleaning at 3:00 PM

### A. Set the robot timer

1. Allows you to enter the current time.
2. These buttons move the time forwards or backwards.
3. Allows you to confirm the current time.

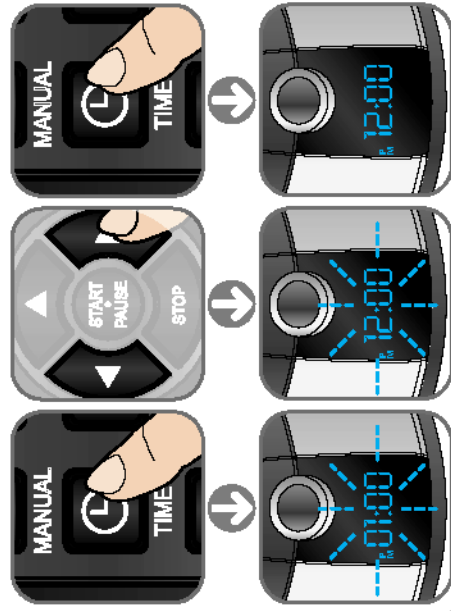

### B. Programme the cleaning

 
1. Activate the cleaning programming.
2. These buttons move the time forwards or backwards.
3. Allows you to confirm the cleaning time.
4. Allows you to regulate the power level.
5. The cleaning is programmed for 3:00 PM.



### C. Programme daily cleaning



Allows you to activate daily cleaning.












EN

## 4 CLEANING THE ROBOT

  
 
### A. Emptying the dust bag

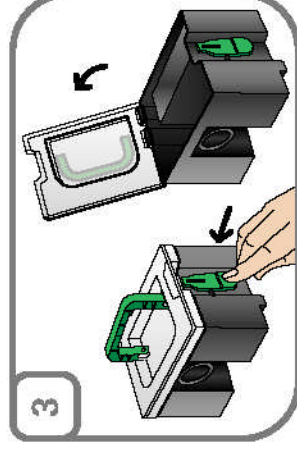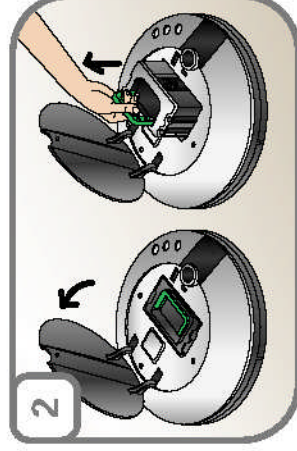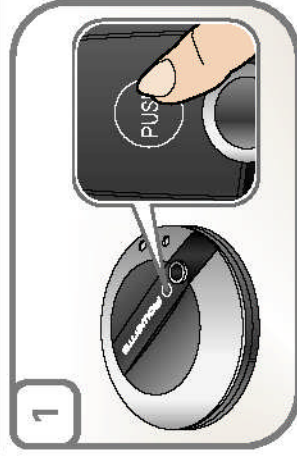

### B. Cleaning the foam filter

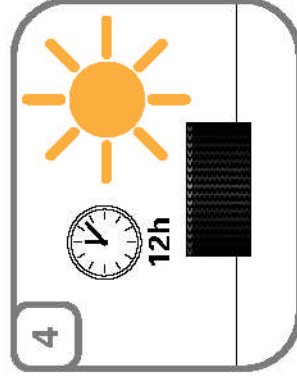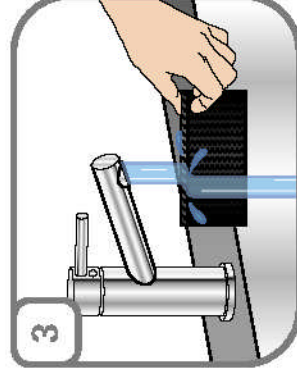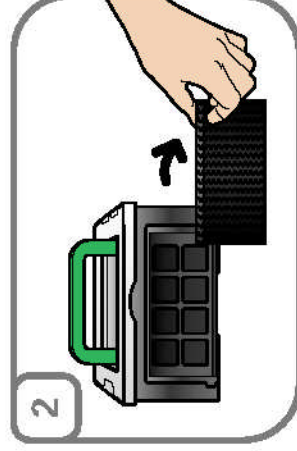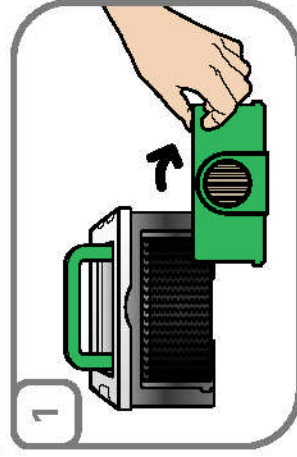    

### C. Cleaning the Hepa filter

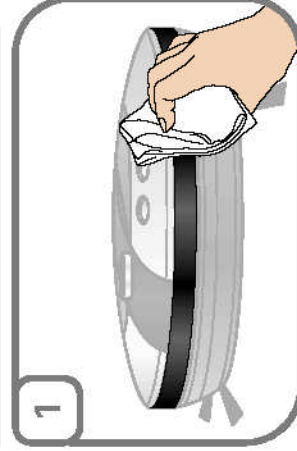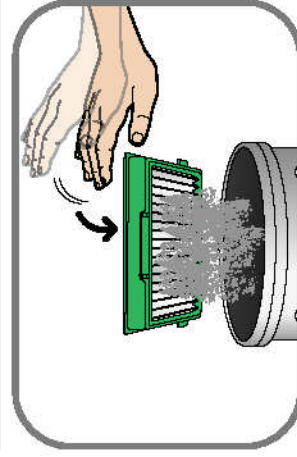  

### D. Cleaning the sensors

