 



User guide

English
Español
Français
Deutsch


3

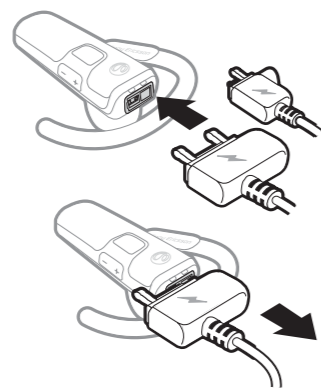

 First time charging: about 8 hours
Normal charging: about 2 hours
Primera carga: aproximadamente 8 horas
Carga normal: aproximadamente 2 horas

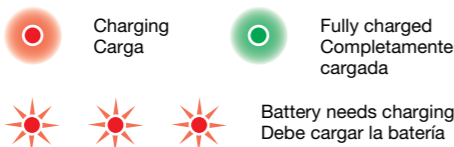

6

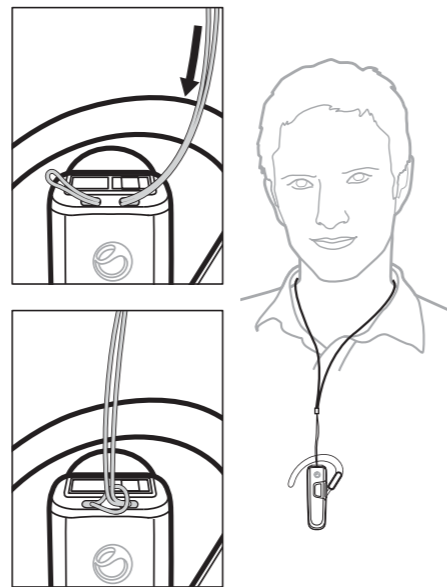 

English

The Bluetooth™ headset HBH-PV712 can be connected to any device with Bluetooth wireless technology that supports the handsfree or headset profile. This User guide focuses on usage with a Sony Ericsson mobile phone.

Charging the headset

Before using the HBH-PV712 for the first time, charge it with, for example, the supplied charger or your phone charger, see figure 3. For compatible chargers, see figure 4.

Pairing the headset

Before you can use the headset it has to be paired once with your phone. Upon a successful pairing, the headset will automatically connect to the phone as soon as it is turned on and within range.

To pair the headset with your phone

1. Make sure the headset is turned off.
2. Turn on the Bluetooth function in the phone. For instructions, see the phone User guide.
3. Turn on Bluetooth visibility in the phone. This makes the phone visible to other Bluetooth devices.
4. Place the phone within 20 cm (8 inches) from the headset.
5. Press and hold down the call handling key until the headset beeps, shows a steady green light and then flashes red and green alternately. If the indicator light only flashes green or red, simultaneously press and hold down both volume keys until the headset beeps and flashes green and red alternately.
6. Press Yes when *Add device?* appears in the phone. If required, the passcode is 0000. The headset beeps and flashes green when successfully paired.

Note: If auto pairing is not supported by your phone, or not successful, follow the first 5 steps above. Then add the headset to your phone as described in the phone User guide. The passcode is 0000.

Putting on the headset

See figure 5. Make sure you twist the speaker round into your ear. For left ear use, change the position of the ear hook as instructed.

Turning on and off the headset

To turn on the headset

- Press and hold down the call handling key until the indicator light shows a steady green light. It will then start flashing green.

To turn off the headset

- Press and hold down the call handling key until the indicator light shows a steady green light. It will then turn off.

Calling

When you have paired the headset with your phone, you can make and receive calls as long as the headset is turned on.

Solid objects, walls and a greater distance than 5 metres (16.5 feet) can affect the sound quality negatively. For best performance, wear the headset and the phone on the same side of your body.

To make a call

- Use the phone keys, and dial the number in the same way as you would normally do. The call is automatically activated in the headset.

To end a call

- Press the call handling key briefly.

To answer a call

- Press the call handling key briefly.

To reject a call

- Press and hold down the call handling key until you hear a short beep (after 2 seconds).

To redial the last number

- Press the call handling key twice within a second.

To turn off the microphone (mute)

- Simultaneously press both volume keys. Repeat to turn on the microphone again.

Adjusting volume

To adjust the ring volume

- When you are not engaged in a call, or while the phone is ringing, press a volume key.

To adjust the speaker volume

- During a call, press a volume key.

Calling using voice commands

Voice commands can be useful when you are using the headset and the phone is not close at hand. For more information on voice commands, see your phone User guide.

To make a call using voice commands

- Press the call handling key briefly, wait for a beep and say your command.

Note: Make sure voice commands are enabled and recorded in your phone before you try to use them.

Transferring sound

To transfer the sound from the phone to the headset

- During a call on the phone, press the call handling key briefly. The sound is transferred to the headset.

To transfer the sound from the headset to the phone

- See the phone User guide.

Resetting the headset

Reset the headset if it behaves unexpectedly.

To reset the headset

1. Simultaneously press and hold down both volume keys until the headset beeps and flashes red and green alternately.
2. Simultaneously press and hold down both volume keys until the headset turns off.
3. Pair the headset with the phone in the same way as you paired it the first time.

Battery

A battery that has been infrequently used, or a new one, could have reduced capacity. It may need to be recharged a number of times.

When the battery needs charging, the indicator light flashes red and you hear a low beep. If you do not charge the headset, it automatically turns off.

To check the battery status

- Simultaneously press both volume keys briefly:
 - one green flash – the battery needs charging soon
 - two green flashes – the battery is medium full
 - three green flashes – the battery is fully charged

Attaching the strap

To attach the enclosed strap, see figure 7.

Viewing regulatory information

To view the regulatory information, see figure 7.

Troubleshooting

No connection to the phone

- Make sure the headset is charged and within range of the phone.
- Check or redo the Bluetooth settings in the phone.
- Try to pair the headset again.

Unexpected behaviour

- Reset the headset.

Redial does not work

If the call list in the phone is empty you cannot use the redial function.

Español

Ajuste del volumen

Para ajustar el volumen del timbre de llamada

- Cuando no esté hablando por teléfono, o cuando éste esté sonando, pulse la tecla de volumen.

Para ajustar el volumen del altavoz

- Mientras habla por teléfono, pulse la tecla de volumen.

Llamadas mediante comandos de voz

Los comandos de voz pueden resultar muy útiles cuando utiliza un auricular y no tiene el teléfono a mano. Para ampliar información sobre los comandos de voz, consulte la Guía del usuario del teléfono.

Para realizar llamadas mediante comandos de voz

- Pulse brevemente la tecla de gestión de llamadas, espere a que suene un pitido y diga el comando.

Nota: Compruebe que los comandos de voz estén activados y que se hayan grabado en el teléfono antes de intentar utilizarlos.

Transferencia de sonido

Para transferir el sonido del teléfono al auricular

- Mientras habla por el teléfono, pulse brevemente la tecla de gestión de llamadas. El sonido se transfiere al auricular.

Para transferir el sonido del auricular al teléfono

- Consulte la Guía del usuario del teléfono.

Reinicio del auricular

Si el auricular funciona de forma anómala, reinicielo.

Para reiniciar el auricular

1. Mantenga pulsadas simultáneamente las dos teclas de volumen hasta que el auricular emita un pitido y parpadee en rojo y verde.
2. Pulse simultáneamente las dos teclas de volumen hasta que el auricular se apague.
3. Asocie el auricular con el teléfono siguiendo el mismo proceso que cuando lo asoció por primera vez.

Batería

Una batería que no se ha utilizado con frecuencia o una batería nueva pueden tener reducida la capacidad. Es posible que deba recargarla varias veces.

Cuando sea necesario cargar la batería, el indicador luminoso parpadeará en rojo y se oirá un leve pitido. Si no carga el auricular, se apagará automáticamente.

Para comprobar el estado de la batería

- Pulse breve y simultáneamente las dos teclas de volumen:
 - un parpadeo verde: es necesario cargar pronto la batería.
 - dos parpadeos verdes: la batería está medio cargada.
 - tres parpadeos verdes: la batería está totalmente cargada.

Colocación del cordón

Para sujetar el cordón adjunto, véase la ilustración 6.

Consulta de información reguladora

Para consultar la información reguladora, véase la figura 7.

Resolución de problemas

No hay conexión con el teléfono

- Asegúrese de que el manos libres esté cargado y dentro de la cobertura del teléfono.
- Compruebe o vuelva a configurar los ajustes de Bluetooth en el teléfono.
- Intente asociar de nuevo el auricular.

 
Funcionamiento anómalo

- Reinicie el auricular.


La rellamada no funciona

Esta función no se puede utilizar si la lista de llamadas está vacía.


1

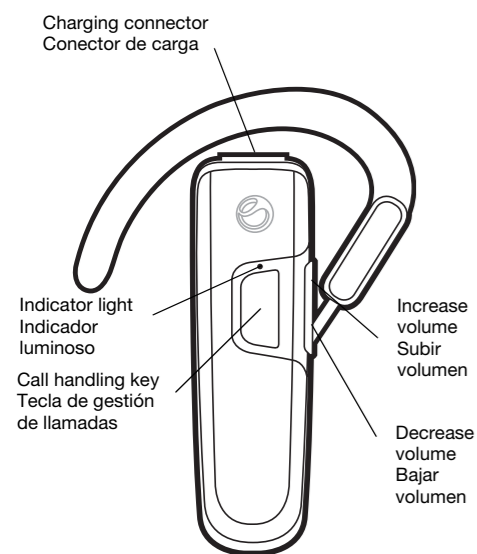


4

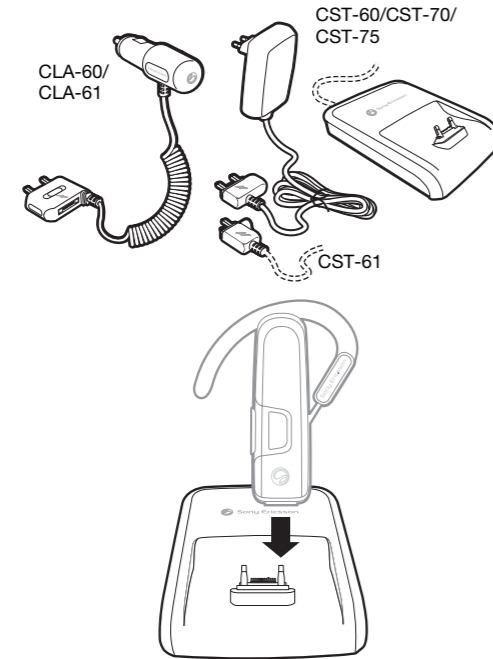 


7

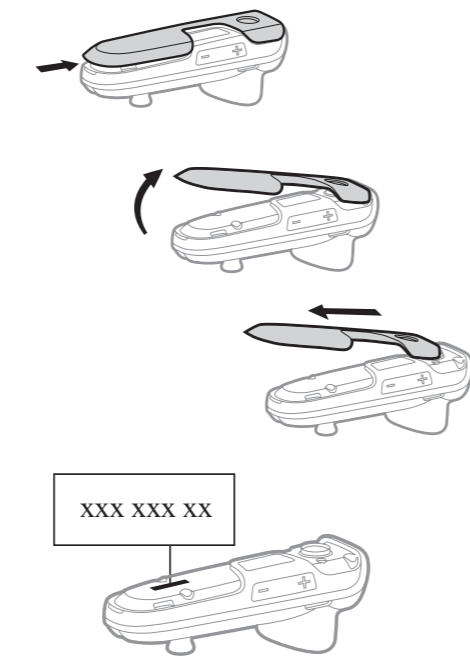 

2

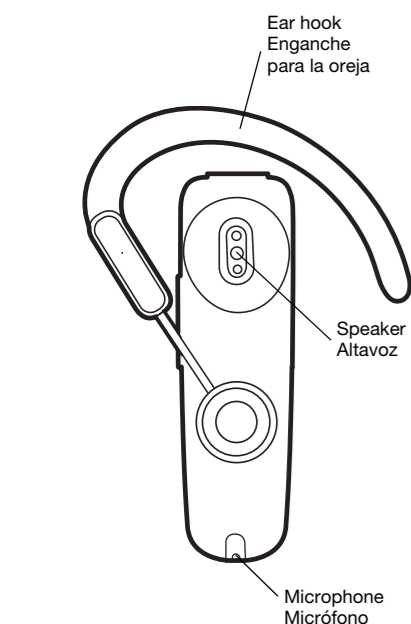 

5

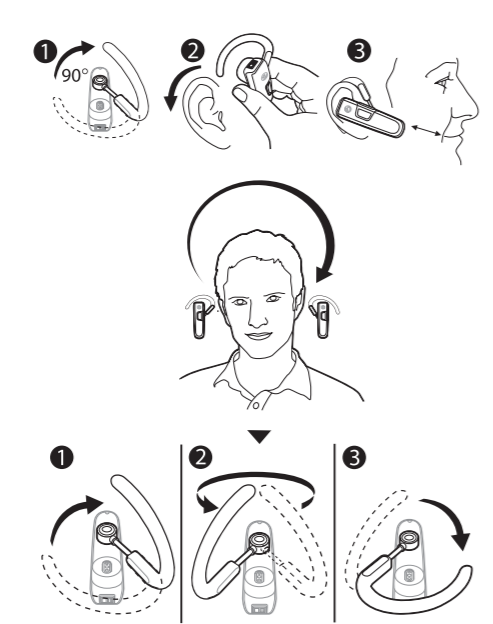 

FCC Statement
This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Declaration of conformity for HBH-PV712
We, Sony Ericsson Mobile Communications AB of Nya Vattenornet SE-221 88 Lund, Sweden declare under our sole responsibility that our product **Sony Ericsson type DDA-0002012** to which this declaration relates is in conformity with the appropriate standards EN 300 328/V1.7.1, EN 301 489-7/V1.3.1, EN 301 489-17/V1.2.1 and EN 60950-1:2006 following the provisions of Radio Equipment and Telecommunication Equipment directive 1999/5/EC. Lund, September 2007

Jacob Sten
CE 0682

Jacob Sten, Head of Product Business Unit Accessories
We fulfil the R&TTE Directive.
Cumplimos con la directiva R&TTE.
Nous nous conformons à la Directive R&TTE.
Die Richtlinie für Funk- und Fernmeldegeräte wird eingehalten.

