

Parts of the MA-1 and their functions

<div><div><div><div><div><div><div></div></div></div><div>LCD display</div>Speaker</div></div></div><div><div><div><div><div><div></div></div></div><div>Volume dial</div>Headphone jack</div></div></div><div><div><div><div><div><div></div></div></div><div>Power switch</div>START/STOP button</div></div></div><div><div><div><div><div><div></div></div></div><div>SOUND/CALIB button</div>BEAT/RHYTHM button</div></div></div><div><div><div><div><div><div></div></div></div><div>▼button</div>▲button</div></div></div><div><div><div><div><div><div></div></div></div><div>TEMPO/TAP button</div>TEMPO/TAP button</div></div></div></div>

Description et fonction des éléments du MA-1

<div><div><div><div><div><div><div></div></div></div><div>Ecran LCD</div>Haut-parleur</div></div></div><div><div><div><div><div><div></div></div></div><div>Commande de volume</div>Prise pour casque</div></div></div><div><div><div><div><div><div></div></div></div><div>Interrupteur</div>START/STOP bouton</div></div></div><div><div><div><div><div><div></div></div></div><div>Bouton SOUND/CALIB</div>Bouton BEAT/RHYTHM</div></div></div><div><div><div><div><div><div></div></div></div><div>Bouton ▼</div>Bouton ▲</div></div></div><div><div><div><div><div><div></div></div></div><div>Bouton TEMPO/TAP</div>Bouton TEMPO/TAP</div></div></div></div>

Bedienelemente und Funktionen des MA-1

<div><div><div><div><div><div><div></div></div></div><div>LC-Display</div>Lautsprecher</div></div></div><div><div><div><div><div><div></div></div></div><div>Lautstärkeregler</div>Kopfhörerbuchse</div></div></div><div><div><div><div><div><div></div></div></div><div>Netzschalter</div>START/STOP-Taster</div></div></div><div><div><div><div><div><div></div></div></div><div>BEAT/RHYTHM-Taster</div>▲-Taster</div></div></div><div><div><div><div><div><div></div></div></div><div>▼-Taster</div>▲-Taster</div></div></div><div><div><div><div><div><div></div></div></div><div>SOUND/CALIB-Taster</div>BEAT/RHYTHM-Taster</div></div></div></div>

Description et fonction des éléments du MA-1

<div><div><div><div><div><div><div></div></div></div><div>Pantalla LCD</div>Altavoz</div></div></div><div><div><div><div><div><div></div></div></div><div>Dial de Volumen</div>Jack para auriculares</div></div></div><div><div><div><div><div><div></div></div></div><div>Commutador de encendido</div>START/STOP botón</div></div></div><div><div><div><div><div><div></div></div></div><div>SOUND/CALIB botón</div>BEAT/RHYTHM botón</div></div></div><div><div><div><div><div><div></div></div></div><div>▼botón</div>▲botón</div></div></div><div><div><div><div><div><div></div></div></div><div>TEMPO/TAP botón</div>TEMPO/TAP botón</div></div></div></div>

各部の名称と操作方法

<div><div><div><div><div><div><div></div></div></div><div>液晶画面</div>スピーカー</div></div></div><div><div><div><div><div><div></div></div></div><div>ボリューム</div>ヘッドホン端子</div></div></div><div><div><div><div><div><div></div></div></div><div>電源スイッチ</div>スタート/ストップスイッチ</div></div></div><div><div><div><div><div><div></div></div></div><div>サウンド/キャリブスイッチ</div>▼スイッチ</div></div></div><div><div><div><div><div><div></div></div></div><div>▲スイッチ</div>スタート/ストップスイッチ</div></div></div></div>