

FI Asennusohje  
 S Installation instruktioner  
 N Installationsinstruktioner  
 DK Installationsinstruktus  
 NL Installatievoorschrift  
 D Montageanweisung  
 F Instructions d'installation  
 ES Instrucciones de montaje  
 I Istruzioni di montaggio

## ML6435B/ML7435E

Electric Linear Actuators  
 for Floating/Modulating Control

### INSTALLATION INSTRUCTIONS

		<p><b>A1-A8: Installation</b></p>
<p><b>A1</b></p>	<p><b>A2</b></p>	<p><b>A3</b></p>
<p><b>A4</b></p>	<p><b>A5</b></p> <p><b>A6</b></p>	<p><b>A6</b></p> <p><b>SOFTWARE CLASS A as per EN60730</b></p>

<p><b>A7</b></p>	<p><b>A8</b></p> <p>OPERATING MODE TYPE 2B as per EN60730</p> <p>24 Vac 230 Vac</p>	<p><b>B: Spring Return Test</b></p> <table border="1"> <tr> <td data-bbox="1010 264 1313 533"> <p><b>1</b></p> <p>W1 = </p> <p>Y = 10 V, 1 min.</p> <hr/> <p>W1 = </p> <p>Y = 0/2 V, 1 min.</p> </td> <td data-bbox="1313 264 1445 533"> <p><b>2</b></p> <p>24 Vac 230 Vac</p> </td> </tr> <tr> <td colspan="2" data-bbox="1010 533 1445 680"> <p><b>3</b>      10...30 sec.</p> </td> </tr> </table>	<p><b>1</b></p> <p>W1 = </p> <p>Y = 10 V, 1 min.</p> <hr/> <p>W1 = </p> <p>Y = 0/2 V, 1 min.</p>	<p><b>2</b></p> <p>24 Vac 230 Vac</p>	<p><b>3</b>      10...30 sec.</p>	
<p><b>1</b></p> <p>W1 = </p> <p>Y = 10 V, 1 min.</p> <hr/> <p>W1 = </p> <p>Y = 0/2 V, 1 min.</p>	<p><b>2</b></p> <p>24 Vac 230 Vac</p>					
<p><b>3</b>      10...30 sec.</p>						
<p><b>C: Manual</b></p>	<p><b>D1-D4: Dismounting</b></p> <p>24 Vac 230 Vac</p>	<p><b>D1</b></p>				
<p><b>D2</b></p>	<p><b>D3</b></p>	<p><b>D4</b></p>				

**Automation and Control Solutions**

Honeywell GmbH  
 Böblinger Strasse 17  
 71101 Schönaich  
 Germany  
 Phone: (49) 7031 63701  
 Fax: (49) 7031 637493  
<http://ecc.emea.honeywell.com>  
 Subject to change without notice.