

 


User guide

2. SETUP

2.1 CONNECTING THE HANDSET


- Plug one end of the spiral cord into the handset at (A), and the other end into the socket on the left side of the phone (B).



2.2 CONNECTING THE TELEPHONE


- Plug the telephone cord into right-hand socket under the set and into the wall socket.

 NOTE: The extra socket is for connecting a modem.



2.3 WALL MOUNTING

- Turn over the wall mounting peg (small grooved plastic part) on the base using a coin.
- Drill two 6 mm holes 70 mm apart.
- Fit two wall plugs and insert wood screws* (3.5 mm in diameter and 30 mm long).
- Mount the base on the 2 screws by pulling it downwards.

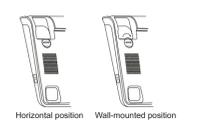

* Screws not supplied.

3. USE

3.1 CALL / MESSAGE WAITING LED

This light flashes in time with the ringer when you receive a call. It goes out as soon as you take the line.

If you are connected to an ALCATEL PABX with a voicemail service, the message waiting LED tells you there is a message in your mailbox.

There are two different ways of dialling:

- by lifting the handset, then dialling.
- by dialling in on-hook mode.

3.2 DIALLING IN ON-HOOK MODE

- Press the hands-free key , then dial your correspondent's number.
- Pick up the handset to talk. The key is backlit in blue.

3.3 USING HANDS-FREE MODE

If you are talking to somebody on the handset, and you want to hear and talk to them over the loudspeaker instead:

- Press and replace the handset.
 - The people around you can join in the conversation.
 - The key is backlit in blue.
- To adjust the volume, use the and keys.
- Lift the handset to return to private conversation mode.

3.4 DIALLING USING THE PHONEBOOK / MEMORY KEYS

The phonebook can hold up to 170 name and number entries and 10 quick-dial memory entries. Each entry can hold up to 20 digits and 16 characters.

To program the phonebook and the quick-dial memory keys, see Section 4.9.

Using the phonebook to make a call

- Press .
- Alphabetic order search
 - Enter the first letter, or the first two letters, of the name you are looking for. The first name starting with that letter appears. To scroll down, press .

or

Manual search

- Press or to scroll through the phonebook until you find the name you are looking for.
- Press to initiate the call.
- Press to dial your correspondent's number.

or

Pick up the handset and make the call.

NOTE: The call timer starts about 12 seconds after the last digit is dialled.

Using a memory key to make a call

- Press the memory key associated with the person you want to call.
- Pick up the handset to initiate the call.

or

Press to talk in hands-free mode.

NOTE: The call timer starts about 12 seconds after the last digit is dialled.

3.5 TAKING A CALL

There are two ways to pick up a call:

- Pick up the handset.
- Press , and start talking in hands-free mode.

NOTE: If the ringer is off, the incoming call will be indicated on the display (Incoming Call) and by the Call LED (flashing). You can take the call in either of the two ways described above.

3.6 HANDSET VOLUME CONTROL

You can turn the handset volume up or down during a call.

- Press (up) or (down).

3.7 MUTE KEY

The Mute key puts your correspondent on hold so that you can talk to someone else without the first person hearing.

- During the call, press .
- A beep is emitted on the line every 10 seconds.
- To resume the conversation, press the Mute key again.

3.8 REDIAL

The Redial function can store the last 10 numbers in memory.

There are two ways of redialling a recently called number:

Off-hook mode

- Press .

► This automatically redials the last number to be called.

On-hook mode

- Press .

► The most recently dialled number is displayed.

- Use or to scroll through the last 10 numbers dialled.
- Press or pick up the handset or press the hands-free key .

► This automatically dials the number displayed.

Deleting a number

If you want to erase the traces of your outgoing calls, you can delete the numbers from the redial memory.

- Press .
 - The most recently dialled number is displayed.
- Use or to select the number you want to delete.

- Press .
- Use or to select "Erase" (to delete the selected number), or "Erase All" (to delete all of the numbers).
- Press to confirm.

4. SETTINGS

Your **TEMPORIS 700** has a "Phone Setting" menu. To access the various sub-menus from the home screen, follow the instructions below.

You can return to the home screen from anywhere in any menu or sub-menu by pressing again. This will cancel any action that you started but didn't finish.

If you make a mistake, e.g. if you enter an invalid date, you will hear 3 warning beeps.

4.1 DISPLAY CONTRAST

- Press , then press twice.
- Use the key to increase the contrast or to decrease the contrast.
- Press to confirm your choice.

4.2 RINGER MELODY AND VOLUME

4.2.1 To set the melody

- Press .
- Press .
- Press until you see "Ringer".
- Press twice.
 - The set melody is played.
- To change the melody, press (choice of 10 ringtones).
- To confirm your choice, press .

4.2.2 To adjust the ringer volume

When a call comes in

- Press or to adjust the volume (level 1, 2, 3 or OFF).

► The chosen ringer volume setting will apply to subsequent calls as well.

► At level 0, the display will indicate "Ringer Off".

At all other times

- Press .
- The default volume level is 3. To change this, press until you reach the desired level: 1, 2 or 3.
- Confirm by pressing .
- To cut the ringer, select 0, and confirm by pressing .

4.3 DISPLAY LANGUAGE

- Press .
- Press .
- Press .
- Press .
- Press until you reach the desired language (Français, Deutsch, Nederlands, Português, Italiano, English, Español)
- Confirm the chosen language with .

4.4 DATE AND TIME

- Press .
- Press .
- Press .
- Press .
- Date:** Using the number keys, enter the day followed by the month (e.g. 12 and 05 for May 12th).
- Time:** Enter the time (e.g. 16 and 45 for 16:45).
- Press to confirm.

4.5 TYPE OF DIALLING

The default dialling mode is tone dialling (DTMF).

- Press .
- Press .
- Press to obtain "Call Settings".
- Press twice.
 - "Tone" flashes.

To switch to pulse dialling

- Press once to obtain "Ratio 60/40".
- Press to confirm.

or

- Press twice to obtain "Ratio 66/33".
- Press to confirm.

4.6 FLASH TIME

The default flash time is 100 ms.

- Press .
- Press .
- Press to obtain "Call Settings".
- Press .
- Press to obtain "Flash Time".
- Press .
- Press to select the desired flash time (100, 300, 600 or some other value).
- Press to confirm.

4.7 PAUSE TIME

- Press .
- Press .
- Press to obtain "Call Settings".
- Press .
- Press to obtain "Pause Time".
- Press .
- Press to select the desired pause time settings (1.5s, 2s, 3s or 4s).
- Press to confirm the chosen pause time.

4.8 KEYPAD LOCK/UNLOCK

Locking the keypad can prevent unwarranted calls being made. By default, a maximum of 4 digits can be dialled when the keypad is locked.

This maximum number of digits can be modified (see Section 7 "Installer menu").

When the keypad is locked, the function keys on the left of the keypad are inoperative.

Locking

- Press .
- Press to obtain "Keypad Lock".

- Press .
- Enter the PIN code (by default, 0000) and press to confirm.
 - The icon appears on the display.

To change the PIN code, see Section 4.10.

Unlocking

- Press .
- Press to obtain "Keypad Lock".
- Press to confirm.
- Enter the PIN code (by default, 0000) and press to confirm.

4.9 MEMORY KEYS AND PHONEBOOK

The **TEMPORIS 700** has a phonebook capacity of 170 names and numbers and 10 quick-dial memories.

4.9.1 Programming the memory keys

- Press one of the 10 quick-dial memory keys.
- Press .
- Wait for the cursor to move on before you enter the next letter.
- Attendez que le curseur se déplace avant de taper la lettre suivante.
 - E.g.: To enter an M, press the key once;
 - To enter an R, press the key three times.

- Press .
- Enter the number, using the keypad.
- Press to save.

NOTE: Use the key to erase a letter or digit.

NOTE: If "Block Mem. Keys" is enabled in the Installer menu, the memory keys cannot be re-programmed or erased.

Modifying a memory key

- Press the desired memory key .
- Press .
- To edit the name, press .
- Enter the name, using the keypad.
- Press to confirm.

Erasing a memory key

- Press the memory key .
- Press .
- Press to confirm.

Storing names and numbers in the phonebook

- Press .
- Press .
- Enter the name, using the keypad (see Section 4.9.1).
- Press .
- Enter the number.
- Press .

NOTE: Use the key to change a mistyped letter or digit before you save.

Editing a phonebook entry

- Press .
- Enter the first letter, or the first two letters, of the name you are looking for.
- Press .
- Press 4 times to reach "Modify".
- Press .
- To edit the name, press .
- Enter the new name and press .
- To edit the number, press .
- Enter the new number and press .

Deleting an entry from the phonebook

- Repeat steps **1** and **2**.
- Use the or key to select "Erase".
- Press to confirm.

Deleting all the entries in the phonebook

- Repeat steps **1** and **2**.
- Use the or key to select "Erase All".
- Press to confirm.

4.10 PIN CODE

To access certain functions on your **TEMPORIS 700** you need to use a PIN code.

By default, the PIN code is 0000. You can modify this to any number of your choosing.

- Press .
- Press .
- Press to obtain "PIN Keylock".
- Press .
- Enter the default code (0000) or the modified code (4 digits).
- Press .
- Enter the new code (4 digits).
- Press .
- Confirm the new code.
- Press .

4.11 SERVICE KEYS

The , and keys on the keypad can be programmed to store various numbers. For example, the (Voice Mailbox) key can be used to store the number of the voicemail server.

- Press .
- Press .
- Press to obtain "Service A".
- Press .
- Press 6 times for "Service A" or 7 times for "Service B".
- Press to scroll through the pause time settings (1.5s, 2s, 3s or 4s).
- Press to confirm the chosen pause time.

Proceed in the same way for the other 2 keys: Service A, Service B.

- Press .
- Press .
- Press to obtain "Learning".
- Press to obtain "Pause Time".
- Press .
- Press 6 times for "Service A" or 7 times for "Service B".
- Press to scroll through the pause time settings (1.5s, 2s, 3s or 4s).
- Press to confirm the chosen pause time.

To dial a number stored on one of these 3 keys

- Pick up the handset (or use hands-free mode).
- Press and hold , or for at least 2 seconds.
 - The number is dialled.

5. USING THE "CALLER ID" SERVICE*

Your network operator provides a number of subscription-only services.

Your **TEMPORIS 700** is compatible with the "Caller ID" service in hands-free or off-hook mode.

 
This service tells you the name or number of the caller before you take the call, and when you are on the line.

5.1 CALL LIST

The Call list is linked to the network operator's caller ID service.

The list can store up to 70 numbers of people who have tried to call you. When the memory is full, the oldest call (bottom of the list) is deleted to make room for the most recent.

The display icons indicate various caller ID data:



5.2 VIEWING THE CALL LIST

If you have new unanswered calls, the icon appears.

- To consult the Call list, press .
- Press to view the other calls.

* Subject to availability and subscription from your network operator. For further details, contact your operator.

While looking up a number

- To call the number, press .
- To save a number in the phonebook, press followed by .
- Then press to store it in the phonebook or on one of the memory keys .
- To delete a contact, press .
- Press to reach "Erase".
- Press to confirm.
- NOTE:** "Erase All" (by pressing again) deletes all the calls from the list.

6. CONNECTING AND USING A HEADSET*

6.1 CONNECTION

- Remove the plastic stopper on the left of the base of the telephone.
- Connect the RJ9 headset cable to the socket.



6.2 HEADSET MODE

Once the headset is connected:

To take an incoming call

- Press .
 - This key becomes backlit in blue.
- After the call, press again to hang up.

To call out

- Press and dial the number, or press one of the memory keys.
- You can, at any moment, switch the call into:

- Hands-free mode: press or
- Headset mode: pick up the handset and remove the headset to hear your correspondent.

* Not supplied with the **TEMPORIS 700**. Your headset must have an RJ9 connector. Use headsets that comply with the EN 60950-1 standard and which are designed to be connected to telephones.

7. INSTALLER MENU

This menu provides access to certain specific programming functions, including system reset.

Procedure for opening the installer menu

! The handset must be on-hook.

- Press and simultaneously.
- While holding these 2 keys down, pick up the handset.
- Release the and keys.
- Leave the handset off-hook while using the various sub-menus.
- Press one of the 4 following keys to access the corresponding menus: , , , .

7.1 KEY 0

Four sub-menus are available.

7.1.1 Memory key lock

To avoid memory keys being accidentally erased. By default, this option is disabled.

To lock/unlock

When the display indicates "Block Mem. Keys":

- Press to confirm.
- Press to select "Activate" or "Deactivate".
- Press to confirm.

