

IMPORTANT SAFEGUARDS

READ ALL INSTRUCTIONS BEFORE USE

When using electrical appliances, basic safety precautions should be followed, including the following:

- Unplug cord from outlet when not in use or before cleaning.
- To protect against risk of electrical shock, do not immerse the cord, plug or motor base in water or any other liquids.
- Do not let cord hang over edge of table or counter or touch hot surfaces.
- Never leave appliance unattended when in use.
- Close supervision is necessary when used near children.
- Avoid contact with moving parts. Keep hands and utensils out of jar while blending to prevent personal injury or damage to the smoothie maker.
- A rubber spatula may be used only when the smoothie maker is not running. The blade is sharp. Handle with care.
- Always put the lid on the jar before operating the smoothie maker.
- When blending hot liquids beware of steam. Remove the jar lid food chute from the lid to allow steam to escape.
- Do not blend boiling liquids in the smoothie maker.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or is dropped or damaged in any manner. Return the appliance to the nearest Authorized Sunbeam Appliance Service center for examination, repair or electrical or mechanical adjustment.
- Do not use outdoors or for commercial purposes; this appliance is for household use only.
- Use this appliance for its intended use as described in this manual.
- Do not use attachments that are not recommended by the manufacturer; they may cause injury.
- Always operate on a flat surface.
- Unplug the smoothie maker when it is not in use, before taking off or putting on parts and before cleaning.
- The use of attachments not made by SUNBEAM®, including canning or ordinary jar and processing assembly parts, is not recommended by Sunbeam Products, Inc., and may cause injury to persons.

THIS PRODUCT IS FOR HOUSEHOLD USE ONLY

The maximum rating marked on the product is based on the attachment that draws the greatest load. Other attachments may draw less power.

www.sunbeam.ca

P.N. 136059

**MODELS/
MODÈLES** **BLSBS4900W-033,
BLSBS4900S-033**

User Manual Smoothie Maker Notice d'emploi Fouette-frappés

Sunbeam®

POWER CORD INSTRUCTIONS

Please follow the instructions below to ensure the safe use of the power cord.

- This appliance is equipped with a polarized plug. This type of plug has one blade that is wider than the other. This plug will fit in a polarized outlet only if the wider blade is inserted into the wider slot of the outlet. If you are unable to insert the plug into the outlet, contact a qualified electrician to replace the obsolete outlet. Do not attempt to defeat the safety purpose of the polarized plug by modifying the plug in any way.
- You may use an extension cord, if necessary, but be certain to follow these guidelines:
 - The marked electrical rating of the extension cord must be at least 120/127 volt, 60 Hz, 10A.
 - The extension must be arranged so that it will not drape over the countertop or tabletop, will not be within the reach of children, and will not be tripped over.
- Do not pull, twist, or otherwise abuse the power cord.

SAVE THESE INSTRUCTIONS

Do not pull, twist, or otherwise abuse the power cord.

PLEASE DO NOT RETURN THIS PRODUCT TO ANY OF THESE ADDRESSES OR TO THE PLACE OF PURCHASE.

In Canada
If you have any question regarding this warranty or would like to obtain warranty service, please call 1-800-667-8623 and a convenient service center address will be provided to you.

In Canada
If you have any question regarding this warranty or would like to obtain warranty service, please call 1-800-334-0759 and a convenient service center address will be provided to you.

This warranty gives you specific legal rights, and you may also have other rights that vary from province to province, state to state or jurisdiction to jurisdiction.

How To Obtain Warranty Service
This warranty does not cover normal wear of parts or damage resulting from any of the following: negligent use or misuse of the product, use on improper voltage or current, use contrary to the operating instructions, disassembly, repair or alteration by anyone other than JCS or an authorized JCS service center. Further, the warranty does not cover: Acts of God, such as fire, flood, hurricanes and tornadoes.

What are the limits on JCS's Liability?
JCS shall not be liable for any incidental or consequential damages caused by the breach of any express, implied or statutory warranty or condition.


1 Year Limited Warranty
Sunbeam Products, Inc. doing business as Jarden Consumer Solutions or if in Canada, Sunbeam Corporation (Canada) Limited doing business as Jarden Consumer Solutions (collectively "JCS") warrants that for a period of one year from the date of purchase, this product will be free from defects in material and workmanship. JCS, at its option, will repair or replace this product or any component of the product found to be defective during the warranty period. Replacement will be made with a new or remanufactured product or component. If the product is no longer available, replacement may be made with a similar product of equal or greater value. This is your exclusive warranty. Do NOT attempt to repair or adjust any electrical or mechanical functions on this product. Doing so will void this warranty.

This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty performance. JCS dealers, service centers, or retail stores selling JCS products do not have the right to alter, modify or any way change the terms and conditions of this warranty.

WELCOME

Now you can quench your thirst anytime with quick, healthy and delicious smoothies created in your SUNBEAM® Smoothie Maker!

KNOW YOUR SUNBEAM® SMOOTHIE MAKER

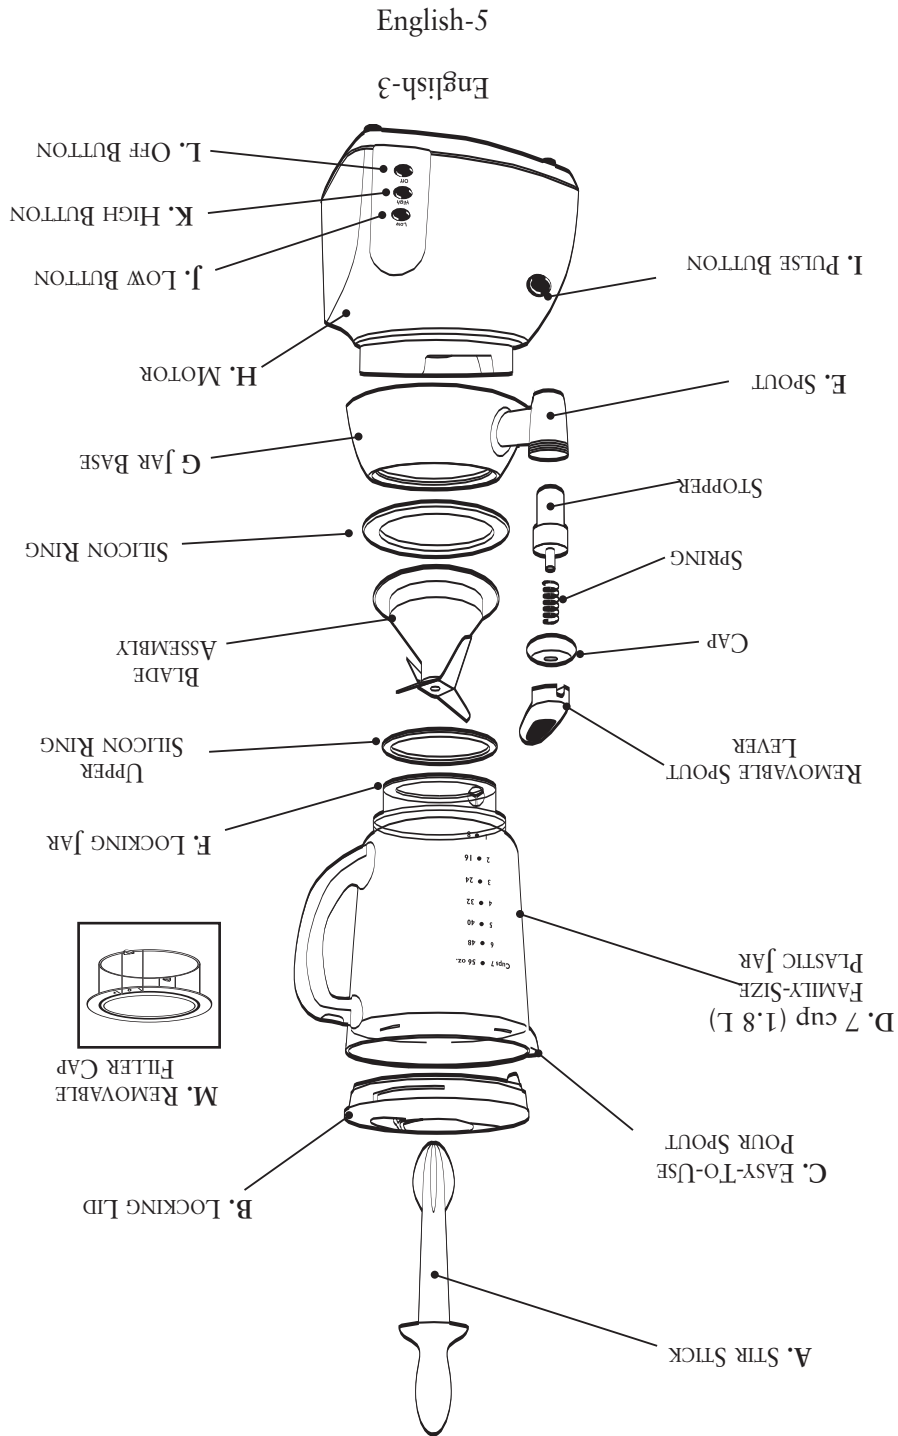

If you experience any problems with your machine, unplug it immediately from your electrical outlet, and contact your nearest authorized service center.

After all parts are clean and dry, replace the silicon ring inside the jar base with the flat side against the jar base and then replace the blade assembly. The upper silicon ring should be installed with the flat side against the jar.

Fit the jar base to the top of the motor housing; the spout should be on the same side as, and centered above, the Pulse button and the Low/High/Off buttons. Place the jar into the jar base so that the handle is on the same side as the Low/High/Off buttons. Store your Smoothie Maker with its lid ajar to prevent jar odors. Your Smoothie Maker is now ready to make more smoothies anytime!

Periodically check all parts before reassembly. If the blades are stuck or difficult to turn, do not use your Smoothie Maker. Check blades by carefully turning them counter-clockwise. Blades should turn freely. If the jar is chipped or cracked, do not use your Smoothie Maker.

To disassemble the spout for cleaning, first remove the lever by pushing upward on the stopper and sliding the lever off of the stopper pin. Remove cap by unscrewing it counter-clockwise. Remove spring. Remove stopper by pulling the rubber rim of the stopper. Do not separate the stopper pin from the stopper. Clean all parts in warm, soapy water, rinse, dry well, and reassemble in the order shown. Do not try to detach spout from the jar base.

To wash the plastic jar, remove it from the jar base by it turning counter-clockwise while on the motor housing. To wash the jar base, turn it counter-clockwise to remove it from the motor housing. Carefully remove the blade assembly and the silicon ring from the jar base and wash. Disassemble the spout lever to rinse out the spout.

CARE AND CLEANING OF YOUR SMOOTHIE MAKER

Before all cleaning, turn off blender and remove cord plug from outlet.

To prolong the life of your Smoothie Maker, do not wash any parts in a dishwasher. Before using your Smoothie Maker for the first time, and after each use, thoroughly wash the mixing jar, jar base, blade assembly, pour spout, lid and stir stick in warm, soapy water, rinse, and dry well.

SERVE
To serve, press the Low button. Hold a glass under the pour spout and depress the lever to dispense your smoothie. Do not run your Smoothie Maker on High while serving.

FEATURES OF YOUR SMOOTHIE MAKER

A. Stir stick for creating an even and smooth consistency

B. Locking lid for added convenience and safety

C. Easy-to-use pour spout for quick and precise dispensing

D. 7 cups (1.8L) family-size plastic jar

E. Spout for dispensing smoothie

F. Locking jar for safety and enhanced performance

G. Jar base

H. 550-watt motor for exceptional ice crushing power

I. Pulse button provides a burst of high speed for crushing ice for smooth, frozen drinks

J. Low button runs Smoothie Maker at low speed for initial mixing of ingredients or while using pour spout

K. High button runs Smoothie Maker at high speed for final mixing of ingredients or while using pour spout

L. Off button shuts Smoothie Maker off when either Low or High button is pressed

M. Removable Filler Cap

Follow these simple steps to make a delicious, healthy smoothie from your favorite ingredients:

CLEAN AND ASSEMBLE
Before using your Smoothie Maker for the first time, clean and assemble it according to the instructions under "Care and Cleaning of Your Smoothie Maker."

Add Liquids
Add any combination of liquid ingredients to the Smoothie Maker jar, including fruit, milk, juice, yogurt, soft tofu or herbal supplements. Use a recipe or experiment with your favorite foods and flavors!

For 2 cups of smoothie, use at least 2.7 ml (8 oz.) of liquid. Do not run your Smoothie Maker without any liquid in the jar.

You can mix up to 7 cups (1.8L) of ingredients as marked on the outside of the jar.

Add Ice
Add ice or any frozen ingredients such as frozen fruit, frozen yogurt or ice cream. For thicker smoothies, add more frozen ingredients.

For thinner smoothies, add more liquid.

You can mix up to 7 cups (1.8L) of ingredients as marked on the outside of the jar.

START SMOOTHING
Lock the lid into place on the top of the jar, insert the stir stick into the hole in the lid, and press the Low button, let your Smoothie Maker run on Low for 30 seconds to begin mixing of ingredients.

After 30 seconds, press the High button. Let your Smoothie Maker run on High until your desired smoothie consistency is reached.

While your Smoothie Maker is running, turn the stir stick counter-clockwise for thorough mixing.

English-4

Printed in China

Imprimé en Chine

©2010 Sunbeam Products, Inc., faisant affaire sous le nom de Jarden Consumer Solutions. Tous droits réservés.

Aux États-Unis, distribuez par Sunbeam Products, Inc.

faisant affaire sous le nom de Jarden Consumer Solutions, Boca Raton, FL 33431.

Au Canada, importé et distribué par Sunbeam Corporation (Canada) Limited

faisant affaire sous le nom de Jarden Consumer Solutions, 20B Hereford Street, Brampton, Ontario, L6Y 0M1.

GSC-MM1109-1049588

Pour toutes questions concernant le produit:

Service à la clientèle Sunbeam

Canada : 1.800.667.8623

www.sunbeam.ca

©2010 Sunbeam Products, Inc., doing business as Jarden Consumer Solutions.

All rights reserved.

In the U.S., distributed by Sunbeam Products, Inc.

doing business as Jarden Consumer Solutions, Boca Raton, FL 33431.

In Canada, imported and distributed by Sunbeam Corporation (Canada) Limited

doing business as Jarden Consumer Solutions, 20B Hereford Street, Brampton, Ontario, L6Y 0M1.

www.sunbeam.ca

Canada : 1.800.667.8623

Jarden Consumer Service

For product questions contact:

Sunbeam®

