

# Digital Still Camera

---

## Operating Instructions


Before operating the unit, please read this manual thoroughly, and retain it for future reference.

## Owner's Record

The model and serial numbers are located on the bottom. Record the serial number in the space provided below. Refer to these numbers whenever you call upon your Sony dealer regarding this product.

Model No. DSC-P5

Serial No. \_\_\_\_\_

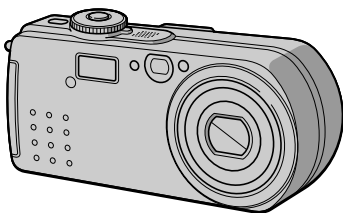

**Cyber-shot**  
Digital Still Camera



**InfoLITHIUM™**



TYPE




**MEMORY STICK™**

# DSC-P5

## WARNING

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

## For the Customers in the U.S.A.

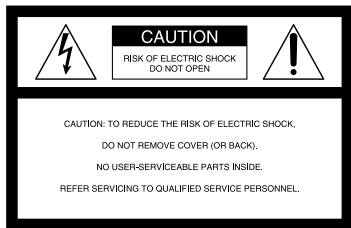

This symbol is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

Never expose the battery pack to temperature above 60°C (140°F), such as in a car parked in the sun or under direct sunlight.

If you have any questions about this product, you may call:

Sony Customer Information Services Center  
1-800-222-SONY (7669)

The number below is for the FCC related matters only.

## Regulatory Information

### Declaration of Conformity

Trade Name: SONY  
Model No.: DSC-P5  
Responsible Party: Sony Electronics Inc.  
Address: 680 Kinderkamack  
Road, Oradell, NJ  
07649 USA  
Telephone No.: 201-930-6972

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### CAUTION

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

### Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The supplied interface cable must be used with the equipment in order to comply with the limits for a digital device pursuant to Subpart B of Part 15 of FCC Rules.

### For the Customers in the U.S.A. and Canada

#### DISPOSAL OF LITHIUM ION BATTERY.

#### LITHIUM ION BATTERY. DISPOSE OF PROPERLY.

You can return your unwanted lithium ion batteries to your nearest Sony Service Center or Factory Service Center.

#### Note:

In some areas the disposal of lithium ion batteries in household or business trash may be prohibited.

For the Sony Service Center nearest you call 1-800-222-SONY (United States only)

For the Sony Factory Service Center nearest you call 416-499-SONY (Canada only)

#### Caution:

Do not handle damaged or leaking lithium ion battery.

### For the Customers in Canada

#### CAUTION

TO PREVENT ELECTRIC SHOCK, DO NOT USE THIS POLARIZED AC PLUG WITH AN EXTENSION CORD. RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE.

### Notice for the Customers in the United Kingdom

A moulded plug complying with BS1363 is fitted to this equipment for your safety and convenience.

Should the fuse in the plug supplied need to be replaced, a 5AMP fuse approved by ASTA or BSI to BS1362, (i.e., marked with ⚡ or ⚡ mark) must be used.

If the plug supplied with this equipment has a detachable fuse cover, be sure to attach the

fuse cover after you change the fuse. Never use the plug without the fuse cover. If you should lose the cover, please contact your nearest Sony service station.

### For the Customers in Germany

Directive: EMC Directive 89/336/EEC, 92/31/EEC

This equipment complies with the EMC regulations when used under the following circumstances:

- Residential area
- Business district
- Light-industry district

(This equipment complies with the EMC standard regulations EN55022 Class B.)

### Attention for the Customers in Europe

This product has been tested and found compliant with the limits sets out on the EMC Directive for using connection cables shorter than 3 meters.

The electromagnetic fields at the specific frequencies may influence the picture and sound of this camera.

### “Memory Stick” and Battery Pack



### For the Customers in the U.S.A.

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:

- (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND
- (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION.

**For the Customers in Canada**  
THIS CLASS B DIGITAL APPARATUS  
COMPLIES WITH CANADIAN ICES-003.

**Be sure to read the following  
before using your camera**

**Trial recording**

Before you record one-time events, you may want to make a trial recording to make sure that the camera is working correctly.

**No compensation for contents of the recording**

Contents of the recording cannot be compensated for if recording or playback is not possible due to a malfunction of your camera or recording medium, etc.

**Notes on image data compatibility**

- This camera conforms with the Design rule for Camera File system universal standard established by the JEITA (Japan Electronics and Information Technology Industries Association). You cannot play back on your camera still images recorded on other equipment (DCR-TRV890E/TRV900/TRV900E, DSC-D700, DSC-D770) that does not conform with this universal standard. (These models are not sold in some areas.)
- Playback of images recorded with your camera on other equipment and playback of images recorded or edited with other equipment on your camera are not guaranteed.

**Precaution on copyright**

Television programs, films, video tapes, and other materials may be copyrighted. Unauthorized recording of such materials may be contrary to the provision of the copyright laws.

**Do not shake or strike the camera**

In addition to malfunctions and inability to record images, this may render the "Memory Stick" unusable or image data breakdown, damage or loss may occur.

**Do not aim the camera at the sun or other bright light**

This may cause irrecoverable damage to your eyes.

**LCD screen, LCD finder (only models with a finder) and lens**

- The LCD screen and the LCD finder are manufactured using extremely high-precision technology so over 99.99% of the pixels are operational for effective use. However, there may be some tiny black points and/or bright points (white, red, blue or green in color) that constantly appear on the LCD screen and the LCD finder. These points are normal in the manufacturing process and do not affect the recording in any way.
- Be careful when placing the camera near a window or outdoors. Exposing the LCD screen, the finder or the lens to direct sunlight for long periods may cause malfunctions.

**Do not get the camera wet**

When taking pictures outdoors in the rain or under similar conditions, be careful not to get the camera wet. If moisture condensation occurs, refer to page 82 and follow the instructions on how to remove it before using the camera.

**Back up recommendation**

To avoid the potential risk of data loss, always copy (back up) data to a disk.

**Handling of the movable lens**

This camera uses a movable lens. Be careful not to strike or apply excessive force to the lens portion.

**When the camera is used for long periods**

Note that the camera body may become hot.

# Introduction

## Check images after recording

Recording still images:


page 19

Playing back still images:

page 28

Deleting images (DELETE):

page 71

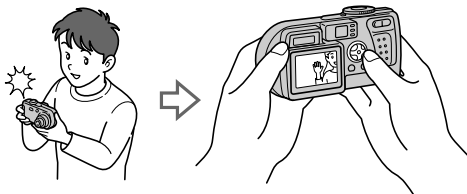


## Capture images with your computer

You can copy images onto your computer and view and modify images or attach images to e-mail on your computer using the supplied USB cable and application software.

Viewing images using a computer: page 31

Recording still images for e-mail (E-MAIL): page 55

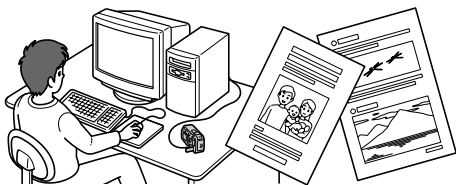

## Record moving pictures (MPEG Movie or Clip Motion)

The digital still camera can record a moving picture with audio (MPEG MOVIE):  
page 26



## Select from various recording modes

Creating Clip Motion Files: page 59

Adding audio files to still images (VOICE): page 56

Recording text documents (TEXT): page 57

Recording still images as uncompressed files (TIFF): page 58

# Table of contents

## Getting started

Identifying the parts .....	8
Preparing the power supply .....	10
Setting the date and time .....	15
Inserting the “Memory Stick” .....	17

## Basic operations

How to use the mode dial .....	18
How to use the control button .....	18
▶ Recording	
Recording still images .....	19
Recording moving images .....	26
▶ Playback	
Playing back still images .....	28
Playing back moving images .....	29
Viewing images using a computer ..	31
Viewing images on Windows .....	32
Viewing images on Macintosh .....	41
Image file storage destinations and image files .....	44

## Advanced operations

Before performing advanced operations .....	46
Setting the image size (IMAGE SIZE) .....	52
▶ Various recording	
Recording images according to shooting conditions (TWILIGHT mode) .....	54
Recording two images continuously .....	55
Recording still images for e-mail (E-MAIL) .....	55
Adding audio files to still images (VOICE) .....	56
Recording text documents (TEXT) .....	57


Recording still images as uncompressed files (TIFF) .....	58
Creating Clip Motion Files .....	59
Setting the distance to the subject ...	61
Recording images at close range (MACRO) .....	61
Adjusting the exposure (EXPOSURE) .....	62
Adjusting the white balance (WHITE BALANCE) .....	63
Enjoying picture effects (P. EFFECT) .....	64
Recording the date and time on a still image (DATE/TIME) .....	64
Using the spot light-metering function .....	65
▶ Various playback	
Playing back three or nine images at once .....	66
Enlarging a part of a still image (Zoom and trimming) .....	67
Playing back still images in order (SLIDE) .....	68
Rotating a still image (ROTATE) ...	69
Viewing images on a TV screen .....	70
▶ Editing	
Deleting images (DELETE) .....	71
Preventing accidental erasure (PROTECT) .....	72
Changing the recorded still image size (RESIZE) .....	74
Copying images (COPY) .....	75
Selecting still images to print (PRINT) .....	76
Dividing a moving image file (DIVIDE) .....	78
Formatting the “Memory Stick” (FORMAT) .....	79
Changing the setup settings (SETUP) .....	80

## Additional information

Precautions .....	82
On “Memory Sticks” .....	83
On “InfoLITHIUM” battery pack ...	84
Using your camera abroad .....	85
Troubleshooting .....	86
Warning and notice messages .....	91
Self-diagnosis display .....	93
Specifications .....	94
Display window indicators .....	95
LCD screen indicators .....	96
Index .....	99

# Identifying the parts

See the pages in parentheses for details of operation.

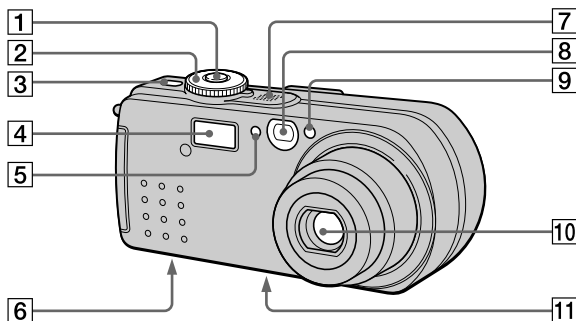

**1 Shutter button (19, 27)**

**2 Mode dial (18)**

☾: To record in TWILIGHT mode

📷: To record still images, VOICE mode audio data

▶: To playback or edit images

📹: To record moving images or Clip Motion images

SET UP: To set the setup items (80)

**3 POWER button (15)**

**4 Flash (24)**

**5 Photocell window for flash**

Do not block while recording with the flash.

**6 Speaker**

**7 Built-in microphone**

Do not touch while recording.

**8 Finder window**




**9 Self-timer (24, 27)/  
AF illuminator (25)**

**10 Lens**

**11 Tripod receptacle (bottom surface)**

Use a tripod with a screw length of less than 5.5 mm (7/32 inch). You will be unable to firmly secure the camera to tripods having longer screws, and may damage the camera.



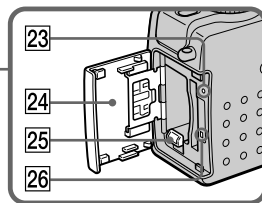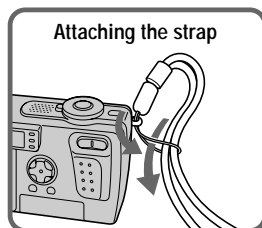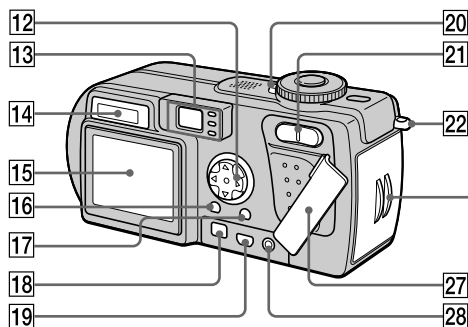


- |   |   |
|---|---|
| <b>12</b> Control button (18, 46)   | <b>20</b> POWER lamp (15)   |
| <b>13</b> Finder (21)<br>Self-timer/recording lamp (red)<br>AE/AF lock lamp (green)<br>⚡ Flash charge lamp (orange)<br>(22) | <b>21</b> Zoom button (for recording) (23)<br>INDEX/zoom button (for playback) (67) |
| <b>14</b> Display window (95)   | <b>22</b> Hook for wrist strap  |
| <b>15</b> LCD screen (96)   | <b>23</b> RESET button (86)   |
| <b>16</b> DSPL/LCD ON/OFF button (21)   | <b>24</b> Battery/"Memory Stick" cover  |
| <b>17</b> MENU button (18, 46)  | <b>25</b> Battery eject lever (10)  |
| <b>18</b> DC IN jack (11, 14)   | <b>26</b> Access lamp (17)  |
| <b>19</b> Ψ (USB) jack (36)   | <b>27</b> Jack cover  |
|   | <b>28</b> A/V OUT jack (70)<br>Audio output is monaural.                            |

# Preparing the power supply

## Installing the battery pack

Your camera operates only with the “InfoLITHIUM” NP-FC10 battery pack\* (C type) (supplied). You cannot use any other battery pack. See page 84 for more information about the “InfoLITHIUM” battery pack.

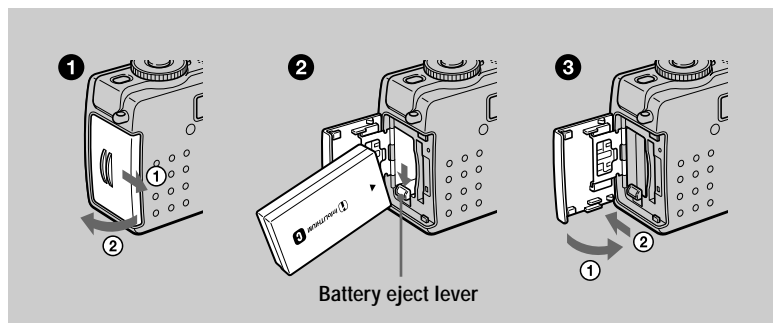

### 1 Open the battery/“Memory Stick” cover.

Slide the cover in the direction of the arrow.

### 2 Install the battery pack.

Insert the battery pack with the ▲ mark facing toward the battery compartment as illustrated.


### 3 Close the battery/“Memory Stick” cover.

## To remove the battery pack

Open the battery/“Memory Stick” cover. Slide the battery eject lever downward, and remove the battery pack.


Be careful not to drop the battery pack when removing it.


### \* What is “InfoLITHIUM”?

“InfoLITHIUM” is a lithium ion battery pack which can exchange information such as battery consumption with compatible electronic equipment. This unit is compatible with the “InfoLITHIUM” battery pack (C type). “InfoLITHIUM” C type battery packs have the  mark. “InfoLITHIUM” is a trademark of Sony Corporation.

## Charging the battery pack

You cannot charge the battery pack while your camera is turned on. Be sure to turn off your camera.

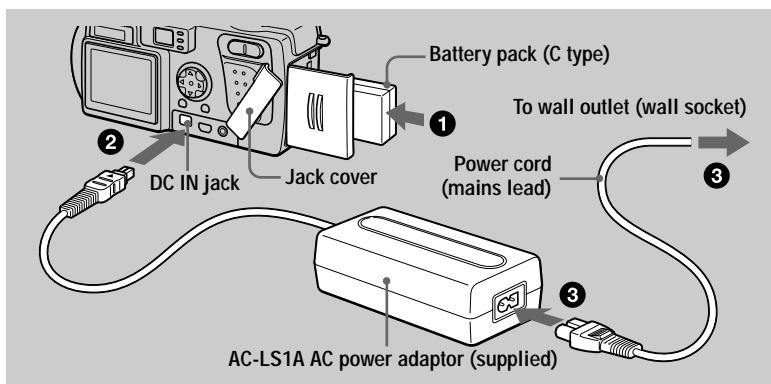

- 1** Insert the battery pack into your camera.
- 2** Open the jack cover and connect the DC connecting cable to the DC IN jack of your camera with the ▲ mark facing up.
- 3** Connect the power cord (mains lead) to the AC power adaptor and then to a wall outlet (wall socket).  
The battery indicator  in the display window flashes when charging begins. When the battery indicator stops flashing, **normal charge** is completed. For **full charge**, which allows you to use the battery longer than usual, leave the battery pack inserted for about one hour after normal charge is completed until the battery remaining indicator and “Full” is displayed alternately in the display window.

### After charging the battery pack

Disconnect the AC power adaptor from the DC IN jack of your camera.

### Battery remaining indicator

The LCD screen on the camera shows the remaining time for which you can still record or play back images. When charging, this shows an indication of the continuous recording time (with LCD screen ON). This indication may not be entirely accurate depending on the conditions of use and the operating environment.

### Recommended charging temperature

We recommend charging the battery pack in an ambient temperature of between 10°C to 30°C (50°F to 86°F).



## NP-FC10 battery pack

When you record images in an extremely cold location or using the LCD screen, the operating time becomes short. When using the camera in an extremely cold location, place the battery pack in your pocket or other place to keep it warm, then insert the battery pack into the camera just before recording. When using a pocket heater, take care not to let the heater directly contact the battery.

### Power save mode

When [POWER SAVE] in the SET UP screen is set to [ON], the battery life will be extended when recording still images. The factory setting is [OFF] (page 81).

When [POWER SAVE] is [ON] (page 81)

- The LCD screen turns off while the flash is being charged (while the  flash charge lamp is flashing\*). When the camera is turned on for the first time after being left unused for a long period of time, the flash will take longer than usual to charge.  
\*If the charging time is short, the  flash charge lamp may not light.
- The time from when you press the shutter button until the image is recorded is slightly longer than when [POWER SAVE] is [OFF].
- The focus is only aligned when the shutter button is pressed halfway, even when auto focusing is activated.

### Charging time

Battery pack	Full charge (min.)	Normal charge (min.)
NP-FC10 (supplied)	Approx. 150	Approx. 90

Approximate time to charge a completely discharged battery pack using the AC-LS1A AC power adaptor at a temperature of 25°C (77°F).

### Battery life and number of images that can be recorded/played back

#### Still image recording\*

	NP-FC10 (supplied)	
	Battery life (min.)	Number of images
LCD screen ON	Approx. 60	Approx. 1200
LCD screen OFF	Approx. 90	Approx. 1800

Approximate battery life and number of images that can be recorded with a fully charged battery pack at a temperature of 25°C (77°F), 640×480 image size, standard picture quality and in NORMAL recording mode.

\* POWER SAVE mode OFF and recording at about 4-second intervals

**Still image playback\*\***

	NP-FC10 (supplied)	
	Battery life (min.)	Number of images
LCD screen ON	Approx. 100	Approx. 2000

Approximate battery life and number of images that can be played back with a fully charged battery pack at a temperature of 25°C (77°F), 640×480 image size, standard picture quality and in NORMAL recording mode.

\*\* Playing back single images in order at about 3-second intervals

**Moving image recording**

	NP-FC10 (supplied)	
	LCD screen OFF (min.)	LCD screen ON (min.)
Continuous recording	Approx. 90	Approx. 60


Approximate recording time with a fully charged battery pack at a temperature of 25°C (77°F) and 160×112 image size.

The recording time and playback time with a normal charge are roughly 90% of what they would be when the battery is fully charged.

**Notes**

- The battery life and number of images will be decreased if you use your camera at low temperatures, use the flash, repeatedly turn the power on/off or use the zoom.
- When LCD BACKLIGHT is set to BRIGHT, the battery life and number of images will be decreased.
- The numbers of images shown on tables above are a guide. The actual numbers may be less depending on conditions.
- The capacity of the “Memory Stick” is limited. The above figures are a for guide when you continuously record/play back while replacing the “Memory Stick.”
- “----” appears in the display window until the battery remaining time is calculated.
- During charging, the indicators in the display window may not appear correctly or may flash in the following cases.
  - When the battery pack is not installed correctly.
  - When the AC power adaptor is disconnected.
  - When the battery pack has malfunctioned.
- When you turn the LCD screen on and off, it takes about one minute for the correct battery remaining time to appear.
- If sufficient battery remaining time is indicated but the power runs out soon, fully charge the battery so that the correct battery remaining time appears.
- Do not short the DC plug on the AC power adaptor with a piece of metal, and do not use the DC plug if it is dirty. Use a dry cotton swab to remove any dirt on the DC plug. Using a dirty plug or shorting the plug can result in improper charging or damage to the camera.

## Using the AC power adaptor

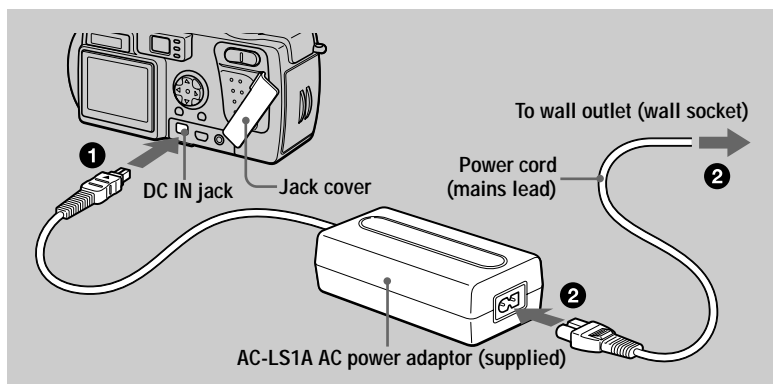

- 1** Open the jack cover and connect the DC connecting cable to the DC IN jack of your camera with the ▲ mark facing up.
- 2** Connect the power cord (mains lead) to the AC power adaptor and then to a wall outlet (wall socket).

## Using your camera abroad


For details, see page 85.

### When using the AC power adaptor

Be sure to use it near the wall outlet (wall socket). If a malfunction occurs, disconnect the plug from the wall outlet (wall socket) at once.

# Setting the date and time


When you first use your camera, set the date and time. If these are not set, the CLOCK SET screen will appear whenever you turn on your camera.

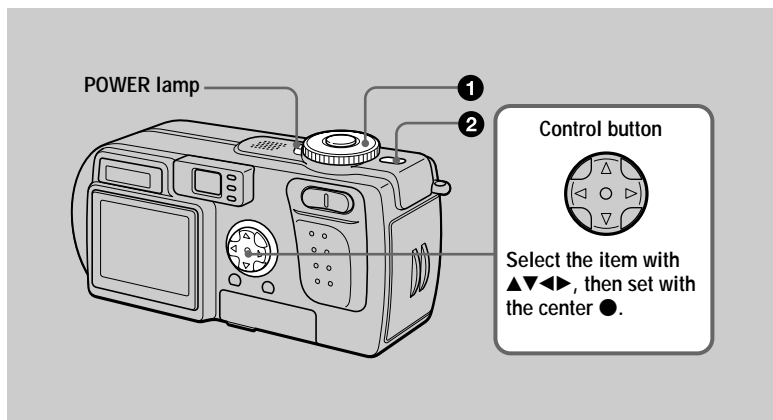

**1** Set the mode dial to , ,  or .


**2** Press and hold down the POWER button for approximately one second to turn on the power.

 The POWER lamp (green) lights up.  
The CLOCK SET screen appears on the LCD screen.




**3** Select the desired date display format with ▲▼ on the control button, then press the center ●.

Select from [Y/M/D] (year/month/day), [M/D/Y] (month/day/year) or [D/M/Y] (day/month/year).

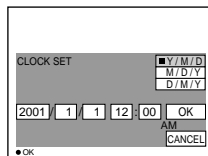

**4** Select the year, month, day, hour or minute item you want to set with ◀▶ on the control button.


The item to be set is indicated with ▲▼.

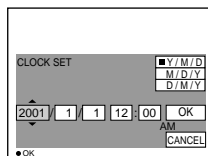

- 5** Set the numeric value with ▲/▼ on the control button, then press the center ● to enter it.


After entering the number, ▲/▼ moves to the next item.

If you selected [D/M/Y] in step 3, set the time on a 24-hour cycle.

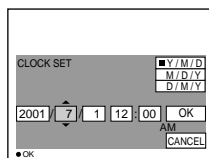

- 6** Select [OK] with ► on the control button, then press the center ● at the desired moment to begin clock movement.


The date and time are entered.

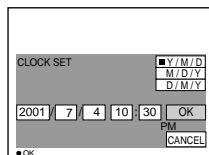

To cancel the date and time setting

Select [CANCEL] with ▲/▼/◀/▶ on the control button, then press the center ●.

### To change the date and time


Set the mode dial to SET UP (page 80) and change the date and time on the CLOCK SET screen in  (SETUP 1).

#### Note

If the rechargeable button battery is ever fully discharged (page 83), the CLOCK SET screen will appear again. When this happens, reset the date and time, by starting from step 5 above.



# Inserting the “Memory Stick”

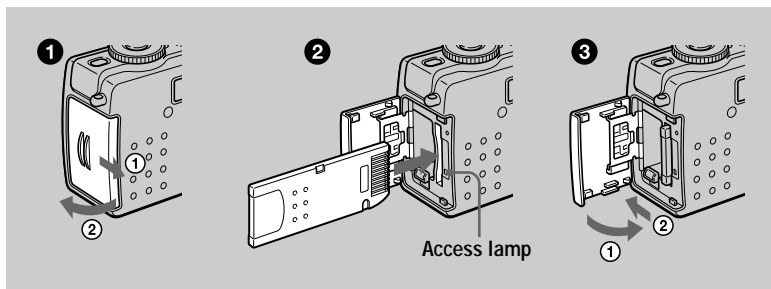


- 1 Open the battery/“Memory Stick” cover.**  
Slide the cover in the direction of the arrow.
- 2 Insert the “Memory Stick.”**  
Insert the “Memory Stick” with the ► mark facing toward the battery compartment as illustrated until it clicks.
- 3 Close the battery/“Memory Stick” cover.**

## Removing the “Memory Stick”

Open the battery/“Memory Stick” cover, then press the “Memory Stick” once lightly.

### Notes

- Insert the “Memory Stick” firmly until it clicks, otherwise a message such as “MEMORY STICK ERROR” will be displayed.
- When the access lamp is lit up, it means data is being read or written. Never remove the “Memory Stick” or turn off the power at this time, as the data may become damaged.
- You cannot record or edit images on a “Memory Stick” if the erasure prevention switch is set to the LOCK position.

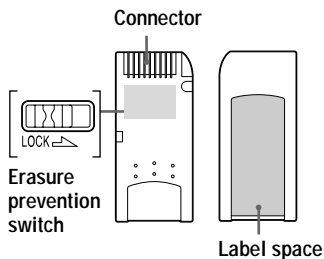


\* The position and shape of the erasure prevention switch may differ depending on the types of “Memory Stick” used.

# Basic operations

## How to use the mode dial

The mode dial switches the function which is used for recording, playback, or editing. Set the dial as follows before starting to operate your camera.

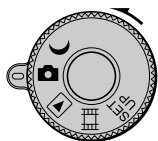


- ☾ : To record still images in TWILIGHT mode (pages 19, 54)
- 📷 : To record still images, VOICE mode audio data (pages 19, 56)
- ▶ : To play back or edit images (pages 28, 29, 71)
- 🎞️ : To record moving images or Clip Motion images (pages 26, 59)
- SET UP: To set the setup items (page 80)

## How to use the control button

### When the menu is not displayed

The control button is used to perform the following operations.

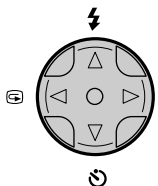

- ⚡ (▲): Recording with flash (page 24)
- 🕒 (▼): Recording with self-timer (pages 24, 27)
- 📷 (◀): Checking the last recorded image (page 22)
- 🌸 (▶): Recording close subjects (macro recording) (page 61)



### When the menu or setup screen is displayed

The control button is used to select the buttons, images and menu items displayed on the LCD screen of your camera and modify the settings.



## Turning on/off the operation buttons (menu) on the LCD screen

Press MENU to display/  
clear the menu on the  
LCD screen.

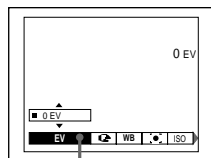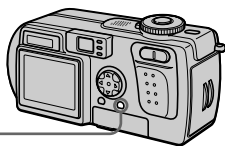


Menu

You can perform this operation even when the LCD screen is off.

# Recording still images

Still images are recorded in JPEG format.

To record still images, press the **POWER** button to turn on the power and insert a “Memory Stick.”

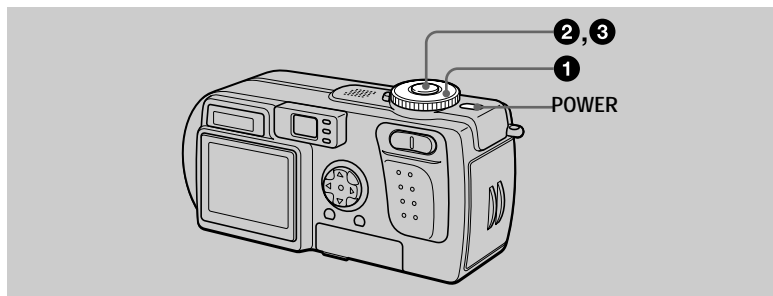


**1** Set the mode dial to or .

**2** Press and hold the shutter button halfway down.

The beeps sound, but the image is not recorded yet. While the AE/AF lock indicator ● is flashing, the camera automatically adjusts the exposure and focus of the captured image. When the camera finishes the automatic adjustments, the AE/AF lock indicator ● changes from flashing to lighted up\* and the camera is ready for recording.

If you release the shutter button, the recording will be canceled.

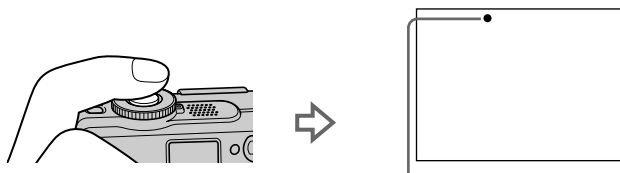


AE/AF lock indicator (green) flashes → lights up

\* If the flashing AE/AF lock indicator changes to flashing slowly, the subject may be difficult to focus on (dark, poor contrast) or the subject may be extremely close. Release the shutter button, then focus again.

### 3 Press the shutter button fully down.

The shutter sounds.

“RECORDING” appears on the LCD screen, and the image will be recorded on the “Memory Stick.” When “RECORDING” disappears, you can record the next image.

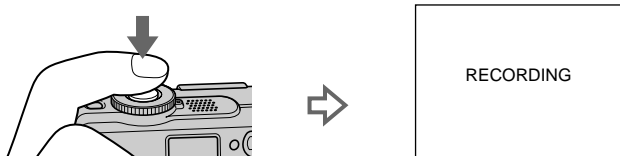


### Auto power-off function

If you do not operate the camera for about three minutes during recording or playback, the camera turns off automatically to prevent wearing down the battery. To use the camera again, press the POWER button to turn on the camera again. The auto power-off function only operates when the camera is operating using a battery pack. The auto power-off function also will not operate when playing back moving images or playing back a slide show (page 68), or when a connector is plugged into the USB jack, the DC IN jack or the A/V OUT jack.

The number of images you can record on a “Memory Stick”  
(8 MB)


See pages 53 and 56 to 60.
 
#### Notes

- Do not touch the lens portion while it is operating.
- The following phenomena may occur when AE/AF is locked, but this does not affect the recorded image.
  - When recording a bright subject, the LCD screen color may change.
  - When recording a dark subject, the LCD screen may brighten momentarily.
- If you press the shutter button fully down at once in step 2, the camera starts recording after the automatic adjustments are complete. However, the recording cannot be carried out while the  flash charge lamp (page 22) is flashing. (During this time, the camera is charging the flash.)

## Holding the camera correctly

Hold the camera so that your fingers do not block the flash or touch the lens portion when recording images.

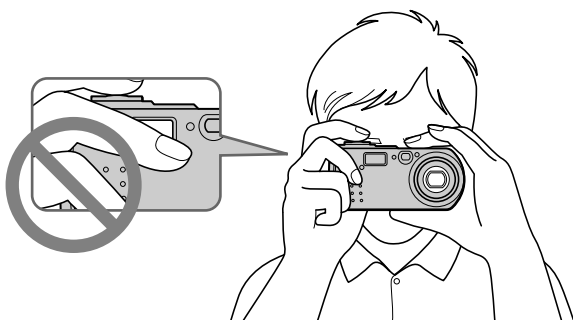

## Recording images with the finder

You can extend the battery time by turning off the LCD screen and recording using the finder.

Each time you press DSPL/LCD ON/OFF, the status of the LCD screen changes as follows:

See page 96 for a detailed description of the indicated items.

The LCD backlight is turned on.

(All the available indicators are turned on.)




The LCD backlight is turned on.


(Warning messages are turned on.)



The LCD backlight is turned off.

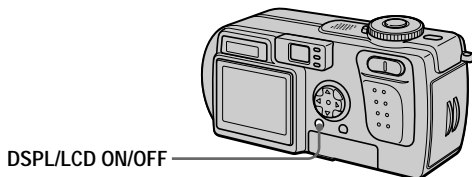

## Indicators in the finder

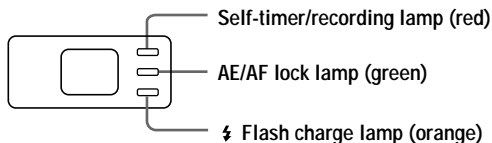


### Notes

- You cannot check the entire recording range with the finder. Recording with the LCD screen is recommended when it is necessary to correctly understand the recording range.
- Because of the difference in the positions of the finder and the lens, use the LCD screen when you record a subject closer than 1 m (3 1/4 feet).
- When [DEMO] is set to [ON] in the SET UP settings, you cannot turn off the LCD screen once the demonstration starts.
- You cannot turn off the LCD backlight in SET UP or when displaying the menu.
- You cannot turn off the self-timer indicators and some of the indicators used in advanced operations.
- The indicators on the LCD screen are not recorded.

## Recording with the LCD screen

When recording with the LCD screen, align the AF frame in the center of the screen with the subject.

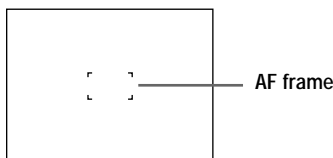

## Checking the last recorded image (Quick Review)

You can check the last recorded image by clearing the menu from the screen (page 18) and pressing ◀ (⊖) on the control button.


**To return to the normal recording mode:** Press lightly on the shutter button or press ◀ (⊖) again.

**To delete the image:**

1. Display the menu.
2. Select [DELETE] with ▶ on the control button, then press the center ●.
3. Select [OK] with ▲ on the control button, then press the center ●.


## Using the zoom feature

The lens portion moves during zoom operation. Be careful not to touch the lens portion while it is operating.

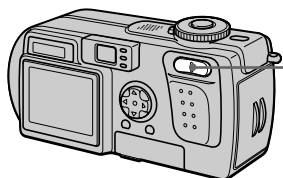

### Zoom button

 W side: for wide-angle (subject appears farther away)



T side: for telephoto (subject appears closer)

### Minimum focal distance to the subject

W side: About 50 cm (19 3/4 inches) or more


T side: About 60 cm (23 5/8 inches) or more

To record even closer subjects, see page 61.

### Digital zoom function

This camera has a digital zoom function.

Digital zoom enlarges the image by digital processing and it starts to function when zoom exceeds 3×.

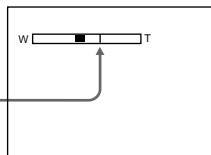

The T side of the bar shows the digital zooming zone.

### Using digital zoom


- The maximum zoom magnification is 6×.
- Digital zooming deteriorates the picture quality. When digital zoom is not necessary, set [DIGITAL ZOOM] to [OFF] in the SET UP settings (page 80).

### Notes

- Zoom does not work for moving images.
- Use the LCD screen when using the digital zoom function. Digitally zoomed images do not appear in the finder.
- The AF frame (page 22) does not appear on the LCD screen.

## Using the self-timer

When you use the self-timer function, the subject is recorded about 10 seconds after you press the shutter button.

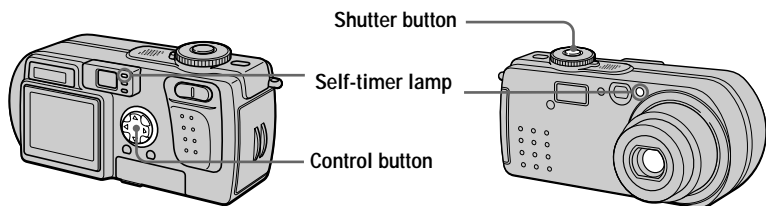

1. Clear the menu (page 18).
2. Press the control button  $\blacktriangledown$  (⊙), then press the shutter button.


The ⊙ (self-timer) indicator appears on the LCD screen, and about 10 seconds after you press the shutter button, the subject is recorded. The self-timer lamp flashes and a beep sounds after you press the shutter button until the shutter is released.

To cancel the self-timer recording

Press the control button  $\blacktriangledown$  (⊙) again.

## Recording images with the flash

In this mode, the flash automatically strobes when the surroundings is dark. The factory setting is auto (no indicator). To change the flash mode, clear the menu (page 18), then press the control button  $\blacktriangle$  (⚡) repeatedly so that the flash mode indicator appears on the LCD screen.

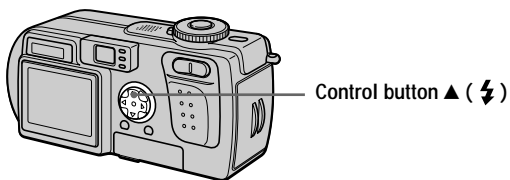

Each time you press the control button  $\blacktriangle$  (⚡), the indicator changes as follows.

(No indicator)  $\rightarrow$  ⚡  $\rightarrow$  ⊕  $\rightarrow$  (No indicator)

⚡ Forced flash: The flash strobes regardless of the surrounding brightness.




⊕ No flash: The flash does not strobe.

---




You can change the brightness of the flash with [ $\blacktriangle$  ±] (FLASH LEVEL) in the menu settings (page 48).




To reduce the red-eye phenomenon


Set [RED EYE REDUCTION] to [ON] in the SET UP settings (page 80). The flash pre-strobes before recording to reduce the red-eye phenomenon. When [ON] is selected and the mode dial is set to  or ,  appears on the LCD screen.

#### Notes


- When [ISO] is set to [AUTO] in the menu settings, the recommended shooting distance using the built-in flash is 0.5 m to 2.8 m (19 3/4 inches to 9 feet 2 1/4 inches) at the W side, and 0.6 m to 1.4 m (19 3/4 inches to 4 feet 7 1/8 inches) at the T side. When it is not set to [AUTO], the flash may be ineffective even if the flash level is changed.
- Red-eye reduction may not produce the desired effects depending on individual differences, the distance to the subject, if the subject does not see the pre-strobe, or other conditions.
- The flash effect is not obtained easily when you use  forced flash in a bright location.
- While charging the flash, the  flash charge lamp flashes. After the charging is complete, the lamp goes out.
- The flash does not function when recording moving images (excluding Clip Motion) or recording in BURST2 mode.
- When you record images in a dark place with the camera set to  (no flash), the shutter speed becomes slow, so using a tripod is recommended to prevent shaking.

### Recording images with the AF illuminator

The AF illuminator is fill light to focus on a subject easily. Set [AF ILLUMINATOR] (page 80) to [ON] in the SET UP settings.  appears on the LCD screen and the AF illuminator emits light when the shutter button is pressed halfway until the focus is locked.

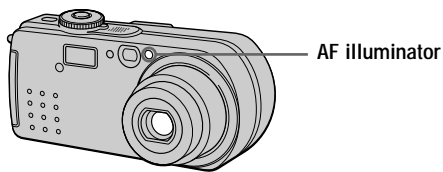


#### Notes

- If AF illuminator light does not reach the subject sufficiently or the subject has no contrast, focus will not be achieved. (An approximate distance up to 2.4 m (7 feet 10 1/2 inches) at the W side, up to 1.4 m (4 feet 7 1/8 inches) at the T side is recommended.)
- In TWILIGHT mode, the AF illuminator will emit light only when the flash mode is set to  (Forced flash).
- Focus is achieved as long as AF illuminator light reaches the subject even if its light is slightly out of the middle position of the subject.
- The AF illuminator does not operate when adjusting focus manually.
- The AF illuminator is a very bright light. Although it is safe to use, avoid shining it directly into someone's eyes at a close distance.

# Recording moving images


Moving images with audio are recorded in MPEG format (page 45).

To record moving images, press the **POWER** button to turn on the power and insert a “Memory Stick.”

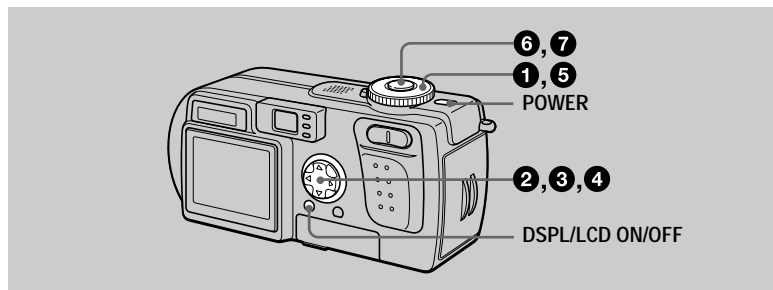


**1** Set the mode dial to **SET UP**.


**2** Select [**📷**] (**CAMERA**) with ▲/▼ on the control button, then press ►.

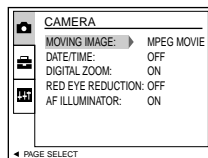

**3** Select [**MOVING IMAGE**] with ▲/▼ on the control button, then press ►.

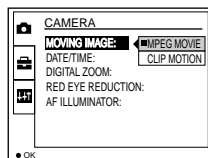

**4** Select [**MPEG MOVIE**] with ▲/▼ on the control button, then press the center ●.

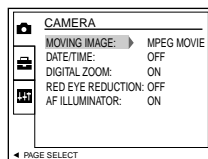

**5** Set the mode dial to **📷**.

**6 Press the shutter button fully down.**

“REC” appears on the LCD screen, and recording of the image and sound on the “Memory Stick” begins.

**7 Press the shutter button fully down again to stop recording.**

The recording stops.

When selecting the 320 (HQ) size: The recording stops in approximately 15 seconds (page 52).

When selecting the 320×240 or 160×112 sizes: The recording stops when the “Memory Stick” is full.

For details on the image size, see “Setting the image size (IMAGE SIZE)” on page 52.

### Using the self-timer

When you use the self-timer function, the subject is recorded about 10 seconds after you press the shutter button.

1. Clear the menu (page 18).

2. Press the control button ▼ (⊙), then press the shutter button.

The ⊙ (self-timer) indicator appears on the LCD screen, and the recording starts about 10 seconds after you press the shutter button. The self-timer lamp flashes and a beep sounds after you press the shutter button until the shutter is released.

To cancel the self-timer recording

Press the control button ▼ (⊙) again.

### LCD screen indicators during recording

Each time you press DSPL/LCD ON/OFF, the status of the LCD screen changes as follows: all indicators on → indicators off → LCD screen off.


These indicators are not recorded. See page 97 for a detailed description of the indicators.

**Note**

**When using the camera for long periods, use the AC power adaptor.** If you remove the battery pack or otherwise turn off the power partway through a recording, the moving image recorded thus far is not saved. When the ⏏ mark appears while operating the camera, stop the recording at this point before the battery completely runs out.

## Playing back still images

To play back still images, press the **POWER** button to turn on the power and insert a “Memory Stick.”

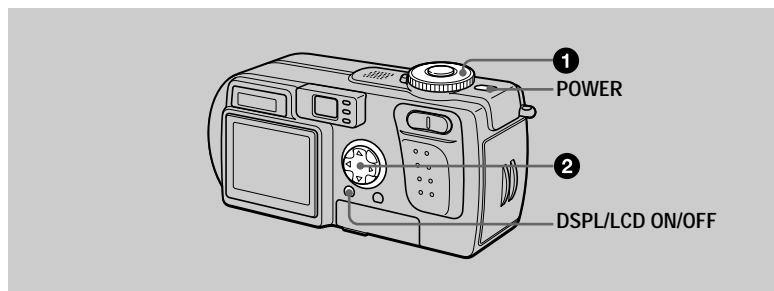


### 1 Set the mode dial to .

The last recorded image (still or moving) appears on the LCD screen.

### 2 Select the desired still image with the control button / .

◀: To display the preceding image.

▶: To display the next image.

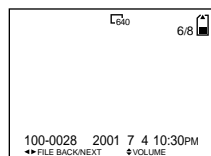

### Notes

- You might not be able to correctly play back images recorded with this camera on other equipment.
- You cannot play back images on this camera which are larger than the maximum image size that can be recorded with this camera.
- A rough image is played back, followed by the normal image.


### LCD screen indicators during still image playback

Each time you press DSPL/LCD ON/OFF, the status of the LCD screen changes as follows: all indicators on → indicators off → LCD screen off.

See page 98 for a detailed description of the indicators.

# Playing back moving images

To play back moving images, press the **POWER** button to turn on the power and insert a “Memory Stick.”

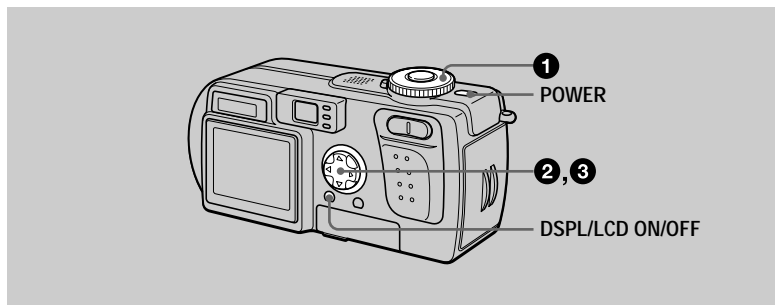



**1 Set the mode dial to .**


The last recorded image (still or moving) appears on the LCD screen.

**2 Select the desired moving image with the control button .**

Moving images are displayed one-size smaller than still images.


: To display the preceding image.


: To display the next image.

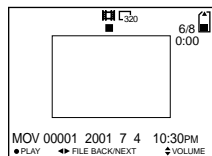

**3 Press the center  on the control button to start the playback.**

The moving image and sound are played back.

During playback,  (playback) appears on the LCD screen.

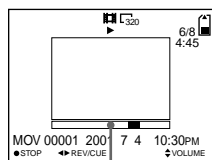



Playback bar

## To pause playback

Press the center  on the control button to pause the playback.

## To advance or rewind the moving image

Press the control button  during playback.

To return to normal playback, press the center  on the control button.

Moving images recorded with the image of [320 (HQ)]  
(page 52)

The images are displayed over the entire screen.

### **Adjusting the volume**

Press the control button ▲/▼ to adjust the volume.

### **LCD screen indicators during moving image playback**

Each time you press DSPL/LCD ON/OFF, the status of the LCD screen changes as follows: all indicators on → indicators off → LCD screen off.

See page 98 for a detailed description of the indicators.

# Viewing images using a computer

You can view data recorded with your camera on a computer, and modify and attach it to e-mail using application software. This section describes the method for viewing images on a computer using the supplied USB cable.

The USB cable is used to connect the camera to a computer so that operations can be performed on image files recorded in a “Memory Stick” from the computer.

In order to use the USB cable, a USB driver must be installed in the computer beforehand.

Be sure to also refer to the operation manuals for your computer and the application software.

There are two ways to make the USB connection, which are the normal connection and the PTP connection. This is set using [USB CONNECT] in the SETUP settings (page 81). The factory setting is [NORMAL].

This section describes the way using the [NORMAL] setting. Users will be informed at the Sony website when PTP connection is supported.

**Viewing images on Windows: page 32**

**Viewing images on Macintosh: page 41**

**Notes on using your computer: page 43**

## Notes

- Data recorded with your camera is stored in the following formats. Make sure that applications that support these file formats are installed on your computer.
  - Still images (other than TEXT mode and uncompressed mode): JPEG format
  - Moving images/audio: MPEG format
  - Uncompressed mode still images: TIFF format
  - TEXT mode/Clip Motion: GIF format
- Depending on your application software, the file size may increase when you open a still image file.
- When you copy an image to the camera from your computer, which was modified with retouching software and was converted to another file format, the “FILE ERROR” message may appear and you may be unable to open the image.
- Depending on your application software, only the first frame of the Clip Motion file may be played back.
- Communications with your computer (for Windows only)  
Communications between your camera and your computer may not recover after recovering from Suspense or Sleep.

- 
- Microsoft, Windows and Windows Media are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.
  - Macintosh, Mac OS and QuickTime are either registered trademarks or trademarks of Apple Computer, Inc.
  - All other product names mentioned herein may be the trademarks or registered trademarks of their respective companies. Furthermore, “™” and “®” are not mentioned in each case in this manual.

---

## Viewing images on Windows

### Recommended computer environment

OS: Microsoft Windows 98, Windows 98SE, Windows 2000 Professional, Windows Millennium Edition  
The above OS must be installed at the factory.  
Operation is not assured in an environment upgraded to the operating systems described above.

CPU: MMX Pentium 200 MHz or faster  
The USB connector must be provided as standard.  
Windows Media Player (recommended) must be installed (to play back moving pictures).

#### ■ Notes

- If you connect two or more USB equipment to a single computer at the same time, some equipment may not operate depending on the type of USB equipment.
- Operations are not guaranteed when using a hub.
- Operations are not guaranteed for all the recommended computer environments mentioned above.

### Installing the USB driver to the computer

Before connecting your camera to your computer, install the USB driver to the computer. The USB driver is included with the application software in the CD-ROM which is supplied with your camera.

#### ■ Caution

**Be sure to complete installation of the USB driver before connecting your camera to the computer. If you connect the USB cable first, you will be unable to install the USB driver properly.**

**See page 35 for corrective measures if the USB cable was connected before installing the driver and the driver software could not be installed correctly.**


---

#### ① Turn on your computer and allow Windows to load.

- Do not connect the USB cable in this step.
- Close down all applications running on the computer.
-




- 2** Insert the supplied CD-ROM in the CD-ROM drive of your computer.

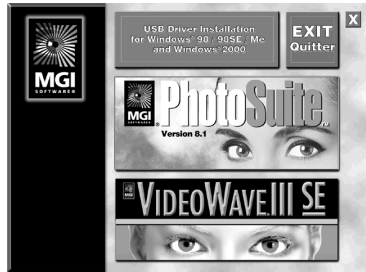

The title screen appears after a moment.


### If the title screen does not appear

- 1 Double-click "My Computer."
  - 2 Double-click the CD-ROM ("PhotoSuite (E:)").
- \* The drive symbol ((E:), etc.) may differ depending on your computer.

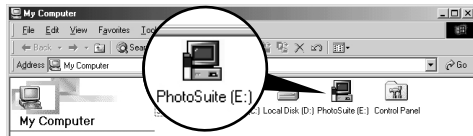

→ The title screen appears after a moment.


- 3** Move the arrow (mouse pointer) to "USB Driver Installation for Windows 98/98SE/Me and Windows 2000" in the title screen and click the left button of the mouse.

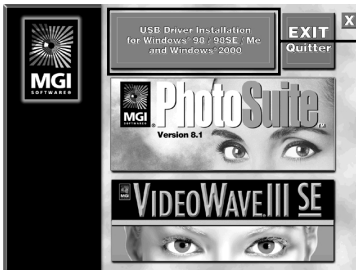

Left-click here.

→ The Install Wizard program starts and the "InstallShield Wizard" screen appears.


#### 4 Left-click "Next."

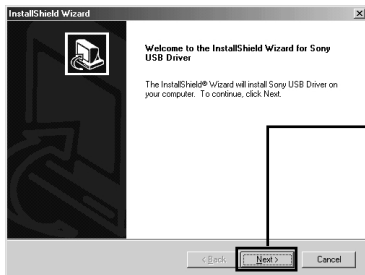


Left-click "Next."

→ Installation starts. When installation finishes, a screen indicating that installation has been completed appears.

#### 5 Eject the CD-ROM from the computer.

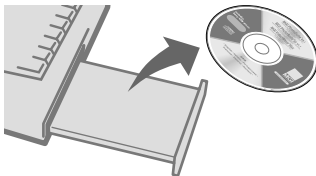

#### 6 Follow the on-screen messages to quit the InstallShield Wizard.

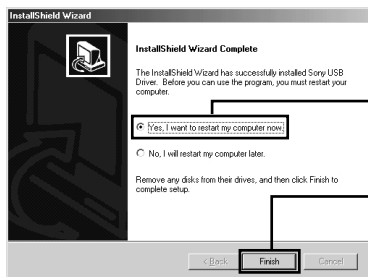

① Select "Yes, I want to restart my computer now."

② Left-click "Finish."

→ The computer turns off and then immediately on again. The USB driver is enabled after restarting.

## If you cannot install the USB driver


Another USB driver may already be installed. Follow the procedure on page 36 to connect the camera and then try the following steps.

### For Windows 98, Windows 98SE and Windows Me users:


The screens shown below are taken from Windows Me.

#### 1 Display the “System Properties” screen.

The “System Properties” screen appears.

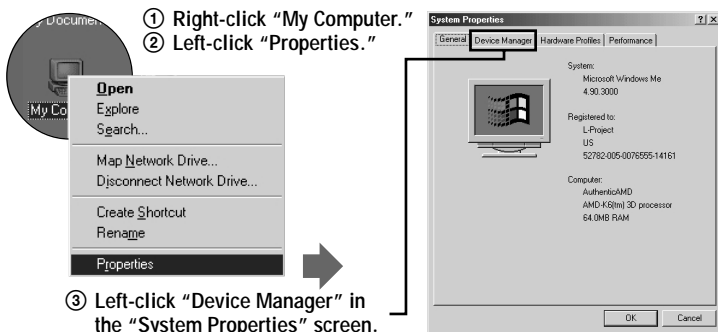

#### 2 Check whether a USB driver is already installed.

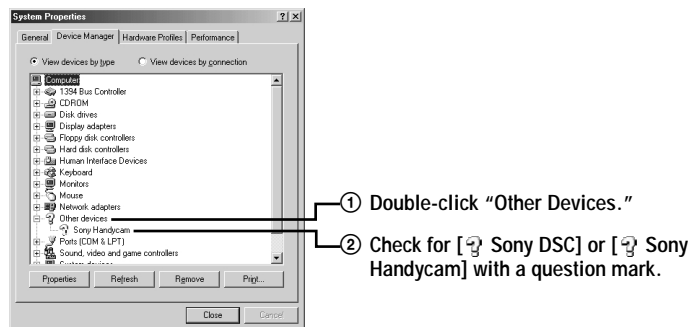

#### 3 If a USB driver is installed, remove it.

If the check in step 2 shows [ ? Sony DSC ] or [ ? Sony Handycam ] in “Other Devices”, another USB driver is already installed in your computer. In this case, the driver must be removed and then installed again. The removal procedure is as follows.

- 1 Left-click [ ? Sony DSC ] or [ ? Sony Handycam ].
- 2 Left-click “Remove.” The “Confirm Device Removal” screen appears.
- 3 Left-click the “OK” button to remove the driver.

Perform the operations starting over from step 1 (page 32) to reinstall the USB driver.

**For Windows 2000 Professional users:**



Log in with the permission of administrator.

**1** Right-click “ My Computer,” then left-click “Properties”.

The “System properties” screen appears.

**2** Left-click “Hardware,” then left-click “Device Manager.”


**3** Left-click “View” in “Device Manager,” then left-click “Devices by type.”

**4** Right-click “ Sony DSC” in “ Other devices,” then left-click “Delete.”

Perform the operations starting over from step **1** (page 32) to reinstall the USB driver.


---


**7** Open the jack cover on the camera and insert the USB cable connector into the USB jack (mini-B) as far as it will go.

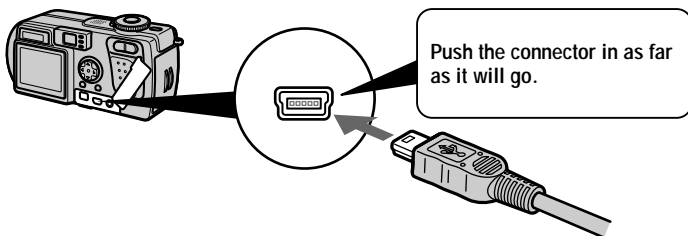

---

**8** Connect the other USB cable connector to the USB jack on your computer.

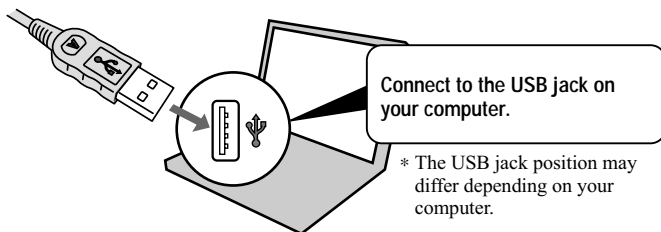

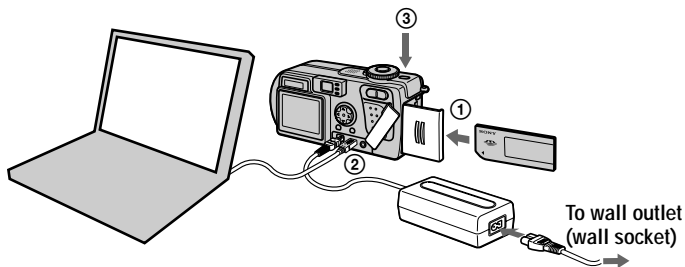**9 Prepare your camera.**

- ① Insert a “Memory Stick” into your camera.
- ② Connect the AC power adaptor to your camera.
- ③ Turn on your camera.

“USB MODE” appears on the LCD screen of your camera.

When you first connect the camera, the Device Manager automatically starts twice in succession to allow your computer to recognize the camera. There is no need to operate either your computer or the camera during this period. Be sure to wait until the Device Manager has started twice.

**Note**

If “USB MODE” does not appear after finishing step ③, check [USB CONNECT] in the SET UP settings, and change the setting to [NORMAL] if it is different.

**Notes**

- Do not connect the USB cable before the USB driver installation is completed in step ⑥.
- In step ⑨, make sure that a “Memory Stick” is inserted into your camera before turning on the camera. Otherwise, you will be unable to recognize the camera.

## Viewing images


When viewing moving images on a Windows system, Windows Media Player or other moving image playback applications must be installed.

Example: Viewing still images


The procedure is the same as for viewing moving images and other image data.

**1 Turn on your computer and allow Windows to load.**

**2 Open the jack cover on the camera and insert the USB cable connector into the USB jack (mini-B) as far as it will go.**

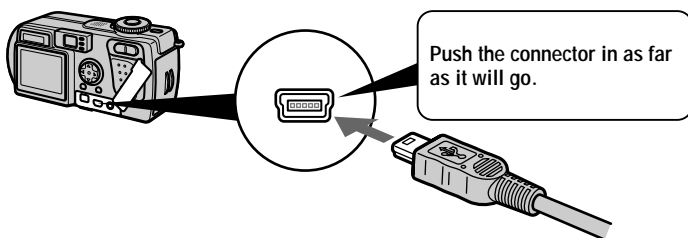


**3 Connect the other USB cable connector to the USB jack on your computer.**

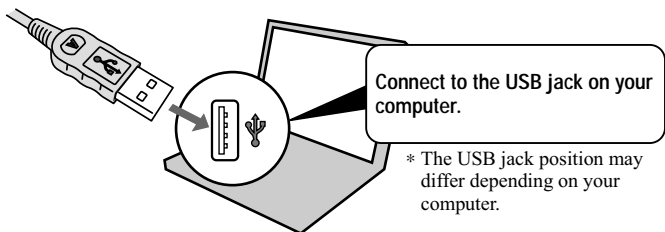


**4 Insert a "Memory Stick" into your camera, and connect the AC power adaptor to your camera and then to a wall outlet (wall socket).**

**5 Turn on the power of your camera.**  
"USB MODE" appears on the LCD screen of the camera.

## 6 Double-click “My Computer.”

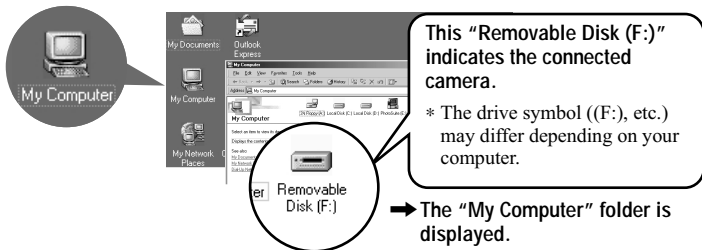

## 7 Double-click the newly recognized drive.

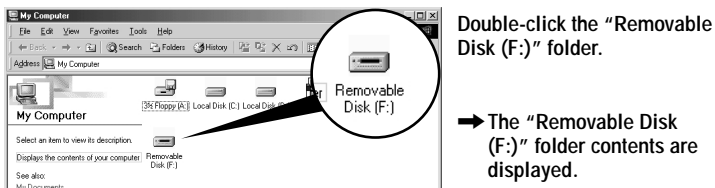


## 8 Double-click the “DCIM” folder.



## 9 Double-click the “100MSDCF” folder.



## 10 Double-click the image.

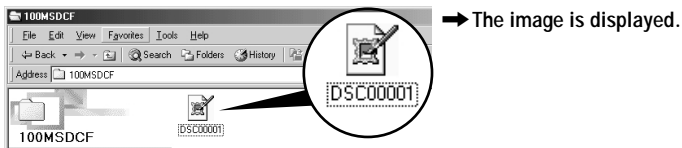


Desired file type	Double-click in this order
Still image	“Dcim” folder → “100msdcf” folder → Image file
Moving image*	“Mssonny” folder → “Moml0001” folder → Image file*
Audio*	“Mssonny” folder → “Momlv100” folder → Audio file*
Clip Motion image	“Dcim” folder → “100msdcf” folder → Image file
E-mail image TIFF image (uncompressed)	“Mssonny” folder → “Imcif100” folder → Image file

\* Copying a file to the hard disk of your computer before viewing it is recommended. If you play back the file directly from the “Memory Stick”, the image and sound may break off.

### To copy the image data to your computer

Drag and drop the image data to the “My Document” (example) folder.

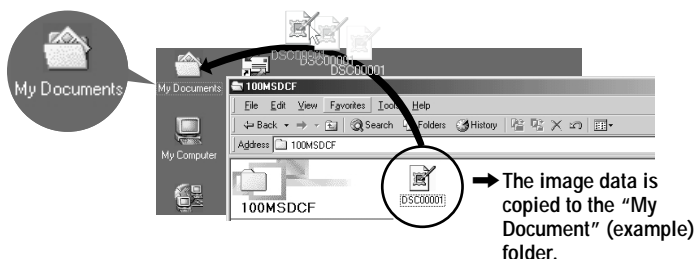



## Viewing images on Macintosh

### Recommended Computer environment

OS: Mac OS 8.5.1/8.6/9.0/9.1, Mac OS X

The above OS must be installed at the factory.

However, note that the upgrade to Mac OS 9.0/9.1 should be used for the following models.

- iMac with the Mac OS 8.6 factory pre-installed and a slot loading type CD-ROM drive
- iBook or Power Mac G4 with the Mac OS 8.6 factory pre-installed

The USB connector must be provided as standard.

QuickTime 3.0 or newer must be installed (to play back moving pictures).

#### Notes

- If you connect two or more USB equipment to a single computer at the same time, some equipment may not operate depending on the type of USB equipment.
- Operations are not guaranteed when using a hub.
- Operations are not guaranteed for all the recommended computer environments mentioned above.

▶ Playback

### Installing the USB driver to the computer

For Mac OS 9.1, Mac OS X users

It is not necessary to install the USB driver. The Macintosh recognizes the camera as a drive simply by connecting it to the Macintosh with the USB cable.

For Mac OS 8.5.1/8.6/9.0 users

Follow the procedures below to install the driver.

- 1 Turn on your computer and allow the Mac OS to load.**
- 2 Insert the supplied CD-ROM in the CD-ROM drive of your computer.**
- 3 Double-click the CD-ROM drive icon to open the window.**
- 4 Double-click the icon of the hard disk containing the OS to open the window.**
- 5 Move the following two files from the window opened in step 3 to the “System Folder” icon in the window opened in step 4 (drag and drop).**
  - Sony USB Driver
  - Sony USB Shim

- 
- 6** When “Put these items into the Extensions folder?” appears, click “OK.”
  - 7** Restart your computer.
- 

### Viewing images

When viewing moving images on a Macintosh system, QuickTime 3.0 or later must be installed.

- 
- 1** Turn on your computer and allow the Mac OS to load.
  - 2** Open the jack cover on the camera and insert the USB cable connector into the USB jack (mini-B) as far as it will go.
  - 3** Connect the other USB cable connector to the USB jack on your computer.
  - 4** Insert a “Memory Stick” into your camera, and connect the AC power adaptor to your camera and then to a wall outlet (wall socket).
  - 5** Turn on the power of your camera.  
“USB MODE” appears on the LCD screen of the camera.
  - 6** Double-click the newly recognized icon on the desktop.  
The folders inside the “Memory Stick” are displayed.
  - 7** Select and double-click the desired image/sound file from the folder.
-

## Notes on using your computer

### “Memory Stick”

- Operation is not guaranteed if you are using a “Memory Stick” that was formatted with a computer, or if you used a computer to format the “Memory Stick” in your camera through a USB connection.
- Do not optimize the “Memory Stick” on a Windows machine. This will shorten the “Memory Stick” life.
- Do not compress the data on the “Memory Stick.” Compressed files cannot be played back on your camera.

### Software

- Depending on your application software, the file size may increase when you open a still image file.
- When you load an image modified using the supplied retouch software from your computer to the camera or when you directly modify the image on the camera, the image format will differ so the “FILE ERROR” message may appear and you may be unable to open the file.
- Depending on your application software, only the first frame of the Clip Motion file may be played back.

### For Windows Me and Windows 2000 users

The following procedures are recommended when disconnecting the USB cable from your computer or ejecting the “Memory Stick” from the camera while it is connected to your computer.

- 1 Stop the drive by clicking on the “Unplug/Eject” icon in the task tray.
- 2 When the message appears confirming the safe removal of the hardware, disconnect the USB cable or eject the “Memory Stick.”

### Communications with your computer (for Windows only)

Communications between your camera and your computer may not recover after recovering from Suspend or Sleep.


### For Mac OS X users

Turn off your computer before disconnecting the USB cable from the computer or removing the “Memory Stick.”

# Image file storage destinations and image files

Image files recorded with your camera are grouped in folders by recording mode. The meanings of the file names are as follows. □□□□ stands for any number within the range from 0001 to 9999.

For Windows Me users (The drive recognizing the camera is "E:")

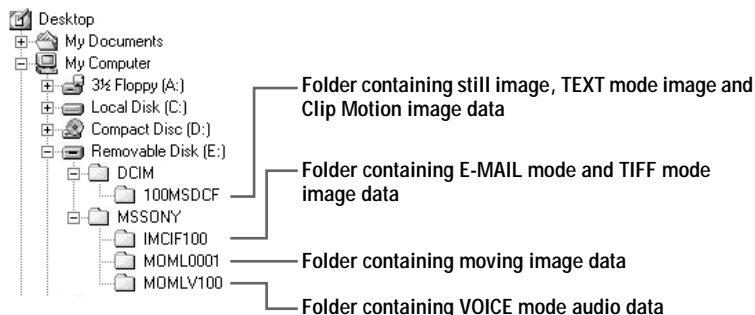

Folder	File	Meaning
100MSDCF	DSC0□□□□.JPG	<ul style="list-style-type: none"> <li>• Still image file recorded normally</li> <li>• Still image file recorded in               <ul style="list-style-type: none"> <li>— E-MAIL mode (page 55)</li> <li>— TIFF mode (page 58)</li> <li>— VOICE mode (page 56)</li> <li>— Burst mode (page 55)</li> </ul> </li> </ul>
	CLP0□□□□.GIF	• Clip Motion file recorded in NORMAL mode (page 59)
	CLP0□□□□.THM	• Index image file of Clip Motion file recorded in NORMAL mode
	MBL0□□□□.GIF	• Clip Motion file recorded in MOBILE mode (page 59)
	MBL0□□□□.THM	• Index image file of Clip Motion file recorded in MOBILE mode
	TXT0□□□□.GIF	• Still image file recorded in TEXT mode (page 57)
	TXT0□□□□.THM	• Index image file of still image file recorded in TEXT mode

Folder	File	Meaning
IMCIF100	DSC0□□□□.JPG	• Small-size image file recorded in E-MAIL mode (page 55)
	DSC0□□□□.TIF	• Uncompressed image file recorded in TIFF mode (page 58)
MOML0001	MOV0□□□□.MPG	• Moving image file recorded normally
MOMLV100	DSC0□□□□.MPG	• Audio file recorded in VOICE mode (page 56)

### ■ Notes

- The numerical portions of the following files are the same.
  - A small-size image file recorded in E-MAIL mode and its corresponding image file
  - An uncompressed image file recorded in TIFF mode and its corresponding image file
  - An audio file recorded in VOICE mode and its corresponding image file
  - An image file recorded in TEXT mode and its corresponding index image file
  - An image file recorded with Clip Motion and its corresponding index image file
- Do not change these folder and file names on your computer. If the name is changed, the camera may be unable to open that folder or file.

### Tips

The digital still camera saves recorded images as digital data. The format of the saved data is called as the file format. The formats that can be used with this camera are as follows:

#### JPEG format

Most digital still cameras, computer operating systems, and browser software adopt this format. This format is able to compress files without appreciable deterioration. However, if the image is compressed and saved on repeated occasions, the image quality will deteriorate. This camera records still images using the JPEG format for normal recording.

#### GIF format

Using this format, the image quality will not deteriorate even if the image is compressed and saved on repeated occasions. This format limits the number of colors to 256 colors. This camera records still images using the GIF format in Clip Motion (page 59) or TEXT mode (page 57).

#### TIFF format

Stores shot images without compression, so the image quality does not deteriorate. Most operating systems and applications support this format. This camera records still images using the TIFF format for the TIFF mode (page 58).

#### MPEG format


This format is very typical for moving images. This camera records audio using the MPEG format for the moving image recordings and the VOICE mode (page 56).

# Before performing advanced operations

The operation methods that are frequently used for advanced operations are described below. For mode dial and control button usage, see page 18.



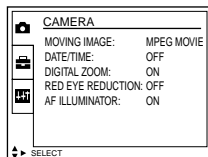


## Setting up the items in the SET UP screen

 - 1 Set the mode dial to SET UP.**  
The SET UP screen appears (page 80).







- 2 Press ▲/▼/◀/▶ on the control button to select the item you want to set up.**
- 3 Press the center ● on the control button to enter the item.**


## Setting up the items in the menu

- 1 Set the mode dial to , ,  or .**
- 2 Press MENU.**  
The menu appears (page 47).
- 3 When the mode dial is set to :**

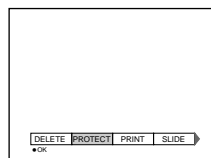- 1 Press ◀/▶ on the control button to select the item you want to set. The selected setting turns yellow.**
- 2 Press the center ● on the control button to enter the item.**





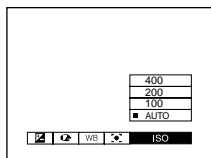



**When the mode dial is set to ,  or :**  
Press ▲/▼/◀/▶ on the control button to select the setting of the item.  
The selected setting turns yellow and the setup is complete.





## Menu settings


Menu items that can be modified differ depending on the positions of the mode dial. The LCD screen shows only the items you can operate at the moment. Factory settings are indicated with ■.





When the mode dial is set to  / 


Item	Setting	Description
 (EV)	+2.0EV to -2.0EV	Adjusts the exposure value. 13 steps in 1/3 EV increments. The factory setting is [0EV].
 (FOCUS)	∞ (infinite) 7.0 m 3.0 m 1.0 m 0.5 m ■ AUTO	Sets the distance to the subject (page 61).
WB (WHITE BAL)	HOLD ■ AUTO IN DOOR OUT DOOR	Sets the white balance (page 63).
 (SPOT METER)	ON ■ OFF	Adjusts the brightness of the spot to be recorded (page 65).
ISO	400 200 100 ■ AUTO	Selects the ISO film speed. When recording under dark conditions or recording a fast-moving subject, use a high-number setting. To record high-quality images, use a low-number setting (except when the mode dial is set to  .
 (IMAGE SIZE)	■ 2048×1536 2048 (3:2) 1600×1200 1280×960 640×480	Selects the image size when recording still images (page 52).
 (P. QUALITY)	■ FINE	Records still images in the fine image quality mode.
	STANDARD	Records still images in the standard image quality mode.







 
Item	Setting	Description
MODE (REC MODE)	TIFF	Records a TIFF (uncompressed) file in addition to the JPEG file (page 58).
	TEXT	Records a GIF file in black-and-white (page 57).
	VOICE	Records an audio file (with a still image) in addition to the JPEG file (page 56).
	E-MAIL	Records a small-size (320×240) JPEG file in addition to the selected image size (page 55).
	BURST2	Records two images continuously (page 55).
	■ NORMAL	Records an image using the normal recording mode.
⚡± (FLASH LEVEL)	HIGH	Makes the flash level higher than normal.
	■ NORMAL	Normal setting.
	LOW	Makes the flash level lower than normal.
PFX (P. EFFECT)	SOLARIZE B&W SEPIA NEG.ART ■ OFF	Sets the image special effects (page 64).
 (SHARPNESS)	+2 +1 ■ 0 -1 -2	Adjusts the sharpness of the image. The  indicator appears (except when the setting is 0).




When the mode dial is set to  (MOVING IMAGE is set to MPEG MOVIE in the SETUP settings.)

Item	Setting	Description
 (EV)	+2.0EV to -2.0EV	Adjusts the exposure value. 13 steps in 1/3 EV increments. The factory setting is [0EV].
 (FOCUS)	∞ (infinite) 7.0 m 3.0 m 1.0 m 0.5 m ■ AUTO	Sets the distance to the subject (page 61).
WB (WHITE BAL)	HOLD ■ AUTO IN DOOR OUT DOOR	Sets the white balance (page 63).
 (SPOT METER)	ON ■ OFF	Adjusts the brightness of the spot to be recorded (page 65).
 (IMAGE SIZE)	320 (HQ) 320×240 ■ 160×112	Selects the MPEG image size when recording moving images (page 52).
PFX (P. EFFECT)	SOLARIZE B&W SEPIA NEG.ART ■ OFF	Sets the image special effects (page 64).

When the mode dial is set to  (MOVING IMAGE is set to CLIP MOTION in the SETUP settings.)


Item	Setting	Description
 (EV)	+2.0EV to -2.0EV	Adjusts the exposure value. 13 steps in 1/3 EV increments. The factory setting is [0EV].
 (FOCUS)	∞ (infinite) 7.0 m 3.0 m 1.0 m 0.5 m ■ AUTO	Sets the distance to the subject (page 61).
WB (WHITE BAL)	HOLD ■ AUTO IN DOOR OUT DOOR	Sets the white balance (page 63).
 (SPOT METER)	ON ■ OFF	Adjusts the brightness of the spot to be recorded (page 65).
 (IMAGE SIZE)	■ NORMAL MOBILE	Selects the Clip Motion image size (page 59).
 (FLASH LEVEL)	HIGH	Makes the flash level higher than normal.
	■ NORMAL	Normal setting.
	LOW	Makes the flash level lower than normal.
PFX (P. EFFECT)	SOLARIZE B&W SEPIA NEG.ART ■ OFF	Sets the image special effects (page 64).
 (SHARPNESS)	+2 +1 ■ 0 -1 -2	Adjusts the sharpness of the image. The  indicator appears (except when the setting is 0).

When the mode dial is set to 




Item	Setting	Description
DELETE	OK	Deletes the displayed image (page 71).
	CANCEL	Cancels deleting of the image.
PROTECT	–	Protects images against accidental erasure (page 72).
PRINT	–	Marks the print mark on still images (page 76).
SLIDE*	INTERVAL	Sets the slide show interval. ■ 3 sec/5 sec/10 sec/30 sec/1 min
	REPEAT	■ ON/OFF
	START	Starts the slide show.
	CANCEL	Cancels the slide show.
COPY	OK	Copies an image (page 75).
	CANCEL	Cancels copying of the image.
RESIZE*	2048×1536 1600×1200 1280×960 640×480	Changes the recorded image size (page 74).
	CANCEL	Cancels changing of the recorded image size.
ROTATE*	 OK	Rotates the still image 90 degrees (page 69).
	CANCEL	Cancels rotation of a still image.
DIVIDE*	OK	Divides a moving image (page 78).
	CANCEL	Cancels division of a moving image.

\* Only in single-image mode.
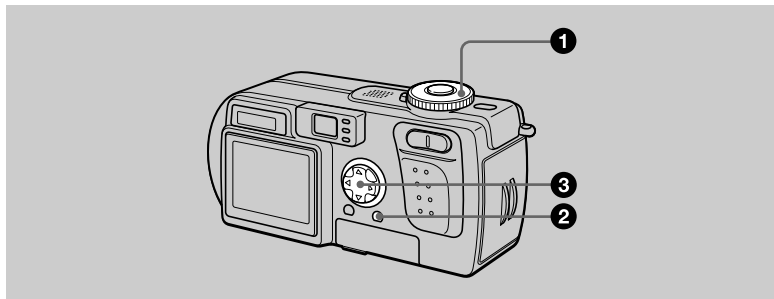
## Setting the image size (IMAGE SIZE)



---

**1** Set the mode dial to ,  or .

---

**2** Press MENU.  
The menu appears.

---

**3** Select [  ] (IMAGE SIZE) with / , then select the desired image size with / .

**Still image sizes:**

2048×1536: 3.0 mega pixels

2048 (3:2)\*

1600×1200: 2.0 mega pixels

1280×960: 1.3 mega pixels

640×480: 0.35 mega pixels

\* The image is recorded in the ratio of three to two to fit the printing paper size. Using this image size, the margin of an image is not printed out. However, a slight amount of the upper and lower black portions are displayed on the LCD screen.

The larger the numbers for the image size are, the larger the file will be, and the fewer images that can be recorded on one “Memory Stick.” For details on how many images can be recorded, refer to page 53.

**Moving image (MPEG movie) sizes:**

320 (HQ)\*, 320×240, 160×112

\* High Quality mode

**Clip Motion sizes:**

NORMAL (160×120), MOBILE (120×108)

---

**Examples of use and the number of images\* or the time\*\* that you can record on a “Memory Stick” (8 MB) for each image size**

**Still images:**

Image size	Usage	Quality	
		STANDARD	FINE
2048×1536	Modifying images	Approx. 9	Approx. 5
2048 (3:2)	Printing in 3:2 ratio	Approx. 9	Approx. 5
1600×1200	Printing in A4 format	Approx. 15	Approx. 8
1280×960	Printing in post card size	Approx. 22	Approx. 12
640×480	Attaching to e-mail	Approx. 118	Approx. 48

**Moving images:**

Image size	Usage	Number of images or time
320 (HQ)	Viewing on TV	Approx. 20 sec.
320×240	Viewing on computer	Approx. 80 sec.
160×112	Attaching to e-mail	Approx. 320 sec.
MOBILE (120×108) (2 frames)	–	Approx. 300
NORMAL (160×120) (10 frames)	–	Approx. 40

\* When MODE (REC MODE) is set to NORMAL.

\*\* The maximum recording time in continuous recording.

**Number of recordable images or recordable time (page 96)**


The actual number of images or recordable time may differ depending on the recording conditions.

## ► Various recording

### Recording images according to shooting conditions (TWILIGHT mode)

**Mode dial:** ☾

This mode is suitable for the night scene.

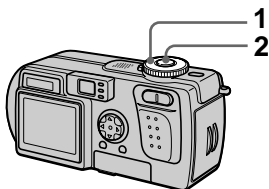

#### 1 Set the mode dial to ☾.

Allows you to record bright subjects in dark places without losing the dark atmosphere of the surroundings. The shutter speed becomes slower, so we recommend that you use a tripod to prevent shaking.

#### 2 Record the image.

To cancel the TWILIGHT mode

Set the mode dial to 📷.

#### 📌 Notes

- Set ⚡ forced flash when you use the flash in the TWILIGHT mode.
- You cannot record moving images in the TWILIGHT mode.
- When using the TWILIGHT mode, the AF illuminator (page 25) emits light when the flash mode is set to ⚡ forced flash.

#### Tips


Under normal recording conditions, the camera automatically makes various adjustments, such as those for the focus, iris, exposure, and white balance, as it shoots. However, you may not be able to carry out your desired shooting depending on the shooting conditions. The TWILIGHT mode provides you with near-optimum adjustments to suit your shooting situation.




 



## Recording two images continuously

Mode dial:  / 

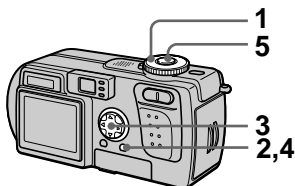This mode is used for a continuous recording.



- 1 Set the mode dial to  or .
- 2 Press MENU.  
The menu appears.
- 3 Select [MODE] (REC MODE) with , [BURST2] with .
- 4 Press MENU.  
The menu disappears.
- 5 Record the image.


To return to normal recording mode  
Select [NORMAL] with  in step 3.


### Notes




 
- You cannot use the flash in this mode.
- During recording in this mode, the image is not displayed on the LCD screen. Make the composition before pressing the shutter button.
- The recording interval is approximately 0.6 seconds.

## Recording still images for e-mail (E-MAIL)

Mode dial:  / 

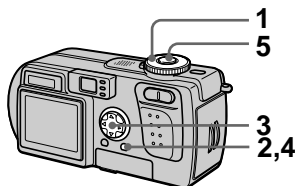In the E-MAIL mode, a small-size image which is suitable for e-mail transmission is also recorded at the same time as recording a normal still image. (The size of the normal still image is set using [  ] (IMAGE SIZE) in the menu settings (page 52).)



- 1 Set the mode dial to  or .
- 2 Press MENU.  
The menu appears.
- 3 Select [MODE] (REC MODE) with , [E-MAIL] with .
- 4 Press MENU.  
The menu disappears.
- 5 Record the image.

The number of images that you can record on a "Memory Stick" (8 MB) in E-MAIL mode

Image size	Quality	
	STANDARD	FINE
2048×1536	Approx. 8	Approx. 4
2048 (3:2)	Approx. 8	Approx. 4
1600×1200	Approx. 14	Approx. 8
1280×960	Approx. 21	Approx. 12
640×480	Approx. 95	Approx. 43

**Number of recordable images (page 96)**


The actual number of images may differ depending on the recording conditions.


To return to normal recording mode



Select [NORMAL] with ▲/▼ in step 3.

## Adding audio files to still images (VOICE)

Mode dial:  / 

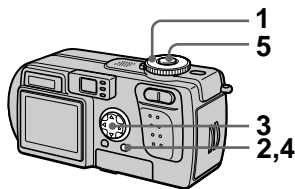In the VOICE mode, the audio is also recorded at the same time as recording a still image. (The size of the normal still image is set using [  ] (IMAGE SIZE) in the menu settings (page 52).)



- 1** Set the mode dial to  or .
- 2** Press MENU.  
The menu appears.
- 3** Select [MODE] (REC MODE) with ◀/▶, [VOICE] with ▲/▼.
- 4** Press MENU.  
The menu disappears.
- 5** Record the image.  
**If you press and release the shutter button**, sound is recorded for five seconds.  
**If you hold down the shutter button**, sound is recorded until you release the shutter button for up to 40 seconds.



The number of images that you can record on a “Memory Stick” (8 MB) in VOICE mode\*


Image size	Quality	
	STANDARD	FINE
2048×1536	Approx. 8	Approx. 4
2048 (3:2)	Approx. 8	Approx. 4
1600×1200	Approx. 13	Approx. 7
1280×960	Approx. 19	Approx. 11
640×480	Approx. 56	Approx. 34

\* When recording 5-second audio.


To return to normal recording mode


Select [NORMAL] with ▲/▼ in step 3.

## Recording text documents (TEXT)

Mode dial: 

The TEXT mode is suitable for recording a document in black and white to emphasize the character. The LCD screen also turns black and white, and the image is recorded in the GIF format.

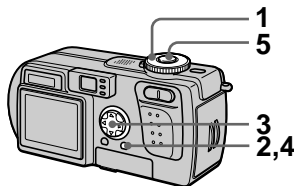

- 1 Set the mode dial to .
- 2 Press MENU.  
The menu appears.
- 3 Select [MODE] (REC MODE) with ◀/▶, [TEXT] with ▲/▼.
- 4 Press MENU.  
The menu disappears.
- 5 Record the image.


The number of images that you can record on a “Memory Stick” (8 MB) in TEXT mode\*

Image size	Number of images*
2048×1536	14–108
2048 (3:2)	16–108
1600×1200	24–138
1280×960	36–162
640×480	121–323

\* The number of recordable images depends on the document condition, such as the amount of text portions.


To return to normal recording mode  
Select [NORMAL] with ▲/▼ in step 3.


**Notes**





- If the subject is not evenly illuminated, you may be unable to record a clear image.
- Writing and reading data take more time than normal recording.
- When the mode dial is set to ☾, images can be recorded, but the image may be bleached out or may be turned black.
- The remaining number of recordable images is not displayed.
- The number of recordable images is the same regardless of whether [  ] (P. QUALITY) is set to STANDARD or FINE.

## Recording still images as uncompressed files (TIFF)

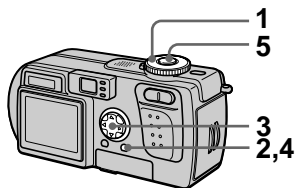**Mode dial:**  / 

In this mode, a 2048×1536 size uncompressed image is recorded at the same time as a normal still image. (The size of the normal still image is set using [  ] (IMAGE SIZE) in the menu settings (page 52).) The uncompressed image quality does not deteriorate. Images recorded in this mode are suitable for printing with a high-quality image.



- 1 Set the mode dial to  or .**
- 2 Press MENU.**  
The menu appears.
- 3 Select [MODE] (REC MODE) with , [TIFF] with .**
- 4 Press MENU.**  
The menu disappears.
- 5 Record the image.**  
The number of images that you can record on a “Memory Stick” (16 MB) in TIFF mode is approximately 1.

To return to normal recording mode  
Select [NORMAL] with ▲/▼ in step 3.


### Notes

- When [2048 (3:2)] is selected for the image size, the uncompressed image is recorded in the [2048 (3:2)] format.
- Writing data takes more time than normal recording.
- The supplied "Memory Stick" (8 MB) does not have sufficient capacity to record uncompressed images.

## Creating Clip Motion Files

**Mode dial:**

Clip Motion is an animation function that plays back still images in succession. The images are stored in GIF format, which is convenient for creating home pages or attaching images to an e-mail.

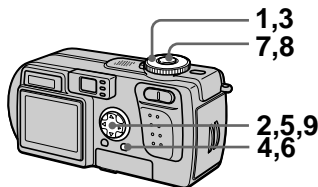

- 1 Set the mode dial to SET UP.**  
The SET UP screen appears.
- 2 Select [CAMERA] with /▼, [MOVING IMAGE] with /▲/▼, [CLIP MOTION] with /▼, then press .**
- 3 Set the mode dial to .**
- 4 Press MENU.**  
The menu appears.
- 5 Select [IMAGE SIZE] with /▶, the desired mode with /▼.**

### **NORMAL (160×120)**


Clip Motion of up to 10 frames can be recorded. This is suitable for use on home pages, etc.

### **MOBILE (120×108)**

Clip Motion of up to 2 frames can be recorded. This is suitable for use with portable data terminals.

- 6 Press MENU.**  
The menu disappears.

## 7 Record the image for the first frame.

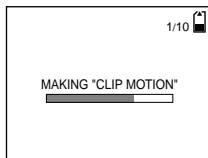

Before carrying out step 9, the images are temporarily stored in the memory. These images are not recorded on the “Memory Stick” yet.

## 8 Record the image for the next frame.

Image recording can be repeated up to the maximum number of recordable frames.

## 9 Press ●.

All the frame images are recorded on the “Memory Stick.”

To delete some or all of the frame images while making a Clip Motion recording

- 1 Press the control button ◀ (⊖) in step 7 or 8.

The recorded frame images are played back in turn and stop at the last image.

- 2 Press MENU, and select [DELETE LAST] or [DELETE ALL] with ◀/▶, then press ●.

- 3 Select [OK] with ▲/▼, then press ●.

When [DELETE LAST] is selected in step 2, each time you repeat steps 1 through 3, a recorded frame is deleted from the newest one.

## The number of Clip Motion frames that you can record on a “Memory Stick” (8 MB)

Image size	Number of images
NORMAL (160×120)	Approx. 40*
MOBILE (120×108)	Approx. 300**

- \* When recording 10 frames per Clip Motion file
- \*\* When recording 2 frames per Clip Motion file


### Notes

- You cannot change the image size midway through a Clip Motion recording.
- Reading and writing data take more time than normal image recording.
- Due to the limitations of the GIF format, the number of colors for Clip Motion images is reduced to 256 colors or less. Therefore, the picture quality may deteriorate for some images.
- The file size is reduced in MOBILE mode, so the picture quality deteriorates.
- GIF files not created on this camera may not be displayed correctly.
- All the frame images are immediately recorded on the “Memory Stick” if the mode dial is switched or the power is turned off.

## Setting the distance to the subject

**Mode dial:** / /

Normally the focus is automatically adjusted. This function is useful when the auto focus does not work well such as in dark places.

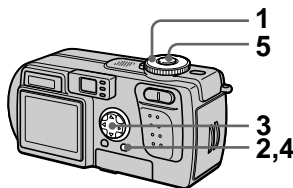

- 1 Set the mode dial to , or .**
- 2 Press MENU.**  
The menu appears.
- 3 Select [F<sub>2</sub>] (FOCUS) with / , the desired distance setting with / .**  
You can select from the following 6 focus settings:  
AUTO, 0.5 m (1 3/4 feet), 1.0 m (3 1/4 feet), 3.0 m (9 3/4 feet), 7.0 m (23 feet), ∞ (infinite).
- 4 Press MENU.**  
The menu disappears.
- 5 Record the image.**

To reactivate auto focusing  
Select [AUTO] with / in step 3.


### Notes

- Focal point information may not show the entirely correct distance. Use the information as a guide.
- If you shoot a subject within 0.6 m (23 5/8 feet) while the zoom is set to the T side, you cannot get a clear focus. In such cases, the focal point information flashes. Press the zoom W button until the indicator stops flashing.

## Recording images at close range (MACRO)

**Mode dial:** / /

The macro recording mode is used when zooming up a small subject, such as flowers, insects.

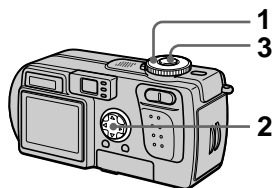

- 1 Set the mode dial to , or .**
- 2 Clear the menu, and press the control button .**  
The (macro) indicator appears on the LCD screen.  
You can record a subject as close as about 10 cm (4 inches) from the lens surface with the zoom set all the way to the W side, or about 60 cm (23 5/8 inches) with the zoom set all the way to the T side.
- 3 Record the image.**

To return to normal recording mode

Press the control button again.  
The indicator disappears.


### Note







When recording images in macro, use the LCD screen. If you record using the finder, the range visible in the finder may differ from the actual recording range.
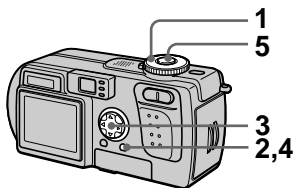
## Adjusting the exposure (EXPOSURE)

**Mode dial:**  /  / 

This adjusts the exposure value which is set in the automatic adjustment.



- 1 Set the mode dial to ,  or .**
- 2 Press MENU.**  
The menu appears.
- 3 Select  (EV) with , the desired exposure value with .**  
Adjust the exposure value while checking the brightness of the background.  
You can select values ranging from +2.0 EV to -2.0 EV in steps of 1/3 EV.
- 4 Press MENU.**  
The menu disappears.
- 5 Record the image.**

### **Note**

If a subject is under extremely bright or dark conditions, or the flash is used, the exposure adjustment may not be effective.


### **Tips**

Normally, the camera automatically adjusts the exposure. If the color of the image is too dark or bright as shown below, we recommend that you adjust the exposure manually. When recording a backlit subject or a subject in the snow, set the exposure toward +, and when recording a subject with extremely bright illumination such as a spotlight, set it toward -.

Set the exposure toward +




Set the exposure toward -

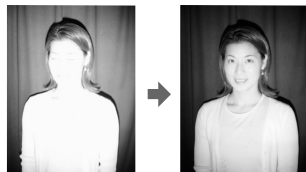





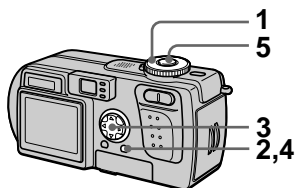


## Adjusting the white balance (WHITE BALANCE)

Mode dial:  /  /  / 

Normally the white balance is automatically adjusted (AUTO). When you record with the shooting condition fixed or under a specific lighting condition, you can manually adjust the white balance.



- 1 Set the mode dial to ,  or .**
- 2 Press MENU.**  
The menu appears.
- 3 Select [WB] (WHITE BAL) with , , the desired setting with , .**

### HOLD

Recording a single-colored subject or background.

### AUTO (No indicator)

Adjusts the white balance automatically  
Under fluorescent lighting

### IN DOOR ( )

- Places where the lighting condition changes quickly
- Under bright lighting such as photography studios
- Under sodium or mercury lamps

### OUT DOOR ( )



Recording a sunrise/sunset, night scene, neon signs, or fireworks

### 4 Press MENU.

The menu disappears.


### 5 Record the image.

To reactivate auto adjustment

Select [AUTO] with  /  in step 3.

### Tips


The image is affected by the lighting conditions. The image looks blue under sunlight in the summer, and looks red under mercury lamps. Human eyes can resolve these problems. However, the camera cannot resolve the problem without making adjustments. Normally, the camera adjusts automatically, but if the image appears in strange colors, we recommend that you change the white balance mode.

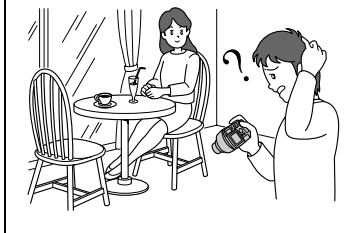






## Enjoying picture effects (P. EFFECT)

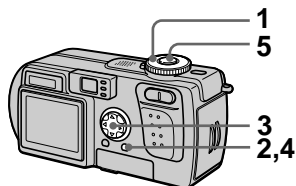Mode dial:  /  / 

You can digitally process images to obtain special effects.



- 1 Set the mode dial to ,  or .
- 2 Press MENU.  
The menu appears.
- 3 Select [PFX] (P. EFFECT) with , the desired mode with .

### SOLARIZE

The light contrast is clearer and the picture looks like an illustration.

### B&W

The picture is monochrome (black and white).

### SEPIA

The picture is sepia-toned like an old photograph.


### NEG.ART

The color and brightness of the picture are reversed as in a negative.

### OFF


Does not use the picture effect function.







- 4 Press MENU.  
The menu disappears.
- 5 Record the image.

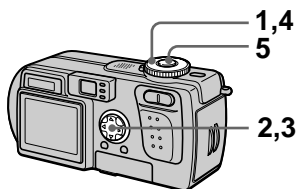To cancel picture effect  
Select [OFF] with  in step 3.

## Recording the date and time on a still image (DATE/TIME)

Mode dial:  / 



- 1 Set the mode dial to SET UP.  
The SET UP screen appears.
- 2 Select [] (CAMERA) with , [DATE/TIME] with , then press .
- 3 Select the date and time setting with , then press .

### DAY & TIME



Superimposes the date, hour, and minute.

### DATE

Superimposes the year, month, and day.

### OFF

Does not superimpose the date and time.

- 4 Set the mode dial to  or .
- 5 Record the image.  
The date and time do not appear on the LCD screen during shooting. These appear during playback only.




### Notes

- If you select [DATE] in step 3, the date is superimposed onto the image in the order selected with “Setting the date and time” (page 15).
- The date and time are not superimposed onto moving images or Clip Motion images.

## Using the spot light-metering function


**Mode dial:** / /

Use this function when there is backlight or when there is strong contrast between the subject and the background, etc. Position the spot light-metering cross hair with the point you want to record.

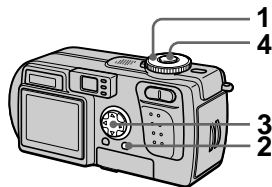

- 1 Set the mode dial to , or .**
- 2 Press MENU.**  
The menu appears.
- 3 Select [] (SPOT METER) with / , [ON] with / .**  
Position the spot light-metering cross hair with the point you want to record.
- 4 Record the image.**  
Gently press the shutter button to record the image when the automatic adjustment has been completed.

LCD screen

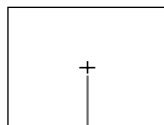

Spot light-metering cross hair

To cancel the spot light-metering function


Select [OFF] with / in step 3.

## ► Various playback

### Playing back three or nine images at once

**Mode dial:** ►

You can display multiple images on the LCD screen at one time using the zoom buttons.

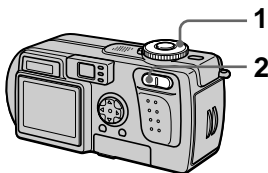


**1 Set the mode dial to ►.**


**2 Press the zoom W button repeatedly.**

The LCD screen display changes as follows:


- Single (single-image) screen

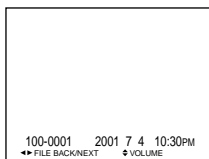

- Index (nine-image) screen

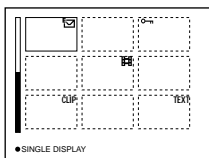


- Triple-image screen

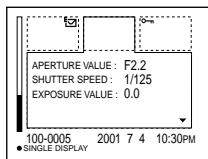


The image indicated by the yellow frame in the index screen is displayed in the middle of the triple-image screen with the recording information. To display the other information, press the control button ▲/▼.

The following marks are displayed on each image according to the image type and settings.

 : Moving image file

 : VOICE mode file

 : E-mail file

 : Print mark

 : Protect mark

TEXT: TEXT file

TIFF: TIFF file

CLIP: Clip Motion file

(No mark): Normal recording (no settings)

To display the next (previous) index screen

Press the control button ▲/▼/◀/▶.

To return to normal playback (single-image)


- Press the zoom T button repeatedly.
- Press the control button ●.

#### **Note**

When viewing an image recorded in Clip Motion or TEXT mode on the index screen, the image may appear different from the actual image.


### Tips

When the triple-image screen is displayed, pressing MENU opens the menu including [PRINT], [PROTECT], and [DELETE]. For details on these items, see pages 71, 72, or 76. To close the menu, press MENU again. The menu disappears and the recording information is indicated.

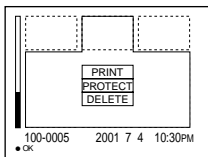

## Enlarging a part of a still image (Zoom and trimming)

Mode dial: ►

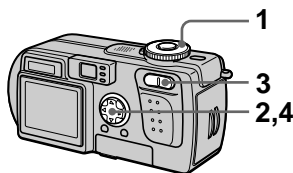

- 1 Set the mode dial to ►.
- 2 Display the image to be enlarged.
- 3 Zoom in/out the image with the zoom T/W buttons.
- 4 Move the image with ▲/▼/◀/▶ to select the desired portion of the image.

To return to the normal size  
Press the control button ●.

To record an enlarged image  
(trimming)

- ① Press MENU after zooming.
- ② Select [TRIMMING] with ►, then press ●.
- ③ Select the image size with ▲/▼, then press ●.

The image is recorded and the image on the LCD screen returns to the normal size after recording.


### Notes




 


- You cannot zoom moving images and Clip Motion images.
- You can zoom images recorded in TEXT mode, but cannot trim them.
- Zoom scaling is up to 5× regardless of the original image size.
- The quality of enlarged images may be deteriorated.
- The original data is retained even if you enlarge the image.
- The enlarged image is recorded as the newest file.
- If you trim an image, the remaining “Memory Stick” capacity will be decreased.
- If the remaining “Memory Stick” capacity is not sufficient, you may be unable to trim an image.
- You cannot trim to an image size of 3:2.
- You cannot trim uncompressed (TIFF) images.

## Playing back still images in order (SLIDE)

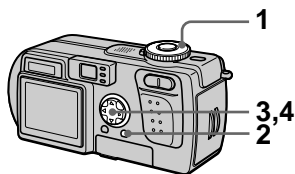**Mode dial:** 

This function is useful for checking the recorded images or for presentations, etc.



- 1 Set the mode dial to .**
- 2 Press MENU.**  
The menu appears.
- 3 Select [SLIDE] with , then press .**  
Set the following items with //.

### INTERVAL

 

 

You can select from 1 min (one minute), 30 sec (30 seconds), 10 sec (10 seconds), 5 sec (5 seconds), or 3 sec (3 seconds).

### REPEAT

ON: Plays back images in a continuous loop.  
OFF: After all images have been played back, the slide show ends.

- 4 Select [START] with , then press .**  
The slide show begins.

To cancel the SLIDE SHOW setting

Select [CANCEL] with // in step 3, then press .

To stop the SLIDE SHOW playback

Press ●, select [EXIT] with ►, then press ●.

To skip to the next/previous image during the SLIDE SHOW

Press ► (next) or ◀ (previous).


**Note**

The interval setting time may vary depending on the image size.

## Rotating a still image (ROTATE)

**Mode dial:** ►

You can rotate the image recorded in portrait orientation and change it in landscape orientation.

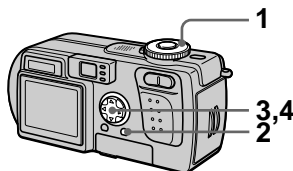

**1** Set the mode dial to ►, and display the image to rotate.

**2** Press MENU.  
The menu appears.

**3** Select [ROTATE] with ◀/►, then press ●.

**4** Select [↶, ↷] with ▲/▼, then rotate the image with ◀/►. Select [OK] with ▲/▼, then press ●.

To cancel rotation

Select [CANCEL] with ▲/▼ in step 4, then press ●.


**Notes**


- You cannot rotate protected or uncompressed images, or images recorded in TEXT mode.
- You may not be able to rotate images recorded with other equipment.
- Also, when viewing images on a computer, the image rotation information may not be reflected depending on the application software.

## Viewing images on a TV screen

**Mode dial:** 

Before connecting your camera, be sure to turn off the TV.

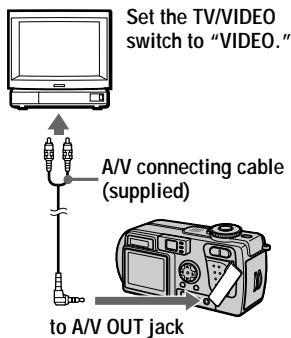

- 1** Set the mode dial to .
- 2** Connect the A/V connecting cable to the A/V OUT jack of your camera and to the audio/video input jacks of the TV.

If your TV has stereo type input jacks, connect the audio plug (black) of the A/V connecting cable to the Lch jack.

- 3** Turn on the TV and start playback on your camera. The image appears on the TV screen.

### Notes

- You cannot use a TV that has an antenna (aerial) connector only.
- When viewing a still image on the TV, the black band may appear around the image.


## ► Editing

### Deleting images (DELETE)

Mode dial: ►

You can delete unwanted files.

#### In single-image or triple-image mode

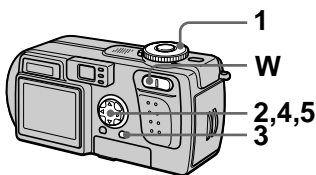

**1** Set the mode dial to ►.

**2** In single-image mode:  
Display the image you want to delete with ◀▶.

**In triple-image mode:**  
Press the zoom W button twice in the single-image mode to turn to the triple-image mode. Display the image you want to delete with ◀▶.

**3** Press MENU.  
The menu appears.


**4** Select [DELETE] with ◀▶ in single-image mode, or with ▲▼ in triple-image mode, then press ●.

**5** Select [OK] with ▲▼, then press ●.  
The displayed image (or the middle-positioned image in triple-image mode) is deleted.

To cancel deleting

- Press MENU in step 4 or 5 so that the menu turns off.
- Select [CANCEL] with ▲▼ in step 5.

#### In index mode

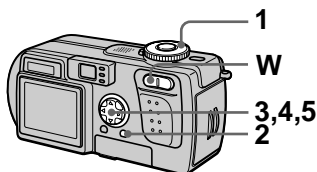

**1** Set the mode dial to ►, then display the index screen with the zoom W button.


**2** Press MENU.  
The menu appears.



**3** Select [DELETE] with ◀▶, then press ●.


**4** Select [ALL] or [SELECT] with ◀▶, then press ●.


**5** When you select [ALL]  
Select [ENTER] with ◀▶, then press ●.  
All the unprotected images are deleted.




#### When you select [SELECT]

 
 



① Select an image to be deleted with ▲▼/◀▶. The frame of the selected image turns green. Press ● to toggle  on and off.

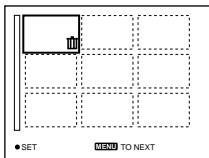● () → ● (no indicator)  
→ ● ()

Repeat this step until  has been toggled on for all images that are to be deleted.



- Press MENU.
- Select [OK] with , , the press .

To cancel deleting  
Select [CANCEL] with ,  in step 4  
or [EXIT] with ,  in step 5, then  
press .

#### Note

If there are files on the “Memory Stick” with names having the same last 4 digits as the file name of the image to be deleted, these files are also deleted at the same time.

## Preventing accidental erasure (PROTECT)


**Mode dial:** 


 

This function protects images against accidental erasure.



#### Note



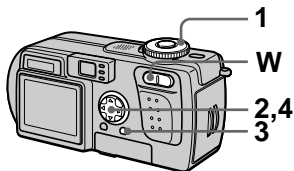


Formatting a “Memory Stick” (page 79) erases even protected images.

 
### In single-image or triple-image mode



- Set the mode dial to .
- In single-image mode**  
Display the image you want to protect with , .

 
**In triple-image mode**  
Press the zoom W button twice in the single-image mode to turn to the triple-image mode.  
Display the image you want to protect with , .

- Press MENU.  
The menu appears.
- Select [PROTECT] with ,  in single-image mode, or with ,  in triple-image mode, then press .

The displayed image (or the middle-positioned image in triple-image mode) is protected.  
The  indicator appears on the image.




To release protection


Press ● again in step 4. The  indicator disappears.

To cancel protection

Press MENU in step 4 so that the menu turns off.

### In index mode

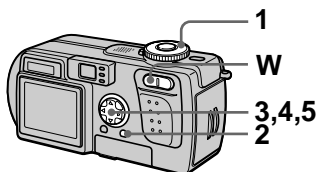


**1** Set the mode dial to , then display the index screen with the zoom W button.

 
 



**2** Press MENU.  
The menu appears.



**3** Select [PROTECT] with , then press ●.


**4** Select [ALL] or [SELECT] with , then press ●.


**5** When you select [ALL]  
Select [ON] with , then press ●.  
All the images in the “Memory Stick” are protected.

### When you select [SELECT]

   
① Select an image to be protected with ///. The frame of the selected image turns green. Press ● to toggle  on and off.

● () → ● (no indicator)  
→ ● ()

 Repeat this step until  has been toggled on for all images that are to be protected.

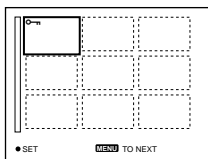


② Press MENU.





③ Select [OK] with , then press ●.

To release protection


**If you selected [ALL] in step 4:**

 Select [OFF] with , and then press ●.





**If you selected [SELECT] in step 4:**

① Select the images to be unprotected with ///, then press ●.


② Repeat ① for all images that are to be unprotected.

 ③ Press the MENU button, select [OK] with , and then press ●.


To cancel protection

 




Select [CANCEL] with / in step 4 or [EXIT] with / in step 5, then press ●.



## Changing the recorded still image size (RESIZE)

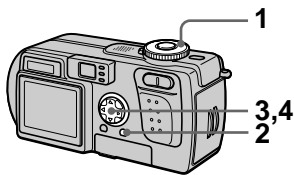**Mode dial:** 

You can change the image size of a recorded image in single mode.



 - 1 Set the mode dial to , then display the image of which you want to change the size.**
- 2 Press MENU.**  
The menu appears.
- 3 Select [RESIZE] with , then press .**
- 4 Select the desired size with , then press .**  
2048×1536, 1600×1200,  
1280×960, 640×480  
The resized image is recorded.

To cancel changing the size  
Select [CANCEL] with , then press .

### Notes


- The original image is retained even after resizing.
- You cannot change the size of images recorded in TEXT mode, moving images, uncompressed images, or Clip Motion images.
- The resized image is recorded as the newest file.
- If you resize an image, the remaining “Memory Stick” capacity will be decreased.
- When you change from a small size to a large size, the picture quality deteriorates.
- If the remaining “Memory Stick” capacity is not sufficient, you may not be able to resize an image.
- You cannot resize to an image size of 3:2.
- When you resize a 3:2 image, the upper and lower black portions are displayed on the LCD screen.
- You cannot resize images in index mode or triple-image mode.




 



## Copying images (COPY)

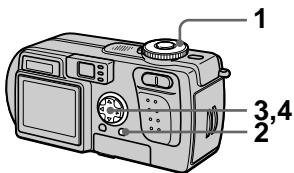

Mode dial: 

You can copy images to another “Memory Stick.”



### In single-image mode




- 1 Set the mode dial to , then display the image you want to copy.
- 2 Press MENU.  
The menu appears.
- 3 Select [COPY] with , then press .
- 4 Select [OK] with , then press .  
“MEMORY STICK ACCESS” appears.
- 5 When “CHANGE MEMORY STICK” appears, eject the “Memory Stick.”  
“INSERT MEMORY STICK” appears.
- 6 Insert the “Memory Stick” on which to copy the image.  
“RECORDING” appears.  
When copying is completed, “COMPLETE” appears.  
To end copying, select [EXIT] with , then press .









To copy the image to another “Memory Stick”  
Select [CONTINUE] with , press , then repeat steps 5 and 6.

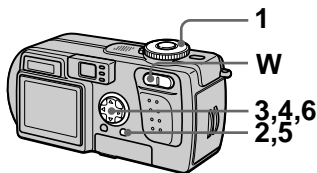



To cancel copying

 
Select [CANCEL] with , then press .


### In index mode



- 1 Set the mode dial to , then display the index screen with the zoom W button.
- 2 Press MENU.  
The menu appears.
- 3 Select [COPY] with , then press . Select [Select] with , then press .  
The frame of the selected image turns green.
- 4 Select the image to copy with the control button, then press .  
Press  to toggle  on and off.

  →  (no indicator) → 

Repeat this step until  has been toggled on for all images that are to be copied.

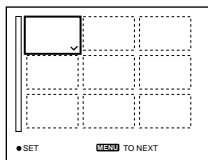

- 5 Press MENU.  
The menu appears.

- 6** Select [ENTER] with ◀▶, then press ●. “MEMORY STICK ACCESS” appears.
- 7** When “CHANGE MEMORY STICK” is displayed, eject the “Memory Stick.” “INSERT MEMORY STICK” appears.
- 8** Insert another “Memory Stick.” “RECORDING” appears. When copying is completed, “COMPLETE” appears. To end copying, select [EXIT] with ▲▼, then press ●.

To copy the image to another “Memory Stick” Select [CONTINUE] with ▲▼ in step 8, press ●, then repeat steps 7 and 8.

To cancel copying Select [CANCEL] with ◀▶ in step 3 or [EXIT] with ◀▶ in step 6, then press ●.

#### Notes


- You cannot copy uncompressed images.
- You cannot copy images that are bigger than 5 MB at once. If “NOT ENOUGH MEMORY” appears or ✓ flashes on the INDEX screen, cancel some images to copy and try again.
- If you do not select [EXIT] after “COMPLETE” appears and instead insert a new “Memory Stick,” the same image is copied again.

## Selecting still images to print (PRINT)

**Mode dial:** ▶

You can mark a print mark on still images recorded with your camera. This mark is convenient when you have images printed at a shop that conforms with the DPOF (Digital Print Order Format) standard.

### In single-image or triple-image mode

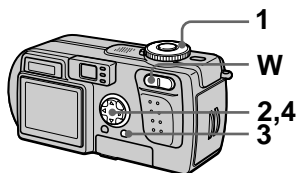

**1** Set the mode dial to ▶.


**2** In single-image mode Display the image you want to print with ◀▶.


#### In triple-image mode

Press the zoom W button twice in the single-image mode to turn to the triple-image mode. Display the image you want to print with ◀▶.

**3** Press MENU. The menu appears.

**4** Select [PRINT] with ◀▶ in single-image mode, or with ▲▼ in triple-image mode, then press ●.


The  (print) mark is marked on the displayed image (or the middle-positioned image in triple-image mode).


To unmark the print mark Press ● again in step 4. The  mark disappears.

To cancel marking the print mark

Press MENU in step 4 so that the menu turns off.

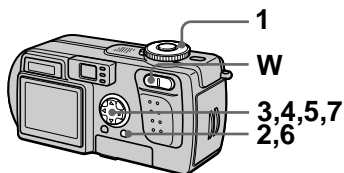


### In index mode

 







**1 Set the mode dial to , then display the index screen with the zoom W button.**


**2 Press MENU.**  
The menu appears.


**3 Select [PRINT] with , then press .**

**4 Select [SELECT] with , then press .**  
The frame of the selected image turns green.  
When marking the  mark, you cannot select [ALL].



**5 Select the images to be marked with the control button, then press .**  
Press  to toggle  on and off.

 →  (no indicator)  
→ 

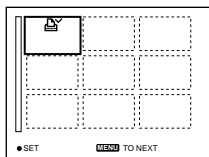
Repeat this step until  has been toggled on for all images that are to be marked.




 
 
 
**6 Press MENU.**  
The menu appears.

**7 Select [OK] with , then press .**


 

To unmark selected print marks

Select the images to be unmarked in step 5 with the control button, then press .

To unmark all the print marks

Select [ALL] with  in step 4, then press . Select [OFF] with , then press .

To cancel marking the print mark

Select [CANCEL] with  in step 4 or select [EXIT] with  in step 7, then press .


#### Notes







- You cannot mark moving images, Clip Motion images or images recorded in TEXT mode.
- If you mark an image recorded in TIFF mode with a print mark, only the uncompressed image is printed, and the JPEG image recorded at the same time is not printed.
- In E-mail mode, a print mark is marked on the normal size image that is recorded at the same time.

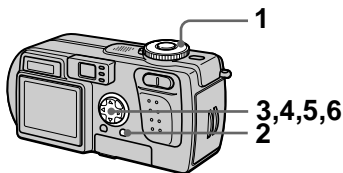
## Dividing a moving image file (DIVIDE)



**Mode dial:** 


You can divide moving images recorded in MPEG MOVIE mode. This is convenient when there is not enough space on a “Memory Stick” or when attaching moving images to e-mails.

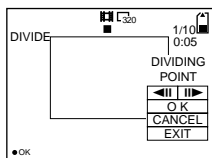

- 1 Set the mode dial to  and display the moving image you want to divide.**
- 2 Press MENU.**  
The menu appears.
- 3 Select [DIVIDE] with , then press , select [OK] with , then press .**  
The moving image is played back.
- 4 Press  at the divide point.**  
The following screen appears.







**[ || ]** (frame forward, frame reverse)

You can finely adjust the divide point using .

**[CANCEL]**

The moving image playback restarts and you can reselect the divide point.


- 5 When you have decided the divide point, select [OK] with , then press .**
- 6 [OK], [CANCEL] and [EXIT] appear on the screen. Select [OK] with , then press .**  
The moving image file is divided.

You cannot divide the following types of files:

- Clip Motion files
- Still image files
- Moving image files that are too short to divide

The file number changes as follows when you divide a file.

<eg.> If you divide the MOV00003.mpg file, the divided file numbers become MOV00004.mpg and MOV00005.mpg, and MOV00003.mpg is skipped. The divided files are saved as the latest files.

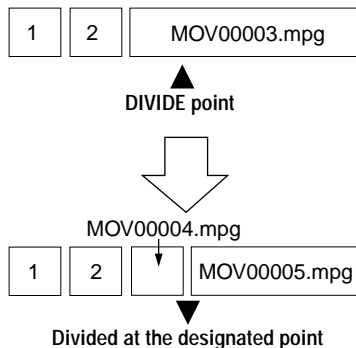

To cancel file division

Press [EXIT]. The image playback screen appears.

### Notes

 
- You cannot recombine divided files.
- The original undivided file is not saved.

To delete unwanted portions of a moving image

<eg.> To delete the unwanted scenes A and B from the file MOV00002.mpg:


### Step 1: Divide

- ① Divide the unwanted scene A.



▲  
DIVIDE point

 
- ② Divide the unwanted scene B.



▲  
DIVIDE point

### Step 2: Delete

 
- ① Delete the unwanted scenes A and B.



▲  
DELETE

▲  
DELETE

 - ② Only the desired scene remains.




## Formatting the “Memory Stick” (FORMAT)

### Mode dial: SET UP

When you format a “Memory Stick,” all data stored on the “Memory Stick” will be deleted. Check the contents of the “Memory Stick” before formatting.

### Note

Even if images are protected, these images will be deleted.

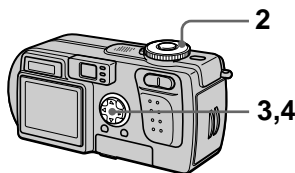

- 1 Insert the “Memory Stick” you want to format.
- 2 Set the mode dial to SET UP. The SET UP screen appears.
- 3 Select [SETUP] (SETUP 1) with ▲/▼, [FORMAT] with ►/▲/▼, then press ►.
- 4 Select [OK] with ▲/▼, then press ●.

To cancel formatting

Select [CANCEL] with ▲/▼ in step 4.

### Notes

- Format the “Memory Stick” only using this camera. You cannot format the “Memory Stick” using a computer via the USB cable.
- When you format, be sure to use a fully charged battery pack or the AC power adaptor as the power source.

## Changing the setup settings (SETUP)

The SET UP position changes the settings of infrequently-used items.

Set the mode dial to SET UP. The SET UP screen appears. You can set up the following items with the control button. Factory settings are indicated with ■.

### CAMERA

Item	Setting	Description
MOVING IMAGE	■ MPEG MOVIE	Records a MPEG movie file (page 26).
	CLIP MOTION	Records a Clip Motion file (page 59).
DATE/TIME	DAY & TIME DATE ■ OFF	Sets whether to superimpose the date and time onto the image (page 64).
DIGITAL ZOOM	■ ON OFF	Uses digital zoom (page 23).
RED EYE REDUCTION	ON ■ OFF	Reduces the red-eye phenomenon (page 25).
AF ILLUMINATOR	■ ON OFF	Uses when it is difficult to focus on the subject under dark conditions (page 25).

### SETUP 1


 
Item	Setting	Description
FORMAT	OK	<b>Formats the “Memory Stick.”</b> <b>Note that formatting erases all the information recorded on the “Memory Stick”, including even erasure protected images.</b>
	CANCEL	Cancels formatting of the “Memory Stick.”
FILE NUMBER	■ SERIES	Assigns numbers to files in sequence even if the “Memory Stick” is changed.
	RESET	Resets the file numbering each time the “Memory Stick” is changed.
言語/ LANGUAGE	■ ENGLISH	Displays the menu items in English.
	日本語/JPN	Displays the menu items in Japanese.
CLOCK SET	OK CANCEL	Sets the date and time (Perform the procedure from step ③ on page 15).

#### **Notes on [DATE/TIME]**

- The date and time do not appear on the LCD screen during shooting. These appear only during playback.
- The date and time are not superimposed onto moving images and Clip Motion images.



## SETUP 2

Item	Setting	Description
LCD BRIGHTNESS	BRIGHT <input checked="" type="checkbox"/> NORMAL DARK	Selects the LCD brightness. This has no effect on the recorded images.
LCD BACKLIGHT	BRIGHT <input checked="" type="checkbox"/> NORMAL	Displayed only when using your camera with the battery pack: Selects the brightness of the LCD backlight. Selecting [BRIGHT] makes the screen bright and easy to see when using the camera outdoors or in other bright locations, but also uses up the battery charge faster.
BEEP	SHUTTER	Turns on the shutter sound only. (The shutter sound is heard when you press the shutter button.)
	<input checked="" type="checkbox"/> ON	Turns on the beep/shutter sound (when you press the control button/shutter button).
	OFF	Turns off the beep/shutter sound.
VIDEO OUT	NTSC	Sets the video output signal to NTSC mode (e.g., Japan, USA) (page 85).
	PAL	Sets the video output signal to PAL mode (e.g., Europe) (page 85).
USB CONNECT	PTP <input checked="" type="checkbox"/> NORMAL	Switches the USB mode (page 31). Users will be informed at the Sony website when PTP connection is supported.
POWER SAVE	ON <input checked="" type="checkbox"/> OFF	Displayed only when using your camera with the battery pack: Set to [ON] to extend the battery life. When [POWER SAVE] is set to [ON], the time from when you press the shutter button until the image is recorded is longer than normal (page 12).
DEMO	<input checked="" type="checkbox"/> ON/STBY OFF	Displayed only when you use your camera with the AC power adaptor. [DEMO] is set to [STBY] at the factory, and the demonstration starts about 10 minutes after you have set the mode dial to  or  . To cancel the demonstration, turn off the power.

## Additional information

### Precautions

#### On cleaning

##### Cleaning the LCD screen

Wipe the screen surface with a cleaning cloth (not supplied) or a LCD cleaning kit (not supplied) to remove fingerprints, dust, etc.

##### Cleaning the camera surface

Clean the camera surface with a soft cloth slightly moistened with water, then wipe the surface dry. Do not use any type of solvent such as thinner, alcohol or benzine as this may damage the finish or the casing.

##### After using your camera at the seashore or other dusty locations

Clean your camera carefully. Otherwise, the salty air may corrode the metal fittings or dust may enter the inside of your camera, causing a malfunction.

#### Note on operating temperature

Your camera is designed for use between the temperatures of 0°C and 40°C (32°F and 104°F). Recording in extremely cold or hot places that exceed this range is not recommended.

#### On moisture condensation

If the camera is brought directly from a cold to a warm location, or is placed in a very damp room, moisture may condense inside or outside the camera. Should this occur, the camera will not operate properly.

##### Moisture condensation occurs easily when:

- The camera is brought from a cold location such as a ski slope into a warmly heated room.
- The camera is taken from an air-conditioned room or car interior to the hot outdoors, etc.

#### How to prevent moisture condensation

When bringing the camera from a cold place to a warm place, seal the camera in a plastic bag and allow it to adapt to conditions at the new location over a period of time (about an hour).

##### If moisture condensation occurs

Turn off the camera and wait about an hour for the moisture to evaporate. Note that if you attempt to record with moisture remaining inside the lens, you will be unable to record clear images.

#### On AC power adaptor

- The unit is not disconnected from the AC power source as long as it is connected to the wall outlet (wall socket), even if the unit itself has been turned off.
- Unplug the unit from the wall outlet (wall socket) when you are not using the unit for a long time.
- To disconnect the power cord (mains lead), pull it out by the plug. Never pull on the power cord (mains lead) itself.
- Do not operate the unit with a damaged power cord (mains lead) or if the unit has been dropped or damaged.
- Do not bend the power cord (mains lead) forcibly, or place a heavy object on it. This will damage the cord (mains lead) and may cause fire or electrical shock.
- Prevent metallic objects from coming into contact with the metal parts of the connecting section. If this happens, a short may occur and the unit may be damaged.
- Always keep the metal contacts clean.
- Do not disassemble the unit.
- Do not apply mechanical shock or drop the unit.
- While the unit is in use, particularly during charging, keep it away from AM receivers and video equipment. AM reception and video operation will be disturbed.
- The unit becomes warm during use. This is not a malfunction.
- Do not place the unit in locations that are:
  - Extremely hot or cold
  - Dusty or dirty
  - Very humid
  - Vibrating

## On battery pack

- Use only the specified charger with the charging function.
- To prevent accident from a short circuit, do not allow metal objects to come into contact with the battery terminals.
- Keep the battery pack away from fire.
- Never expose the battery pack to temperatures above 60°C (140°F), such as in a car parked in the sun or under direct sunlight.
- Keep the battery pack dry.
- Do not expose the battery pack to any mechanical shock.
- Do not disassemble or modify the battery pack.
- Install the battery pack in the camera securely.
- Charging while some capacity remains does not affect the original battery capacity.

If any problem occurs, unplug your camera and contact your nearest Sony dealer.

## On internal rechargeable button battery

This camera has an internal rechargeable button battery for maintaining the date and time and other settings regardless of whether the power is on or off. This rechargeable button battery is constantly charged as long as you are using the camera. However, if you use the camera for only short periods it discharges gradually, and if you do not use the camera at all for about one month it becomes completely discharged. In this case, be sure to charge this rechargeable button battery before using the camera. However, even if this rechargeable button battery is not charged, you can still use the camera as long as you do not record the date and time.

### Charging method

Connect the camera to a wall outlet (wall socket) with the AC power adaptor, or install a charged battery pack, and leave the camera for 24 hours or more with the POWER button set to OFF.

## On "Memory Sticks"

"Memory Stick" is a new compact, portable and versatile IC recording medium with a data capacity that exceeds a floppy disk. "Memory Stick" is specially designed for exchanging and sharing digital data among "Memory Stick" compatible products. Because it is removable, "Memory Stick" can also be used for external data storage.

There are two types of "Memory Sticks": general "Memory Sticks" and "MagicGate Memory Sticks" that are equipped with the MagicGate\* copyright protection technology.

You can use both types of "Memory Stick" with your camera. However, because your camera does not support the MagicGate standards, data recorded with your camera is not subject to MagicGate copyright protection.

\* MagicGate is copyright protection technology that uses encryption technology.

"Memory Stick",  "MEMORY STICK"™, "MagicGate Memory Stick" and  are trademarks of Sony Corporation.

"MagicGate" and **MAGICGATE** are trademarks of Sony Corporation.

### Notes

- Data may be damaged if:
  - you remove the “Memory Stick” or turn off your camera while reading or writing data.
  - you use the “Memory Stick” in a location subject to the effects of static electricity or noise.
- Do not attach any other material than the supplied label on the labeling position.
- Attach the label so that it does not stick out from the proper attachment location.
- When you carry or store the “Memory Stick,” put it in its supplied case.
- Do not touch the terminals of the “Memory Stick” with your hand or a metal object.
- Do not strike, bend or drop the “Memory Stick.”
- Do not disassemble or modify the “Memory Stick.”
- Do not allow the “Memory Stick” to get wet.

## On “InfoLITHIUM” battery pack



### What is the “InfoLITHIUM” battery pack?

The “InfoLITHIUM” battery pack is a lithium-ion battery pack that has functions for communicating information related to operating conditions of your camera. The “InfoLITHIUM” battery pack calculates the power consumption according to the operating conditions of your camera, and displays the remaining battery time in minutes.

### Charging the battery pack

- Be sure to charge the battery pack before you start using your camera.
- We recommend charging the battery pack in an ambient temperature of between 10°C to 30°C (50°F to 86°F) until the “Full” indicator appears, indicating that the battery pack is fully charged. If you charge

the battery pack outside of this temperature range, you may not be able to efficiently charge the battery pack.

- After charging is completed, disconnect the AC power adaptor from the DC IN jack on your camera or remove the battery pack.
- When the camera temperature is high (60°C (140°F)), “HI” appears in the LCD screen and the battery pack cannot be charged. However, the camera can be left in this state without problem. When the camera temperature drops and the “HI” indicator disappears, charging starts.

### Effective use of the battery pack

- Battery performance decreases in low-temperature surroundings. So, the time that the battery pack can be used is shorter in cold places. We recommend the following to ensure longer battery pack use:
  - Put the battery pack in a pocket close to your body to warm it up, and insert it in your camera immediately before you start shooting.
- Frequently using the LCD panel or frequently operating wears out the zoom the battery pack faster.
- Be certain to turn off the power when not taking shots or playing back on your camera.
- We recommend having spare batteries handy for two or three times the expected shooting time, and making trial shots before taking the actual shots.
- Do not expose the battery pack to water. The battery pack is not water-resistant.

### Remaining battery time indicator

If the power goes off although the battery remaining indicator indicates that the battery pack has enough power to operate, charge the battery pack fully again so that the indication on the battery remaining indicator is correct. Note, however, that the correct battery indication sometimes will not be restored if it is used in high temperatures for a long time or left in a fully charged state, or the battery pack is frequently used. Regard the remaining battery time indication as the approximate shooting time.

## How to store the battery pack

- If the battery pack is not used for a long time, do the following procedure once per year to maintain proper function.
  1. Fully charge the battery.
  2. Discharge on your camera.
  3. Remove the battery from your camera and store it in a dry, cool place.
- To use the battery pack up on your camera, leave the POWER button to on in slide show playback mode until the power goes off.

## Battery life

 
- The battery life is limited. Battery capacity decreases little by little as you use it more and more, and as time passes. When the battery operating time is shortened considerably, a probable cause is that the battery pack has reached the end of its life. Please buy a new battery pack.
- The battery life varies according to how it is stored and operating conditions and environment for each battery pack.

---

## Using your camera abroad

### Power sources

You can use your camera in any country or area with the supplied battery charger within 100 V to 240 V AC, 50/60 Hz. Use a commercially available AC plug adaptor [a], if necessary, depending on the design of the wall outlet (wall socket) [b].



### Watching the playback picture on TV

If you want to view the playback picture on a TV, you need a TV having a video input jack and a video connecting cable.

The color system of the TV must be the same as that of your digital still camera. Check the following list:

### NTSC system

Bahama Islands, Bolivia, Canada, Central America, Chile, Colombia, Ecuador, Jamaica, Japan, Korea, Mexico, Peru, Surinam, Taiwan, the Philippines, the U.S.A., Venezuela, etc.

### PAL system

Australia, Austria, Belgium, China, Czech Republic, Denmark, Finland, Germany, Holland, Hong Kong, Hungary, Italy, Kuwait, Malaysia, New Zealand, Norway, Poland, Portugal, Singapore, Slovak Republic, Spain, Sweden, Switzerland, Thailand, United Kingdom, etc.

### PAL-M system

Brazil

### PAL-N system






Argentina, Paraguay, Uruguay




 





### SECAM system

Bulgaria, France, Guiana, Iran, Iraq, Monaco, Russia, Ukraine, etc.

## Troubleshooting





If you experience trouble with your camera, first check the following items. Should your camera still not operate properly after you have made these checks, press the RESET button. (If you press the RESET button, all settings including the date and time are cleared.) Should your camera still not operate properly, consult your Sony dealer or local authorized Sony service facility. **If code displays (C:□□:□□) appear on the LCD screen, the self-diagnosis display function is working (page 93).**

Symptom	Cause and/or Solution
The power does not turn on when you press the POWER button.	→ Press and hold down the POWER button for approximately one second.
Your camera does not work.	<ul style="list-style-type: none"><li>• You are not using an “InfoLITHIUM” battery pack. → Use an “InfoLITHIUM” battery pack (page 10).</li><li>• The battery level is low (the  indicator appears on the LCD screen). → Charge the battery pack (page 11).</li><li>• The AC power adaptor is not connected securely. → Connect it firmly to the DC IN jack of your camera and a wall outlet (wall socket) (pages 11, 14).</li><li>• The built-in microcomputer is not working properly. → Disconnect and then reconnect all power sources after one minute. Then turn the power on and check that the camera works properly. Press the RESET button using a sharp-pointed object.</li></ul>
Your camera cannot record images.	<ul style="list-style-type: none"><li>• You cannot record images while charging the flash.</li><li>• The mode dial is set to  or SET UP. → Set it to ,  or  (pages 19, 26).</li><li>• No “Memory Stick” has been inserted into your camera. → Insert a “Memory Stick” (page 17).</li><li>• The erasure prevention switch on the “Memory Stick” is set to LOCK. → Set it to the recording position.</li></ul>
The LCD screen does not light when the power is turned on.	<ul style="list-style-type: none"><li>• The power was turned off with the LCD screen set to OFF the last time the camera was used. → The camera retains the settings from the last time it was used. If you turn the power off with the LCD screen set to OFF, the LCD is still set to OFF the next time you turn the power on.</li></ul>

Symptom	Cause and/or Solution
The picture is out of focus.	<ul style="list-style-type: none"> <li>Your camera is not in macro recording mode when you shoot a subject that is about 10 to 60 cm (4 to 23 5/8 inches) from the lens. →Set the macro recording (page 61).</li> <li>The focus preset is selected. →Cancel the function (page 61).</li> </ul>
The resizing function does not work.	<ul style="list-style-type: none"> <li>You cannot resize moving images, text images, Clip Motion and uncompressed images.</li> </ul>
Images recorded in TEXT mode are blurry.	<ul style="list-style-type: none"> <li>Light is not striking the subject evenly. →Adjust so that the lighting strikes the subject evenly.</li> </ul>
You cannot record images in TEXT mode.	<ul style="list-style-type: none"> <li>The mode dial is set to . →Set the mode dial to .</li> </ul>
You cannot display a print mark.	<ul style="list-style-type: none"> <li>You cannot display print marks on moving images, text images and Clip Motion images.</li> </ul>
The picture is noisy.	<ul style="list-style-type: none"> <li>Your camera is placed near a TV or other equipment that uses strong magnets. →Move your camera away from the TV, etc.</li> </ul>
The picture is too dark.	<ul style="list-style-type: none"> <li>You are shooting a subject with a light source behind the subject. →Adjust the exposure (page 62).</li> <li>The brightness of the LCD screen is too low. →Adjust the brightness of the LCD screen (page 81).</li> </ul>
The picture is too bright.	<ul style="list-style-type: none"> <li>You are shooting a spotlighted subject in a dark location such as on a stage. →Adjust the exposure (page 62).</li> <li>The LCD screen is too bright. →Adjust the brightness of the LCD screen (page 81).</li> </ul>
The flash does not work.	<ul style="list-style-type: none"> <li>The flash is set to  no flash. →Set the flash to auto (no indicator) or  forced flash (page 24).</li> <li>The mode dial is set to . →Set the flash to  forced flash.</li> <li>The mode dial is set to , SET UP or  (MPEG MOVIE). →Set it to .</li> <li>[MODE] (REC MODE) is set to [BURST2] in the menu settings. →Set it to other modes.</li> </ul>

Symptom	Cause and/or Solution
The date and time are recorded incorrectly.	<ul style="list-style-type: none"> <li>The date and time are not set correctly. →Set the correct date and time (page 15).</li> </ul>
Vertical streaks appear when you are shooting a very bright subject.	<ul style="list-style-type: none"> <li>The smear phenomenon is happening. →This is not a malfunction.</li> </ul>
The battery life is short.	<ul style="list-style-type: none"> <li>You are recording/playing back images under extremely cold temperatures.</li> <li>The battery pack is not charged enough. →Charge the battery pack fully.</li> <li>The battery pack is dead. →Replace the battery pack with a new one (page 85).</li> </ul>
The battery remaining indicator is incorrect.	<ul style="list-style-type: none"> <li>You have used the camera for a long time in an extremely hot or an extremely cold location.</li> <li>The battery pack is dead. →Replace the battery pack with a new one (page 85).</li> <li>The battery pack is discharged. →Install a charged battery pack (pages 10, 11).</li> </ul>
Sufficient battery remaining indicator is displayed but the power runs out soon.	<ul style="list-style-type: none"> <li>A deviation has occurred in the remaining battery time. →Fully charge the battery pack (page 11).</li> </ul>
The indicators flash during charging.	<ul style="list-style-type: none"> <li>The battery pack is not installed correctly. →Install the battery pack correctly (page 10).</li> <li>The battery pack has malfunctioned. →Contact your Sony dealer or local authorized Sony service facility.</li> </ul>
You cannot charge the battery, or nothing appears in the display window.	<ul style="list-style-type: none"> <li>The camera is turned on. → Turn the camera off (page 11).</li> <li>The AC power adaptor is disconnected. →Firmly connect the power cord to the wall outlet (wall socket) (page 11).</li> </ul>
The zoom does not work.	<ul style="list-style-type: none"> <li>The zoom cannot be used when recording a moving image with [MOVING IMAGE] set to [MPEG MOVIE].</li> </ul>





Symptom	Cause and/or Solution
Digital zoom does not function.	<ul style="list-style-type: none"> <li>The digital zoom cannot be used when recording a moving image with [MOVING IMAGE] set to [MPEG MOVIE], or the LCD screen is OFF.</li> <li>[DIGITAL ZOOM] is set to [OFF]. → Set [DIGITAL ZOOM] to [ON] in the menu settings.</li> </ul>
Your camera cannot play back images.	<ul style="list-style-type: none"> <li>The mode dial is set to , ,  or SET UP. → Set it to  (pages 28, 29).</li> <li>Your camera cannot play back image files copied to the hard disk of your computer if the file name has been changed or the image has been modified.</li> </ul>
The image and sound are interrupted by noise when you play back an image on a computer.	<ul style="list-style-type: none"> <li>You are playing back the file directly from the “Memory Stick.” → Copy the file to the hard disk of the computer and then play back the file from the hard disk (page 40).</li> </ul>
The image cannot be played back on a computer.	→ Consult the computer or software manufacturer.
Your camera cannot delete an image.	<ul style="list-style-type: none"> <li>The image is protected. → Cancel the protection (page 72).</li> </ul>
The power turns off suddenly.	<ul style="list-style-type: none"> <li>The auto-power off function (page 20) is activated. → Turn on the camera or use the AC power adaptor.</li> <li>The battery is discharged. → Replace it with a charged battery.</li> </ul>
The image does not appear on the TV screen.	<ul style="list-style-type: none"> <li>The video output signal setting of your camera is incorrect. → Change the setting (page 81).</li> </ul>
A file error occurs when you play back a file.	<ul style="list-style-type: none"> <li>Your camera cannot play back files with an image size larger than 2048×1536 that were recorded by another camera.</li> </ul>
The picture is monochrome (black and white).	<ul style="list-style-type: none"> <li>The camera is set to TEXT mode. → Cancel TEXT mode (page 57).</li> <li>P. EFFECT is set to B&amp;W mode. → Cancel B&amp;W mode (page 64).</li> </ul>
The lens does not retract even when the power is turned off.	<ul style="list-style-type: none"> <li>The battery is discharged. → Replace it with a fully charged battery or use the AC power adaptor.</li> </ul>

Symptom	Cause and/or Solution
Your computer does not recognize your camera.	<ul style="list-style-type: none"> <li>• The battery level is low. →Use the AC power adaptor (page 14).</li> <li>• The camera is turned off. →Turn on the camera.</li> <li>• The USB cable is not connected firmly. →Disconnect the USB cable, and connect it again firmly. Make sure that “USB MODE” is displayed on the LCD screen (pages 37, 38).</li> <li>• [USB CONNECT] is set to [PTP] in the setup settings. →Set it to [NORMAL] (page 81).</li> <li>• The USB connectors on your computer are connected to other equipment besides the keyboard, the mouse, and your camera. →Disconnect the USB cables except for the ones connected to the keyboard, the mouse, and your camera.</li> <li>• The USB driver is not installed. →Install the USB driver (page 32).</li> <li>• Since the camera is connected to a computer with the USB cable before installing the USB driver, the drive is not recognized by the computer. →Delete the drive which is not recognized, then install the USB driver. For details, see the procedure on page 35.</li> </ul>
No function works though the power is on.	<p>→Remove the battery pack, then install it again after about one minute. If the functions still do not work, press the RESET button (page 9) using a sharp-pointed object. (If you press the RESET button, all settings including the date and time are cleared.)</p>

## Warning and notice messages


Various messages appear on the LCD screen. Check the corresponding descriptions in the following list.

Message	Meaning
NO MEMORY STICK	No “Memory Stick” has been inserted.
SYSTEM ERROR	Turn the power off and on again.
MEMORY STICK ERROR	<ul style="list-style-type: none"><li>• The inserted “Memory Stick” cannot be used with your camera, or is damaged.</li><li>• The “Memory Stick” is not inserted correctly.</li></ul>
FORMAT ERROR	Failed to format the “Memory Stick.”
MEMORY STICK LOCKED	The write-protect tab on the “Memory Stick” is set to the LOCK position.
NO MEMORY SPACE	The capacity of the “Memory Stick” is full, and you cannot record or copy images.
NO FILE	No image has been recorded on the “Memory Stick.”
FILE ERROR	An error occurred while playing back the image.
FILE PROTECT	The image is protected against erasure.
for “InfoLITHIUM” battery only	The battery is not the “InfoLITHIUM” type.
NOT ENOUGH MEMORY	The images you want to copy are too big to copy with your camera.
COPY ERROR	Copying was not performed correctly, or the “Memory Stick” was removed during copying.
DIRECTORY ERROR	A directory with the same name already exists on the “Memory Stick.”
IMAGE SIZE OVER	You are playing back an image of a size that cannot be played back with your camera.
INVALID OPERATION	You are playing back a file that was created on equipment other than your camera.

Message	Meaning
	<p>The battery level is low. Depending on the conditions of use or the type of battery pack, the indicator may flash even though there is still 5 to 10 minutes of remaining battery time left.</p>
CANNOT DIVIDE	<ul style="list-style-type: none"> <li>• The file is not long enough to be divided.</li> <li>• The file is not a moving image.</li> </ul>
	<p>The amount of light is not sufficient or the shutter speed is too slow. (Mount the camera on a tripod or otherwise secure the camera in place.)</p>
TURN THE POWER OFF AND ON AGAIN	<p>The power did not turn on properly.</p>

## Self-diagnosis display

Your camera has a self-diagnosis display. This function displays the camera condition on the LCD screen with a combination of a letter and four digits of numbers. If this occurs, check the following code chart. The code informs you of the camera's current condition. The last two digits (indicated by □□) will differ depending on the state of the camera.

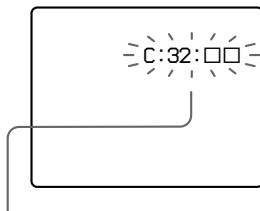

### Self-diagnosis display

- C:□□:□□  
You can reverse the camera malfunction yourself.
- E:□□:□□  
Contact your Sony dealer or local authorized Sony service facility.

First three digits	Cause and/or Corrective Action
C:32:□□	<ul style="list-style-type: none"><li>• There is trouble with your camera's hardware or zooming function. → Turn the power off and on again.</li></ul>
C:13:□□	<ul style="list-style-type: none"><li>• The camera cannot read or write data on the "Memory Stick." → Re-insert the "Memory Stick" several times.</li><li>• An unformatted "Memory Stick" is inserted. → Format the "Memory Stick" (page 79).</li><li>• The inserted "Memory Stick" cannot be used with your camera, or is damaged. → Insert a new "Memory Stick" (page 17).</li></ul>
E:61:□□ E:91:□□	<ul style="list-style-type: none"><li>• A camera malfunction that you cannot reverse has occurred. → Contact your Sony dealer or local authorized Sony service facility and inform them of the 5-digit service code (example: E:61:10).</li></ul>

**If you are unable to solve the problem even after trying the corrective actions a few times, or if the camera is not reset even if you press the RESET button, contact your Sony dealer or local authorized Sony service facility.**

# Specifications

## System

### Image device

8.93 mm (1/1.8 type) color

CCD

### Effective pixels number of camera

Approx. 3 207 000 pixels

### Lens

3× zoom lens

f = 8 – 24 mm

(11/32 – 31/32 inches)

(39 – 117 mm (1 9/10 –

4 5/8 inches) when converted

to a 35 mm still camera)

F = 2.8 – 5.6

### Exposure control

Automatic exposure

### White balance

Automatic, Hold, Indoor,

Outdoor

### Data system

Movie: MPEG1

Still: JPEG, GIF (in TEXT

mode, Clip Motion), TIFF

Audio with still image:

MPEG1 (Monaural)

### Recording medium

“Memory Stick”

### Flash

Recommended recording

distance (ISO set to AUTO):

W side: 0.5 m to 2.8 m (19 3/4

inches to 9 feet 2 1/4 inches)

T side: 0.6 m to 1.4 m (19 3/4

inches to 4 feet 7 1/8 inches)

### Output connector

#### A/V OUT (Monaural)

Minijack

Video: 1 V<sub>p-p</sub>, 75 Ω,

unbalanced, sync negative

Audio: 327 mV (at a 47 kΩ

load)

Output impedance: 2.2 kΩ

#### USB jack

mini-B

## LCD screen

### Used LCD panel

3.8 cm (1.5 type) TFT (Thin

Film Transistor active matrix)

drive

### Total number of dots

123 200 (560×220) dots

## General

### Used battery pack

NP-FC10

### Power requirements

3.6 V

### Power consumption (during recording)

2.4 W/2.2 W (LCD

BACKLIGHT: BRIGHT/

NORMAL)

1.5 W (LCD BACKLIGHT:

OFF)

### Operation temperature

0°C to 40°C (32°F to 104°F)

### Storage temperature

–20°C to +60°C

(–4°F to +140°F)

### Dimensions

112.5×53.8×36.2 mm

(4 1/2×2 1/8×1 7/16 inches)

(w/h/d) (excluding maximum

protrusions)

### Mass

Approx. 214 g (7.5 oz)

(including battery pack NP-

FC10, “Memory Stick” and

wrist strap, etc.)

### Built-in microphone

Electret condenser microphone

### Built-in speaker

Dynamic speaker

## AC-LS1A

### AC power adaptor

#### Power requirements

100 to 240 V AC, 50/60 Hz

#### Rated output voltage

DC 4.2 V, 1.5 A in operating

mode

#### Operation temperature

0°C to 40°C (32°F to 104°F)

### Storage temperature

–20°C to +60°C

(–4°F to +140°F)

### Maximum dimensions

105×36×56 mm

(4 1/4×1 7/16×2 1/4 inches)

(w/h/d) (excluding maximum

protrusions)

### Mass

Approx. 180 g (6.4 oz)

## NP-FC10 battery pack

### Used battery

Lithium ion battery

### Maximum voltage

DC 4.2 V

### Nominal voltage

DC 3.6 V

### Capacity

2.4 Wh (675 mAh)

## Accessories

A/V connecting cable (1)

NP-FC10 battery pack (1)

AC-LS1A AC power adaptor

(1)

Power cord (1)

USB cable (1)

Wrist strap (1)

“Memory Stick” (8 MB) (1)

CD-ROM (USB driver

SPVD-004) (1)


Operating Instructions (1)

Design and specifications are

subject to change without

notice.


## Display window indicators

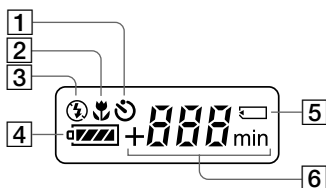

- 1 Self-timer indicator
- 2 Macro mode indicator
- 3 Flash mode indicator
- 4 Battery remaining indicator
- 5 "Memory Stick" mark
- 6 Remaining number of recordable images indicator (+999 is displayed for 999 or more images)/Battery usable time indicator (displayed only during charging)/Minutes indicator for the remaining recordable time of moving images

# LCD screen indicators

## The indicators during recording still images

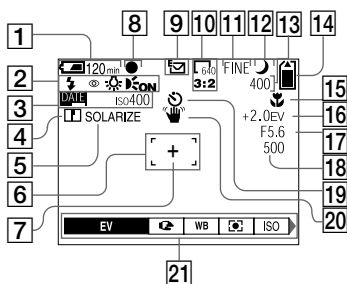


- 1 **Battery remaining indicator**
- 2 **Flash mode/red eye reduction/white balance/AF illuminator indicator**
- 3 **Date/time/ISO number indicator**
- 4 **Sharpness indicator**
- 5 **Picture effect indicator**
- 6 **AF frame**
- 7 **Spot light-metering cross hair**
- 8 **AE/AF lock indicator**
- 9 **Recording mode indicator**
- 10 **Image size indicator**
- 11 **Image quality indicator**
- 12 **TWILIGHT mode indicator**
- 13 **Remaining number of recordable images indicator/  
Self-diagnosis function indicator**

The actual number of remaining images may differ depending on the recording conditions.
- 14 **Remaining memory capacity indicator**
- 15 **Macro/focus mode indicator/Focus preset value**
- 16 **EV level indicator**
- 17 **Aperture value indicator**
- 18 **Shutter speed indicator**
- 19 **Self-timer indicator**
- 20 **Light amount warning indicator**
- 21 **Menu and guide menu**

Pressing MENU switches the menu on/off.




## The indicators during recording moving images

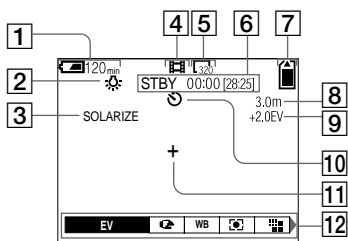


- |   |  |
|---|--|
| <b>1</b> Battery remaining indicator  | <b>7</b> Remaining memory capacity indicator                             |
| <b>2</b> White balance indicator  | <b>8</b> Macro /focus mode  indicator/Focus preset value                 |
| <b>3</b> Picture effect indicator   | <b>9</b> EV level indicator  |
| <b>4</b> Recording mode indicator   | <b>10</b> Self-timer indicator   |
| <b>5</b> Image size indicator   | <b>11</b> Spot light-metering cross hair                                 |
| <b>6</b> Recording time [maximum recordable time] indicator/<br>Self-diagnosis function indicator | <b>12</b> Menu and guide menu<br>Pressing MENU switches the menu on/off. |

## When playing back still images

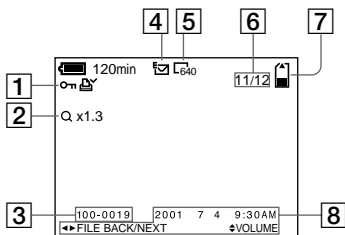

- |                                       |   |
|---------------------------------------|---|
| <b>1</b> Protect/print mark indicator | <b>6</b> Image number/number of stored images in “Memory Stick”   |
| <b>2</b> Zoom scaling indicator       | <b>7</b> Remaining memory capacity indicator                      |
| <b>3</b> File name                    | <b>8</b> Recording date of the playback image/menu and guide menu |
| <b>4</b> Recording mode indicator     |   |
| <b>5</b> Image size indicator         |   |

## When playing back moving images

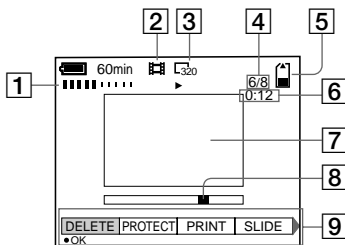

- |   |                              |
|---|------------------------------|
| <b>1</b> VOL. (Volume) indicator                                | <b>6</b> Counter             |
| <b>2</b> Recording mode indicator                               | <b>7</b> Playback image      |
| <b>3</b> Image size indicator                                   | <b>8</b> Play bar            |
| <b>4</b> Image number/number of stored images in “Memory Stick” | <b>9</b> Menu and guide menu |
| <b>5</b> Remaining memory capacity indicator                    |                              |

# Index

## A

- Adjusting the exposure ... 62
- Auto power-off  
function ..... 20
- Auto red-eye reduction ... 25

## B

- Battery pack  
battery life ..... 12
- battery remaining  
indicator ..... 96
- charging ..... 11
- BEEP ..... 81
- BURST2 ..... 55

## C

- Charging the battery  
pack ..... 11
- Cleaning ..... 82
- Clip Motion ..... 59
- Control button ..... 18
- COPY ..... 75

## D

- DELETE ..... 71
- Digital zoom ..... 23
- Display window  
indicators ..... 95
- DPOF ..... 76

## E

- E-MAIL ..... 55
- Enlarging a part of a still  
image ..... 67

## F

- File name ..... 44
- FILE NUMBER ..... 80
- FLASH LEVEL ..... 48
- Focus preset ..... 61
- FORMAT ..... 79

## G

- GIF ..... 57, 59

## I

- Image  
deleting ..... 71
- print mark ..... 76
- protect ..... 72
- size ..... 52
- INDEX screen ..... 66
- "InfoLITHIUM" battery  
pack ..... 10

## J

- JPEG ..... 19

## L

- LCD screen ..... 96
- LCD screen indicators ... 96

## M

- Macro recording ..... 61
- Menu ..... 18
- MOBILE mode ..... 59
- Mode dial ..... 18
- Moisture condensation ... 82
- Moving images  
playing back ..... 29
- recording ..... 26
- MPEG ..... 26

## N

- NTSC system ..... 85
- Number of recordable  
images  
Clip Motion ..... 60
- E-mail mode ..... 56
- Image size ..... 53
- TEXT mode ..... 57
- TIFF mode ..... 58
- VOICE mode ..... 57

## P

- PAL system ..... 85
- Picture effect ..... 64
- Playing back  
INDEX screen ..... 66
- moving images ..... 29
- slide show ..... 68
- still images ..... 28
- POWER button ..... 15
- Power save mode ..... 12
- Power supply  
AC power adaptor ..... 14
- battery pack ..... 11
- PRINT MARK ..... 76
- PROTECT ..... 72

## Q

- Quick Review ..... 22

## R

- REC MODE ..... 48
- Recording  
Clip Motion ..... 59
- E-mail mode ..... 55
- moving images ..... 26
- still images ..... 19
- TEXT mode ..... 57
- TIFF mode ..... 58
- VOICE mode ..... 56
- with the flash ..... 24
- RESIZE ..... 74
- ROTATE ..... 69

## S

- SECAM system ..... 85
- Self-diagnosis display .... 93
- Self-timer ..... 24, 27
- SET UP ..... 80
- Setting the date and  
time ..... 15
- SHARPNESS ..... 48
- Single-image display ..... 66
- SLIDE SHOW ..... 68
- Spot light-metering ..... 65
- Still images  
playing back ..... 28
- recording ..... 19

## T

- TEXT ..... 57
- TIFF ..... 58
- TV color system ..... 85
- TWILIGHT ..... 54

## U

- USB ..... 32, 41
- Using your camera  
abroad ..... 85

## V

- Viewing images  
on a TV screen ..... 70
- using a computer ..... 31
- VOICE ..... 56

## W

- Warning and notice  
messages ..... 91
- WHITE BALANCE ..... 63

## Z

- Zoom ..... 23

<http://www.sony.net/>

Printed on recycled paper

Sony Corporation Printed in Japan



307092512