

SONY®

4-205-400-31(1)

FD Trinitron Colour Television

Instruction Manual

GB

KV-21FT1U

2000 by Sony Corporation Printed in Spain


NOTICE FOR CUSTOMERS IN THE UNITED KINGDOM

A moulded plug complying with BS1363 is fitted to this equipment for your safety and convenience.

Should the fuse in the plug supplied need to be replaced, a 5 AMP fuse approved by ASTA or BSI to BS 1362 (i.e. marked with ⬠ or ⬡) must be used.

When an alternative type of plug is used it should be fitted with a 5 AMP FUSE, otherwise the circuit should be protected by a 5 AMP FUSE at the distribution board.

If the plug supplied with this equipment has a detachable fuse cover, be sure to attach the fuse cover after you change the fuse. Never use the plug without the fuse cover. If you should lose the fuse cover, please contact your nearest Sony service station.

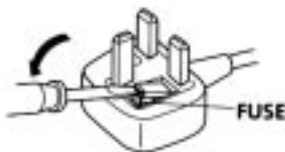

How to replace the fuse

Open the fuse compartment with a blade screwdriver, and replace the fuse.

• IMPORTANT


If the plug supplied is not suitable for the socket outlets in your home, it should be cut off and an appropriate plug fitted in accordance with the following instructions:

The wires in this mains lead are coloured in accordance with the following code:

Blue Neutral

Brown Live

As the colours of the wires in the mains lead of this apparatus may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black. The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red. Do not connect either wire to the earth terminal in the plug which is marked by the letter E or by the safety earth symbol  or coloured green or green and yellow.






WARNING

- To prevent shock hazard, do not insert the plug cut off from the mains lead into a socket outlet. This plug cannot be used and should be destroyed.
- To prevent fire or shock hazard, do not expose the unit to rain or moisture.
- Dangerously high voltages are present inside the set. Do not open the cabinet. Refer servicing to qualified personnel only.



Introduction

Thank you for choosing this Sony FD Trinitron Colour Television.

Before operating the TV, please read this manual thoroughly and retain it for future reference.

- Symbols used in the manual:
 -  Informs you of possible hazards.
 -  Important information
 -  Information on a feature.
 - **1,2...** Sequence of instructions.
 -  Shaded buttons on the remote control show you the buttons you have to press to follow the sequence of the instructions.
 -  Informs you of the result of instructions.

Safety Information

-  All TV's operate on extremely high voltages. To prevent fire or electric shock, please follow the safety guidelines indicated in the blue sheet supplied.
-  In case of problems, have your TV serviced by qualified personnel. Never open the casing yourself.

GB

Table of Contents

| | |
|---|----|
| Notice for Customers in the United Kingdom | 2 |
| Introduction..... | 3 |
| Safety Information..... | 3 |
| Overview | |
| Overview of Remote Control Buttons | 4 |
| Overview of TV Buttons | 5 |
| Installation | |
| Inserting Batteries into the Remote Control | 5 |
| Connecting the Aerial and VCR | 5 |
| First Time Operation | |
| Switching On the TV and Automatically Tuning | 6 |
| Menu system | |
| Introducing and Using the Menu System..... | 8 |
| Menu Guide | 8 |
| Teletext..... | 14 |
| Additional Information | |
| Connecting Optional Equipment | 15 |
| Using Optional Equipment | 15 |
| Specifications..... | 16 |
| Troubleshooting..... | 17 |
| Television Channel Number Guide for United Kingdom..... | 18 |

Overview of Remote Control Buttons

Muting the Sound

Press to mute TV sound. press again to restore the sound.

Displaying on Screen information

Press to display all on-screen indications. Press again to cancel.

Selecting channels

Press to select channels.

For double-digit programme numbers, e.g. 23, press **-/-** first, then the buttons 2 and 3.


If you enter an incorrect first digit, this should be corrected by entering another digit (0-9) and then selecting **-/-** button again to enter the programme number of your choice.

Selecting TV mode

Press to switch off teletext or video input.

Selecting Teletext

Press to switch on teletext.

 
This button only works in Teletext mode. Function  associated to this button does not work with this TV.

Selecting Picture mode

Press repeatedly to change the picture mode.

Adjusting TV volume


Press to adjust the volume of the TV.

This button only works in Teletext mode. Function  associated to this button does not work with this TV.


Selecting channels

Press to select the next or previous channel.

 To Temporarily Switch Off TV

Press to temporarily switch off TV (the standby indicator  on TV lights up). Press again to switch on TV from standby mode.

To save energy we recommend switching off completely when TV is not in use.

 After 15 minutes without a signal and without any button being pressed, the TV switches automatically into standby mode.

Selecting input source

Press repeatedly until the desired input symbol of the source appears on the TV screen.

Back to the channel last watched





Press to watch the last channel selected (watched for at least 5 seconds).

Displaying the menu system

 
 
Press to display the menu on the TV screen. Press again to remove the menu display from the TV screen.

Menu selection

• When MENU is switched on:


-  Scroll Up
-  Scroll Down
-  Previous menu or selection
-  Next menu or selection
- OK** confirms your selection


• When MENU is switched off:

- OK** Shows a channel overview.
- Press  or  to select the channel and then, press again the **OK** button to watch the selected channel.


Selecting Screen format

Press to view programmes in 16:9 mode. Press again to return to 4:3 mode.

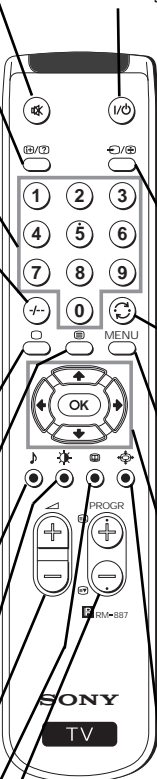

 Besides TV functions, all coloured buttons as well as green symbols are also used for Teletext operation. For more details, please refer to "Teletext" section of this instruction manual.


Overview of TV Buttons

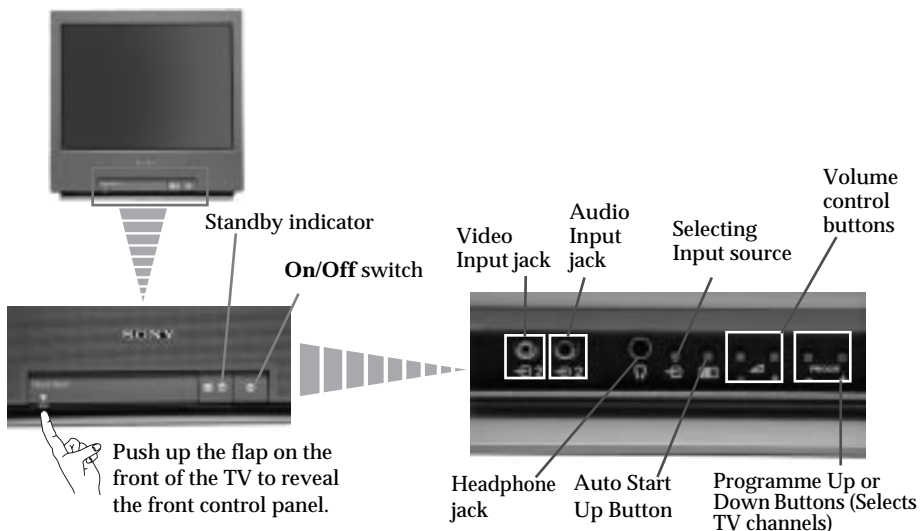

GB



Inserting Batteries into the Remote Control

⚠ Make sure to insert the supplied batteries using the correct polarities. Always remember you dispose of used batteries in an environmental friendly way.

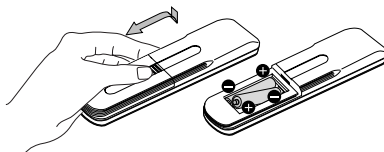

Connecting the Aerial and VCR

i Connecting cables are not supplied

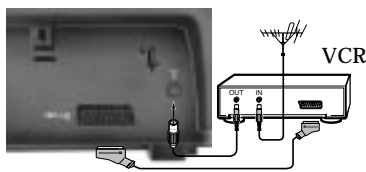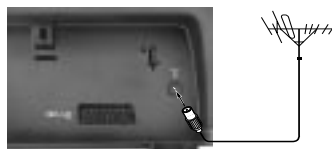


⚠ For more details of VCR connection, please refer to the section "Connecting Optional Equipment" of this instruction manual.

Switching On the TV and Automatically Tuning


i The first time you switch on your TV, a sequence of menu screen appear on the TV enabling you to: 1) choose the language of the menu screen, 2) search and store all available channels (TV Broadcast) and 3) change the order in which the channels (TV Broadcast) appear on the screen.

However, if you need to change the language menu, change or repeat the tuning (e.g. when you move house) or rearrange again the order of the channels afterwards, you can do that by selecting the appropriate menu in the **Set Up** (Set Up). For more information, refer to the "Menu Guide" section of this instruction manual. You can also do that by pressing the Auto Start Up Button **▶▶** on the TV set.


-
- 1** Connect the TV plug to the mains socket (220-240V AC, 50Hz)
Press the **Ⓚ** on/off button on the TV set to turn on the TV.
The first time you press this button, a **Language** menu displays automatically on the TV screen.

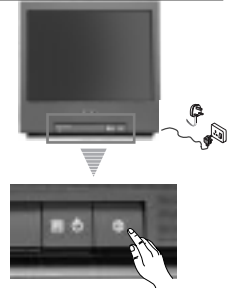

-
- 2** Press the **↓** or **↑** button on the remote control to select the language, then press the **OK** button to confirm your selection. From now on all the menus will appear in the selected language.

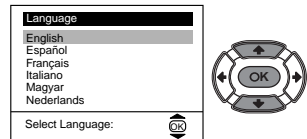



-
- 3** The **Auto Tuning** menu appears on the screen. Press the **OK** button to select **Yes**.

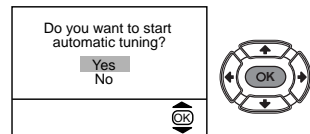


-
- 4** A new menu appears on the screen asking you to check that the aerial is connected and then press the **OK** button to start the automatic tuning.

i The TV starts to automatically search and store all available channels (TV Broadcast) for you.

⚠ This procedure could take some minutes. Please be patient and do not press any button. Otherwise the automatic tuning will not be completed.

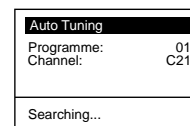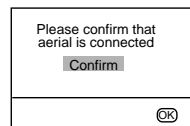
 






continued...

5  After all available channels are captioned and stored, the **Programme Sorting** menu appears automatically on the screen enabling you to change the order in which the channels appear on the screen.



a) If you do not wish to change the channel order, go to step 6.

b) If you wish to change the channel order:

 1 Press the  or  button to select the programme number with the channel (TV Broadcast) you wish to rearrange, then press the  button.

2 Press the  or  button to select the new programme number position for your selected channel (TV Broadcast), then press  .

3 Repeat steps b)1 and b)2 if you wish to change the order of the other channels.

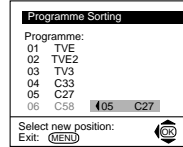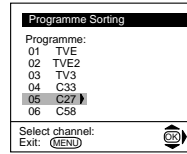

6 Press the **MENU** button to remove the menu from the screen.




GB



Your TV is now ready for use

Introducing and Using the Menu System

 Your TV uses an on-screen menu system to guide you through the operations. Use the following buttons on the Remote Control to operate the menu system:

1 Press the **MENU** button to switch the first level menu on.



2 • To highlight the desired menu or option, press **↓** or **↑**.

- To enter to the selected menu or option, press **→**.
- To return to the last menu or option, press **←**.
- To alter settings of your selected option, press **↓** / **↑** / **←** or **→**.
- To confirm and store your selection, press **OK**.




3 Press the **MENU** button to remove the menu from the screen.




Menu Guide

Level 1

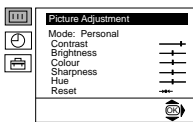

Level 2

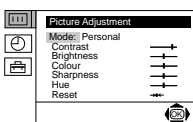

Level 3 / Function

PICTURE ADJUSTMENT

The "Picture Adjustment" menu allows you to alter the picture adjustments.

To do that: after selecting the item you want to alter press **→**, then press repeatedly **↓** / **↑** / **←** or **→** to adjust it and finally press **OK** to store the new adjustment.



This menu also allows you to customise the picture mode based on the programme you are watching:

- ↓ **Personal** (for individual settings).
- ↓ **Live** (for live broadcast programmes).
- ↓ **Movie** (for films).


- **Brightness**, **Colour** and **Sharpness** can only be altered if "Personal" mode is selected.
- **Hue** is only available for NTSC colour signal (e.g: USA video tapes).
- Select **Reset** and press **OK** to reset the picture to the factory preset levels.

continued...

Level 1

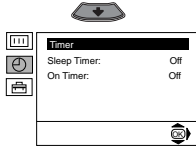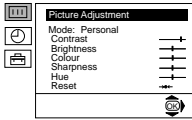

Level 2

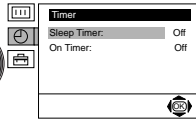




Level 3 / Function

SLEEP TIMER

The "Sleep Timer" option in the "Timer" menu allows you to select a time period for the TV to switch itself automatically into the standby mode.

To do that: after selecting the option press **▶**, then press **▼** or **▲** to set the time period delay (max. of 4 hours) and finally press **OK** to store.

 - While watching the TV, you can press the **(+)** button on the remote control to display the time remaining.
- One minute before the TV switches itself into standby mode, the time remaining is displayed on the TV screen automatically.

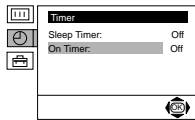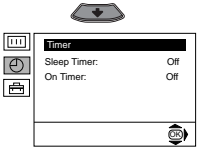




ON TIMER

The "On Timer" option in the "Timer" menu allows you to select a time period for the TV to switch itself automatically on from standby mode.

To do that: after selecting the option press **▶**, then press **▼** or **▲** to set the time period delay (max. 12 hours) and press **OK** to store. Finally press the standby button **|/|** on the remote control. After the selected length of time the TV switches on automatically.

- The standby indicator **⏻** on the TV set flashes regularly to indicate that "On Timer" is active.
- Any loss of power will cause these settings to be cleared.

 GB

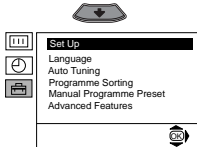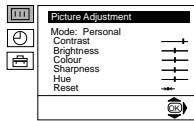



LANGUAGE

The "Language" option in the "Set Up" menu allows you to select the language that the menus are displayed in.


To do that: after selecting the option, press **▶** and then proceed in the same way as in the step 2 of the section "Switching On the TV and Automatically Tuning".

continued...

Level 1

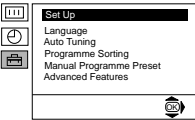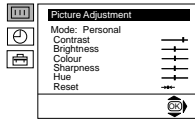

Level 2

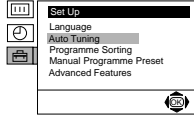

Level 3 / Function

AUTO TUNING




The “Auto Tuning” option in the “Set Up” menu allows you to automatically search for and store all available TV channels.

To do that: after selecting the option, press **▶** and then proceed in the same way as in steps 4 and 5 of the section “Switching On the TV and Automatically Tuning”.

PROGRAMME SORTING

The “Programme Sorting” option in the “Set Up” menu allows you to change the order in which the channels (TV Broadcast) appear on the screen.

To do that: after selecting the option, press **▶** and then proceed in the same way as in step 6 b) of the section “Switching On the TV and Automatically Tuning”.


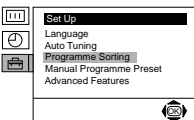
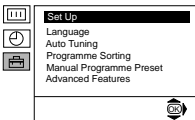
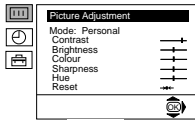


MANUAL PROGRAMME PRESET

The “Manual Programme Preset” option in the “Set Up” menu allows you to:

a) Preset channels or a video input source one by one to the programme order of your choice. To do that:

- 1 After selecting the “Manual Programme Preset” option, press **▶** then with **Programme** option highlighted press **▶**. Press **▼** or **▲** to select on which programme number you want to preset the channel (for VCR, select programme number “0”). Then press **◀**.

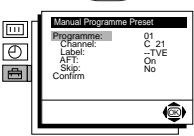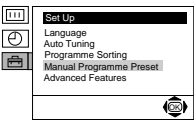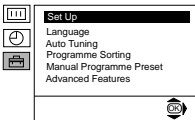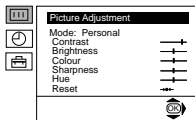

continued...

- 2 After selecting the **Channel** option, press **➡**. Then press **⬇** or **⬆** to select the channel tuning ("C" for terrestrial channels or "S" for cable channels). Next press **➡**. After that, press the number buttons to enter directly the channel number of the TV Broadcast or the channel of the VCR signal. If you do not know the channel number, press **⬇** or **⬆** to search for it. When you tune the desired channel, press **OK** twice to store.

Repeat all the above steps to tune and store more channels.

- b) Normally the automatic fine tuning (AFT) is operating, however you can manually fine tune the TV to obtain a better picture reception in the case that the picture is distorted.

To do that: while watching the channel (TV Broadcast) you wish to fine tune, select the **AFT** option and press **➡**. Next press **⬇** or **⬆** to adjust the fine tuning between -15 and +15. Finally press **OK** twice to store.

- c) Skip any unwanted programme numbers when they are selected with the **PROGR +/-** buttons.

To do that: Highlighting the **Programme** option, press the **PROGR +/-** button to select the programme number you want to skip. When the programme you want to skip appears on the screen, select the **Skip** option and press **➡**. Next press **⬇** or **⬆** to select **Yes**. Finally press **OK** twice to confirm and store.

To cancel this function afterwards, select "No" instead of "Yes" in the step above.

- d) Label a channel using up to five characters.


To do that: Highlighting the **Programme** option, press the **PROGR +/-** button to select the programme number with the channel you wish to name. When the programme you want to name appears on the screen, select the **Label** option and press **➡**. Next press **⬇** or **⬆** to select a letter, number or "-" for a blank. Press **➡** to confirm this character. Select the other four characters in the same way. After selecting all the characters, press **OK** twice to store.

continued...

Level 1

Level 2

Level 3 / Function

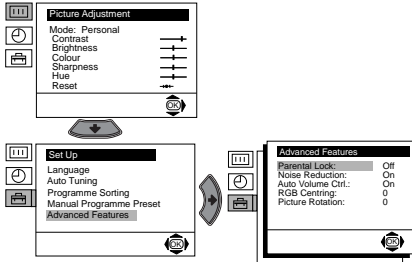


PARENTAL LOCK

The “Parental Lock” option in the “Advanced Features” menu allows you to lock the buttons of the TV set. In this way after this option is selected and the TV set is switched off, the buttons on the TV do not work and the TV only works by using the remote control buttons.

To do that: after selecting the option, press **▶**. Then press **▼** or **▲** to select **On**. Press **OK** to confirm and store and finally press **|/⏻** on the remote control.

To cancel this function afterwards, select “Off” instead of “On” in the step above.

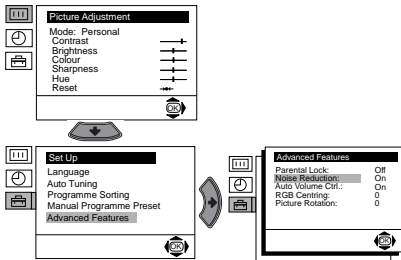


NOISE REDUCTION

The “Noise Reduction” option in the “Advanced Features” menu allows you to reduce the picture noise in case of a weak broadcasting signal.

To do that: after selecting the option, press **▶**. Then press **▼** or **▲** to select **On**. Finally press **OK** to confirm and store.

To cancel this function afterwards, select “Off” instead of “On” in the step above.

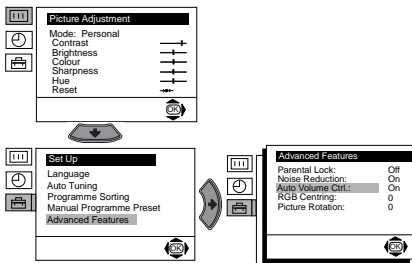

AUTO VOLUME CONTROL



The “Auto Volume Ctrl.” option in the “Advanced Features” menu allows you to keep the same volume level of the channels, independent of the broadcast signal (e.g. in case of advertisement).

To do that: after selecting the option, press **▶**. Then press **▼** or **▲** to select **On**. Finally press **OK** to confirm and store.


To cancel this function afterwards, select “Off” instead of “On” in the step above.

continued...

 Level 1

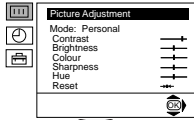

Level 2



 


Level 3 / Function

RGB CENTRING

When connecting an RGB source, such as a "PlayStation", you may need to readjust the geometry of the picture. In that case, you can readjust it through the "RGB Centring" option in the "Advanced Features".

To do that: while watching an RGB source select the "RGB Centring" option and press **↩**. Then press **⬇** or **⬆** to adjust the centre of the picture between -10 and +10. Finally press **OK** to confirm and store.

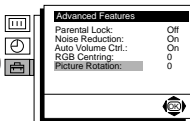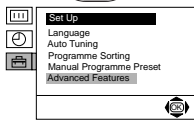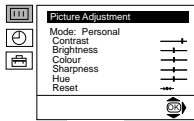

PICTURE ROTATION

Because of the earth's magnetism, the picture might slant. In this case, you can correct the pictures slant by using the option "Picture Rotation" in the "Advanced Features" menu.

To do that: after selecting the option, press **↩**. Then press **⬇** or **⬆** to correct any slant of the picture between -5 and +5 and finally press **OK** to store.

GB

Teletext

i Teletext is an information service transmitted by most TV stations. The index page of the teletext service (usually page 100) gives you information on how to use the service. To operate teletext, use the remote control buttons as indicated below.

A Make sure to use a channel (TV Broadcast) with a strong signal, otherwise teletext errors may occur.

To Switch On Teletext :

After select the channel (TV Broadcast) which carries the teletext you wish to view, press **⏏**.



| TELETEXT | |
|-----------|-----|
| Index | 25 |
| Programme | 25 |
| News | 153 |
| Sport | 101 |
| Weather | 98 |

To Select a Teletext page:

Input 3 digits for the page number, using the numbered buttons.

- *If you have made a mistake, retype the correct page number.*
- *If the counter on the screen continues searching, it is because this page is not available. In that case, input another page number*

To access the next or preceding page:

Press **PROGR +** (**⏏**) or **PROGR -** (**⏏**).

To superimpose teletext on to the TV:

Whilst you are viewing teletext, press **⏏**. Press it again to cancel teletext mode.

To freeze a teletext page:

Some teletext pages have sub-pages which follow on automatically. To stop them, press **⏏** / **⏏**. Press it again to cancel the freeze.

To reveal concealed information (e.g: answer to a quiz):

Press **⏏** / **⏏**. Press it again to conceal the information.

To Switch Off Teletext:

Press **⏏**.

Fastext

i Fastext service lets you access pages with one button push.

While you are in Teletext mode and Fastext is broadcast, a colour coded menu appears at the bottom of the teletext page. Press the colour button (red, green, yellow or blue) to access the corresponding page.


Connecting Optional Equipment

i Using the following instructions, you can connect a wide range of optional equipment to your TV set. (Connecting cables are not supplied).

Connecting a VCR:

To connect a VCR, please refer to the section “Connecting the aerial and VCR” of this instruction manual. We recommend you connect your VCR using a scart lead. If you do not have a scart lead, tune in the VCR test signal to TV programme number “0”. by using “Manual Programme Preset” option. (for details how to manual programme, see page 10, step a).

Also refer to your VCR instruction manual to find out how to find the output channel of your VCR.

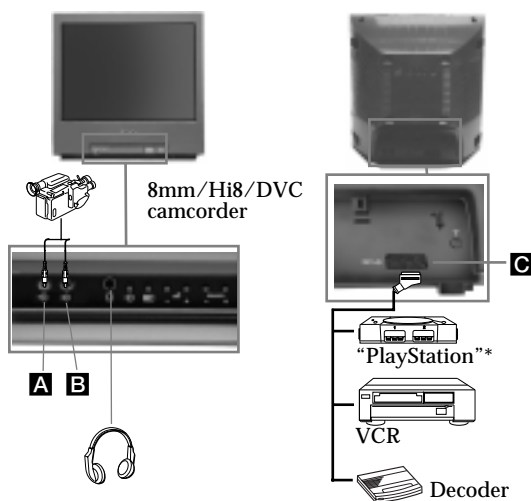


GB




* “PlayStation” is a product of Sony Computer Entertainment, Inc.

* “PlayStation” is a trademark of Sony Computer Entertainment, Inc.


Using Optional Equipment

- 1 Connect your equipment to the designated TV socket, as indicated above.
- 2 To watch the picture of the connected equipment, press the  button repeatedly until the correct input symbol appears on the screen.

Symbol Input Signals

-  1 • Audio / video input signal through the Scart connector **C**
-  • RGB input signal through the Scart connector **C**. This symbol appears only if a RGB source has been connected.
-  2 • Video input signal through the phono socket **A** and Audio input signal through **B**.

3 Switch on the connected equipment.

4 Press  button on the remote control to return to the normal TV picture.

Specifications



TV system:
I

Colour system:
PAL, SECAM
NTSC 3.58, 4.43 (only Video In)

 


Channel Coverage:
I: UHF B21-B69

Picture Tube:
Flat Display FD Trinitron

Rear Terminals

 1 /  21-pin scart connector
(CENELEC standard)
including audio/video
input, RGB input, TV audio/
video output.

Front Terminals

 2 video input – phono jack
 2 audio input – phono jack
 headphones jack

Sound Output:

1 x 8 W (music power)
1 x 4 W (RMS Mono)

Power Consumption:
76 W

Standby Power Consumption:
≤ 0.55 W

Dimensions (w x h x d):
Approx. 488 x 480 x 477 mm.

Weight:
Approx. 24 Kg.

Accessories supplied:

1 Remote Control (RM-887)
2 Batteries (IEC designated)

Other features:

- Teletext, Fasttext, TOPtext
- Sleep Timer
- Wake UP Timer
- Smartlink (direct link between your TV set and a compatible VCR. For more information on Smartlink, please refer to the Instruction Manual of your VCR).

Design and specifications are subject to change without notice.

Ecological Paper- Totally Chlorine Free 

Troubleshooting



Here are some simple solutions to the problems which may affect the picture and sound.

| Problem | Solution |
|--|--|
| No picture (screen is dark) and no sound. | <ul style="list-style-type: none">• Check the aerial connection.• Plug the TV in and press the ⏻ button on the front of TV.• If the standby indicator ⏻ is on, press /⏻ button on the remote control. |
| Poor or no picture (screen is dark), but good sound. | <ul style="list-style-type: none">• Using the menu system, select the “Picture Adjustment” menu and select “Reset” to return to the factory settings. |
| No picture or no menu information from the equipment connected to the Scart connector. | <ul style="list-style-type: none">• Check that the optional equipment is on and press the ⏻ button repeatedly on the remote control until the correct input symbol is displayed on the screen. |
| Good picture, no sound. | <ul style="list-style-type: none">• Press the △ +/- button on the remote control. |
| No colour on colour programmes. | <ul style="list-style-type: none">• Using the menu system, select the “Picture Adjustment” menu and select “Reset” to return to factory settings. |
| Distorted picture when changing programmes or selecting teletext. | <ul style="list-style-type: none">• Turn off any equipment connected to the Scart connector on the rear of the TV. |
| Picture slanted | <ul style="list-style-type: none">• Using the menu system, select the “Picture Rotation” option in the “Advanced Features” menu to correct the picture slant. |
| Noisy picture when viewing a TV channel. | <ul style="list-style-type: none">• Using the menu system, select the “Manual Programme Preset” menu and adjust Fine Tuning (AFT) to obtain better picture reception.• Using the menu system, select the “Noise Reduction” option in the “Advanced Features” menu and select “On” to reduce the noise in the picture. |
| Remote control does not function. | <ul style="list-style-type: none">• Replace the batteries. |
| The standby indicator ⏻ on the TV flashes even though the “On Timer” | <ul style="list-style-type: none">• Contact to your nearest Sony service centre. |

GB



In case of problems, have your TV serviced by qualified personnel. Never open the casing yourself.

Television Channel Number Guide for United Kingdom

i Only the main transmitters are listed. Information regarding the regional sub-relay channel numbers can be obtained by contacting The BBC Engineering Information Dept. (0181) 752 5040.

| MAIN TRANSMITTERS | BBC1 | BBC2 | ITV | CH4 | CH5 |
|--------------------------------|------|------|-----|-----|-----|
| London & South East | | | | | |
| ①Baird Hill | 48 | 46 | 43 | 67 | - |
| ②Crystal Palace | 26 | 33 | 23 | 30 | - |
| ③Dover | 58 | 56 | 46 | 53 | - |
| ④Hastfield | 44 | 52 | 64 | 67 | - |
| ⑤Orford | 57 | 63 | 68 | 53 | 49 |
| South-West | | | | | |
| ⑥Beacon Hill | 57 | 63 | 68 | 53 | - |
| ⑦Caradon Hill | 22 | 28 | 25 | 32 | - |
| ⑧Hantsboro Cross | 55 | 62 | 59 | 65 | 67 |
| ⑨Redruth | 52 | 44 | 41 | 47 | 37 |
| ⑩Stockland Hill | 53 | 28 | 23 | 26 | - |
| Channel Islands | | | | | |
| ⑪Fremont Point | 52 | 44 | 41 | 47 | - |
| South | | | | | |
| ⑫Hastings | 58 | 45 | 42 | 46 | - |
| ⑬Malden | 68 | 55 | 58 | 68 | - |
| ⑭Roanridge | 55 | 24 | 27 | 21 | - |
| West | | | | | |
| ⑮Mersey | 58 | 64 | 61 | 54 | 37 |
| East | | | | | |
| ⑯Standy Heath | 35 | 27 | 24 | 21 | 39 |
| ⑰Shadbury | 52 | 44 | 41 | 47 | - |
| ⑱Tacolnaston | 62 | 55 | 59 | 65 | 52 |
| Midlands (West) | | | | | |
| ⑲Bodge Hill | 22 | 28 | 25 | 32 | - |
| ⑳Stanton Coldfield | 46 | 48 | 43 | 50 | - |
| ㉑The Wreake | 26 | 33 | 23 | 29 | - |
| Midlands (East) | | | | | |
| ㉒Nottingham | 58 | 64 | 61 | 54 | - |
| Northern Ireland | | | | | |
| ㉓Brough Mountain | 22 | 28 | 25 | 32 | - |
| ㉔Droghda | 55 | 27 | 24 | 21 | - |
| ㉕Lisnady | 55 | 62 | 59 | 65 | - |
| North | | | | | |
| ㉖Ridmont | 22 | 28 | 25 | 32 | 56 |
| ㉗Tynley Moor | 44 | 51 | 47 | 43 | 37 |
| North West | | | | | |
| ㉘Winter Hill | 55 | 62 | 59 | 65 | 48 |
| North-East | | | | | |
| ㉙Ribble West Moor | 53 | 28 | 29 | 23 | - |
| ㉚Caldbeck | 30 | 34 | 28 | 32 | 56 |
| ㉛Claxton | 39 | 45 | 49 | 42 | - |
| ㉜Forster Pike | 58 | 64 | 61 | 54 | - |
| Scotland | | | | | |
| ㉝Angus | 57 | 63 | 68 | 53 | - |
| ㉞Black Hill | 48 | 46 | 43 | 50 | 37 |
| ㉟Sundale | 22 | 67 | - | - | - |
| ㊱Caldbeck | - | - | 28 | 32 | 56 |
| ㊲Craggully | 55 | 27 | 24 | 21 | 48 |
| ㊳Darvel | 33 | 28 | 23 | 29 | - |
| ㊴Derris | 22 | 28 | 25 | 32 | 47 |
| ㊵Ethal Lawrie | 53 | 28 | 23 | 29 | - |
| ㊶Killybeg Hill | 48 | 46 | 43 | 50 | - |
| ㊷Knox Moor | 33 | 28 | 23 | 29 | - |
| ㊸Rosemarkie | 39 | 45 | 49 | 42 | - |
| ㊹Rannoch Forest | 35 | 27 | 24 | 21 | - |
| ㊺Sedburgh | 58 | 62 | 59 | 65 | 52 |
| Wales | | | | | |
| ㊻Llanpelyd | 35 | 27 | 24 | 21 | 56 |
| ㊼Carmel | 57 | 63 | 68 | 53 | - |
| ㊽Llandfona | 57 | 63 | 68 | 53 | - |
| ㊾Mael-y-Pan | 52 | 45 | 48 | 42 | - |
| ㊿Presty | 46 | 48 | 43 | 50 | 37 |
| ①Wentac | 44 | 51 | 47 | 43 | - |

