

**SONY®**

4-206-016-31(1)



# ***FD Trinitron Colour Television***

---

***Instruction Manual***

**GB**

## ***KV-21LS30U***

© 2001 by Sony Corporation


## NOTICE FOR CUSTOMERS IN THE UNITED KINGDOM

A moulded plug complying with BS1363 is fitted to this equipment for your safety and convenience.

Should the fuse in the plug supplied need to be replaced, a 5 AMP fuse approved by ASTA or BSI to BS 1362 (i.e. marked with  $\diamond$  or  $\heartsuit$ ) must be used.

When an alternative type of plug is used it should be fitted with a 5 AMP FUSE, otherwise the circuit should be protected by a 5 AMP FUSE at the distribution board.

If the plug supplied with this equipment has a detachable fuse cover, be sure to attach the fuse cover after you change the fuse. Never use the plug without the fuse cover. If you should lose the fuse cover, please contact your nearest Sony service station.

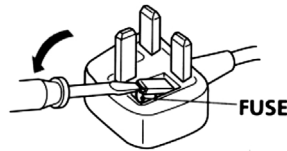

### How to replace the fuse

Open the fuse compartment with a blade screwdriver, and replace the fuse.

#### • IMPORTANT

If the plug supplied is not suitable for the socket outlets in your home, it should be cut off and an appropriate plug fitted in accordance with the following instructions:

The wires in this mains lead are coloured in accordance with the following code:

Blue      Neutral

Brown    Live

As the colours of the wires in the mains lead of this apparatus may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black. The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red. Do not connect either wire to the earth terminal in the plug which is marked by the letter E or by the safety earth symbol  $\perp$  or coloured green or green and yellow.






#### WARNING

- To prevent shock hazard, do not insert the plug cut off from the mains lead into a socket outlet. This plug cannot be used and should be destroyed.
- To prevent fire or shock hazard, do not expose the unit to rain or moisture.
- Dangerously high voltages are present inside the set. Do not open the cabinet. Refer servicing to qualified personnel only.

# Introduction

Thank you for choosing this Sony FD Trinitron Colour Television.

Before operating the TV, please read this manual thoroughly and retain it for future reference.

 

 

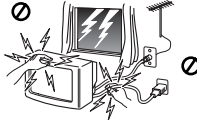
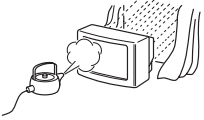
 
 
 

 
 



- Symbols used in the manual:
  -  Informs you of possible hazards.
  -  Important information
  -  Information on a feature.
  - 1,2... Sequence of instructions.
-  Shaded buttons on the remote control show you the buttons you have to press to follow the sequence of the instructions.
-  Informs you of the result of instructions.

## Table of Contents

Notice for Customers in the United Kingdom .....	2
Introduction.....	3
Safety Information.....	4
<b>Overview</b>	
Overview of Remote Control Buttons .....	5
Overview of TV Buttons .....	6
<b>Installation</b>	
Inserting Batteries into the Remote Control .....	6
Connecting the Aerial and VCR .....	6
<b>First Time Operation</b>	
Switching On the TV and Automatically Tuning .....	7
<b>Menu system</b>	
Introducing and Using the Menu System.....	9
Menu Guide:	
Picture Adjustment .....	9
Sound Adjustment.....	10
Sleep Timer.....	11
On Timer .....	11
Language .....	11
Auto Tuning .....	12
Programme Sorting .....	12
Programme Labels.....	12
AV Preset .....	12
Manual Programme Preset.....	13
Noise Reduction.....	15
AV2 Output .....	15
RGB Centring .....	16
Picture Rotation .....	16
<b>Teletext</b> .....	17
<b>Additional Information</b>	
Connecting Optional Equipment .....	18
Using Optional Equipment .....	19
Specifications.....	20
Troubleshooting.....	21
Television Channel Guide for United Kingdom.....	22

GB

# Safety Information

 <p>This set is to operate on a 220-240V AC supply only. Take care not to connect too many appliances to the same power socket as this could result in fire or electric shock.</p>	 <p>For environmental and safety reasons, it is recommended that the TV set is not left in standby mode when not in use. Disconnect from the mains.</p>	 <p>Never push objects of any kind into the set as this could result in a fire or electric shock. Never spill liquid of any kind on the set. If any liquid or solid object does fall through, do not operate the TV. Have it checked immediately by qualified personnel.</p>
 <p>Do not open the cabinet and the rear cover of the TV. Refer to qualified service personnel only.</p>	 <p>For your own safety, do not touch any part of the TV, power lead or aerial lead during lightning storms.</p>	 <p>To prevent fire or shock hazard, do not expose the TV to rain or moisture.</p>
 <p>Do not cover the ventilation openings of the TV. For ventilation, leave a space of at least 10cm all around the set.</p>	 <p>Never place the TV in hot, humid or excessively dusty places. Do not install the TV where it may be exposed to mechanical vibrations.</p>	 <p>To prevent fire, keep inflammable objects or naked lights (eg candles) away from the TV.</p>
 <p>Clean the TV with a soft, lightly dampened cloth. Do not use benzene, thinner or any other chemicals to clean the TV. Do not scratch the TV screen. As a safety precaution, unplug the TV before cleaning it.</p>	 <p>Pull out the power lead by the plug. Do not pull on the power lead itself.</p>	 <p>Take care not to place heavy objects on the power lead as this could result in damage. We recommend you wind any excess lead around the holders provided on the rear of the TV.</p>
 <p>Place the TV on a secure stable stand. Do not allow children to climb on to it. Do not place the TV on its side or face up.</p>	 <p>Unplug the power lead before moving the TV. Avoid uneven surfaces, quick steps or excessive force. If the set has been dropped or damaged, have it checked immediately by qualified service personnel.</p>	 <p>Do not cover the ventilation openings of the TV with items such as curtains or newspapers etc.</p>

# Overview of Remote Control Buttons

## Muting the Sound

Press to mute TV sound. Press again to restore the sound.

## Displaying on Screen information

Press to display all on-screen indications. Press again to cancel.

## Selecting channels

Press to select channels.

For double-digit programme numbers, enter the second digit within 2.5 seconds.

or

Press **-/--** and then the first and second digit.

If you enter an incorrect first digit, this should be corrected by entering another digit (0-9) and then selecting **-/--** button again to enter the programme number of your choice.

## Selecting TV mode

Press to switch off teletext or video input.

## Selecting Teletext

Press to switch on teletext.

## Selecting sound mode


Press repeatedly to change the sound mode.

## Selecting Picture mode

 
Press repeatedly to change the picture mode.

## Adjusting TV volume


Press to adjust the volume of the TV.

*This button only works in Teletext mode. Function  associated to this button does not work with this TV.*

## To Temporarily Switch Off TV

Press to temporarily switch off TV (the standby indicator  on TV lights up). Press again to switch on TV from standby mode.

*To save energy we recommend switching off completely when TV is not in use.*

 After 15 minutes without a signal and without any button being pressed, the TV switches automatically into standby mode.

## Selecting input source

Press repeatedly until the desired input symbol of the source appears on the TV screen.

## Back to the channel last watched





Press to watch the last channel selected (watched for at least 5 seconds).

## Displaying the menu system



Press to display the menu on the TV screen. Press again to remove the menu display from the TV screen.

## Menu selection

• When MENU is switched on:

-  Scroll Up
-  Scroll Down
-  Previous menu or selection
-  Next menu or selection
- OK** confirms your selection

• When MENU is switched off:

- OK** Shows a channel overview.
- Press  or  to select the channel and then, press again the **OK** button to watch the selected channel.


## Selecting Screen format

Press to view programmes in 16:9 mode. Press again to return to 4:3 mode.


## Selecting channels

Press to select the next or previous channel.

GB


 Besides TV functions, all coloured buttons as well as green symbols are also used for Teletext operation. For more details, please refer to "Teletext" section of this instruction manual.

# Overview of TV Buttons

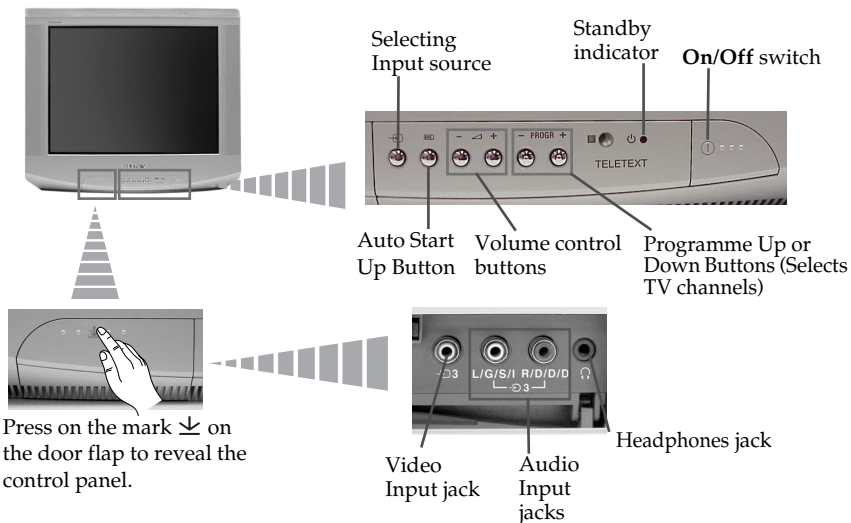


# Inserting Batteries into the Remote Control

Make sure you insert the supplied batteries using the correct polarities. Always remember to dispose of used batteries in an environmental friendly way.

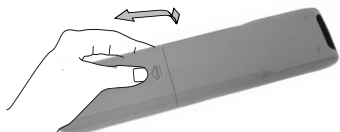


# Connecting the Aerial and VCR

Connecting cables are not supplied.

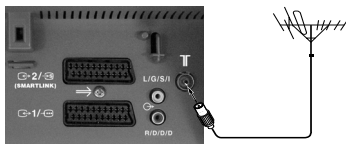

OR

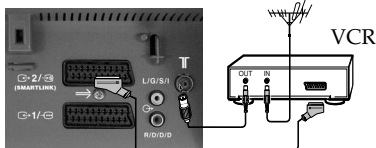



Scart lead is optional.


For more details of VCR connection, please refer to the section "Connecting Optional Equipment" of this instruction manual.

# Switching On the TV and Automatically Tuning


**i** The first time you switch on your TV, a sequence of menu screens appear on the TV enabling you to: 1) choose the language of the menu screen, 2) adjust the picture slant 3) search and store all available broadcast channels and 4) change the order in which the broadcast channels appear on the screen.

However, if you need to change any of these settings at a later date, you can do that by selecting the appropriate option in the  (Set Up menu) or by pressing the Auto Start Up Button  on the TV set.



**1** Connect the TV plug to the mains socket (220-240V AC, 50Hz)


The first time that TV set is connected, it is usually turned on. If the TV is off, press the  on/off button on the TV set to turn on the TV.

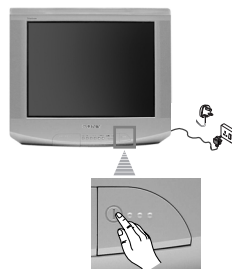The first time you switch on the TV, a **Language** menu displays automatically on the TV screen.






 
 

GB

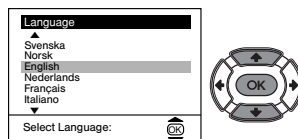
**2** Press the  or  button on the remote control to select the language, then press the **OK** button to confirm your selection. From now on all the menus will appear in the selected language.



**3** Because of the earth's magnetism, the picture might slant. The **Picture Rotation** menu allows you to correct the picture slants if it is necessary.


a) If it is not necessary, press  or  to select **Not necessary** and press **OK**.

b) If it is necessary, press  or  to select **Adjust now**, then press **OK** and correct any slant of the picture between -5 and +5 by pressing  or . Finally press **OK** to store.

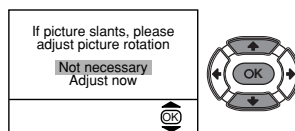


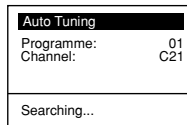
continued...


- 4 The Auto Tuning menu appears on the screen. Press the **OK** button to select **Yes**.

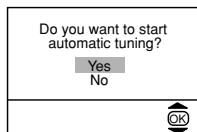



- 5 The TV starts to automatically search and store all available broadcast channels for you.


 This procedure could take some minutes. Please be patient and do not press any button, otherwise the automatic tuning will not be completed.



 If no channels were found during the auto tuning process then a new menu appears automatically on the screen asking you to connect the aerial. Please connect the aerial (see page 6) and press **OK**. The auto tuning process will start again.

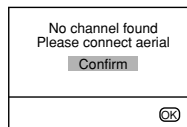

- 6  After all available broadcast channels are captioned and stored, the **Programme Sorting** menu appears automatically on the screen enabling you to change the order in which the broadcast channels appear on the screen.

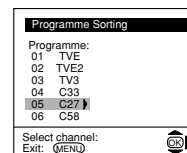


a) If you wish to keep the broadcast channels in the tuned order, go to step 7.

b) If you wish to store the broadcast channels in a different order:

1 Press the **▼** or **▲** button to select the programme number with the broadcast channel you wish to rearrange, then press the **▶** button.


2 Press the **▼** or **▲** button to select the new programme number position for your selected broadcast channel, then press **◀**.

3 Repeat steps b)1 and b)2 if you wish to change the order of the other broadcast channels.

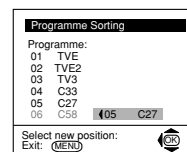


- 7 Press the **MENU** button to remove the menu from the screen.



 Your TV is now ready for use






# Introducing and Using the Menu System

 Your TV uses an on-screen menu system to guide you through the operations. Use the following buttons on the Remote Control to operate the menu system:





**1** Press the **MENU** button to switch the first level menu on.



**2** • To highlight the desired menu or option, press  or .

• To enter to the selected menu or option, press .

• To return to the last menu or option, press .

• To alter settings of your selected option, press  /  /  or .

• To confirm and store your selection, press **OK**.




**3** Press the **MENU** button to remove the menu from the screen.




**GB**

## Menu Guide

### Level 1

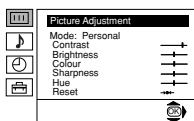

 
 
 

 
### Level 2

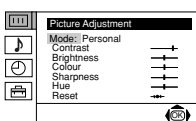




### Level 3 / Function

#### PICTURE ADJUSTMENT

The "Picture Adjustment" menu allows you to alter the picture adjustments.

To do this: after selecting the item you want to alter press , then press repeatedly  /  /  or  to adjust it and finally press **OK** to store the new adjustment.

 
This menu also allows you to customise the picture mode based on the programme you are watching:

-  **Personal** (for individual settings).
-  **Live** (for live broadcast programmes).
-  **Movie** (for films).



- **Brightness, Colour and Sharpness** can only be altered if "Personal" mode is selected.
- **Hue** is only available for NTSC colour signal (e.g: USA video tapes).
- Select **Reset** and press **OK** to reset the picture to the factory preset levels.

continued...

## Level 1



## Level 2

 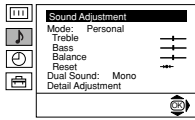

## Level 3 / Function

### SOUND ADJUSTMENT

The “Sound Adjustment” menu allows you to alter the sound adjustments.

To do this: after selecting the item you want to alter, press **➔**. then press repeatedly **⬇** / **⬆** / **⬇** or **➔** to adjust it and finally press **OK** to store the new adjustment.

This menu also contains two submenus as following:

**Mode** ➔ **⬇** **Personal** (for individual settings)  
**⬇** **Rock**  
**⬇** **Pop**  
**⬇** **Jazz**

**Detail Adjustment** ➔ **⬇** **Sound Effect:** **⬇** **Off:** Normal.  
**⬇** **Spatial:** Acoustic sound effect.

 

**⬇** **Auto volume:** **⬇** **Off:** Volume level changes according to the broadcast signal.  
**⬇** **On:** Volume level of the channels will stay the same, independent of the broadcast signal (e.g. in the case of advertisements).

**⬇** **TV Speakers:** **⬇** **Off:** Sound from external amplifier connected to the audio outputs on the rear of the TV set.  
**⬇** **On:** Sound from the TV set.


- **Treble** and **Bass** can only be altered if “**Personal**” mode is selected.
- Select **Reset** and press **OK** to reset the sound to the factory preset levels.
- In case of a bilingual broadcast select **Dual Sound** and set **A** for sound channel 1, **B** for sound channel 2 or **Mono** for mono channel if available. For a stereo broadcast you can choose **Stereo** or **Mono**.

continued...

## Level 1

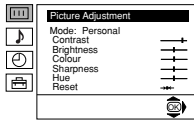

## Level 2

 




## Level 3 / Function

### SLEEP TIMER

The "Sleep Timer" option in the "Timer" menu allows you to select a time period for the TV to switch itself automatically into the standby mode.

To do this: after selecting the option press **▶**, then press **▼** or **▲** to set the time period delay (max. of 4 hours) and finally press **OK** to store.

- While watching the TV, you can press the **⏪** button on the remote control to display the time remaining.
- One minute before the TV switches itself into standby mode, the time remaining is displayed on the TV screen automatically.

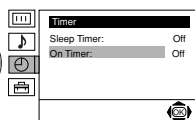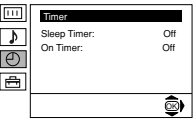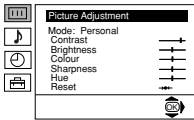




### ON TIMER

The "On Timer" option in the "Timer" menu allows you to select a time period for the TV to switch itself automatically on from standby mode.

To do this: after selecting the option press **▶**, then press **▼** or **▲** to set the time period delay (max. 12 hours) and press **OK** to store. Finally press the standby button **|/⏻** on the remote control. After the selected length of time the TV switches on automatically.

- The standby indicator **⏻** on the TV set flashes regularly to indicate that "On Timer" is active.
- Any loss of power will cause these settings to be cleared.

**⚠** If you have not activated the "On Timer" option but the indicator **⏻** on the TV set flashes, please contact to your nearest Sony Service Centre.

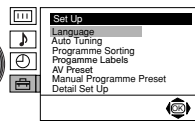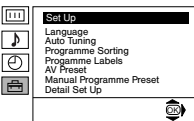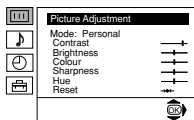

### LANGUAGE


The "Language" option in the "Set Up" menu allows you to select the language that the menus are displayed in.

To do this: after selecting the option, press **▶** and then proceed in the same way as in the step 2 of the section "Switching On the TV and Automatically Tuning".


GB

continued...

## Level 1

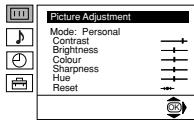

## Level 2

 


## Level 3 / Function

### AUTO TUNING

The "Auto Tuning" option in the "Set Up" menu allows you to automatically search for and store all available TV broadcast channels.



 
To do this: after selecting the option, press **➡** and then proceed in the same way as in TV steps 4 and 5 of the section "Switching On the TV and Automatically Tuning".



### PROGRAMME SORTING

The "Programme Sorting" option in the "Set Up" menu allows you to change the order in which the broadcast channels appear on the screen.

   To do this: after selecting the option, press **➡** and then proceed in the same way as in step 6 b) of the section "Switching On the TV and Automatically Tuning".






### PROGRAMME LABELS

The "Programme Labels" option in the "Set Up" menu allows you to name a broadcast channel using up to five characters (letters or numbers).

To do this:

   - 1 After selecting the option, press **➡**, then press **⬇** or **⬆** to select the programme number with the broadcast channel you wish to name.
- 2 Press **➡**. With the first element of the **Label** column highlighted, press **⬇** or **⬆** to select a letter or number (select "-" for a blank), then press **➡** to confirm this character. Select the other four characters in the same way. Finally press **OK** to store.






### AV PRESET

The "AV Preset" option in the "Set Up" menu allows you to designate a name to the external equipment you have connected to the sockets of this TV.

To do this:

   
- 1 After selecting the option, press **➡**, then press **⬇** or **⬆** to select the input source you wish to name (**AV1** and **AV2** are for the rear Scarts and **AV3** for front connectors). Then press **➡**.



continued...

2 In the label column automatically appears a label:

- a) If you want to use one of the 6 predefined labels (**CABLE, GAME, CAM, DVD, VIDEO** or **SAT**), press **▼** or **▲** to select the desired label and finally press **OK** to store.
- b) If you want to set a different label, select **Edit** and press **▶**. Then with the first element highlighted, press **▼** or **▲** to select a letter, number or “-” for a blank, then press **▶** to confirm this character. Select the other four characters in the same way and finally press **OK** to store.

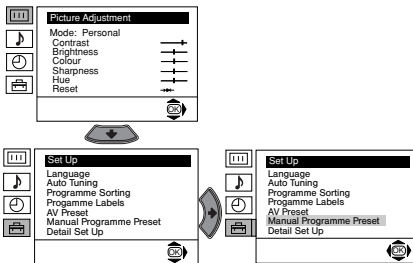

### MANUAL PROGRAMME PRESET

The “Manual Programme Preset” option in the “Set Up” menu allows you to:

a) Preset broadcast channels or a video input source one by one to the programme order of your choice. To do this:


- 1 After selecting the “Manual Programme Preset” option, press **▶** then with **Programme** option highlighted press **▶**. Press **▼** or **▲** to select on which programme number you want to preset the broadcast channel (for VCR, select programme number “0”). Then press **◀**.
- 2 After selecting the **Channel** option, press **▶**. Then press the number buttons to enter directly the channel number of the TV Broadcast or the channel of the VCR signal. If you do not know the channel number, press **▼** or **▲** to search for it. When you tune the desired channel, press **OK** twice to store.

*Repeat all the above steps to tune and store more channels.*



**GB**

continued...

## Level 1

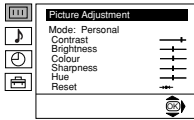

## Level 2

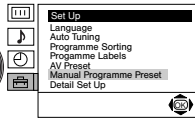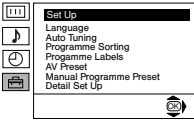

## Level 3 / Function

**b)** Label a channel using up to five characters.

To do this: Highlighting the **Programme** option, press the **PROGR +/-** button to select the programme number with the broadcast channel you wish to name. When the TV broadcast you want to name appears on the screen, select the **Label** option and press **▶**. Next press **▼** or **▲** to select a letter, number or “-” for a blank. Press **▶** to confirm this character. Select the other four characters in the same way. After selecting all the characters, press **OK** twice to store.

**c)** Normally the automatic fine tuning (AFT) is operating, however you can manually fine tune the TV to obtain a better picture if the picture is distorted.

To do this: while watching the channel (TV Broadcast) you wish to fine tune, select the **AFT** option and press **▶**. Next press **▼** or **▲** to adjust the fine tuning between -15 and +15. Finally press **OK** twice to store.

**d)** Skip any unwanted programme numbers when they are selected with the **PROGR +/-** buttons.

To do this: Highlighting the **Programme** option, press the **PROGR +/-** button to select the programme number you want to skip. When the programme you want to skip appears on the screen, select the **Skip** option and press **▶**. Next press **▼** or **▲** to select **Yes**. Finally press **OK** twice to confirm and store.


*To cancel this function afterwards, select “No” instead of “Yes” in the step above.*

continued...

## Level 1

## Level 2

## Level 3 / Function

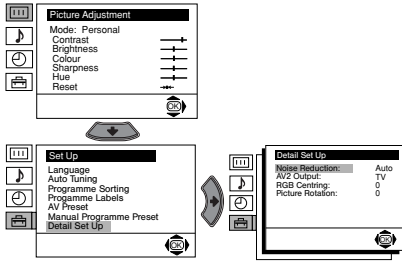


### NOISE REDUCTION

The “Noise Reduction” option in the “Detail Set Up” menu allows you to automatically reduce the picture noise visible in the broadcast signal.

To do this: after selecting the option, press **➡**. Then press **⬇** or **⬆** to select **Auto**. Finally press **OK** to confirm and store.

*To cancel this function afterwards, select “Off” instead of “Auto” in the step above.*

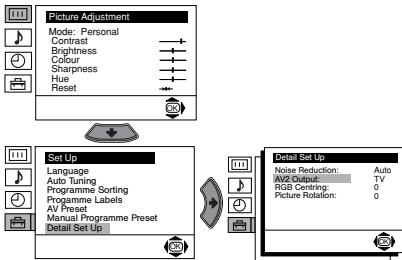

### AV2 OUTPUT

The “AV2 Output” option in the “Detail Set Up” menu allows you to select the source to be output from the Scart connector **↔2/→S** in order you can record from this Scart any signal coming from the TV or from external equipment connected to the Scart connector **↔1/→S** or front connectors **↔3** and **↔4**.

**i** If your VCR supports Smartlink, this procedure is not necessary.

To do this: after selecting the option, press **➡**. Then press **⬇** or **⬆** to select the desired output signal: **TV**, **AV1**, **AV3** or **AUTO**.



**⚠** If you select “AUTO”, the output signal will always be the same one that is displayed on the screen.

**⚠** If you have connected a decoder to the Scart **↔2/→S** or to a VCR connected to this Scart, please remember to change back the “AV2 Output” to “AUTO” or “TV” for correct unscrambling.


**GB**

continued...

## Level 1

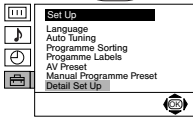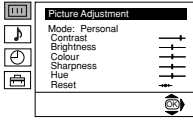

## Level 2



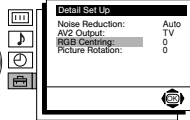


## Level 3 / Function

### RGB CENTRING

When connecting an RGB source, such as a "PlayStation", you may need to readjust the horizontal position of the picture. In that case, you can readjust it through the "RGB Centring" option in the "Detail Set Up" menu.

To do this: while watching an RGB source select the "RGB Centring" option and press **▶**. Then press **▼** or **▲** to adjust the centre of the picture between -10 and +10. Finally press **OK** to confirm and store.

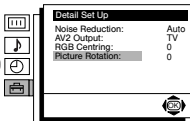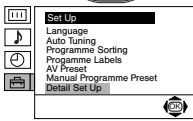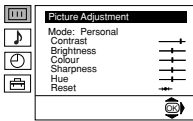


### PICTURE ROTATION


Because of the earth's magnetism, the picture might slant. In this case, you can correct the picture slant by using the option "Picture Rotation" in the "Detail Set Up" menu.

To do this: after selecting the option, press **▶**. Then press **▼** or **▲** to correct any slant of the picture between -5 and +5 and finally press **OK** to store.




# Teletext

 Teletext is an information service transmitted by most TV stations. The index page of the teletext service (usually page 100) gives you information on how to use the service. To operate teletext, use the remote control buttons as indicated below.

 Make sure to use a broadcast channel with a strong signal, otherwise teletext errors may occur.

## To Switch On Teletext :

After selecting the TV channel which carries the teletext service you wish to view, press .



TELETEXT	
Index	25
Programme	25
News	153
Sport	101
Weather	98

## To Select a Teletext page:

Input 3 digits for the page number, using the numbered buttons.

- If you have made a mistake, retype the correct page number.
- If the counter on the screen continues searching, it is because this page is not available. In that case, input another page number.

## To access the next or preceding page:



Press **PROGR +** () or **PROGR -** ()

## To superimpose teletext on to the TV:



Whilst you are viewing teletext, press . Press it again to cancel teletext mode.

GB


## To freeze a teletext page:

Some teletext pages have sub-pages which follow on automatically. To stop them, press  / . Press it again to cancel the freeze.


## To reveal concealed information (e.g: answer to a quiz):

Press  / . Press it again to conceal the information.

## To Switch Off Teletext:

Press .


# Fastext

 Fastext service lets you access pages with one button push.

While you are in Teletext mode and Fastext is broadcast, a colour coded menu appears at the bottom of the teletext page. Press the colour button (red, green, yellow or blue) to access the corresponding page.

# Connecting Optional Equipment

**i** Using the following instructions you can connect a wide range of optional equipment to your TV set. (Connecting cables are not supplied).

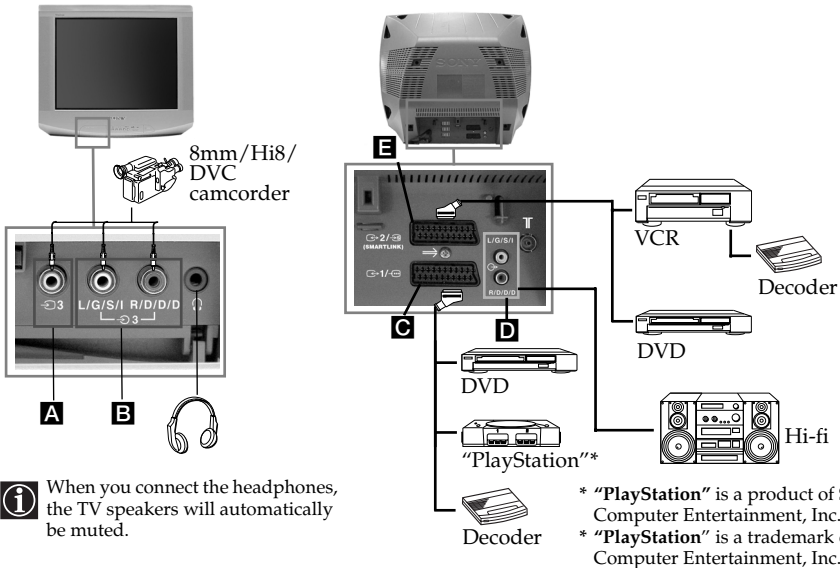

**i** When you connect the headphones, the TV speakers will automatically be muted.

## Connecting a VCR:

To connect a VCR, please refer to the section "Connecting the aerial and VCR" of this instruction manual. We recommend you connect your VCR using a scart lead. If you do not have a scart lead, tune in the VCR test signal to the TV programme number "0" by using the "Manual Programme Preset" option. (for details of how to manually programme these presets, see page 13, step a).

Refer to your VCR instruction manual to find out how to find the output channel of your VCR.

## Connecting a VCR that supports Smartlink:

**i** Smartlink is a direct link between the TV set and the VCR. For more information on Smartlink, please refer to the instruction manual of your VCR.

If you use a VCR that supports Smartlink, please connect the VCR by using a Scart lead to the Scart 2 / **E**.


continued...

## Connecting to external Audio Equipment:

Plug in your Hi-Fi equipment to the audio output sockets **D** if you wish to amplify the audio output from TV. Next, using the menu system, select the "Sound Adjustment" menu. Enter the "Detail Adjustment" option and set "TV Speakers" to "Off".






**i** The audio level of the external speakers can be modified by pressing the volume buttons on the remote control. Also treble and bass settings can be modified through the "Sound Adjustment" menu.


## Using Optional Equipment

- 1 Connect your equipment to the designated TV socket, as indicated in the previous page.
- 2 Switch on the connected equipment.
- 3 To watch the picture of the connected equipment, press the  button repeatedly until the correct input symbol appears on the screen.


### Symbol

### Input Signals

- |   |  |
|---|--|
|    | • Audio / video input signal through the Scart connector <b>C</b>  |
|    | • RGB input signal through the Scart connector <b>C</b> . This symbol appears only if a RGB source has been connected. |
|    | • Audio / video input signal through the Scart connector <b>E</b> .  |
|    | • S Video input signal through the Scart connector <b>E</b> .  |
|  | • Video input signal through the phono socket <b>A</b> and Audio input signal through <b>B</b> .                       |

- 4 Press  button on the remote control to return to the normal TV picture.

### For Mono Equipment

Connect the phono plug to the L/G/S/I socket on the front of the TV and select 3 input signal using the instructions above. Finally, refer to the "Sound Adjustment" section of this manual and select "Dual Sound" "A" on the sound menu screen.

GB

# Specifications

## TV system:

I

## Colour system:

PAL,  
SECAM, NTSC 3.58, 4.43 (only Video In)

 
## Channel Coverage:


I: UHF B21-B69


## Picture Tube:

Flat Display FD Trinitron  
21" (approx. 55 cm. measured  
diagonally)


## Rear Terminals

 
 21-pin scart connector  
(CENELEC standard)  
including audio/video  
input, RGB input, TV  
audio/video output.


 21-pin Scart connector  
(CENELEC standard)  
including audio / video  
input, S video input,  
selectable audio / video  
output and Smartlink  
interface.

 audio outputs (Left/  
Right) - phono jacks

## Front Terminals

  3 video input – phono jack

 3 audio input – phono jacks

 headphones jack

## Sound Output:

2 x 14 W (music power)

2 x 7 W (RMS)

## Power Consumption:

60 W

## Standby Power Consumption:

0.5 W

## Dimensions (w x h x d) :

Approx. 516 x 471 x 487 mm.

## Weight:

Approx. 27 Kg.

## Accessories supplied:

1 Remote Control (RM-887)

2 Batteries (IEC designated)


## Other features:


 
 
 
 


- Teletext, Fasttext, TOPtext
- Sleep Timer
- Wake UP Timer
- Smartlink (direct link between your TV set and a compatible VCR. For more information on Smartlink, please refer to the Instruction Manual of your VCR).


Design and specifications are subject to change without notice.

Ecological Paper- Totally Chlorine Free 

# Troubleshooting

 Here are some simple solutions to the problems which may affect the picture and sound.


Problem	Solution
No picture (screen is dark) and no sound.	<ul style="list-style-type: none"> <li>• Check the aerial connection.</li> <li>• Plug the TV in and press the  button on the front of the TV.</li> <li>• If the standby indicator  is on, press  button on the remote control.</li> </ul>
Poor or no picture (screen is dark), but good sound.	<ul style="list-style-type: none"> <li>• Using the menu system, select the "Picture Adjustment" menu and select "Reset" to return to the factory settings.</li> </ul>
No picture or no menu information from equipment connected to the Scart connector.	<ul style="list-style-type: none"> <li>• Check that the optional equipment is on and press the  button repeatedly on the remote control until the correct input symbol is displayed on the screen.</li> </ul>
Good picture, no sound.	<ul style="list-style-type: none"> <li>• Press the  button on the remote control.</li> <li>• Check that "TV Speakers" is "On" on the "Sound Adjustment" menu.</li> <li>• Check that headphones are not connected.</li> </ul>
No colour on colour programmes.	<ul style="list-style-type: none"> <li>• Using the menu system, select the "Picture Adjustment" menu and select "Reset" to return to factory settings.</li> </ul>
Distorted picture when changing programmes or selecting teletext.	<ul style="list-style-type: none"> <li>• Turn off any equipment connected to the Scart connector on the rear of the TV.</li> </ul>
Picture slanted	<ul style="list-style-type: none"> <li>• Using the menu system, select the "Picture Rotation" option in the "Detail Set Up" menu to correct the picture slant.</li> </ul>
Noisy picture when viewing a TV channel.	<ul style="list-style-type: none"> <li>• Using the menu system, select the "Manual Programme Preset" menu and adjust Fine Tuning (AFT) to obtain better picture reception.</li> <li>• Using the menu system, select the "Noise Reduction" option in the "Detail Set Up" menu and select "Auto" to reduce the noise in the picture.</li> </ul>
No unscrambling or unstable picture whilst viewing a scrambling channel with a decoder connected through the Scart connector  .	<ul style="list-style-type: none"> <li>• Using the menu system, select the "Set Up" menu. Then enter to "Detail Set Up" option and set "AV2 Output" to "TV".</li> </ul>
Remote control does not function.	<ul style="list-style-type: none"> <li>• Replace the batteries.</li> </ul>
The standby indicator  on the TV flashes even though the "On Timer" function is not in use.	<ul style="list-style-type: none"> <li>• Contact your nearest Sony service centre.</li> </ul>

 If you continue to experience problems, have your TV serviced by qualified personnel. Never open the casing yourself.

# Television Channel Number Guide for United Kingdom

**i** Only the main transmitters are listed. Information regarding the regional sub-relay channel numbers can be obtained by contacting The BBC Engineering Information Dept., Telephone Number 020 7852 5040.

MAIN TRANSMITTERS	BBC1	BBC2	ITV	CH4	CH5
<b>London &amp; South East</b>					
① Bluebell Hill	40	46	43	65	-
② Crystal Palace	26	33	23	30	-
③ Dover	50	56	66	53	-
④ Heathfield	49	52	64	67	-
⑤ Oxford	57	63	60	53	49
<b>South-West</b>					
⑥ Beacon Hill	57	63	60	53	-
⑦ Caradon Hill	22	28	25	32	-
⑧ Huntshaw Cross	55	62	59	65	67
⑨ Redruth	51	44	41	47	37
⑩ Stockland Hill	33	26	23	29	-
<b>Channel Islands</b>					
⑪ Fremont Point	51	44	41	47	-
<b>South</b>					
⑫ Hannington	39	45	42	66	-
⑬ Midhurst	61	55	58	68	-
⑭ Rowridge	31	24	27	21	-
<b>West</b>					
⑮ Mendip	58	64	61	54	37
<b>East</b>					
⑯ Sandy Heath	31	27	24	21	39
⑰ Sudbury	51	44	41	47	-
⑱ Tacolneston	62	55	59	65	52
<b>Midlands (West)</b>					
⑲ Ridge Hill	22	28	25	32	-
⑳ Sutton Coldfield	46	40	43	50	-
㉑ The Wrekin	26	33	23	29	-
<b>Midlands (East)</b>					
㉒ Waltham	58	64	61	54	-
<b>Northern Ireland</b>					
㉓ Brougher Mountain	22	28	25	32	-
㉔ Divis	31	27	24	21	-
㉕ Limavady	55	62	59	65	-
<b>North</b>					
㉖ Belmont	22	28	25	32	56
㉗ Emley Moor	44	51	47	41	37
<b>North-West</b>					
㉘ Winter Hill	55	62	59	65	48
<b>North-East</b>					
㉙ Bilsdale West Moor	33	26	29	23	-
㉚ Caldbeck	30	34	28	32	56
㉛ Chatton	39	45	49	42	-
㉜ Pontop Pike	58	64	61	54	-
<b>Scotland</b>					
㉝ Angus	57	63	60	53	-
㉞ Black Hill	40	46	43	50	37
㉟ Sandale	22	67	-	-	-
㊱ Caldbeck	-	-	28	32	56
㊲ Craigkelly	31	27	24	21	48
㊳ Darvel	33	26	23	29	-
㊴ Durris	22	28	25	32	67
㊵ Eitshal (Lewis)	33	26	23	29	-
㊶ Keelylang Hill	40	46	43	50	-
㊷ Knock More	33	26	23	29	-
㊸ Rosemarkie	39	45	49	42	-
㊹ Rumster Forest	31	27	24	21	-
㊺ Selkirk	55	62	59	65	52
<b>Wales</b>					
㊻ Blaenplwyf	31	27	24	21	56
㊼ Carmel	57	63	60	53	-
㊽ Llanddona	57	63	60	53	-
㊾ Moel-y-Parc	52	45	49	42	-
㊿ Presely	46	40	43	50	37
① Wenvoe	44	51	41	47	-

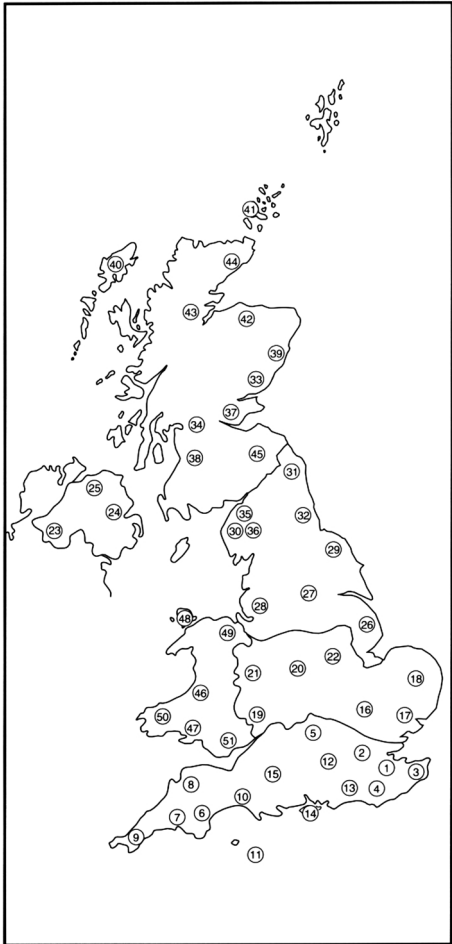

**Sony España, S.A.**  
Printed in Spain

Ecological Paper - Totally Chlorine Free

