

## *Trinitron Color TV*

---

### Operating Instructions \_\_\_\_\_

**GB**


- Before operating the unit, please read this manual thoroughly and retain it for future reference.

**FD Trinitron**  
**WEGA**

*KV-HA21*  
*KV-HA14*

|     |
|-----|
| L80 |
| M81 |
| M80 |

# A Getting Started

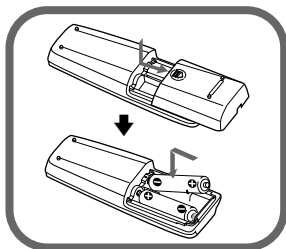


## Step 1

Insert the batteries (supplied) into the remote.

### Note

- Do not use old batteries nor use different types of batteries together.

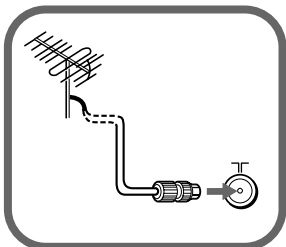


## Step 2

Connect the antenna cable (not supplied) to T (antenna input) at the rear of the TV.


### Tip

- You can also connect your TV to other optional components. (See **E**)

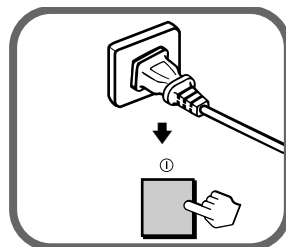

## Step 3

Plug in the power cord, then press **⏻** on the TV to turn it on.

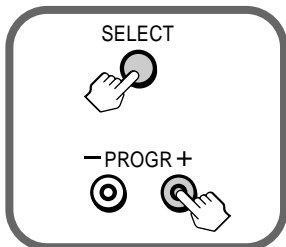


## Step 4

Press SELECT and PROGR + on the TV at the same time for one to two seconds to preset the channels automatically. (See **J**)

### Tip

- To stop the automatic channel presetting, press SELECT.

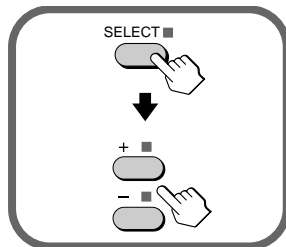


## Step 5


Press SELECT on the remote until "LANGUAGE/ اللغة : ENGLISH" appears on the screen, then press + or - to change the on-screen display language.

# **B** WARNING


- Dangerously high voltages are present inside the TV.
- TV operating voltage: 110 – 240 V AC.
- Do not plug in the power cord until you have completed making all other connections; otherwise a minimum leakage current might flow through the antenna and other terminals to ground.
- To avoid battery leakage and damage to the remote, remove the batteries from the remote if you are not going to use it for several days. If any liquid that leaks from the batteries touches you, immediately wash it away with water.

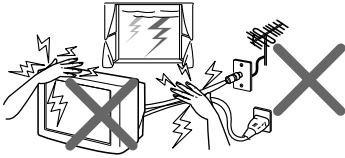


For your own safety, do not touch any part of the TV, the power cord and the antenna cable during lightning storms.

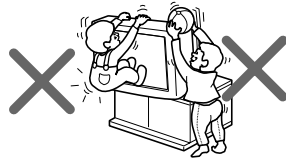


For children's safety, do not leave children alone with the TV. Do not allow children to climb onto it.

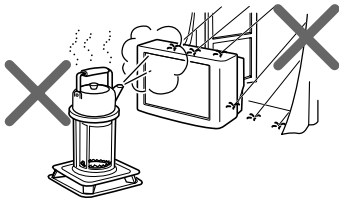


To prevent fire or shock hazard, do not expose the TV to rain or moisture.

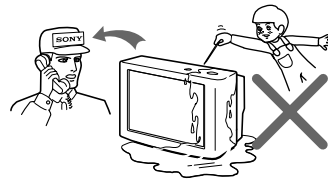


Do not operate the TV if any liquid or solid object falls into it. Have it checked immediately by qualified personnel only.

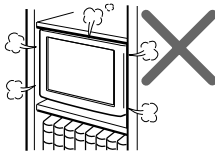


Do not block the ventilation openings of the TV. Do not install the TV in a confined space, such as a bookcase or built-in cabinet.

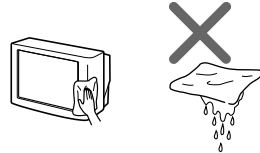

Clean the TV with a dry and soft cloth. Do not use benzene, thinner, or any other chemicals to clean the TV. Do not scratch the picture tube.




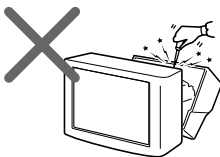


Do not open the cabinet and the rear cover of the TV as high voltages and other hazards are present inside the TV. Refer servicing and disposal of the TV to qualified personnel.

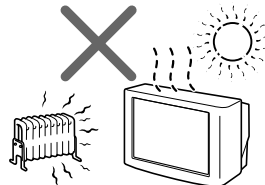

Your TV is recommended for home use only. Do not use the TV in any vehicle or where it may be subject to excessive dust, heat, moisture or vibrations.




## WARNING (continued)
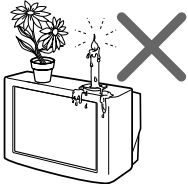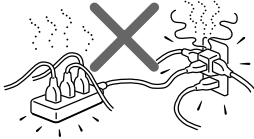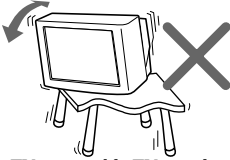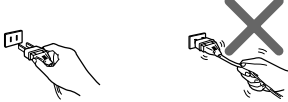 
|   |  |
|---|--|
|  <p>Do not place any objects on the TV.</p>  |  <p>Do not plug in too many appliances to the same power socket. Do not damage the power cord.</p>  |
|  <p>Install the TV on a stable TV stand and floor which can support the TV set weight. Ensure that the TV stand surface is flat and its area is larger than the bottom area of the TV.</p> |  <p>Pull the power cord out by the plug. Do not pull the power cord itself. Even if your TV is turned off, it is still connected to the AC power source (mains) as long as the power cord is plugged in. Unplug the TV before moving it or if you are not going to use it for several days.</p> |


## **C** Securing the TV

### ► KV-HA21 only

To prevent the TV from falling, use the supplied screws, clamps and band to secure the TV.

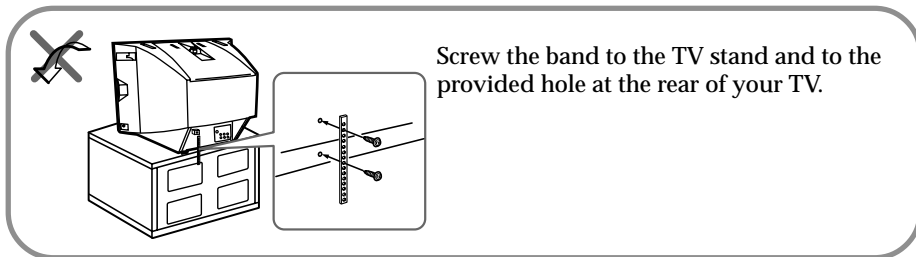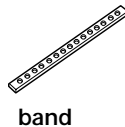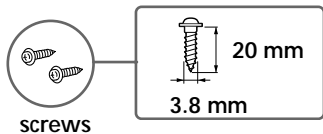


or

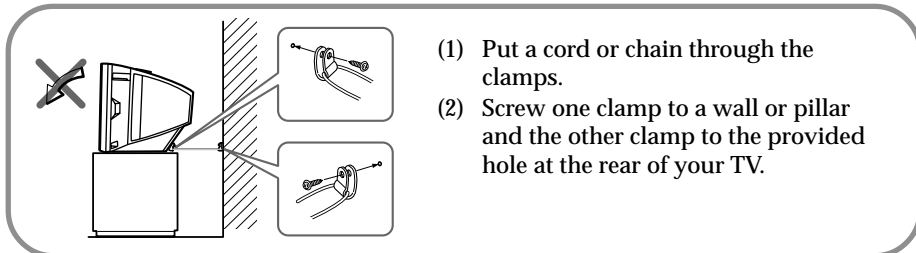

### Note

- Use only the supplied screws. Use of other screws may damage the TV.

# D TV front and rear panels

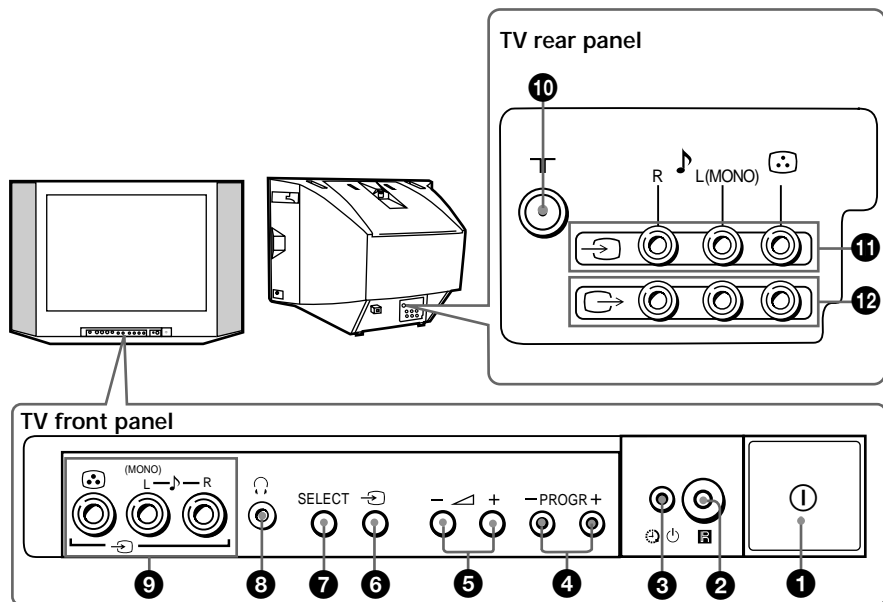


| Button      | Function                    |
|-------------|-----------------------------|
| ① ①         | Turn off or turn on the TV. |
| ②           | Remote control sensor.      |
| ③           | Standby indicator.          |
| ③           | Wake Up indicator.          |
| ④ PROGR +/- | Select program number.      |
| ⑤           | Adjust volume.              |
| ⑥           | Select TV or video input.   |
| ⑦ SELECT    | Select the desired item.    |
| ⑧           | Headphone terminal.         |
| ⑨, ⑪        | Video input terminal.       |
| ⑩           | Antenna input terminal.     |
| ⑫           | Monitor output terminal.    |

\* You can also use the +/- buttons on the TV to work as the +/- buttons on the remote.

# E Connecting optional components

## Connecting to the video input terminal (↻)

TV front panel

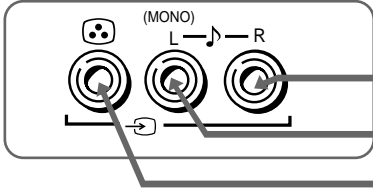

Audio/Video cable  
(not supplied)




Camcorder




Video game  
equipment

TV rear panel

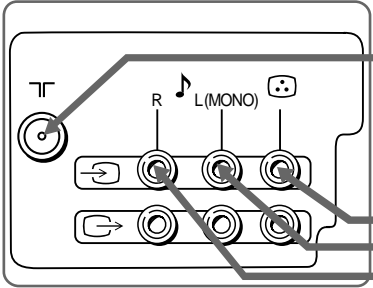

Antenna cable  
(not supplied)

Audio/Video cable  
(not supplied)

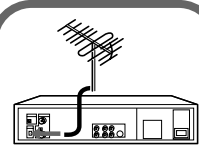


VCR

### Note

- Do not connect video equipment to ↻ (video input) at the front and the rear of your TV at the same time; otherwise the picture will not be displayed properly on the screen.

## Connecting to the monitor output terminal (⇨)


TV rear panel

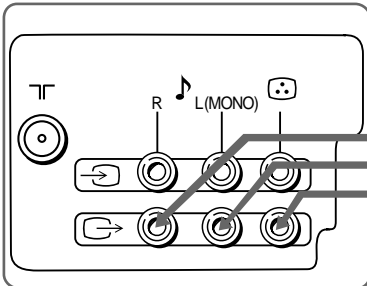

Audio/Video cable  
(not supplied)



 Audio system

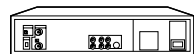

VCR

# F Troubleshooting

If you find any problem while viewing your TV, please check the following guide. If any problem persists, contact your Sony dealer.

| Symptom   | Solutions   |
|---|---|
| Snowy picture, noisy sound  | <ul style="list-style-type: none"> <li>• Check the antenna cable and connection on the TV, VCR and on the wall.</li> <li>• Preset the channel manually again. (See <b>J</b>)</li> <li>• Check the antenna setup. Contact a Sony dealer for advice.</li> </ul>     |
| Good picture, noisy sound   | <ul style="list-style-type: none"> <li>• Select the appropriate TV system. (KV-HA21M81/HA21M80) (See <b>J</b>)</li> </ul>   |
| No picture, no sound  | <ul style="list-style-type: none"> <li>• Check the power cord, antenna and the VCR connections.</li> <li>• Press I/⏻ (power) or ⏻ (main power) to turn on the TV.</li> </ul>  |
| Good picture, no sound  | <ul style="list-style-type: none"> <li>• Press ◀ + to increase the volume level.</li> <li>• Press ✖ to cancel the muting.</li> </ul>  |
| Dotted lines or stripes   | <ul style="list-style-type: none"> <li>• Do not use a hair dryer or other equipment near the TV.</li> <li>• Check the antenna setup. Contact a Sony dealer for advice.</li> </ul>   |
| Double images or "ghosts"   | <ul style="list-style-type: none"> <li>• Use the fine tuning ("FINE") function. (See <b>J</b>)</li> <li>• Turn off or disconnect the booster if it is in use.</li> <li>• Check the antenna setup. Contact a Sony dealer for advice.</li> </ul>                    |
| No color  | <ul style="list-style-type: none"> <li>• Select the appropriate color system. (See <b>J</b>)</li> <li>• Adjust the color level. (See <b>K</b>)</li> <li>• Check the antenna setup. Contact a Sony dealer for advice.</li> </ul>                                   |
| Abnormal color patches  | <ul style="list-style-type: none"> <li>• Keep external speakers or other electrical equipment away from the TV. Press ⏻ (main power) to turn off the TV for about 15 minutes, then turn it on again to demagnetize the TV.</li> </ul>                             |
| Teletext display is incomplete (snowy picture or double images). (KV-HA21M81 only)        | <ul style="list-style-type: none"> <li>• Check the antenna cable and connection on the TV, VCR and on the wall.</li> <li>• Use the fine tuning ("FINE") function. (See <b>J</b>)</li> <li>• Check the antenna setup. Contact a Sony dealer for advice.</li> </ul> |
| The ⏻ (standby) indicator on your TV flashes red several times after every three seconds. | <ul style="list-style-type: none"> <li>• Count the number of times the ⏻ (standby) indicator flashes. Press ⏻ (main power) to turn off your TV. Contact your nearest Sony service center.</li> </ul>  |
| TV cabinet creaks.  | <ul style="list-style-type: none"> <li>• Changes in room temperature sometimes make the TV cabinet expand or contract, making a noise. This does not indicate a malfunction.</li> </ul>   |
| A "boom" sound is heard when the TV is turned on.   | <ul style="list-style-type: none"> <li>• The TV's demagnetizing function is working. This does not indicate a malfunction.</li> </ul>   |


# **G** Specifications

|                                 | KV-HA21M81<br>KV-HA21M80  | KV-HA14L80  | Note                       |
|---------------------------------|---|---|----------------------------|
| Power requirements              | 110-240 V AC, 50/60 Hz  |   |                            |
| Power consumption (W)           | Indicated on the rear of the TV   |   |                            |
| Television system               | B/G, I, D/K, M  | B/G   |                            |
| Color system                    | PAL, PAL 60, SECAM,<br>NTSC4.43, NTSC3.58   | PAL, PAL 60, SECAM,<br>NTSC3.58 (AV IN), NTSC4.43 |                            |
| Teletext language               | English, Farsi (Persian), French  |   | KV-HA21M81 only            |
| Channel coverage<br>B/G         | VHF : E2 to E12<br>UHF : E21 to E69<br>CATV: S01 to S03, S1 to S41                                      |   |                            |
| I                               | UHF : B21 to B68<br>CATV: S01 to S03, S1 to S41   | —   |                            |
| D/K                             | VHF : C1 to C12, R1 to R12<br>UHF : C13 to C57, R21 to R60<br>CATV: S01 to S03, S1 to S41,<br>Z1 to Z39 | --  |                            |
| M                               | VHF : A2 to A13<br>UHF : A14 to A79<br>CATV: A-8 to A-2, A to W+4,<br>W+ 6 to W+84                      | —   |                            |
| ⌋ (Antenna)                     | 75-ohm external terminal  |   |                            |
| Audio output (Speaker)          | 5W + 5W   | 3W + 3W   |                            |
| Number of terminal<br>Ⓜ (Video) | Input: 2* Output: 1   | Phono jacks; 1 Vp-p, 75 ohms                      | * One input line available |
| ♪ (Audio)                       | Input: 2* Output: 1   | Phono jacks; 500 mVrms                            | * One input line available |
| 🎧 (Headphone)                   | Output: 1   | Stereo minijack                                   |                            |
| Picture tube                    | 21 in.  | 14 in.  |                            |
| Tube size (cm)                  | 54  | 37  | Measured diagonally        |
| Screen size (cm)                | 51  | 34  | Measured diagonally        |
| Dimensions (w/h/d, mm)          | 639 × 458 × 490   | 466 × 346 × 419                                   |                            |
| Mass (kg)                       | 26  | 13  |                            |

Design and specifications are subject to change without notice.



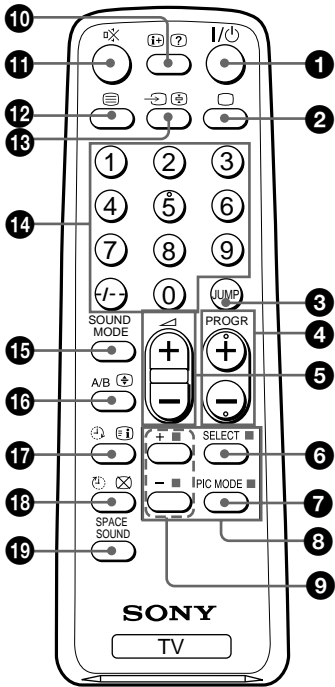


# H Remote control




| Button   | Function  | See      |
|--|---|----------|
| <b>1</b> I/⏻   | Turn off temporarily or turn on the TV.         | -        |
| <b>2</b> □   | Display the TV program.                         | -        |
| <b>3</b> JUMP  | Jump to previous program number.                | -        |
| <b>4</b> PROGR +/-   | Select program number.                          | -        |
| <b>5</b> ▽ +/-   | Adjust volume.                                  | -        |
| <b>6</b> SELECT  | Select the desired item.                        | -        |
| <b>7</b> PIC MODE  | Select picture mode.                            | <b>K</b> |
| <b>9</b> +/-   | Adjust items.                                   | -        |
| <b>10</b> ⓘ  | Display on-screen information.                  | -        |
| <b>11</b> ⏸  | Mute the sound.                                 | -        |
| <b>13</b> ↺  | Select TV or video input.                       | -        |
| <b>14</b> 0 - 9, -/-   | Input numbers.                                  | -        |
| <b>Timer operations</b>  |   |          |
| <b>17</b> ⌚  | Set TV to turn on automatically.                | <b>L</b> |
| <b>18</b> ⌚  | Set TV to turn off automatically.               | <b>L</b> |
| <b>15</b> SOUND MODE   | Select sound mode.                              | <b>K</b> |
| <b>19</b> SPACE SOUND  | Select space sound mode.                        | <b>K</b> |
| <b>16</b> A/B  | Not function for your TV.                       | -        |
| <b>Teletext operations (green label)<br/>(KV-HA21M81 only)</b> |   |          |
| <b>8</b> ■ (red, green, yellow, blue)                          | Access a FASTEXT menu.                          | <b>M</b> |
| <b>10</b> ?  | Reveal concealed information                    | <b>M</b> |
| <b>12</b> ≡  | Display Teletext broadcast.                     | <b>M</b> |
| <b>13</b> ⊞  | Stop Teletext display from scrolling.           | <b>M</b> |
| <b>16</b> ⊞  | Enlarge the Teletext display.                   | <b>M</b> |
| <b>17</b> ⓘ  | Display Teletext service contents.              | <b>M</b> |
| <b>18</b> ⊞  | Show TV screen while waiting for Teletext page. | <b>M</b> |


# I Setting the timers

You can turn on and off your TV by using the  and  buttons respectively.

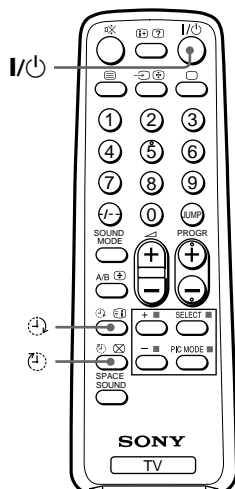


 
## Setting the Wake Up timer

- 1 Press  until the desired period of time appears on the screen.

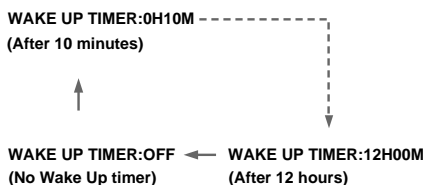


The Wake Up timer starts immediately after you have set it.

- 2 Select the program number or video input you want to wake up to.
- 3 Press , or set the Sleep timer if you want the TV to turn off automatically.

The  indicator on the TV lights up orange when the TV goes into standby mode.

## Setting the Sleep timer

Press  until the desired period of time appears on the screen.




The Sleep timer starts immediately after you have set it.

### Notes

- You can also cancel the Wake Up and Sleep timers by turning off the TV's main power.
- If no buttons or controls are pressed for more than two hours after the TV is turned on using the Wake Up timer, the TV automatically goes into standby mode.

# J Presetting channels

You can automatically preset up to 100 TV channels in numerical sequence from program number 1, or manually preset desired channels and channels that cannot be preset automatically.

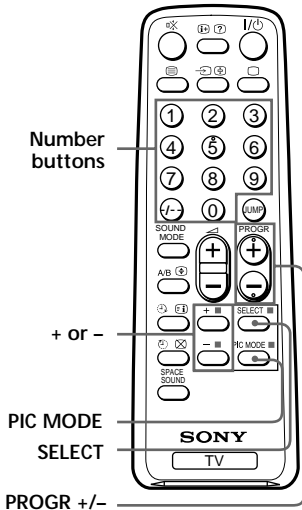

## Presetting channels automatically from a specified program number

- 1 Press SELECT until "AUTO PROGRAM" appears on the screen.
- 2 Press + or - once to enter the "AUTO PROGRAM" mode.  
The on-screen display will start flashing.
- 3 Press PROGR +/- or the number buttons until the desired program number appears on the screen.
- 4 Press + or - to start presetting channels automatically.

## Presetting channels manually

- 1 Press SELECT until "MANUAL PROGRAM" appears on the screen.
- 2 Press + or - once to enter the "MANUAL PROGRAM" mode.
- 3 Press PROGR +/- or the number buttons until the desired program number appears on the screen.
- 4 Press + or - until the desired channel picture appears on the screen.
- 5 To preset other channels manually, repeat steps 3 to 4.

## ***Presetting channels (continued)***

### **To change the TV system setting (KV-HA21M81/HA21M80 only)**

If the picture or sound is abnormal when receiving programs through the ㄗ (antenna input) terminal

- (1) Press SELECT until "TV SYS" appears on the screen.
- (2) Press + or – to select the appropriate TV system until the picture or sound quality is optimal.

**B/G → I → D/K → M**

### **To change the color system setting**

If the color is abnormal when receiving programs through the ㄗ (antenna input) terminal or the ㄗ (video input) terminal

- (1) Press SELECT until "COLOR SYS" appears on the screen.
- (2) Press + or – to select the appropriate color system until the color is optimal.

**AUTO → PAL → SECAM → NTSC3.58 → NTSC4.43**

### **To skip program numbers**

- (1) Press PROGR +/- or the number buttons until the unused or unwanted program number appears on the screen.
- (2) Press SELECT until "MANUAL PROGRAM" appears on the screen.
- (3) Press + or – once to enter the "MANUAL PROGRAM" mode.
- (4) Press PIC MODE to skip the unused or unwanted program number.
- (5) Press SELECT to exit the "MANUAL PROGRAM" mode.


#### **Note**

- To restore the skipped program number again, preset the channel automatically or manually.

### **To use the fine tuning function**

The fine tuning (FINE) function may help to reduce the following problems: incomplete Teletext display (KV-HA21M81 only), double images and lines moving across the TV screen.


You can use the fine tuning function as below:

- (1) Select the program number you want to adjust.
- (2) Press SELECT until "MANUAL PROGRAM" appears on the screen.
- (3) Press + or – once to enter the "MANUAL PROGRAM" mode.
- (4) Press  to display "FINE" on the screen.
- (5) Press + or – continuously until the above problems are minimized. The + or – icon on the screen flashes while tuning.
- (6) Press SELECT to exit the "MANUAL PROGRAM" mode.

# K Customizing the picture and sound

You can customize the picture and sound by selecting the picture and sound modes or by adjusting its settings.

You can change the sound effect by selecting the space sound mode.

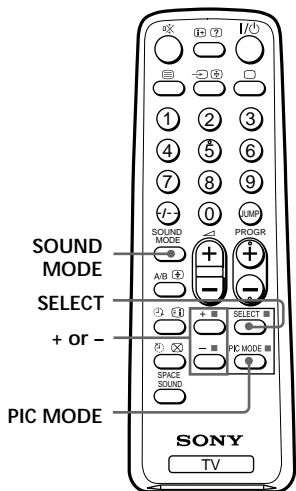

## Selecting the picture mode

Press PIC MODE to select the desired picture mode.

| Select     | To                             |
|------------|--------------------------------|
| "DYNAMIC"  | view high contrast pictures.   |
| "STANDARD" | view normal contrast pictures. |
| "SOFT"     | view mild pictures.            |

## Selecting the sound mode

Press SOUND MODE to select the desired sound mode.

| Select      | To  |
|-------------|---|
| "♪ DYNAMIC" | listen to dynamic and clear sound that emphasizes the low and high sound. |
| "♪ DRAMA"   | listen to sound that emphasizes vocals and background music.              |
| "♪ SOFT"    | listen to soft sound.   |

## Adjusting the picture and sound settings

**1** Press SELECT until the desired setting appears.

Each time you press SELECT, the setting item will change as follows:



**2** Press + or - to adjust the item.

**3** To adjust other items, repeat steps 1 to 2.

### Notes

- "HUE" can be adjusted for the NTSC color system only.
- Reducing "SHARP" can also reduce picture noise.

## Customizing the picture and sound (continued)

### Selecting the space sound mode

Press SPACE SOUND.

| Select | To  |
|--------|---|
| "ON"   | listen to monaural sound with a stereo-like effect. |
| "OFF"  | turn off space sound mode.                          |



#### Note

- You can also turn space sound on or off using the SELECT and + or – buttons.

## **L** Adjusting the picture position


 
### ► KV-HA21M81 only

If the picture is slanting, you can adjust the picture position using the "PIC ROTATION" function until it is optimal.

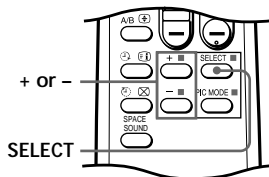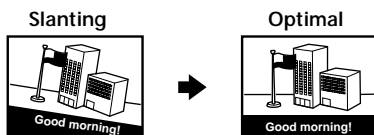

**1** Press SELECT repeatedly until "PIC ROTATION" appears on the screen.

**2** Press + or – to adjust the picture position.

The  or  icon on the screen flashes while adjusting.

#### Note


- To reduce the slanting picture, keep external speakers or other electrical equipment away from the TV.

# M Viewing Teletext

## ► KV-HA21M81 only

Some TV stations broadcast an information service called Teletext which allows you to receive various information, such as stock market reports and news.

You can use the buttons on the remote to view Teletext.

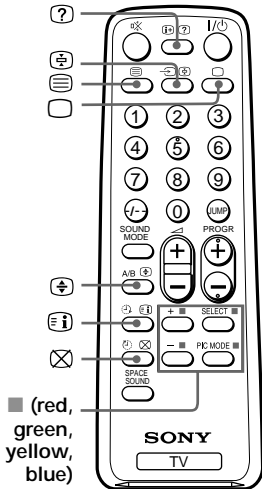

| To   | Do this   |
|--|---|
| display a Teletext page on the TV picture                | Press . Each time you press , the screen changes as follows: Teletext → Teletext and TV → TV. If there is no Teletext broadcast, "100" is displayed at the top left corner of the screen.                 |
| check the contents of a Teletext service                 | Press . An overview of the Teletext contents, including page numbers, appears on the screen.  |
| select a Teletext page                                   | Press the number buttons to enter the three-digit page number of the desired Teletext page. If you make a mistake, reenter the correct page number. To access the next or previous page, press PROGR +/-. |
| hold (pause) a Teletext display                          | Press  to display the symbol "" at the top left corner of the screen. To resume normal Teletext viewing, press  or .  |
| reveal concealed information (e.g., an answer to a quiz) | Press . To conceal the information, press the button again.   |
| enlarge the Teletext display                             | Press . Each time you press , the Teletext display changes as follows: Enlarge upper half → Enlarge lower half → Normal size.   |
| stand by for a Teletext page while watching a TV program | <ol style="list-style-type: none"> <li>1 Enter the Teletext page number that you want to refer to, then press .</li> <li>2 When the page number is displayed, press  to show the text.</li> </ol>         |
| select a FASTEXT menu or the colored boxes               | Press  (red, green, yellow and blue) that corresponds to the desired menu or page number.   |
| turn off Teletext  | Press .   |

### Note

- The FASTEXT feature can be used only when the FASTEXT broadcast is available.