

Brand	Component	Code No.
Nokia Oceanic	TV	036, 035
	VCR	032
Nordmende	TV	044, 039, 040
	VCR	024, 023
Okano	TV	011, 068
	VCR	036, 034, 037
Onwa	TV	062
Orion	TV	051, 015, 049, 050
	VCR	040
	COMBO	TV 051&VCR 038
Panasonic	TV	096, 079, 080, 112, 113
	VCR	028, 031
Philips	TV	086, 087, 088, 089, 011, 015, 095, 098, 101, 102, 013, 014, 015, 019
	VCR	018, 012, 017, 019, 014
	COMBO	TV 013&VCR 018, TV 013&VCR 012
Phoenix	TV	011
Phonola	TV	013, 015
	VCR	014, 012, 013
Pioneer	TV	059
Provision	TV	013
PYE	TV	013
Radio	TV	013
Radiola	TV	015
Roadstar	TV	068
	VCR	045
SABA	TV	100, 032, 037, 023, 039, 040, 044, 042, 041
	VCR	023, 024, 060, 025
Salora	TV	020
	VCR	032
Samsung	TV	089, 097, 084, 085, 018, 016, 017, 011, 012
	VCR	053, 055, 056, 061, 054
	COMBO	TV 060&VCR 054, TV 014&VCR 054, TV 060&VCR 055, TV 060&VCR 053
Sanyo	TV	056, 110
	VCR	050, 049
Schneider	TV	095, 011, 047, 013, 062, 106, 115
	VCR	018, 012, 020
	COMBO	TV 013&VCR 012
SEG	VCR	039
Seleco	TV	031, 045
	VCR	045, 041
Sharp	TV	082, 111
	VCR	032
Siemens	TV	026, 027
	VCR	020, 049
Sinudyne	TV	045, 011
Supertech	TV	068, 013
	COMBO	TV 068&VCR 057
Supervision	TV	013
Tandberg	TV	031
	VCR	058
Tatung	TV	013
Teac	TV	010
Techimagen	TV	013
Telefunken	TV	100, 032, 037, 040, 039, 043, 023
	VCR	025, 026
Thomson	TV	100, 037, 032, 042, 044
	VCR	066, 023
	COMBO	TV 074&VCR 057
Thorn	TV	011
	VCR	049, 052
Toshiba	TV	058, 057, 103
	VCR	051, 022
Universum	TV	013, 020
	VCR	026, 040, 052, 012
Vestel	TV	013
W.W.House	TV	013
	VCR	052
Watson	TV	013, 068, 047, 014
	VCR	014, 038
	COMBO	TV 051&VCR 038

DVD

Brand	Code No.
Sony	001
Denon	006
Hitachi	008
JVC	007
KLH	010
Panasonic	002
Philips	012
Pioneer	004
RCA	005
Sharp	011
Thomson	013
Toshiba	003
Yamaha	006
Zenith	009

VD

Brand	Code No.
Sony	001, 002, 003, 004
Hitachi	008
Kenwood	013, 014
Magnavox	010
Panasonic	005, 006, 007
Philips	015
Pioneer	009
Sanyo	012
Sharp	011, 016

CBL

Brand	Code No.
Hamlin/Regal	022, 023, 024, 025, 026
Jerrold/G.I.	001, 002, 003, 004, 005, 006, 007, 008, 018, 043
NET	042
Oak	027, 028, 029
Panasonic	019, 020, 021
Pioneer	014, 015
Scientific Atlanta	009, 010, 011
Tocom	016, 017, 043
Zenith	012, 013

SAT (analog)

Brand	Code No.
Sony	001
Amstrad	024, 002, 023
Galaxis	026, 031, 010, 012, 014
Grundig	026, 027, 035
Hyundai	044
Jerrold	038
Kathrein	022
Matsui	025
Nikko	021
Nokia	037
NTV plus	040
Pace	016, 020
Radix	024, 011
SABA	028, 032, 033, 008, 009, 047
Sky Master	003, 006, 005
Technisat	034, 018, 019, 045
Thomson	032
Watson	004
Zehnder	007, 013, 050

SAT (digital)

Brand	Code No.
Sony	057, 042
Amstrad	046
CANAL+	006, 042
Galaxis	030, 053
Gold box	036
Kathrein	043, 049
Nokia	017, 056
Pace	015
Philips	054
Radix	029, 052
Technisat	039, 051
TPS	055
Zehnder	048

AMP

Brand	Code No.
Sony	001
Aiwa	040, 022
Denon	027, 028, 036, 037
Finearts	044
Fisher	011
Harman/Kardon	035
JVC	047, 020, 019, 099
Kenwood	025, 016, 015
Magnavox	021
Marantz	029
NAD	033
Nakamichi	087
Onkyo	034, 039, 043
Panasonic	008
Parasound	067
Philips	029
Pioneer	032, 086, 091
Rotel	068
Sansui	038, 090, 088, 087
Sanyo	011
Sharp	028, 016
Sherwood	031
Teac	089, 058, 088
Technics	026, 045, 008
Yamaha	030, 046, 014

CD

Brand	Code No.
Sony	001, 002
Aiwa	037, 021
Denon	026, 009
Emerson	092
Fisher	040, 010
Harman/Kardon	031
Hitachi	041
JVC	033, 018, 019
Kenwood	034, 014, 024
Magnavox	016, 026
Marantz	072
NAD	029
Nakamichi	044, 083
Onkyo	030, 035, 038
Panasonic	010
Philips	016
Pioneer	028, 017
Sansui	083, 084, 087
Sanyo	040, 010
Sharp	009, 015
Sherwood	039
Teac	049, 054, 084
Technics	025, 032, 005
Universum	063
Yamaha	027, 036, 013

MD/DAT

Brand	Code No.
Sony	001, 002, 019 (DAT)
Aiwa	012
Akai	018
Denon	003
JVC	005, 008
Kenwood	004, 011, 014
Marantz	007
Onkyo	015, 020 (DAT)
Panasonic	010, 006
Pioneer	016, 020 (DAT)
Sansui	009
Sharp	013
Teac	005
Yamaha	017

TAPE

Brand	Code No.
Sony	001, 002, 005
Aiwa	042, 045, 025
Denon	028, 029, 009, 010
Fisher	011
Goldstar/LG	008
Harman/Kardon	033
JVC	022, 023, 024
Kenwood	036, 037, 015, 016
Marantz	047
NAD	031, 032
Nakamichi	079
Onkyo	038, 039, 040, 041, 043, 044
Panasonic	067
Philips	047
Pioneer	034, 035, 020, 021, 006
Sansui	079, 077, 078
Sanyo	011
Sharp	028
Teac	077, 078, 080, 081
Technics	046, 007, 067
Yamaha	030, 014

Mini Hi-Fi Component System / Minichaîne hifi / Mini-HiFi-Komponentenanlage / Sistema de minicomponentes de alta fidelidad / Mini hi-fi componenten-systeem / Hi-Fi ministereo / Sistema a minicomponenti hi-fi / Sistema de minicomponentes Hi-Fi

Brand	Code No.	AMP	CD	TAPE	MD
Sony	001	001	001	001	001
	001	001	002	—	—
	002	001	001	001	001
	002	001	002	—	—
	003	002	003	—	—
	003	002	004	—	—
	003	002	005	—	—
	002	021	—	—	—
	023	022	025	—	—
	023	022	026	—	—
Aiwa	040	037	042	—	—
	080	075	072	012	—
	075	069	068	—	—
	053	049	—	—	—
	065	061	—	—	—
	066	062	—	—	—
	069	064	059	—	—
	(Bang&Olufsen)	—	—	—	—
	048	045	—	—	—
	063	059	—	—	—
Denon	005	003	—	—	—
	010	008	009	—	—
	028	009	028	—	—
	028	009	029	—	—
	028	009	010	—	—
	024	023	027	—	—
	037	009	028	003	—
	061	057	—	—	—
	021	020	—	—	—
	017	016	019	—	—
Harman/Kardon	062	058	057	—	—
	076	070	069	—	—
	035	091	—	—	—
	019	018	022	005	—
	019	018	023	—	—
	020	019	024	—	—
	071	018	060	—	—
	071	018	061	—	—
	019	018	060	005	—
	019	018	061	005	—
JVC	079	074	071	008	—

Brand	Code No.	AMP	CD	TAPE	MD
Kenwood	015	014	015	—	—
	016	015	017	—	—
	016	015	018	—	—
	025	034	036	—	—
	025	024	—	—	—
	072	066	064	014	—
	072	066	065	014	—
	072	066	015	014	—
	072	066	016	—	—
	083	078	074	011	—
Goldstar/LG	084	079	075	014	—
	009	007	008	—	—
	017	016	019	—	—
	029	039	019	—	—
	095	016	050	—	—
	062	058	057	—	—
	060	056	057	—	—
	077	071	—	—	—
	059	055	055	—	—
	034	035	038	—	—
Mission	034	035	039	—	—
	034	030	038	—	—
	034	030	039	—	—
	085	080	076	015	—
	008	006	—	—	—
	008	005	067	—	—
	078	073	070	010	—
	100	095	—	—	—
	017	016	019	—	—
	006	004	006	—	—
Pioneer	091	028	034	—	—
	018	017	020	—	—
	018	017	021	—	—
	006	017	006	—	—
	018	017	006	—	—
	073	067	066	—	—
	082	077	073	016	—
	049	046	048	—	—
	049	046	049	—	—
	041	042	—	—	—