



ADDENDUM

Dear Customer


Thank you for purchasing this Panasonic product. We would like to correct the description in the operation instructions as follows:

DMR-EZ45V / DMR-EX95V (page 26)

The soundtrack cannot be changed by pressing the **DISPLAY** button. Read the valid description below:

VHS screen information

- Press ⓘ during playback. Each time the button is pressed, the display switches between tape counter and remaining tape time.

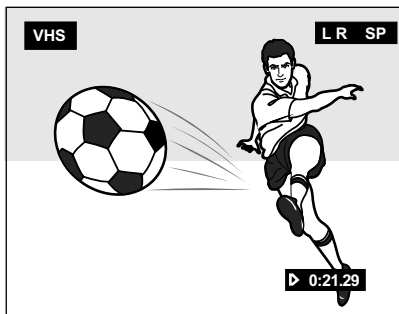

VHS	Current medium
L R SP	<p>LR, L, R: The soundtrack can be changed with the DISPLAY button. The soundtrack can be changed by pressing and holding the STTL button for approximately 5 secs. Repeat this step to toggle through all the soundtracks (L, R, LR, - -)</p> <p>SP: Selected recording mode.</p>
REMAIN: 0:24	<p>Remaining tape time: The display depends on the correct setting of the tape length. (EZ45V) (EX95V) </p>
▷ 0:21.29	<p>Tape counter: It is automatically set to 0:00.00 when a video cassette is inserted. Use * / RESET to reset the counter to 0:00.00.</p>
R▷ 0:21.29	Repeat

Note

You can display detailed information only during playback or recording (VHS only recording). They are not recorded.