99637181_GB_B.qxd 12/05/05 11:15 Page 1

Brandt

Gas hob operating guide



99637181_GB_B.qxd 12/05/05 11:15 Page 2

Contents

Using your hob in complete safety	4
What your hob looks like?	5
Installing your hob in all simplicity	5
Fitting recommendations	5-7
Electrical connections	8
Gas connections	9
Changing the type of gas supply for CHINA	10-11
Using your hob in all simplicity	12
How to use your gas burners?	12
Which pans are best adapted for use on the gas burner	13
How to look after your hob?	14
Minor troubleshooting	15
Gas-cooking guide	16

In this Manual,



P

displays safety instructions

displays tips and hints

Editorial

Dear Customer,

Thank you for buying a BRANDT hob.

Our design staff have produced a new generation of kitchen equipment, to make everyday cooking a pleasure.

You will find that the clean lines and modern look of your Brandt hob blends in perfectly with your kitchen décor. It is easy to use and performs to a high standard.

Brandt also makes a range of products that will enhance your kitchen such as hobs, extractor hoods, built-in dishwashers and refrigerators. There are models to complement your new Brandt hob.

Of course, we make every effort to ensure that our products meet all your requirements, and our Customer Service department is at your disposal, to answer all your questions and to listen to all your suggestions.

Brandt has always been a leader in the development of new products, thus enhancing the quality of everyday life by providing increasingly efficient products, that are easy to use, respect the environment, and are attractive and reliable.

The BRANDT name.

Your hob in complete safety

Using your hob in complete safety

We have designed your hob for private domestic use.

With a view to the constant improvement of our products, we reserve the right to make any changes in their technical, functional or aesthetic characteristics as a result of technical evolution.

These hobs are designed exclusively for the cooking of drinks and foodstuffs. These products do not contain any asbestos-based component parts.

You must always keep an eye on your cooking.

Read the instructions before installing and using the apparatus.

Never leave any **CLEANING** or **INFLAMMABLE** products in the cupboard beneath your hob (aerosols or other pressurised cans, papers, recipe books, etc.).

Using a gas-powered hob produces both heat and humidity in the room where it is used. Make sure your kitchen is well ventilated.

Keep all natural ventilation inlets open or install a mechanical ventilation device. Intensive and prolonged use of this appliance may require additional ventilation, (for example by opening the window), or more effective ventilation (for example by increasing the power of the mechanical ventilation if this exists).

Disconnect your hob from both electrical and gas supplies before carrying out any maintenance operations.

For safety reasons, do not forget to close the main gas valve for built in gas lines.


The connector pipe should remain accessible along its entire length and must be replaced before its expiration date (marked on the pipe). Regardless of the means of connection chosen, ensure that this is totally free of leaks following installation using soapy water.

If a knob is difficult to turn, **DO NOT FORCE IT**. Call up your installer.

Should a crack appear on the glass, disconnect your appliance immediately and contact your After-Sales Service.

1 Your hob is delivered pre-set for use with HONG KONG town gas.

What your hob looks like?

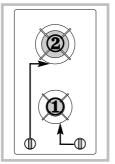

① Semi-fast burner 1,5 kW*

② Extra-fast burner 3,1 kW*

(*Powers in Hong Kong gas)

Installing your hob in all simplicity

Fitting recommendations

	Width	Depth	Height	
Standard cutout	26,5 cm	48 cm	Depending on the unit	
Outside dimensions above the work surface	31 cm	51 cm	5 cm	
Outside dimensions below the work surface	26 cm	47 cm	5,1 cm	

This appliance should be installed by a qualified technician / installer.

Prior to installation, ensure that the local distribution conditions (nature of the gas and gas pressure) and the adjustment conditions of the appliance are compatible.

This appliance must be installed and connected in compliance with the regulations in force, and used only in a well-ventilated area. Consult the instructions before installing and using this appliance.

Since this appliance is not connected to a combustion products evacuation device, particular attention should be given to the relevant requirements regarding ventilation.

On this subject, combustion can take place only if oxygen from the air is present, so this air must be constantly renewed and the combustion products must be evacuated (a minimum air input of 2 m3/hour per kW of gas energy is required).

E.g.: for a 30 cm hob with 2 gas-rings Total power: 4.6kW $4,6 \text{ kW x } 2 = 9.2 \text{ m}^3/\text{h}$ minimum flow-rate.

Fitting recommendations (cont'd)

The hob must be built into the worktop of a support cupboard. This worktop must be at least 3 cm thick and heat-resistant or else coated with a heat resistant material.

A side-clearance of at least 30 cm should be left to the right and left of the hob. A tall cupboard or partition too close to the hob would hinder free movement of kitchen utensils. If a horizontal partition is put under the hob, it must be placed between 10 and 15 cm from the bottom of the work top. In any case, do not keep any sprays or pressurized containers in the compartment which could be just under the hob.


To ensure sealing between the cupboard and the worktop follow points below :


1- Remove the pan support grates, the burner caps and heads after checking their position.

2- Turn the hob over and place it gently over the opening in the worktop paying attention not to damage the control knobs and lighters.

3- Stick the foam seal **around the outside of the hob**.

4- Put the hob back the right way up and place the burners, caps and pan grates back in position.

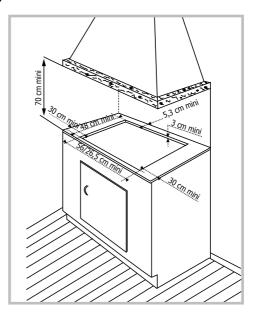

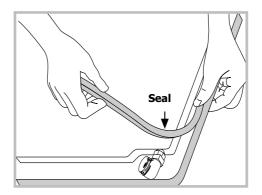

Fitting recommendations (cont'd)


- Place the hob in position in the cutout on the worktop, pulling it forward as far as possible.

- Put the burners, caps and pan grates back in position.

Connect the hob power supply cable to the electrical installation of the kitchen. (See "Electrical connections").
Connect the hob to the gas.

If you wish you can lock the hob into position using attachments that come with screws (see picture opposite) and are secured to the corners of the housing.

Only use the holes provided. Stop screwing when the lug starts to bend. Do not use a power screwdriver.

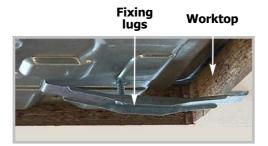

Holes for fixing



CROSS SECTION OF THE CABLE TO USE

Electrical connections

Your hob is delivered with a threeconductor (phase + ground + neutral) H05VVF- T105 or H05V2V2F - T90 1mm² section cable, which must be connected to a 220-240 V~ single phase mains supply by the intermediary of a two phase + earth CEI 60083 standardised neutral plug, or a single pole cut-off device with a contact opening by at least 3,5mm.

In HONG KONG, you must use 3-pin plug that comply with the relevant safety standard BS 546.

The mains plug must be accessible after installation.

	220-240V~-50 Hz All-gas
Cable H05VVF - T105 or H05V2V2F - T90	3 conductors of which 1 is to be earthed
Cross section of conductors in mm2	1
Fuse	5 A

The protective conductor (green/yellow) is connected to the \bigoplus earth connection on the hob and therefore must also be connected to an external earth connection \bigoplus .

If the power supply cable is damaged, it must be replaced with a cable or a special unit available from the manufacturer or his After Sales Service.

/ľ

Connecting the gas supply

Preliminary remarks

If the hob is installed above an oven or if the proximity of other heat generating elements threatens to cause the connection to heat up, it is vital that the connection be made using a rigid pipe. If a hose or soft pipe is used, it must not come into contact with any of the unit's moving parts or enter an area that is likely to be obstructed.

The gas supply must be connected in line with current regulations in the country of installation.

Gas rating

Appliance designed for installation in Hong Kong Hourly input -see below at 15°C at 1013 mbar		Towngas HONG KONG 10 mbar
Extra Fast BurNER Indicator marked on injector Nominal heat rating Low heat rating Hourly output	(kW) (kW) (l/h)	340 3,10 0,700 693
SEMI-FAST BURNER Indicator marked on injector Nominal heat rating Low heat rating Hourly output	(kW) (kW) (l/h)	165 1,50 0,500 335
30 cm hob 2 gas rings Total nominal heat rating Maximum output	(kW) (l/h)	4,60 1028

MARK ON THE INJECTORS



(165)

This table shows the position of the injectors on your hob depending on the type of gas you use. The number is marked on each injector.

Changing the type of gas supply for CHINA

The changing from Hong Kong towngas to natural gas G20/20mbar for CHINA must be realised by a qualified installer. He will find the injectors and the spanner available from the manufacturer or its After Sales Service.

• Changing from HONG KONG towngas to natural gas G20/20 mbar for China

When carrying out this operation, you should successively:

• Change the injectors

Adjust the retarder on the taps

• CHANGE THE INJECTORS in the following way:

• Remove the supports, and all the burner caps and heads.

• Using the spanner supplied, unscrew the injectors at the bottom of each dish and remove them (fig 1).

- Replace these with the injectors supplied in the wallet, in accordance with the gas rating table at the end of the chapter; to do this:


Screw in the injectors by hand until they are tight.

S Put the spanner well onto the injector.


⇒ With a pencil draw a line on the hearth plate as indicated (fig. 2).
 ⇒ Turn the spanner clockwise until the line appears on the other side (fig. 3). Warning! Do not go

beyond this limit as you are liable to cause damage.

➡ Put the burner heads, covers and pan supports back in position.

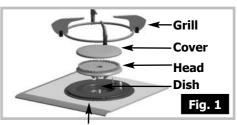

Upper side of the hob

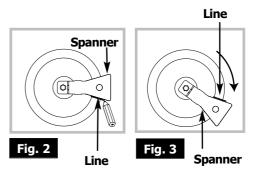

Changing the type of gas supply for CHINA (cont'd)

The changing from Hong Kong towngas to natural gas G20/20mbar for CHINA must be realised by a qualified installer. He will find the injectors and the spanner available from the manufacturer or its After Sales Service.


Adjust the RETARDER ON THE TAPS located under the knobs. Proceed as follows:

- Work on one tap at a time.
- Pull off all knobs and sealing rings.

• Using a small screwdriver, **screw** in the brass retarder adjustment screw (yellow) (**Fig. 1**) **fully**, **clockwise**.

• Check the position of the sealing rings and knobs before putting them back in place. Make sure the knobs are pushed down as far as possible.

• Put the burner heads, covers and pan supports back in position.

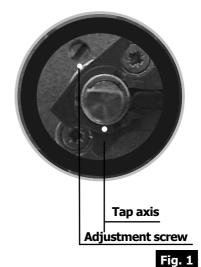

• Gas rating

Appliance designed for installation in CHINA Hourly input -see below at 15°C at 1013 mbar		Natural gas G20 20 mbar
EXTRA FAST BURNER Indicator marked on injector Nominal heat rating Low heat rating Hourly output	(kW) (kW) (l/h)	137 3,10 0,870 295
SEMT-FAST BURNER Indicator marked on injector Nominal heat rating Low heat rating Hourly output	(kW) (kW) (l/h)	94 1,50 0,615 143
30 cm hob 2 gas rings Total nominal heat rating Maximum output	(kW) (l/h)	4,60 438

MARK ON THE INJECTORS

This table shows the position of the injectors on your hob depending on the type of gas you use. The number is marked on each injector.



(94)

Using your hob in all simplicity

How to use your gas burners?

• Lighting a hob **FITTED WITH A SAFETY DEVICE**

• Each burner is controlled by a tap fitted with a safety system, which cuts the gas off automatically if ever the flame goes out by accident (overflowing, drafts, etc.).

• The safety system for the burners is a metal rod next to the flame.


• Your hob is equipped with an automatic lighting system integrated into each control knob.

• Choose the gas burner you need using the symbols at the side of each control knob; (E.g. back burner <).

• To ignite a burner, press down and turn the knob anti-clockwise until it is pointing to the maximum position 1.

Keep the knob pressed down. This will trigger off a series of sparks that will light up the burner.

• Adjust the flame to the height your require by turning the control knob between the \bigwedge and \bigwedge symbols.

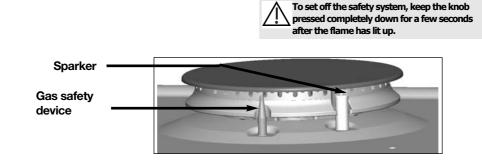

- If ever your flame goes out, relight it as per normal procedure.

- The flames on the burner are smaller near the grate supports to avoid any damage being done to the enamel.

- The noise made by certain burners is related to their power and burning gas; this does not harm the quality of cooking in any way.

 Should there be an electricity cut, you can always light a burner using a match and by pressing down on the control knob at the same time.

Using your hob in all simplicity


Which pans are best adapted for use on the gas burner ?

• Recommended pan sizes:

Extra burner	Small burner
Extra-fast	auxiliary
18 to 28 cm	12 to 16 cm

Adjust the flames so that they do not lick up the side of your pan.


Do not use a pan with a convex or concave bottom.

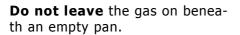

Do not use pans whose bases or handles may partially cover control knobs.

Do not use heat regulators, toasters, steel meat grills or stew-pots that touch the glass-top.

P

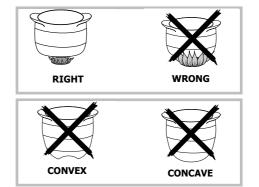



Keep all natural air-vents open or have a mechanical ventilation system installed (a mechanically ventilated hood).

- Prolonged, intensive use of the hob may require extra ventilation; by opening a window for example or producing more efficient ventilation by increasing the power of the existing mechanical ventilation (a minimum air input of 2m3/hour per kW of gas energy is required.) E.g. : for a 60 cm hob with 4 gas-rings

Total power: 4.6 kW. 4,6 kW x 2 = 9.2 m³/h minimum flow-rate.

How to look after your hob?

Keeping your hob in good condition is easy if you clean it **before it is completely cold**. Even so, never clean it when it is in use. Put all the electric and gas control knobs at zero.

	HOW TO PROCEED	ACCESSORIES TO BE USED
Looking after sparkers and injectors	 If ever the sparkers get dirty, clean them with a stiff nonmetallic brush. The gas injectors are in the centre of each burner in the form of a "pot". Make sure not to block them up partially when cleaning the hob, as this will considerably reduce the performance of your gas-rings. 	- Small hard-bristled brush. - Safety pin
Looking after the grills and burners	- Use a non-abrasive cream for removing any persistent stains. Then rinse with clean water. Dry each burner element carefully before re-lighting your hob.	- Non-abrasive cream. - Household sponge.

- It is better to clean the elements of your hob by hand, do not put any parts in the dishwasher.

- Never use scouring pads for cleaning your hob.

- Do not use a steam cleaner.

Should a crack appear on the glass, disconnect your appliance immediately and contact your After-Sales Service.

Minor troubleshooting

You have doubts about whether your hob is working correctly. This does not necessarily mean there is a breakdown. Nevertheless, check the following points

IF YOU REALIZE THAT	WHAT SHOULD YOU DO?		
Lighting the burners: There is no sparking when the control knobs or buttons are pressed down.	 Check the electrical connections on the hob. Check that the sparkers are clean. Check that the burners are clean and in position. If the hob is fixed to the worktop, make sure that the fixing clamps have not been twisted. Check that the sealing rings have not come out of place. 		
When you only press down one control knob all the burners spark.	This is normal. The lighter system is centralised, and all the burners spark at the same time.		
Sparking takes place but the burners do not light up.	 Check that the gas inlet pipe has not been squashed. Check that the gas inlet pipe tube is less than 2m long. Check that the main gas tap is open. If you use gas tanks or cylinders check that they are not empty. If you have just installed your hob or changed a gas cylinder, keep the control knob wide open for a few seconds so that the gas can get through. Make sure the injector is not blocked up. if this is the case, clear it with a safety pin. Light up your gas-ring before putting a pan on it. 		
If your table is fitted with a gas safety system and the flames go out as soon as you release the control knob.	 Push the control knob down completely and keep it under pressure for a few seconds after the burner has lit. Check that the burner parts are in place. Check that the sealing rings under the control knobs have not come out of place. Avoid any severe drafts in the room. Light the burner before putting your pan on it. 		
In the low position the flames go out or are too high.	 Avoid any severe drafts in the room. Check that the gas you are using corresponds to the injectors that have been installed (See injector identification in the "Gas Rating" chapter). Remember that gas hobs are delivered preset for use with HONG KONG town gas. Check the adjustment of the low power screw (See paragraph "Changing the type of gas supply"). 		
Flames are irregular.	 Check that the burners and injectors are clean and assembled correctly. Check you have enough gas in your gas cylinders. 		
The knobs get hot during cooking.	Use small pans on the burners next to the control knobs. Large pans are to be put on the large burners furthest away from the knobs. Put the pan in place with the burner in the middle. The pan should not be above the control knobs.		

Gas-cooking guide

	DISHES	TIME	EXTRA- FAST	SEMI- FAST
SOUPS	Broths Thick soups	8-10 minutes	x	
FISH	Court-bouillon Grilled	8-10 minutes 8-10 minutes	x x	
SAUCES	Hollandaise, Bearnaise Bechamel, Aurore	10 minutes		x x
VEGETABLES	Endives, spinach Peas in sauce Provence tomatoes Fried potatoes Pasta	25-30 minutes 15-20 minutes	× × × ×	
MEAT	Steak Blanquette, Osso-bucco Fried escalope Tournedos	90 minutes 10-12 minutes 10 minutes	X X X X	
FRYING	Chips Fritters		x x	
DESERTS	Rice pudding Stewed fruit Pancakes Chocolate	25 minutes 3-4 minutes 3-4 minutes	x x	x x
	Custard	10 minutes		×

After Sales Service

Any maintenance on your equipment should be undertaken by:

- either you dealer,

- or another qualified mechanic who is an authorised agent for the brand appliances. When making an appointment, state the full reference of your equipment (model, type and serial number). This information appears on the manufacturer's nameplate attached to your equipment.

Brandt Appliances - société par actions simplifiée au capital de 10.000.000 euros RCS Nanterre 440 302 347.

Réf. appareil : TG 528*

9963-7181 - 05/05