

QUAL  
UCCIONES

MANUAL  
DE INSTRUÇÕES

LAVADORA  
MANUAL  
DE INSTRUCCIONES

AUTOMATICKÁ  
PRAČKA  
NÁVOD  
K OBSLUZE

LAVATRICE  
ISTRUZIONI  
PER L'USO

МАШИНА  
ИНСТРУКЦИЯ ПО  
ИСПОЛЬЗОВАНИЮ

СТИРАЛЬНАЯ МАШ  
ИНСТРУКЦИЯ ПО  
ИСПОЛЬЗОВАНИЮ

LAVE-LINGE  
NOTICE  
D'UTILISATION

PRALKA  
INSTREUKCJA  
OBSŁUGI

ΜΑΧΗΡΙΟ  
ΡΟΥΧΩΝ  
ΟΔΗΓΙΕΣ  
ΧΡΗΣΕΩΣ

ΠΛΥΝΤΗΡΙΟ  
ΡΟΥΧΩΝ  
ΟΔΗΓΙΕΣ  
ΧΡΗΣΕΩΣ

WÄSCHMASCHINE  
GEBRAUCHSANWEISUNG

WASMACHINE  
GEBRUIKSAANWIJZING

WASHING MACHINE  
OPERATING  
INSTRUCTIONS

LAVADORA  
MANUAL  
DE INSTRUCCIONES

MÁQUINA  
DE LAVAR ROUPA  
MANUAL  
DE INSTRUÇÕES

WASHING MA  
OPERATING  
INSTRUCTION

LAVATRICE  
ISTRUZIONI  
PER L'USO

AUTOMATICKÁ  
PRAČKA  
NÁVOD  
K OBSLUZE

LAVATR  
ISTRUZI  
PER L'U

PRALKA  
INSTREUKCJA  
OBSŁUGI

СТИРАЛЬНАЯ МАШИНА  
ИНСТРУКЦИЯ ПО  
ИСПОЛЬЗОВАНИЮ

ΠΛΥΝΤΗΡΙΟ  
ΡΟΥΧΩΝ  
ΟΔΗΓΙΕΣ  
ΧΡΗΣΕΩΣ

LAVE-LINGE  
NOTICE  
D'UTILISATION

PRAL  
INSTRE  
OBSŁ

WASMACHINE  
GEBRUIKSAANWIJZING

WÄSCHMASCHINE  
GEBRAUCHSANWEISUNG

WASM  
GEBRUIKS

MÁQUINA  
DE LAVAR ROUPA  
MANUAL

WASHING MACHINE  
OPERATING  
INSTRUCTIONS

MÁ

**(F)**  
Code d'entretien  
des textiles

**(GB)**  
Fabric cleaning  
code

**(D)**  
Waschanleitung

**(NL)**  
Onderhoudscodes  
voor textiel

**(I)**  
Simboli di  
manutenziione  
dei tessili

**(PL)**  
Objaśnienia  
dotyczące  
konserwacji tkanin

**(E)**  
Codigos de  
mantenimiento de  
los textiles

**(P)**  
Códigos de  
manutenção dos  
têxteis

**(GR)**  
Κωδικοί  
καθαρισμού  
υφασμάτων

**(RUS)**  
Условные  
обозначения  
на этикетках  
текстильных  
изделий



Lavage : ne dépassez jamais les températures indiquées  
 Wash : never exceed the recommended temperatures  
 Hauptwäsche : Wählen Sie niemals höhere Temperaturen als die auf der Wäsche angegebenen Werte  
 Hoofdwassen : de aangegeven temperaturen nooit overschrijden  
 Lavaggio : non superare mai le temperature indicate  
 Pranie : nigdy nie przekraczać podanych temperatur  
 Lavado : nunca exceda las temperaturas indicadas  
 Lavagem : nunca ultrapassar as temperaturas indicadas  
 Πλύση : μην υπερβαίνετε ποτέ τις συνιστώμενες θερμοκρασίες  
 Стирка : ни в коем случае не превышать указанные температуры



Chlorage dilué à froid possible  
 Cold diluted bleach can be used  
 Möglichkeit der Verwendung von kalt verdünnter Bleichlauge  
 Verdund chloor kan koud worden toegevoegd  
 Possibilità di inserire lo sbiancante diluito in acqua fredda  
 Możliwość użycia chlorku rozpuszczonego w zimnej wodzie  
 Es posible utilizar lejía diluida en frío  
 Lixívia diluída a frio possível  
 Χρησιμοποιήστε λευκαντικό διαλυμένο σε κρύο νερό  
 Отбеливание разбавленной хлоркой в холодной воде возможно



Repassage :	● doux	●● moyen	●●● fort
Iron :	● cold	●● medium	●●● hot
Bügeln :	● schwach	●● mittel	●●● stark
Strijken :	● zacht	●● middelmatig	●●● sterk
Stiratura :	● leggera	●● media	●●● forte
Prasowanie :	● łagodne	●● średnie	●●● gorące
Planchado :	● suave	●● medio	●●● fuerte
Passar a ferro :	● brando	●● médi	●●● forte
Σίδερο :	● κρύο	●● μέτριο	●●● δυνατό
Гладить :	● умеренная температура	●● средняя температура	●●● высокая температура



	(F)	(P)	(A)
Nettoyage à sec :	essence minérale	perchloréthylène	tous solvants
Dry-cleaning :	mineral spirit	hexachlorethane	all solvents
Chemische Reinigung :	Mineralbenzin	Perchlorethyleen	allgem. übliche Lösungsmittel
Droog reinigen :	wasbenzine	perchloorethyleen	alle oplosmiddelen
Lavaggio a secco :	essenza minerale	percloretilene	tutti i tipi di solventi
Pranie chemiczne :	benzyna mineralna	perchloroetylen	rozpuszczalniki różne
Lavado en seco :	gasolina mineral	percloretileno	todos los solventes
Lavagem a seco :	essência mineral	percloretileno	todos os solventes
Στεγνό καθαρισμό :	βενζίνη	τετραχλωροαιθυλένιο	διαλυτικό
Химическая чистка :	бензин	перхлорэтилен	любые растворители



Respectez les interdictions !  
 Do not use !  
 Beachten Sie die Verbote !  
 Neem de aanwijzingen in acht !  
 Rispettare i divieti !  
 Przestrzegać zakazów !  
 Respete las indicaciones !  
 Seguir as indicações !  
 Ακολουθήστε τις οδηγίες  
 Соблюдайте запрещения!

### Cleaning the detergent compartment (Diagram D8)

Clean the detergent compartment regularly. To do this :

- Press simultaneously on the bosses at either side of the compartment, causing it to spring out of its housing.
- Remove the siphon tubes at the back of the compartment.
- Rinse all parts under the tap (take care to remove any excess water remaining inside the compartment).
- Replace the siphon tubes and refit the compartment. Cleaning the "debris trap"

### Cleaning the "debris trap"

This clever system traps any small debris you might have overlooked in the clothes and prevents it from damaging the pump.

To clean the trap :

- remove part **(A)** (see procedure in the chapter on "Incidents .... **the machine does not empty ...**"). Then rotate the drum slightly with the flaps open, towards the front of the machine.

You then have access to the "debris trap" (Diagram D12)

- remove it from its housing ;
- remove any items from the inside ;
- rinse it under the tap ;
- replace it, pushing it firmly into its housing after first checking that the housing is clean ;
- refit part **(A)** .

### Cleaning the machine (Diagram D9).

**For cleaning the surfaces:**

use only soap and water.

**For cleaning all plastics parts (control panels, plinth, etc.) :**  
use only a cloth moistened with water.

**Do not use** any of the following :

- abrasive powders
- metal or plastic scrubbers
- alcohol-based substances (alcohol, thinners, etc.)

### Risk of freezing

If there is a risk of freezing, disconnect the water inlet hose and empty out any water remaining in the drain hose by placing this as low as possible in a sink.

### Risk of mould

To avoid any mould developing in your machine, we recommend :

- leaving the lid open for a time after washing ;
- regularly cleaning the plastic and rubber parts around the tank access using a mild chlorine detergent ;
- regularly running a wash cycle at 90°.

### Periodic checks

You should check the condition of the water inlet and drain hoses. If you find any splits in the hoses, however minor, do not hesitate to replace them by identical hoses that can be obtained from the manufacturer or the after-sales service.

## Replacing the power lead

See diagrams page E **D10**

Your machine is fitted with a specially designed power lead. If it has to be replaced, use an identical lead which is only obtainable from the manufacturer or the after-sales service.

To change the lead, proceed as follows (Diagram D10) :

### 1) Disconnect the power plug.

### 2) Remove the lid from the junction box at the back of the machine using a screwdriver at the four points shown on the diagram.

### 3) Replace the lead, taking care :

- to connect the **green/yellow** conductor **(1)** to the central terminal;
- to tighten the lead retaining collar **(2)**

**(Caution: this collar must bear on the insulation surrounding the lead).**

### 4) Replace the lid on the box and plug in the machine.

**Once again, if you are doubtful, it is preferable to contact your installer.**

## Possible incidents

See diagrams page E **D11-D13**

Incidents may occasionally occur when you are using your washing machine : if so, check the following points.

### The washing machine does not work - check :

- water and power supplies ;
- that the lid is closed.

### The machine vibrates when spinning - check :

- the machine has been properly unpacked ;
- that the ground is horizontal ;
- that the washing machine is not standing on its two "front" castors.

### There is water on the floor near the washing machine (VERY IMPORTANT: unplug the machine from the power socket or remove the individual fuse) - check :

- that the drain hose hook fitting is properly positioned in the drain
- the seal on the water inlet hose or tap (check that the seals are present and that the hose connectors on the machine and on the tap are tight).

There may also be water on the ground near the machine if your machine is producing too much suds.

In this case check :

- that you have in fact used a MACHINE washing product ;
- that you have not used too much detergent.

In these two cases, after mopping up the water, plug in the power lead again, programme an emptying operation if your machine can do this (if not, proceed as indicated at the foot of the page), then carry out several rinses.

Finally, restart your programme.

### The machine does not empty or the clothes are not properly spun - check :

- that you have not programmed a function that prevents spinning (for example, full drum stop) ;
- that the bottom of the tank is not blocked by some small item of laundry (for example, a handkerchief, sock, etc.).

In this case :

- unplug the machine ;
- remove as much water as possible using the drain spout (see "Emptying the machine" at the foot of the page)
- remove the washing ;

- rotate the drum so that the closed flaps are at the bottom : you will see a plastic part **(A)** (Diagram D11)

- if it is fitted on your machine, remove screw **(B)** ;
- on some types of machine, part **(A)** is provided with a clip **(C)**. If this is the case, unlock part **(A)** by applying pressure to the clip while gently sliding it to the right ;
- then, in all instances : turn the drum again, open the doors and remove part **(A)** by sliding it in the direction of the arrow ;
- remove whatever is in the bottom of the tub through the holes now accessible.

Take the opportunity to clean the "debris trap" at the bottom of the tub (see procedure in the chapter "Maintenance ...: cleaning the debris trap").

- refit the plastic part and bolt **(B)** by following the above procedure in the reverse order.


### Emptying the machine

If, after an incident, you have to empty the machine, proceed as follows (Diagram D13) :

- open the door **(1)** at the front of the machine. To do this :
  - insert a screwdriver as indicated on the diagram
  - detach the door by pressing to the left
- pull on yellow plug **(2)** to release the drain spout.

- separate the plug from the spout **(3)** and allow the water to flow into a container placed for the purpose (**be careful of the water temperature**).

When emptying is complete, refit the spout by following the above procedure in the reverse order.

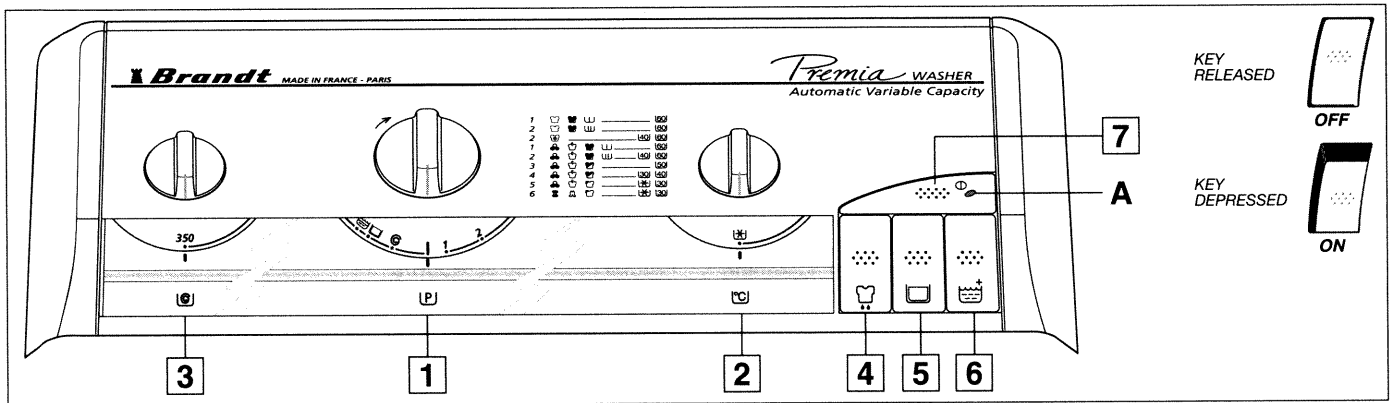

### 5 Full drum stop

This function is intended for articles you don't want to spin-dry or if you expect to be absent when the programme comes to an end.

When this button is selected, the cycle is interrupted before final spinning, allowing your washing to float in water to avoid creasing. Then :

- if you want draining with spinning : release this button. The programme terminates automatically.
- if you simply want to drain your washing : turn knob **1** to position "P" and release the button.

### 6 Extra rinse

An additional programme for "sensitive and allergic skins". It adds an extra rinse to the "WHITES" and "COLOURED" and "SYNTHETICS" cycles.

On the other hand it has no effect in the "DELICATE and WOOL" cycle even if the button is pressed.

### 7 On / Off

Check that the power cable is plugged in and the water inlet tap open.

Programme your machine and then press in the "ON-OFF" button.

The washing cycle begins and light "A" comes on.

*Do not start the machine unless the drum loading doors and the machine lid are properly closed.*

When the cycle has finished or if the machine is stopped with the tank full of water, the light "A" goes out.





















 
 




Switch off the machine by releasing the "ON-OFF" button.

You can then open the lid and remove your laundry.

You should also release any other buttons you have selected.



 
 
*As a safety measure, you should unplug the power cable and close the water inlet valve.*

## Programme examples

		P	°C		I	II	III	IV
  	Heavily soiled whites with pre-wash	1	60	500 to max.	■	■	3	02 : 20
  	Heavily soiled whites without pre-wash	2	60		■	■	3	02 : 05
	Soiled whites ECO	2	40 or 60		■	■	3	02 : 05
  	Heavily soiled coloureds and synthetics with pre-wash	1	60		■	■	3	02 : 20
  	Heavily soiled coloureds and synthetics without pre-wash	2	40 or 60		■	■	3	02 : 05
 	Soiled coloureds and synthetics	3	50		■	■	3	01 : 50
 	Soiled coloureds and synthetics	4	30 or 40		■	■	3	01 : 45
 	Slightly soiled coloureds and synthetics	5	X or 30		■	■	3	01 : 30
	Rinsing spinning whites, coloureds and synthetics		—				1	00 : 25
	Spinning whites, coloureds and synthetics		—				—	00 : 20
	Draining		—				—	00 : 05
 	Delicate and wool	6	X or 30	350		■	3	00 : 50
	Rinsing spinning delicate		—	to			1	00 : 15
	Spinning delicate		—	600			—	00 : 10

"Delicate and wool" cycle : maximum load 1 kg (this cycle includes two 6-minute washing activation phase during which it is normal that the drum of your machine does not turn).

### PROGRAMME FOR STANDARDISED COMPARATIVE TESTING

  Programme 2 : Soiled whites ECO at 60°	LOAD  5 kg	DURATION  02 : 05	POWER  1.15 kWh	WATER  69 l
----------------------------------------	-----------------------------------------------------------------------------------------------	------------------------------------------------------------------------------------------------------	------------------------------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------

For the message on the energy label, the tests are carried out in accordance with European Directive 92/75/CEE, at nominal capacity, ensuring total use of CEI detergent from the start of the washing phase.

## Loading the laundry and the washing powder/liquid

Proceed as follows :

### Opening the machine

- Ensure that the "ON-OFF" button is released ;
- Raise the opening handle. The lid will open.
- Open the doors of the drum by pushing the button situated on the front flap.

### Loading the laundry

Put the laundry, sorted beforehand, in the drum ; do not push it down, and distribute it evenly.

### Loading detergent

#### ① - Pre-wash tray (powder)

See the adjoining table

#### ② - Main wash tray (powder or liquid)

See the adjoining table.

The "MAIN WASH" tray can receive powder or liquid detergent ; however, liquid detergent should not be used for programmes WITH prewashing.

#### ③ - Fabric conditioner

The conditioner is designed to make your clothes soft and pleasant smelling.

**Concentrated conditioner should be diluted in hot water.**

#### ④ - Bleach

Bleach can be used as a disinfectant or as a bleaching agent. Its action supplements that of the washing powder.

**Concentrated bleach must be diluted.**


### Amount of detergent to be used

	pre-wash	main wash
Normal washing powders	140 ml	300 ml
Liquid detergents		180 ml

We recommend that you use the graduated beaker provided with most washing products for measuring out your detergent.

The quantities recommended above refer to normal washing conditions and may be modified according to the hardness of the water, the dirt level of the laundry and if certain options are fitted :

- Soft water  
or "slightly soiled" laundry  
or "quick wash", "half load", etc.:  
**reduce the quantities by 10%**
- Very hard water  
or "very soiled" laundry :  
**increase the quantities by 10%.**

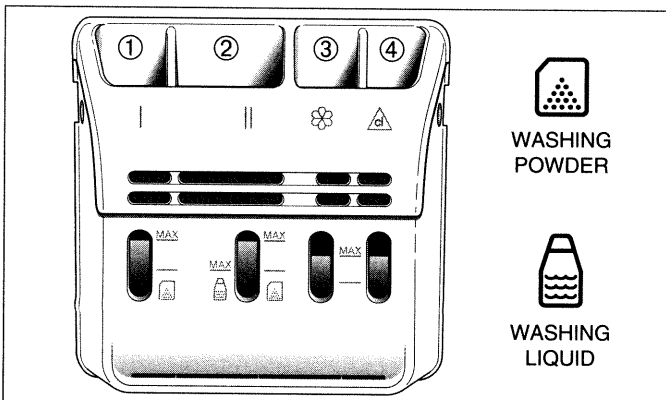

### Concentrated detergents

Follow the instructions printed on the container.

### Detergents for woollens and delicate fabrics

Always use the appropriate detergent. Use the quantities recommended on the package.

### IMPORTANT :

- when filling the detergent trays, open the lid as far as possible ;
- do not exceed the maximum level.

## Automatic safety devices

### Lid open safety devices :

Once the washing cycle starts, the lid of your machine is locked and light "A" comes on.

When the cycle has finished or if the machine is stopped with the tank full of water, the lid is unlocked and light "A" goes out.

If you want to open the lid during the cycle, release the "ON-OFF" button and wait 2 or 3 minutes for the lid safety device to unlock.

### Spinning safety device :

Your washing machine is fitted with a safety device that prevents spinning if it detects uneven loading.

In this case : open the drum, redistribute the clothes and programme a further spinning.

## Selecting a wash programme

### 1 Selecting the type of laundry \_\_\_\_\_ [P]

Select a programme according to the type of laundry to be washed.

Typical programmes are shown on page 3.

### 2 Selecting the temperature \_\_\_\_\_ [C]

Select the most appropriate temperature for the clothes to be washed. Follow the washing recommendations given on labels attached to most articles.

**WHITES - COLOURED and SYNTHETICS** : from "cold" [X] to 60°C  
**DELICATE and WOOL** : from "cold" [X] to 30°C

### 3 Selecting the spinning speed \_\_\_\_\_ [G]

Select a spinning speed appropriate to the type of clothes.

**WHITES - COLOURED and SYNTHETICS** : from 500 rpm to maximum speed  
**DELICATE and WOOL** : from 350 rpm to 600 rpm

#### Notes:

- In the "WHITES" and "COLOURED AND SYNTHETICS" programmes, the final spinning takes place in two stages to reduce creasing.

### 4 Drip drying \_\_\_\_\_ [D]

Select this option if you want simply to allow your washing to drip-dry.

### BEFORE ATTEMPTING TO USE THE MACHINE, YOU MUST FOLLOW THE PROCEDURE DESCRIBED BELOW

These operations involve removing the metal transit bracket and the blocks which immobilise the tank of your machine during the transportation, as well as the supports which hold up the hoses and the electric cable.

**These operations, known as "unpacking", are necessary for your machine to operate correctly and also for complying with current safety standards.**

- 1 - Remove the washing machine from its base (**check that the block (A) that retains the motor is not stuck under the machine**) (Diagram D1.①)
- 2 - Remove the four screws (B) with a screwdriver (Diagram D1.②)
- 3 - Remove the bracket (C) by removing the two bolts (D) with a 13 spanner (Diagram D1.③)  
**(Make sure that the two plastic spacers attached to the bar are removed at the same time).**  
Replace screws (B) in their original position.
- 4 - Blank off the two holes using the plugs (E) provided (in bag of accessories) (Diagram D1.④)
- 5 - Remove the block (F) that immobilises the drum and tub (Diagram D2).  
To do this :
  - raise the machine lid;
  - remove the block by rotating it through 90°;
  - open the doors of the drum, locked in the low position, by pushing both flaps at the same time.
- 6 - Lift up the hoses support clamps ① and **do not fall to block the holes using plugs ②** (provided in the accessories bag) (Diagram D3).

**Please keep carefully all the packing components because they must be replaced if the machine is to be shipped elsewhere**

**All these parts and the components of your machine are made of recyclable materials. Please bear this in mind when the time comes to dispose of your machine**

Your machine was inspected before leaving the factory. You may therefore find traces of water in the tank or in the detergent compartment

## Installing the machine

see diagram page B **D4**

**We advise against installing your machine on a carpeted floor. If this is unavoidable, take all precautions to avoid preventing air circulation at the base, to ensure that the internal parts are well ventilated.**

### Machine location

If you locate your machine next to another appliance or an item of furniture, you should leave space between them to allow air to circulate.

### Levelling :

Use a spirit level to check that the ground is horizontal: the maximum allowable slope is 2° which gives a difference in height of about 1 cm across the width of the machine and 1.5 cm from front to rear.

### Moving the machine - using the castors :

If your machine is fitted with folding castors, it is easy to move. To extend the castors, move the lever at the bottom of the machine from right to left (Diagram D4).

The machine should not be used while standing on its two "front" castors : do not forget to return the lever to its original position.

## Connecting up your machine

see diagrams page B **D5-D6-D7**

### Cold water supply

Connect up the hose (Diagram D5) :

- connect one end to the union at the back of the machine;
- connect the other end to a tap fitted with a threaded end diameter 20 x 27 mm (3/4 BSP), not forgetting to insert the seal supplied in the bag of accessories (if you are using a self-piercing tap, the opening made should have a diameter of at least 6 mm).

Water inlet :

- **Minimum water pressure : 0.07 MPa or 0.7 bars**
- Maximum water pressure : 1 MPa or 10 bars

### Waste water drain

Connect up the drain hose, after fitting the hook supplied in the machine (Diagram D6) :

- either temporarily into a sink or bath
- or permanently to a ventilated siphon.

If your drain installation is not fitted with a ventilated siphon, ensure that the connection is not airtight. In order to avoid any build-up of waste water in the machine, we strongly recommend that an air gap be left between the drain hose of the machine and the drainpipe.

In these circumstances, the hooked end of the drain hose should be between 90 and 65 cm above the bottom of the machine.

*Note : make sure that the drain hose is securely attached to prevent it releasing in service and causing a flood.*

The waste water can be drained on to the ground, so long as the drain hose passes through a point between 90 and 65 cm higher than the bottom of the machine.

**For your own safety, please follow the following instructions**

### Power supply (Diagram D7)

- Before you connect the appliance, it is essential to check that its electrical characteristics are compatible with your installation (see details on the rating plate on the back of the appliance).
- The electrical installation must be compliant with current standards and the requirements of the Electrical Authorities in the country concerned, **especially as regards earthing** and installation in a bathroom.

**We cannot be held liable for any incident resulting from improper earthing of the machine.**

### Recommendations for the electrical installation of your machine.

- Do not use extension leads, adaptors or multiple plugs ;
- **Never** remove the earth connection ;
- The socket outlet must be readily accessible but out of the reach of children.

**If in doubt, get in touch with your installer**

**Your machine complies with European directives EEC/73/23 (electrical safety) and EEC/89/336 (electromagnetic compatibility), amended by directive EEC/93/68.**

(F)

## Guide des symboles

(GB)

## Symbols guide

(D)

## Zeichenerklärungen

(NL)

## Uitleg v/d symbolen

(I)

## Guida dei simboli

(PL)

## Lista symboli

(E)

## Guía de los símbolos

(P)
















## Tabela de símbolos

(GR)


## Οδηγός για τα σύμβολα

(RUS)


## Условные обозначения

				
COTON COTTON BAUMWOLLE KATOEN COTONE BAWEŁNA ALGODON ALGODÃO БАМБАКЕРА ХЛОПОК	ECONOMIQUE ECONOMY SPAR SPAAR ECONOMICO OSZCZĘDNE ECONOMICO ECO OIKONOMIKO ЭКОНОМИЧНЫЙ ЦИКЛ	COULEUR COLOUREDS BUNTWÄSCHE BONTWAS COLORATI KOLOROWE COLORES COR ΧΡΩΜΑΤΙΣΤΑ ЦВЕТНОЕ БЕЛЬЕ	SYNTHÉTIQUE SYNTHETICS SYNTHETIK SYNTHETISCH SINTHETICI SYNTETYCZNE SINTETICOS SINTÉTICA ΣΥΝΘΕΤΙΚΑ СИНТЕТИЧЕСКОЕ БЕЛЬЕ	DÉLICAT DELICATES FEINWÄSCHE FIJNE STOFFEN DELICATI DELIKATNE DELICADO DELICADA ΕΥΑΙΣΘΗΤΑ ТОНКОЕ БЕЛЬЕ
				
LAINÉ WOOL WOLLE WOL LANA WEŁNA LANA LĀ ΜΑΛΛΙΝΑ ШЕРСТЬ	LAINÉ Woolmark WOOL Woolmark WOLLE Woolmark WOL Woolmark LANA Woolmark WEŁNA Woolmark LANA Woolmark LĀ Woolmark ΜΑΛΛΙΝΑ Woolmark ШЕРСТЬ «Woolmark»	TRÈS SALE HEAVILY SOILED STARK VERSCHMUTZT ZEER VUIL MOLTO SPORCA TKANINY BARDZO BRUDNE MUY SUCIO MUITO SUJA ΠΟΛΥ ΛΕΡΩΜΕΝΑ ОЧЕНЬ ГРЯЗНОЕ БЕЛЬЕ	SALE SOILED NORMAL VERSCHMUTZT VUIL SPORCA TKANINY BRUDNE SUCIO SUJA ΛΕΡΩΜΕΝΑ ГРЯЗНОЕ БЕЛЬЕ	PEU SALE SLIGHTLY SOILED WEINIG VERSCHMUTZT WEINIG VUIL POCO SPORCA TKANINY LEKKO ZABRUDZONE POCO SUCIO POUCO SUJA ΛΙΓΟ ΛΕΡΩΜΕΝΑ МАЛО ГРЯЗНОЕ БЕЛЬЕ
				
FROID COLD KALT KOUĐ FREDDO NA ZIMNO FRIO FRIO КРΥО ХОЛОДНАЯ ВОДА	RINÇAGE RINSE SPÜLEN SPOELEN RISCIACQUO PŁUKANIE ACLARADO ENXAGUAGEM ΞΕΒΓΑΛΜΑ ПОЛОСКАНИЕ	ESSORAGE SPIN DRY SCHLEUDERN CENTRIFUGEREN CENTRIFUGA WIROWANIE CENTRIFUGADO CENTRIFUGAÇÃO ΣΤΥΨΙΜΟ ООТЖАТИЕ	ÉGOUTTAGE DRIP DRY SCHONSCHLEUDERN WATER AFPOMPEN SGOCCIOLLO ODWIROWANIE DELIKATNE ESCURRIMIENTO GOTA A GOTA ΑΠΑΛΟ ΣΤΥΨΙΜΟ СТЕКАНИЕ	VIDANGE DRAIN ABPUMPEN AFVOER SCARICO OPRÓŻNIANIE DESAGUE ESCOAMENTO ΕΚΚΕΝΩΣΗ СЛИВ


# D1

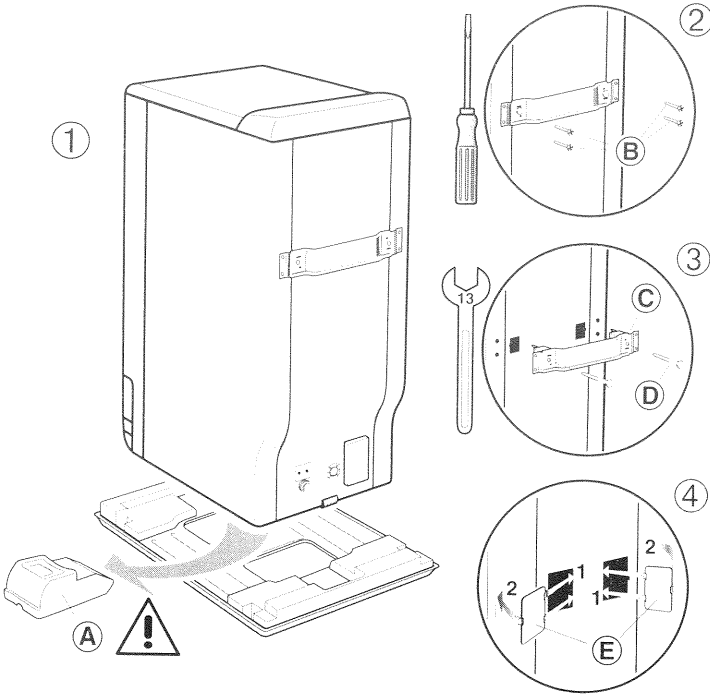


# D5

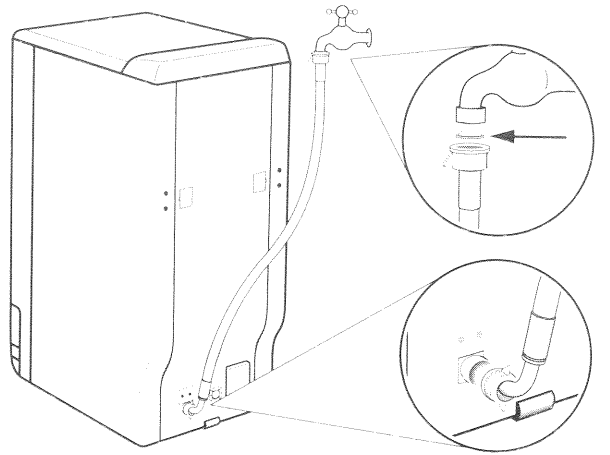



# D2

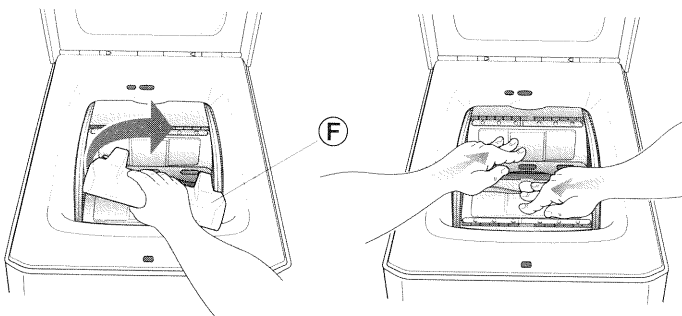


# D3

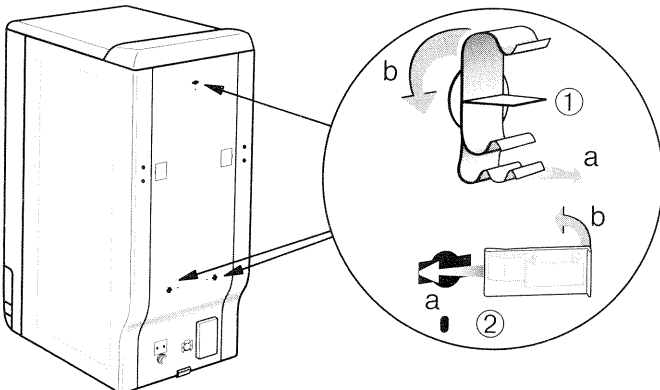


# D6

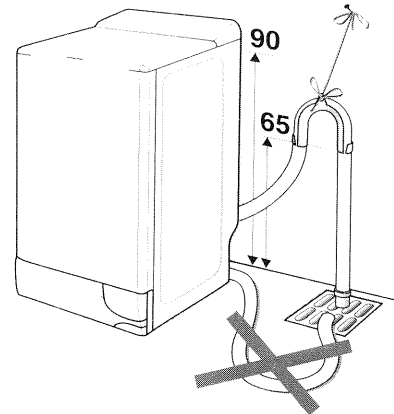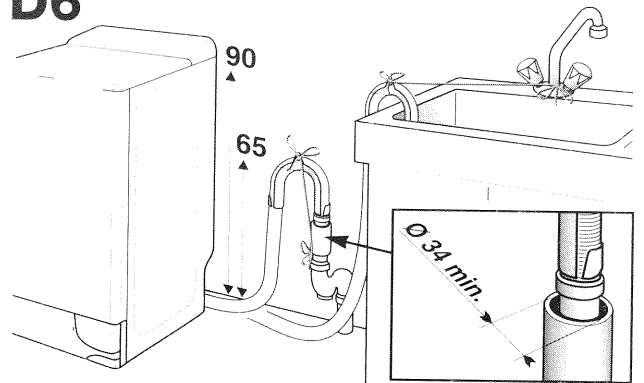

# D4

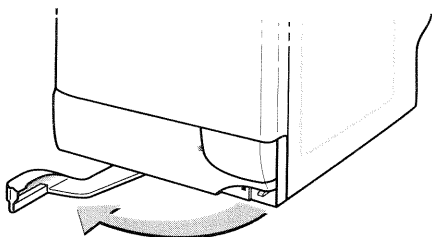


# D7

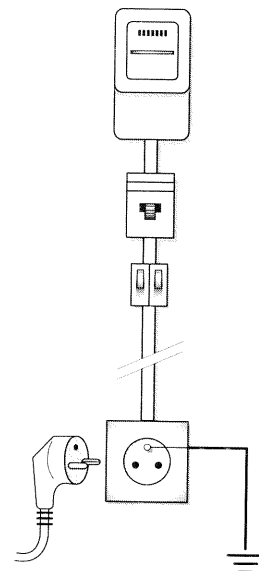







**D8**

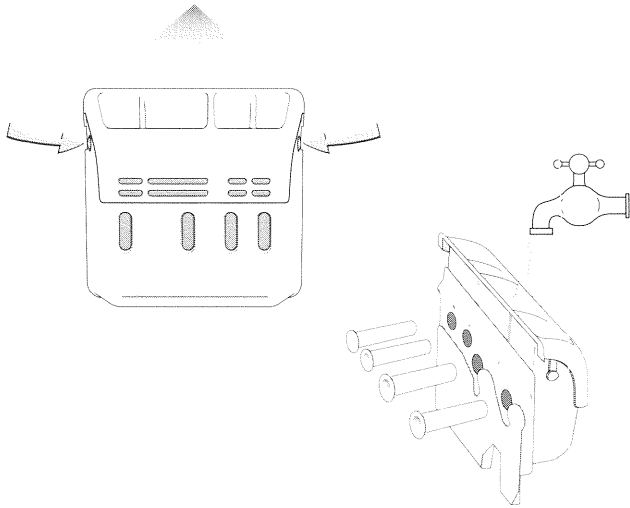


**D11**

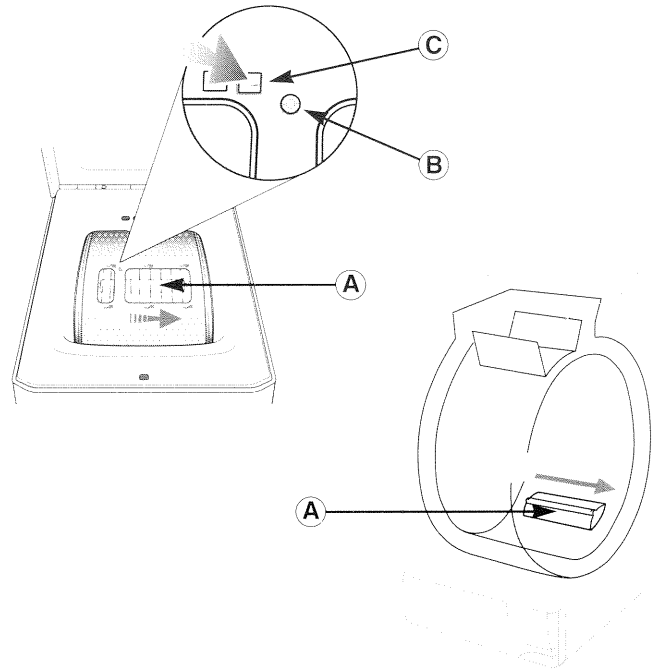


**D9**

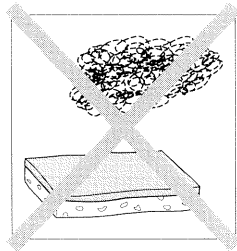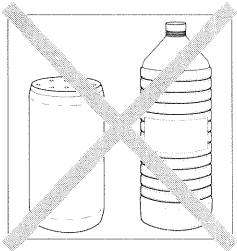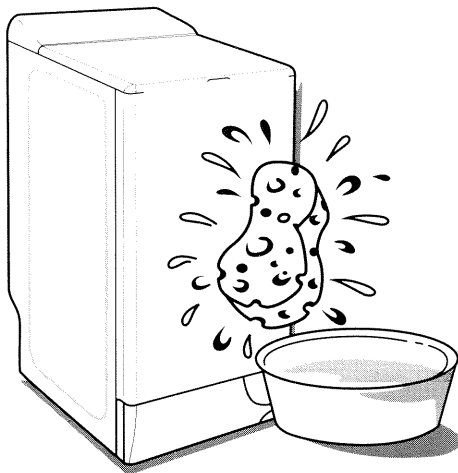


**D12**

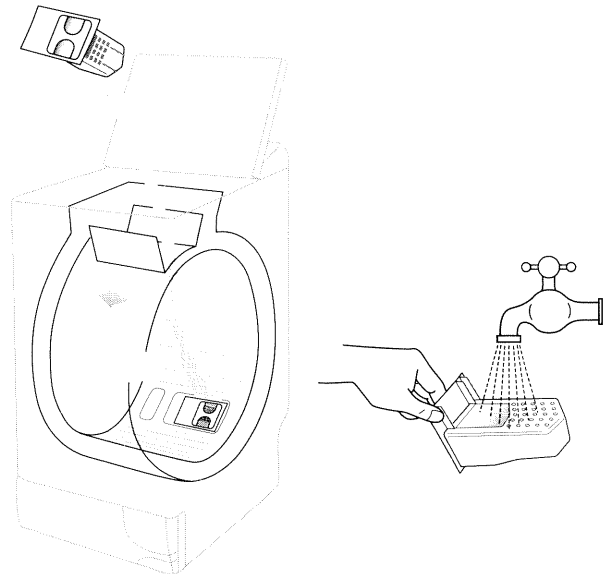

**D10**

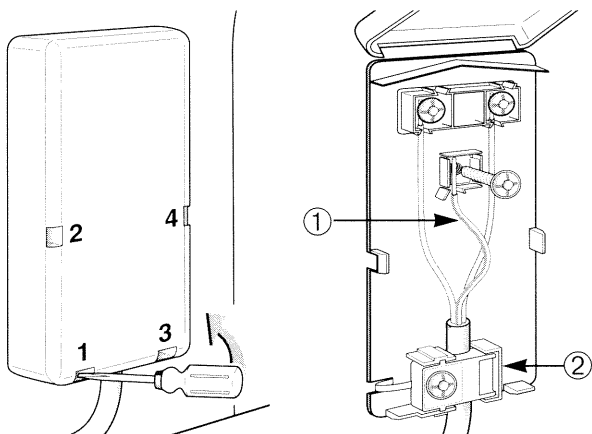

**D13**

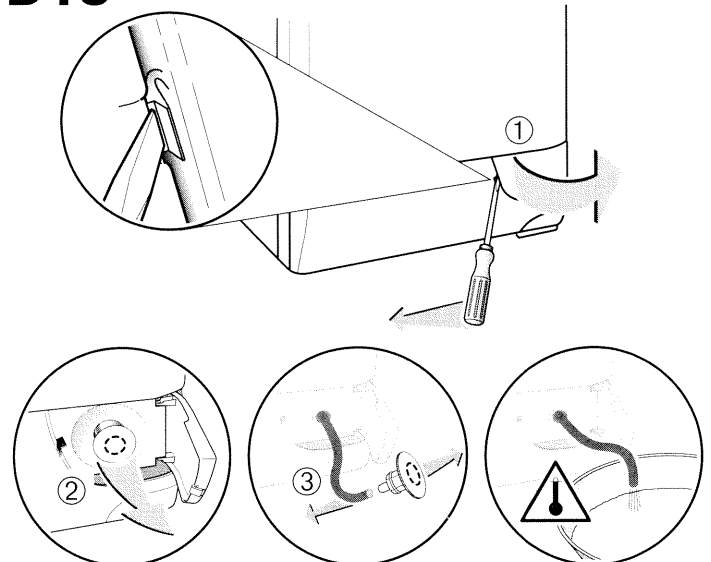

(F)

**Service après vente :**

Les éventuelles interventions sur votre appareil doivent être effectuées :

- soit par votre revendeur,
- soit par un autre professionnel qualifié dépositaire de la marque.

Lors de votre appel, mentionnez la référence complète de votre appareil (modèle, type et numéro de série). Ces renseignements figurent sur la plaque signalétique fixée au dos de l'appareil.

(GB)

**After Sales Service :**

Possible maintenance on your washing machine should be undertaken by :

- either your dealer,
- or another qualified mechanic who is an authorized agent for the brand appliances.

When making an appointment, state the complete reference of your equipment (model, type and serial number). This information appears on the manufacturer's nameplate attached to the rear of the equipment.

(D)

**Kundendienst :**

Eingriffe an Ihrem Gerät dürfen nur :

- von Ihrem Händler oder,
- von einem sonstigen Fachmann und Vertragshändler der Marke durchgeführt werden.

Geben Sie bei der Meldung einer Störung die vollständige Typenbezeichnung Ihres Gerätes an (Modell, typ, Seriennummer). Diese Angaben sind auf einem Schild auf der Hinterseite des Gerätes markiert.

(NL)

**Na koop service :**

De eventuele interventies in de machine moeten worden uitgevoerd :

- of door een verkoper,
- of door een andere professioneel van dit merk.

Tijdens het telefoneren, dient u de complete referentie op te geven van uw machine (model, type, serienummer). Deze informatie staat op het typeplaatje aan de achterkant van de machine.

(I)

**Servizio Assistenza :**

Gli interventi eventuali sul vostro apparecchio devono essere effettuati :

- sia dal rivenditore,
- sia da persone qualificate concessionarie della marca.

Quando si chiama il Servizio Assistenza, bisogna dare tutte le referenze dell'apparecchio (modello, tipo, numero di serie). Queste informazioni sono fornite sulla targhetta matricola applicata sulla parte posteriore dell'apparecchio.

(PL)

**Usługi konserwacyjno-naprawcze:**

Wszelkie czynności konserwacyjno-naprawcze mają być wykonywane wyłącznie przez:

- waszego sprzedawcę,
- wyspecjalizowany zakład naprawczy posiadający atest producenta

Aby przyspieszyć i ułatwić obsługę prosimy o podanie dokładnych danych dotyczących sprzętu (model, typ i numer serii). Wszystkie te dane znajdują się na płytce informacyjnej z tyłu sprzętu.

(E)

**Servicio postventa :**

Las intervenciones que requiera la lavadora deberán ser efectuadas :

- por el revendedor,
- o por cualquier profesional cualificado depositario de la marca.

Al llamar, indique la referencia completa de la máquina (modelo, tipo, número de serie). Estos datos figuran en la placa de identificación situada en la parte trasera de la máquina.

(P)

**Serviços autorizados :**

Qualquer intervenção na sua máquina de lavar deve ser realizada :

- quer pelo seu revendedor,
- quer por um outro profissional qualificado autorizado pela marca.

Ao chamá-los, indique a referência completa de sua máquina (o modelo, o tipo, o número da série). Estas informações figuram na placa de identificação fixada atrás da máquina .

(GR)

**Τεχνική υποστήριξη:**

Οι ενδεχόμενες επεμβάσεις στο πλυντήριο σας θα πρέπει να διενεργηθούν μόνο από το κατά τόπους εξουσιοδοτημένο σέρβις.

Σε περίπτωση που τηλεφωνήσετε, θα πρέπει να αναφέρετε όλα τα στοιχεία του πλυντηρίου σας (μοντέλο, τύπο και αριθμό σειράς). Τα στοιχεία αυτά αναγράφονται στην πινακίδα μητρώου που βρίσκεται στην πλάτη του πλυντηρίου σας.

(RUS)

**Сервисное обслуживание:**

Необходимый ремонт Вашей машины должен производиться:

- либо тем, кто продал ее Вам
- либо квалифицированным специалистом по данной марке изделий.

При вызове ремонтной службы необходимо указать полный номер Вашей машины (модель, тип и серийный номер). Эти сведения приведены на номерном щитке сзади машины.