

## DVD1940CI/1940/1740/758/558 Wireless Remote Controller IR Data

## FORMAT SHARP

DATA CONSTRUCTION 15bits, C14=0, C15 0=NOT INVERTED, 1=INVERTED

key title	CH	C1	C2	C3	C4	C5	C6	C7	C8	C9	C10	C11	C12	C13
POWER ON	49	0	0	0	1	0	1	0	0	0	1	1	0	1
POWER OFF	75	0	1	1	0	0	0	0	0	0	0	0	1	1
MODE	28	0	0	0	1	0	0	0	1	1	1	0	0	1
OPEN/CLOSE	16	0	0	0	1	0	0	0	0	0	1	0	0	1
A-B REPEAT	58	0	0	0	1	0	0	1	0	1	1	1	0	1
1	2	0	0	0	1	0	0	1	0	0	0	0	0	1
2	3	0	0	0	1	0	1	1	0	0	0	0	0	1
3	4	0	0	0	1	0	0	0	1	0	0	0	0	1
REPEAT	20	0	0	0	1	0	0	0	1	0	1	0	0	1
4	5	0	0	0	1	0	1	0	1	0	0	0	0	1
5	6	0	0	0	1	0	0	1	1	0	0	0	0	1
6	7	0	0	0	1	0	1	1	1	0	0	0	0	1
RANDOM	42	0	0	0	1	0	0	1	0	1	0	1	0	1
7	8	0	0	0	1	0	0	0	0	1	0	0	0	1
8	9	0	0	0	1	0	1	0	0	1	0	0	0	1
9	10	0	0	0	1	0	0	1	0	1	0	0	0	1
ZOOM	66	0	0	1	0	0	1	1	1	1	1	0	0	1
CLEAR	35	0	0	0	1	0	1	1	0	0	0	1	0	1
0	1	0	0	0	1	0	1	0	0	0	0	0	0	1
+10	12	0	0	0	1	0	0	0	1	1	0	0	0	1
ANGLE	15	0	0	0	1	0	1	1	1	1	0	0	0	1
SUBTITLE	13	0	0	0	1	0	1	0	1	1	0	0	0	1
AUDIO	14	0	0	0	1	0	0	1	1	1	0	0	0	1
DISPLAY	39	0	0	0	1	0	1	1	1	0	0	1	0	1
MENU	17	0	0	0	1	0	1	0	0	0	1	0	0	1
TOP MENU	61	0	0	0	1	0	1	0	1	1	1	1	0	1
▲	44	0	0	0	1	0	0	0	1	1	0	1	0	1
◀	47	0	0	0	1	0	1	1	1	1	0	1	0	1
ENTER	59	0	0	0	1	0	1	1	0	1	1	1	0	1
▶	46	0	0	0	1	0	0	1	1	1	0	1	0	1
▼	45	0	0	0	1	0	1	0	1	1	0	1	0	1
RETURN	18	0	0	0	1	0	0	1	0	0	1	0	0	1
SETUP	60	0	0	0	1	0	0	0	1	1	1	1	0	1
DISC SKIP	43	0	0	0	1	0	1	1	0	1	0	1	0	1
DISC1	36	0	0	0	1	0	0	0	1	0	0	1	0	1
DISC2	37	0	0	0	1	0	1	0	1	0	0	1	0	1
DISC3	38	0	0	0	1	0	0	1	1	0	0	1	0	1
DISC4	40	0	0	0	1	0	0	0	0	1	0	1	0	1
DISC5	41	0	0	0	1	0	1	0	0	1	0	1	0	1
SEARCH MODE	65	0	0	1	0	0	0	1	1	1	1	0	0	1
SKIP<<	25	0	0	0	1	0	1	0	0	1	1	0	0	1
SKIP>>	24	0	0	0	1	0	0	0	0	1	1	0	0	1
DISC EXCHANGE	58	0	1	1	0	0	0	1	0	1	1	1	1	1
STOP	33	0	0	0	1	0	1	0	0	0	0	1	0	1
PLAY	32	0	0	0	1	0	0	0	0	0	0	1	0	1
<<	27	0	0	0	1	0	1	1	0	1	1	0	0	1
>>	26	0	0	0	1	0	0	1	0	1	1	0	0	1
STILL/PAUSE	29	0	0	0	1	0	1	0	1	1	1	0	0	1
GROUP	63	0	1	1	0	0	1	1	1	1	1	1	1	1
PAGE+	73	0	1	1	0	0	0	1	1	1	1	1	1	1
SUPER AUDIO CD SETU	62	0	0	0	1	0	0	1	1	1	1	1	1	0
PAGE-	72	0	1	1	0	0	1	0	1	1	1	1	1	1