



**7 607 621 139 (Für Interface 7 607 586 510/511)**

- (D) Bedienungsanleitung für das Fahrzeugspezifische Adapterkabel 7 607 621 139 an die Renault-Lenkradfernbedienung.**
- (GB) Operating instructions of the vehicle-specific adapter cable 7 607 621 139 to the Renault steering wheel remote control.**
- (F) Mode d'emploi pour le câble d'adaptation spécifique au véhicule 7 607 621 139 à la télécommande au volant Renault.**
- (I) Istruzioni d'uso per il cavo di adattamento 7 607 621 139, con caratteristiche specifiche a seconda dell'autovettura, da allacciare al telecomando su volante.**
- (NL) Gebruiksaanwijzing van de modelspecifieke adapterkabel 7 607 621 139 op de Renault-stuurwielafstandsbediening.**
- (S) Bruksanvisning för den fordonsspecifika adapterkabeln 7 607 621 139 till rattfjärrstyrningen Renault.**
- (E) Instrucciones de manejo del cable adapter 7 607 621 139 específico al vehículo al mando a distancia del volante.**
- (P) Instrução de serviço para o cabo de adaptação específico para o tipo de automóvel 7 607 621 139 ao telecomando de volante da.**

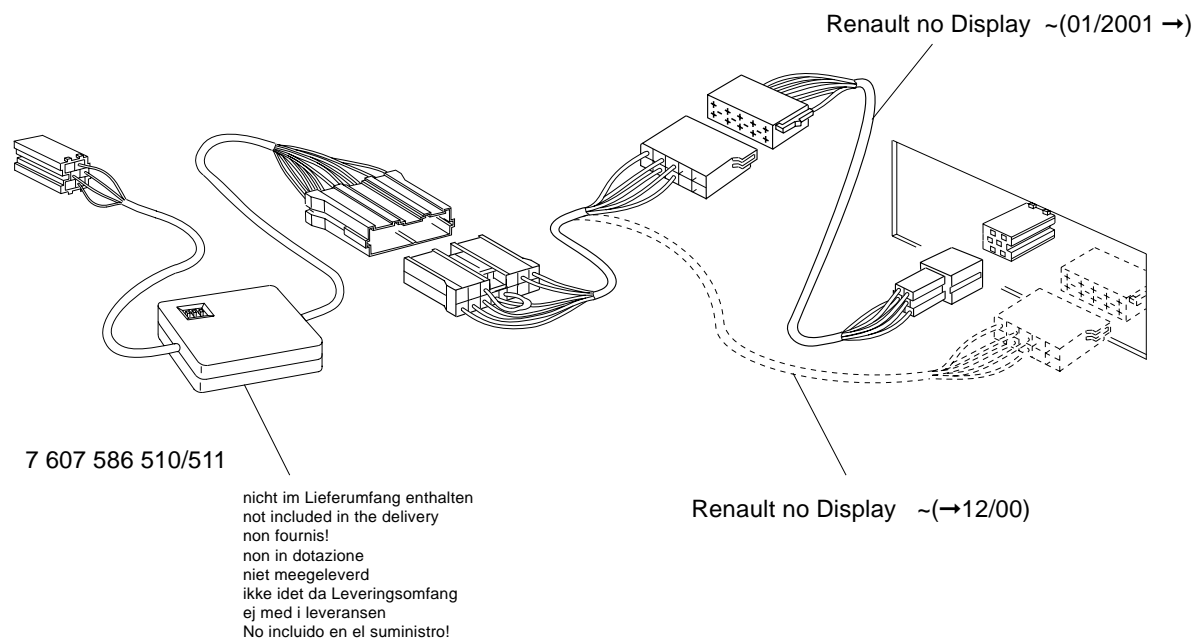

## Funktionstabelle für Renault Mégane Scénic, Clio, Kangoo, Twingo ohne sep. Display

	Radiotyp:	1	2	3	4	5	Radiotyp:	1	2	3	4	5	Radiotyp:	1	2	3	4	5	Radiotyp:	1	2	3	4	5	Radiotyp:	3	
<b>RC-Button</b>	<b>Tuner</b>						<b>CC</b>						<b>CD</b>						<b>CDC</b>						<b>Phone</b>		
Source	SRC	x	x	x	x	x	SRC	x	x	x	x		SRC	x	x		x	x	SRC					x	x		
Source >2s	CD-Eject	*	*										CD-Eject	x	x				Navi						x		
Source >2s	Scan				x								CD-Scan				x		CD-Scan					x			
<del>x</del>	Mute	x	x		x	x	Mute	x	x		x		Mute	x	x		x	x	Mute		x			x	x		
<del>x</del>	Phone			x			Phone				x								Phone			x				Phone	x
<del>x</del> >2s	prog. Mute Lautstärke	x	*				prog. Mute Lautstärke						CD-Pause	x			x		CD-Pause					x			
<del>x</del> >2s	Telephone off			x			Telephone off				x		prog. Mute Lautstärke	x					Telephone off			x					
VOL +	VOL +	x	x	x	x	x	VOL +	x	x	x	x		VOL +	x	x		x	x	VOL +		x	x	x	x		VOL +	x
VOL -	VOL -	x	x	x	x	x	VOL -	x	x	x	x		VOL -	x	x		x	x	VOL -		x	x	x	x		VOL -	x
Search <1s	Search next	x	x	x	x		SCPS +	x	x	x	x		Track up	x	x		x		Track up		x	x		x			
Search <1s	Band Selection					x													CD up					x			
Search >2s	Search previous	x	x	x	x		SCPS -	x	x	x	x		Track down						Track down						x		
Search >2s	Preset +					x													CD down					x			
Rotary switch ↓	Preset +	x	x	x	x		FF	x	x	x	x		Cue	x					CD up		x	x				short code alpha	x
Rotary switch ↓	Blättern/man.SL					x							Track up					x	Track up					x			
Rotary switch ↑	Band Selection	x	x	x	x		FR	x	x	x	x		Review	x					CD down		x						
Rotary switch ↑	Blättern/man.SL					x							Track down					x	Track down					x			

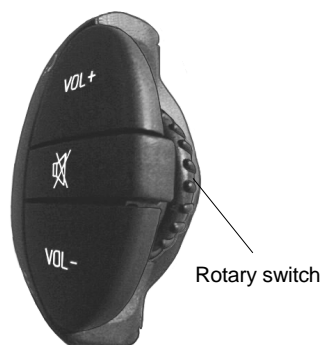

Rotary switch

### Radiotyp 1

Barcelona RCM 104 A, Hamburg RCM 104, Heidelberg RCM 126, Frankfurt RCM 104, Köln RCM 126, Las Vegas DJ, London RDM 104/RDM 126, Mailand DJ, Madrid DJ, Madrid RCM 105, München RDM 126, Orlando DJ, Paris RCM 104, Stockholm RCM 104/RCM 126/RCM 128, San Francisco RDM 127, Sydney RCM 126/RCM 128, Toronto RDM 126/RDM 128, Washington RCM 127.

### Radiotyp 2

Arizona RCM 127, Avignon RCM 127, Bergamo RCR 148, Cannes RCM 127, Casablanca RCM 127, Coburg RCM 127, Como RCM 148, Düsseldorf RCM 127, Hamburg RCM 148, Los Angeles DJ, Madrid RCM 148, Melbourne RCM 148, Miami DJ, Modena RD 148, Montana RCR 148, New Orleans DJ, Paris RCM 127, Texas RCM 148, Viking TMC 148, Wiesbaden RCR 148, Woodstock DJ.

### Radiotyp 3

Amsterdam TCM 127  
Helsinki RTM 127  
Gemini GPS 148  
Monte Carlo TCM 169

### Radiotyp 4

Generation Skyline  
Generation FunLine

### Radiotyp 5

TravelPilot RNS 149  
TravelPilot RNS 150

### Hinweise:

\* (D) Funktion ist geräteabhängig; (GB) Function depends on system; (F) La fonction dépend de l'appareil; (I) La funzione dipende dal tipo di apparecchio; (NL) De werking is afhankelijk van het soortapparaat; (S) Funktionen beror av utrustningen; (P) A função depende do aparelho; (E) Función depende del sistema.