

Panasonic®

FM-AM 2-BAND STEREO HEADPHONE RECEIVER

RF-H7

Operating Instructions



Before operating or adjusting this product, please read these instructions completely. Please save this manual.

P

Caution:

To avoid product damage, do not expose this product to rain, water or other liquids.

Matsushita Consumer Electronics Company,
Division of Matsushita Electric Corporation
of America

One Panasonic Way Secaucus, New Jersey 07094

Panasonic Sales Company, Division of
Matsushita Electric of Puerto Rico, Inc. ("PSC")
Ave. 55 de Indiferencia, Km. 3.5 San Gabriel Industrial Park,
Carolina, Puerto Rico 00983

RCT3585-P
R0296D0 (D)

Printed in China

Cautions

Avoid using or placing this unit near sources of heat. Do not leave it in an automobile exposed to direct sunlight for a long period of time with the doors and windows closed, as this may deform the cabinet.

If the set is not used for a long period of time, remove all the batteries to prevent potential damage due to possible battery leakage.

Listening caution



Do not play your headphones or earphones at a high volume. Hearing experts advise against continuous extended play.

If you experience ringing in your ears, reduce volume and discontinue use.

Do not use while operating a motorized vehicle. It may create a traffic hazard and is illegal in many areas.

You should use extreme caution or temporarily discontinue use in potentially hazardous situations.

Even if your headphones or earphones is an open-air type designed to let you hear outside sounds, don't turn up the volume so high that you can't hear what's around you.

Sound can be deceiving. Over time your hearing "comfort level" adapts to higher volumes of sound. So what sounds "normal" can actually be loud and harmful to your hearing. Guard against this by setting your equipment at a safe level BEFORE your hearing adapts. To establish a safe level:

- Start your volume control at a low setting
- Slowly increase the sound until you can hear it comfortably and clearly and without distortion.

Once you have established a comfortable sound level:

- Set the dial and leave it there.

Maintenance

Do not clean the plastic cabinet with benzine or thinner. Clean it with a cloth, dampened in a mild solution of soap and water.

Avoid spray aerosol type cleaner. Some cleaners contain corrosive chemicals that may cause internal damage and cabinet deformation.

Product Service

Do not attempt to remove the cover(s) or repair the unit yourself. Refer servicing to qualified personnel only.

Product information

For product service, product information or assistance with product operation, refer to the serviceman directory.

Technical Specifications

Frequency range:	
FM:	88-108 MHz
AM:	525-1710 kHz
Antennas:	
FM:	Built-in headband antenna
AM:	Built-in ferris antenna
Power requirement:	DC 5V (Two AA size (R6LR6) batteries)
	• Do not use rechargeable type batteries.
Weight:	143 g (5.1 oz.) without batteries

Note:
Specifications are subject to change without notice.
Weight is approximate.

CAUTION:

Any unauthorized changes or modifications to this equipment would void the users authority to operate this device.

Matsushita Consumer Electronics Company
Division of Matsushita Electric Corporation of America
One Panasonic Way, Secaucus
New Jersey 07094

ONLY FOR U.S.A.

PANASONIC SALES COMPANY, Division of
MATSUSHITA ELECTRIC OF PUERTO RICO, INC. ("PSC")
Ave. 55 de Indiferencia, Km. 3.5
San Gabriel Industrial Park,
Carolina, Puerto Rico 00983
Tel. (809) 750-4300
FAX: (809) 750-2910

Panasonic Limited Warranty

Matsushita Consumer Electronics Company or Panasonic Sales Company collectively referred to as "the warrantors" will repair or replace with new or refurbished parts, free of charge, in the U.S.A. or Puerto Rico, from the date of original purchase, in the event of a defect in materials or workmanship as follows:

For one (1) year—Radio, Clock Radio, Radio with Tape Player or Recorder.

For two (2) days—Batteries—unless applicable—your rechargeable batteries, in exchange for defective rechargeable batteries. Non-rechargeable batteries are not warranted.

For assistance in the U.S.A. in obtaining repairs contact:

Matsushita Service Company
Panasonic PLUS Department
2525 Gilmer Avenue South
Knox, TN 37922
Phone: 1-800-853-0425
FAX: 1-800-837-9050

or:

If repair is needed during the warranty period the purchase will be replaced for an in a series of replacement of 3 if purchase indicating date of purchase.

Also, the purchaser will be responsible for shipping the unit to the above address. This warranty is extended only to the original purchaser.

For assistance in Puerto Rico contact, Panasonic Sales Company at the address or telephone number above.

LIMITS AND EXCLUSIONS

There are no express warranties shown as listed above. THE WARRANTY SHALL NOT BE USED FOR ANY DEFECT OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR PARTS AS OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING WITHOUT LIMITATION, DAMAGE TO TAPES, RECORDS OR DISCS, ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE WARRANTIES OF MERCHANTABILITY, ARE LIMITED TO THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE. Some states do not allow the exclusion or limitation of incidental or consequential damages or limitations on the length of implied warranty, so the above exclusions or limitations may not apply to you.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

If a problem with this product develops during or after the warranty period, you may contact your dealer or Panasonic PLUS Dept. In the absence of a dealer, you should contact the address in the Customer Satisfaction Order or the company address above or call 800-853-0425.


Power Source

Insert two AA size (R6/LR6 or equivalent, not included) batteries.

- Batteries installed with incorrect polarities may leak and damage this unit.
- Replace with fresh batteries of the same kind, observing correct polarity.
- Do not use rechargeable type batteries.

Battery life

When the batteries are weak, the sound will become distorted, and the volume will decrease.

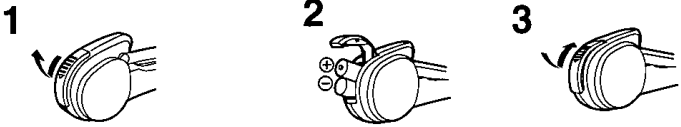


Radio Operation

Headband
Adjust it to fit your head.

Support band

Before putting on the receiver, pull out the support band fully from the headband. Then adjust it to fit your head.

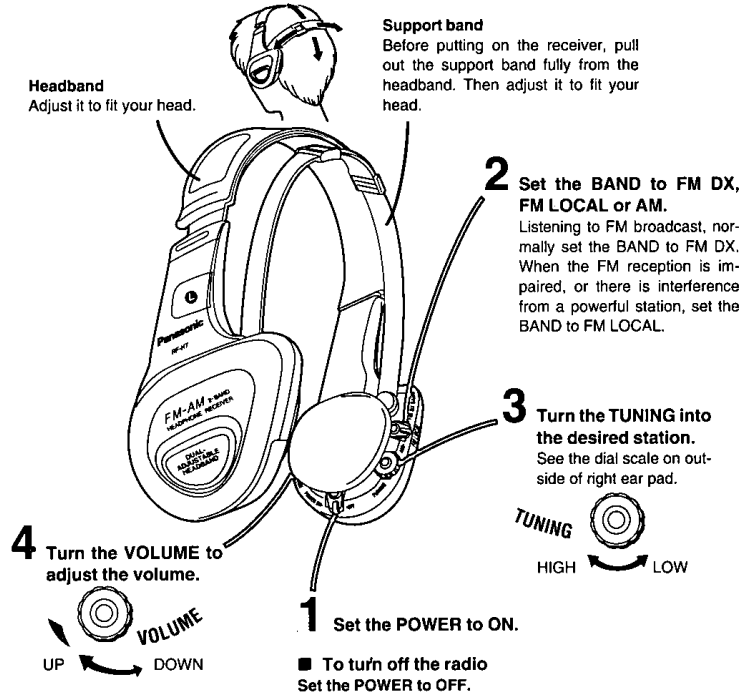

Troubleshooting Guide

Before requesting service for this unit, check the chart below for a possible cause of the problem you are experiencing. Some simple checks or a minor adjustment on your part may eliminate the problem and restore proper operation.

If you are in doubt about some of the check points, or if the remedies indicated in the chart do not solve the problem, refer to the directory of Authorized Service Centers (enclosed with this unit) to locate a convenient service center, or consult your dealer for instructions.

(In U.S.A. consult MSC Authorized Servicenters for detailed instructions or call 1-800-545-2672 for the address of an authorized factory servicenter.)

Problem	Checkpoint	Remedy
No operation.	The batteries are installed in the reverse polarity.	Re-insert the batteries observing the correct polarity.
No sound.	The batteries are worn out.	Replace the batteries with new batteries.

User memo:

DATE OF PURCHASE _____
 DEALER NAME _____
 DEALER ADDRESS _____
 TELEPHONE NUMBER _____

If you ship the product

Carefully pack and send it prepaid, adequately insured and preferably in the original carton. Attach a letter, detailing the complaint, to the outside of the carton.

Do NOT send the product to the Executive or Regional Sales offices. They are NOT equipped to make repairs.

Customer's Record

Model No. _____
 Serial No. _____
 or
 Code No. _____
 Date of Purchase _____
 Dealer's Name _____
 Dealer's Address _____