

QUICK INSTALLATION GUIDE



TwinBox 430

TABLE OF CONTENTS

	5
FUNCTIONS	5
MAIN FEATURES	5
DESCRIPTION OF REMOTE CONTROL	6
BEFORE STARTING	8
FRONT VIEW	8
REAR VIEW	8
CONNECT TWINBOX 430 TO YOUR TV	9
INSTALL THE DVBT CHANNELS	10
VIEW AND RECORD DVBT CHANNELS	12
VIEWING DVBT CHANNELS	12
LIVE RECORDING	12
SCHEDULED RECORDING	14
USE OF STORAGE DEVICE	16
ENJOY THE MULTIMEDIA WORLD	17
SETTINGS	18
DISPLAY AND LANGUAGE	18
NETWORK	19
TECHNICAL SUPPORT	22
WARRANTY REGISTRATION	22
GUARANTEE CONDITIONS	23
SECURITY INFORMATION	23
GENERAL	24
SAFETY	24
PRODUCT'S POWER SUPPLY	24
PLACING OF THE PRODUCT	24
CLEANING	24
IMPORTANT HINT	25
SAFETY-ENVIRONMENT	25

INTRODUCTION

The TwinBox 430 allows you to receive the free DVBT channels, including the high definition channels (HD) and to record them. DVBT Records (live, scheduled or deferred) are done on the USB storage (hard drive or USB key).

FUNCTIONS

- Connect to the wall antenna socket; you can view DVBT channels and HD DVBT channels.

- Connect an USB device (external hard drive or USB key) to be able to record DVBT and HD DVBT programs.

MAIN FEATURES

- Dual Tuner DVBT/ HD DVBT.
- USB Host Connections (x2).
- Video Connections: Composite, YPbPr and HDMI.
- Audio Connection: Coaxial.
- Power supply: 100V 240V.
- Supported formats Video: Avi, Xvid HD, MPEG HD, MKV, WMV HD, RMVB and VOB
 - Audio: MP3, WMA, AAC, WAV, OGG, AC3, DDP, TrueHD, DTS, DTS HD,

FLAC and APE

- Photo: HD JPEG, BMP, GIF, PNG and TIFF

DESCRIPTION OF REMOTE CONTROL



Remote control 1


Remote control 2

Remote control 1: Corresponds to the real remote control. **Remote control 2:** Corresponds to the numeration of the remote control's keys.

No	KEY		FUNCTION
1	STANDBY	ڻ ا	Power on / off (standby) the TwinBox 430.
2	MUTE	×	Enable / disable the sound (mute).
3	NUMERIC KEYS	09	0-9
4	GOTO	•0	Allows going to a specific point of the video file (Time).
5	INFO	i	Displays the information of the selected file.
6	RED		Option key.
7	GREEN		Option key.
8	YELLOW		Option key.
9	BLUE		Option key.
10	VOL+/VOL-	VOL+ VOL-	Increase / decrease the volume.
11	TIMESHIFT		Enables the "TIMESHIFT".
12	TIMER	ි	Allows direct access to the programming page.
13	REC		Allows to records the program being viewed.
14	STOP		Stop playing the media.
15	AUDIO		Allows selecting the audio track.
16	ТТХ		Enable / disable Teletext function
17	SUBTITLE		Enable / disable the display of subtitles.
18	EPG		Allows displaying the EPG screen (Electronic Program Guide).
	DIRECTIONA	0	Switches between the various files and folders.
	L KEYS		"♠͡ᠠᡧ"keys allows to change channels, ♠ =CH +, ♥ =CH –
19			Play or pause playback of multimedia files.
13	CONFIRM	ENTER	Allows to validate your choice and to see the list of DVBT
			channels.
20	EXIT	~	Exits / return to the previous page.
21	HOME		Allows direct access to the main page.
22	PREVIEW	144	 Return to previous page when you browse media files. Returns to the previous file when playing media files.
23	FR/FR	•	Rewind the media file with a read speed of 2x, 4x, 8x
24		>>	Fast forward the media file with a read speed of 2x, 4x, 8x
25	NEXT	I	1. Go to next page when you browse media files.
			2. Go to the next file during when playing media files.
26	SLOW		Enables slow motion while viewing a video file.
27	ZOOM	Į Į	Enlarge photo or video.
			1. Video and Music: Repeats the current file or repeat all files
28	REPEAT		in the directory or cancel the repeat function.
20		(da)	2. Photo: Repeats the background music.
29	A-B	C	Allows setting a point "A" and "B" to enable the repetition of the sequence.
30	SETUP	TI	Allows direct access to the configuration page.
31	OPTION	*	Displays the list of options in the browser
32	4:3/16:9	0	Allows toggling the display mode between 4:3 PS, 4:3 LB and 16:9.
33	VIDEO OUT	Ð	Allows toggling between video displays modes.
	•		

BEFORE STARTING

FRONT VIEW

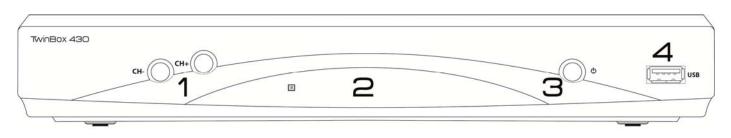

- 1. -/CH CH +: To change channel.
- 2. VFD DISPLAY: To display hour or the time of the film.
 - **INFRARED RECEIVER:** To receive the signal from the remote control.
- 3. POWER: Allows to put the TwinBox 430 in the standby mode.


4. **USB HOST**: To record your programs and read the contents of your USB devices (USB keys, external hard drives ...).


REAR VIEW

		8
(\mathcal{A})		
	ANT IN ANT OUT VIDEO L AUDIO R COAXIAL D HDMI LAN USB	~110-240V 50/60Hz

- 1. **ANTENNA IN:** To connect an antenna cable from the wall outlet to TwinBox 430. **ANTENNA OUT:** To connect an antenna cable from the TwinBox 430 to the TV.
- ANTENNA OUT: To connect an antenna cable from the TwinBox 430 to
- 2. Y / Pb / Pr: To connect an YUV cable to your TV.
- 3. AV OUT: To Connect the AV cable (from the TwinBox 430 to your TV).
- 4. **COAXIAL:** To connect a S-PDIF coaxial cable.
- 5. HDMI: To connect the HDMI cable to your TV.
- 6. LAN: To connect a network cable.
- 7. USB HOST: To read the contents of your USB devices (USB keys, external hard drives ...).
- 8. AC: To connect the TwinBox 430 to the wall socket.

CONNECT TWINBOX 430 TO YOUR TV

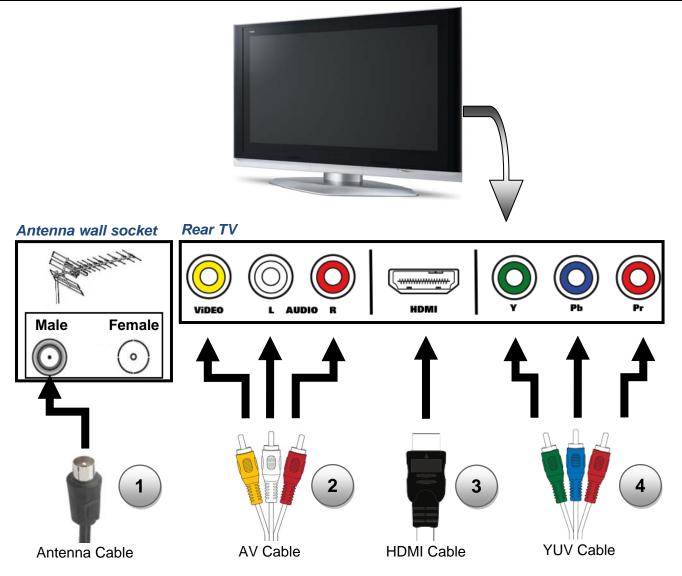

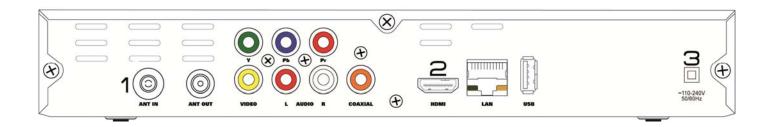

1. Connect your TwinBox 430 to the wall antenna socket to enjoy the DVBT and HD DVBT channels.

2. Connect TwinBox 430 to the TV using the AV cable (depending on your configuration).

3. Connect the power cord into your wall power socket.

INSTALL THE DVBT CHANNELS

Press "HOME" on the remote control and select "Setup" by pressing "ENTER".

1. Select "REC".

Setu	p
	System
	Audio
	Video
	REC
	Network
- 1 (MISC
	Press 🚧 or 🔛 to switch category.

2. Choose the geographic area that corresponds to your position.

RE	C	
	TV Region	France
	Time	/
	Channel Scan	
	Channel Set	
	REC Device	USB
	REC priority	Manual REC
		Press 树 or 눩 to switch category.

3. Select "Channel Scan" and then press ENTER. Select "Auto Scan" and press ENTER.

	REC	
N STR.	TV Region	Portugal
	Time	, si tagai
	Channel Scar	1
	Channel Set	
	REC Device	USB
	REC priority	Manual REC
		Press 🚧 or 🔛 to switch category.

AUTO SCAN: To scan and automatically install the DVBT channels. **MANUAL SCAN:** To manually scan and install the DVBT channels.

BALA	VAGE ALL	
	BALAYAGE AUTO est balayée :22 Trouvé :11 Annuler	

This progressing bar should appear.

4. Once the channels scan is complete, press **ENTER**.

VIEW AND RECORD DVBT CHANNELS

VIEWING DVBT CHANNELS

1. Select "DTV".



- Use "***" to change channels.
- Press ***** to display the signal strength.
- Press "-" to change the subtitles.
- Press "
 to display the Electronic Program Guide.

LIVE RECORDING

To be able to record DVBT / HD DVBT channels, you must have previously connected an USB device to the TwinBox 430.

1. Select "DTV".



2. Select the desired channel for recording, using the "*** keys or press "ENTER" to display the channel list.

3. Press 🖤 on your remote control to start recording.



4. Press To stop recording the current program.



HINT: Records are stored directly on the device connected (USB or external hard drive) in the "**REC**" folder at the root of the device.

You can record one channel and watch another simultaneously, simply proceed in the same way as for normal viewing of a channel.

To schedule a record, you must first press "Timer" on the remote control. The TIMER interface will appear.



1. Press "RED" on your remote control to enter the interface below and add a scheduled program.

Cycle Une fois Dim Lun Mar Mer Jeu Ven S			Ú.	Sél	ectionne	er le prog	ramme de	planif
		Une fois Dim	Lun	O Cycle				Sam
Source ANNEE MOIS JOUR Commencer fin	Source	ANNEE	MOIS	JOUR	Comm	encer		

- 1.1. Select the recording source.
- 1.2. Select the recording date.
- 1.3. Select the start time of the record.
- 1.4. Select the end time of the record.
- 1.5. To select the recording repeat frequency, press "RED" on your remote control.
 - Once
 - From Monday to Friday

- Everyday

- From Monday to Saturday

- Sunday
- Tuesday - Thursday

- Monday
- Wednesday

- Saturday

- Friday

2. Select the recording device.

3. Press **ENTER**, a confirmation message will appear. If the settings are right for you, select "**Confirm**" and press **ENTER**.



HINT: You can record one channel and watch another simultaneously, simply proceed in the same way as for normal viewing of a channel.


USE OF STORAGE DEVICE

The TwinBox 430 is equipped with two USB HOST ports that allow you to connect an USB key or an external hard drive to the TwinBox 430, to browse it and thus read the multimedia content stored in.

1. Select "File Manager" and then press ENTER.



2. Select your storage device and press "ENTER", select the file you want to view and press "ENTER".

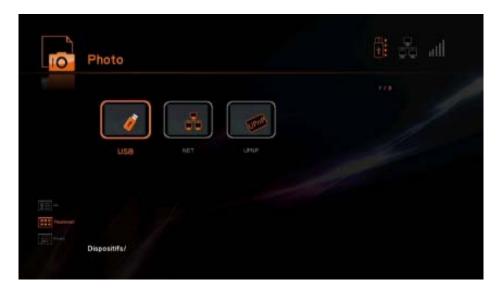

ENJOY THE MULTIMEDIA WORLD

1. Select "File Manager" on the homepage.



2. Select your STOREX server that appears in the list by pressing "ENTER", and select the folder you want to browse or the file you want to read.





3. Enjoy the Multimedia world!

SETTINGS

DISPLAY AND LANGUAGE

- 1. Turn on your TwinBox 430.
- 2. After startup, select "Setup" to configure your TwinBox 430.



3. Select "VIDEO" and then select "TV System" to select the display resolution.



4. Select "SYSTEM" and then select "MENU LANGUAGE" to change the language.

Se Se	etup	System	
	System	Menu Language	English
	Audio	Text Encoding	
	Video	R/RW Auto-Play	
	REC		Off
	Network	Scan storage	
	MISC		

NETWORK

HINT: The WiFi key is an option of the TwinBox 430, please contact your distributor or visit the website http://www.e-storex.com to acquire a compatible WiFi key.

Connect the WiFi USB device (optional) on one of the USB HOST ports at the back of the unit.

The WiFi wireless Network is available only if the WiFi USB device is connected to the unit and your WiFi router is activated.

1. Select the type of network you wish to connect to your home network.



2. Select "LAN SETTING" to connect with wired networking. Press ENTER and then select OK to set your wired connection.

- 3. If you wish to have a wireless connection (WiFi) follows the steps below:
- 4. Select "WIRELESS SETUP" then press "ENTER".



5. The list of available names on your SSID network appears.

<hidden></hidden>	CIÉ WPA	
<hidden></hidden>		
freephonie		
freephonie		
STOREX_N	WEP	
madhome		ALC: NO.
FreeWifi	Ouvrir sy	
FreeWifi	And the second se	

6. Enter your key using the virtual keypad. Select **OK** and then press **ENTER** to confirm.

						HI	Input history 🕨 🚽
a	b	c	d	1	2	3	
e	-f	9	h	4	5	6	equ
i.	i	k	÷	7	8	9	admin
m	n	0	P	•	0		
P	r	8	t	1			
u	v	w	x	5		7	
У	z	ę	?	OK	Space	Clear	

7. The connection test begins; confirm your choice by pressing **ENTER**.

Wireless Setup			
Connec	Infrastructure (AP) Testing…		
Connec	Cancel		
©K Connect	Advance Config.	Q Re-scan AP	

8. You will find the IP address, subnet mask and default gateway if your connection is successful. Press **OK** to confirm settings.



9. Once the above parameters are accepted, press **HOME** to return to the main page.

STOREX_N	
Connection2	
Connection3	

HINT

- It is recommended to configure the network after you correctly connect the USB WiFi to the TwinBox 430.
- Please check that the anti-virus or firewall is not blocking access of this unit to the network.

Perhaps you might experience a temporary break and the freeze of the AV content read through the WiFi network because of network speed, video streams input capacity or AV files including HD codes. In this case, please copy them to a USB device or memory card before watching.

STOREX WEBSITE

Go to http://www.storex.eu, select "DVBT Recorder" and then select TwinBox 430. You will be able to download the latest full version of the manual and software updates.

TECHNICAL SUPPORT

In order to easily manage your issue, you should contact our support team, we invite you to register your TwinBox 430 guarantee on our website at the following address:

http://garantie.storex.eu

For repairing, contact your dealer to repair your TwinBow 430 under guarantee, or send your request via email to the following address:

support@storex.eu

or by phone at:

France:01 55 85 82 00 (local call charge to Paris)Spain:902 110 572 (soporte.es@storex.eu)

Monday to Thursday from 9:30 to 19:30 p.m. Friday from 9:30 to 18:30 p.m.

For more details, please read the full version of user manual (available on the website):

http://www.storex.eu

WARRANTY REGISTRATION

We invite you to register your warranty for TwinBox 430 on our website at:

http://garantie.storex.eu

GUARANTEE CONDITIONS

STOTEX's available guarantee is valid for 1 year for TwinBox 430 and 3 months long for its accessories (remote control, AV cables, power supply ...).

STOREX TwinBox guarantees your TwinBox 430 against any manufacturing or assembling faults. This guarantee only applies to the first purchase of the TwinBox 430 by the end user and is not transferable if the device is resold. This warranty does not cover any incompatibilities found by end user apart from recommendations specified on the packaging, or any other incompatibility generated by other hardware or software on the computer that is connected to the TwinBox 430. Proof of purchase must be presented to our services to apply STOREX guarantee.

The guarantee doesn't cover failures or defects induced by non-compliance to this manual's instructions, neglect, alteration, improper installation or maintenance, reparation or alteration not authorized by STOREX, improper tests, accident or external factor such as (not exhaustive) excessive heat or dampness, power failures or bad installation / uninstalling of TwinBox 430.

The only contractual obligation endorsed by STOREX pertains to the reparation or replacement of a defective product. In no case, STOREX cannot be held responsible for any loss of data, or its consequences induced by operational fault or a product failure. In any case, STOREX won't be bound to any financial responsibility for any amount exceeding the value of the product purchased by the end user.

This guarantee of your TwinBox 430 is defined and can't be modified, decreased or increased without written consent from STOREX. Furthermore, STOREX cannot be held responsible for any technical advice or service provided pertain to TwinBox 430.

You are not the grantee of this current warranty.

This warranty covers only your TwinBox 430 and is governed by French law. For any request not covered by this guarantee, please contact STOREX support or log on to www.e-storex.com to order accessory.

HINT: STOREX [™] reserves the right to modify the user manual without prior notice according to the product's evolutions. You can find the latest version of the manual on our website: http://www.storex.eu

SECURITY INFORMATION

This device was designed and manufactured to ensure your safety. The security mechanisms built into the product will protect you if you observe the following procedures for installing, operating and troubleshooting:

- Read and follow the instructions below before handling and installation of your equipment;
- Keep these instructions for future reference.

GENERAL

- Do not shake, or it may lead to damage to the device;
- Use only parts and accessories (power supply ...) recommended by the manufacturer;
- Do not move the appliance when in operation.

SAFETY

- To prevent fire or electric shock, do not put the appliance near objects filled with liquids,

- If a heavy object or liquid is dropped on the device, unplug it immediately and send it to check by qualified personnel before re-use.

- When in operation, the housing surface generates heat; Do place the product on a flat and rigid surface and avoid covering it or placing any object on it.

PRODUCT'S POWER SUPPLY

- In case you don't use the product for a long time or during a lightning storm, unplug the unit from the outlet by grabbing the plug itself, without pulling the cable,

- The included power adapter is specific to the product. Using a different adapter may cause damage or accidents.

PLACING OF THE PRODUCT

- Install the appliance away from any equipment with strong attraction such as microwave ovens, big speakers ...

- Place your product in a well ventilated area and on a hard and flat surface to disperse heat from the device.

CLEANING

- Never open the product to clean, otherwise the warranty will be canceled,
- Unplug the product from the wall outlet before cleaning the product,

- Clean the outside of the product and the remote control using a soft, dry cloth. Never use an abrasive pad, scouring powder or solvent such as alcohol or gasoline.

ROUBLESHOOTING

- Refer all troubleshooting to qualified personnel. Troubleshooting is required when the appliance has been damaged in any way: plug or cord is damaged, liquid spilled into the product, introduction of small objects in the product, exposure to rain or moisture, malfunction, drop of the product...

IMPORTANT HINT

Warning: This product helps maintain a still video image or a picture-screen on your television screen indefinitely. If you leave the still video image or picture-screen on your television screen display for an extended period, you may damage your TV screen. The plasma TVs and projection televisions are sensitive.

SAFETY-ENVIRONMENT

CE Your STOREX product has been tested in laboratory and is consistent with corresponding European Directives for CE marking applicable during the time of marketing.



A traceability of the components of your STOREX product was performed; it showed us that the product complies with Environmental Directive (RoHS) in effect at the time of its release.

X

At its end of life, do not throw the product in a garbage but bring it to the distributor to your household waste disposal who will get the product in a recycling of electrical waste and electro mechanics and electronics (DEEE).



Your STOREX product was prepared, tested and packaged in a French company certified ISO9001: 2008 by an annual audit by a gualified person of the Bureau Veritas Certification.

HINT

TwinBox 430

is a product range of STOREX



www.storex.eu

© STOREX - 2011

All trademarks are patended by their respective owners.