



English 1. When not in use, store the receiver conveniently in the bottom of the number pad. 2. Turn the unit off by pressing the On/Off button for two seconds. 3. Place the unit in its protective pouch.

Deutsch 1. When not in use, store the receiver conveniently in the bottom of the number pad. 2. Turn the unit off by pressing the On/Off button for two seconds. 3. Place the unit in its protective pouch.

Français 1. When not in use, store the receiver conveniently in the bottom of the number pad. 2. Turn the unit off by pressing the On/Off button for two seconds. 3. Place the unit in its protective pouch.

Italiano 1. When not in use, store the receiver conveniently in the bottom of the number pad. 2. Turn the unit off by pressing the On/Off button for two seconds. 3. Place the unit in its protective pouch.

Español 1. When not in use, store the receiver conveniently in the bottom of the number pad. 2. Turn the unit off by pressing the On/Off button for two seconds. 3. Place the unit in its protective pouch.

Português 1. When not in use, store the receiver conveniently in the bottom of the number pad. 2. Turn the unit off by pressing the On/Off button for two seconds. 3. Place the unit in its protective pouch.

Nederlands 1. When not in use, store the receiver conveniently in the bottom of the number pad. 2. Turn the unit off by pressing the On/Off button for two seconds. 3. Place the unit in its protective pouch.

Svenska 1. When not in use, store the receiver conveniently in the bottom of the number pad. 2. Turn the unit off by pressing the On/Off button for two seconds. 3. Place the unit in its protective pouch.

English 1. Launches Microsoft® Excel® 2. Launches Windows® calculator 3. Launches Internet browser 4. One-touch Excel® keys 5. Backspace key/Internet Back key

Deutsch 1. Launches Microsoft® Excel® 2. Launches Windows® calculator 3. Launches Internet browser 4. One-touch Excel® keys 5. Backspace key/Internet Back key

Français 1. Launches Microsoft® Excel® 2. Launches Windows® calculator 3. Launches Internet browser 4. One-touch Excel® keys 5. Backspace key/Internet Back key

Italiano 1. Launches Microsoft® Excel® 2. Launches Windows® calculator 3. Launches Internet browser 4. One-touch Excel® keys 5. Backspace key/Internet Back key

Español 1. Launches Microsoft® Excel® 2. Launches Windows® calculator 3. Launches Internet browser 4. One-touch Excel® keys 5. Backspace key/Internet Back key

Português 1. Launches Microsoft® Excel® 2. Launches Windows® calculator 3. Launches Internet browser 4. One-touch Excel® keys 5. Backspace key/Internet Back key

Nederlands 1. Launches Microsoft® Excel® 2. Launches Windows® calculator 3. Launches Internet browser 4. One-touch Excel® keys 5. Backspace key/Internet Back key

Svenska 1. Launches Microsoft® Excel® 2. Launches Windows® calculator 3. Launches Internet browser 4. One-touch Excel® keys 5. Backspace key/Internet Back key

Dansk 1. When not in use, store the receiver conveniently in the bottom of the number pad. 2. Turn the unit off by pressing the On/Off button for two seconds. 3. Place the unit in its protective pouch.

Norsk 1. When not in use, store the receiver conveniently in the bottom of the number pad. 2. Turn the unit off by pressing the On/Off button for two seconds. 3. Place the unit in its protective pouch.

Suomi 1. When not in use, store the receiver conveniently in the bottom of the number pad. 2. Turn the unit off by pressing the On/Off button for two seconds. 3. Place the unit in its protective pouch.

Ελληνικά 1. When not in use, store the receiver conveniently in the bottom of the number pad. 2. Turn the unit off by pressing the On/Off button for two seconds. 3. Place the unit in its protective pouch.

Πο-русски 1. When not in use, store the receiver conveniently in the bottom of the number pad. 2. Turn the unit off by pressing the On/Off button for two seconds. 3. Place the unit in its protective pouch.

Magyar 1. When not in use, store the receiver conveniently in the bottom of the number pad. 2. Turn the unit off by pressing the On/Off button for two seconds. 3. Place the unit in its protective pouch.

Česká verze 1. When not in use, store the receiver conveniently in the bottom of the number pad. 2. Turn the unit off by pressing the On/Off button for two seconds. 3. Place the unit in its protective pouch.

Po polsku 1. When not in use, store the receiver conveniently in the bottom of the number pad. 2. Turn the unit off by pressing the On/Off button for two seconds. 3. Place the unit in its protective pouch.

Dansk 1. Launches Microsoft® Excel® 2. Launches Windows® calculator 3. Launches Internet browser 4. One-touch Excel® keys 5. Backspace key/Internet Back key

Norsk 1. Launches Microsoft® Excel® 2. Launches Windows® calculator 3. Launches Internet browser 4. One-touch Excel® keys 5. Backspace key/Internet Back key

Suomi 1. Launches Microsoft® Excel® 2. Launches Windows® calculator 3. Launches Internet browser 4. One-touch Excel® keys 5. Backspace key/Internet Back key

Ελληνικά 1. Launches Microsoft® Excel® 2. Launches Windows® calculator 3. Launches Internet browser 4. One-touch Excel® keys 5. Backspace key/Internet Back key

Πο-русски 1. Launches Microsoft® Excel® 2. Launches Windows® calculator 3. Launches Internet browser 4. One-touch Excel® keys 5. Backspace key/Internet Back key

Magyar 1. Launches Microsoft® Excel® 2. Launches Windows® calculator 3. Launches Internet browser 4. One-touch Excel® keys 5. Backspace key/Internet Back key

Česká verze 1. Launches Microsoft® Excel® 2. Launches Windows® calculator 3. Launches Internet browser 4. One-touch Excel® keys 5. Backspace key/Internet Back key

Po polsku 1. Launches Microsoft® Excel® 2. Launches Windows® calculator 3. Launches Internet browser 4. One-touch Excel® keys 5. Backspace key/Internet Back key



www.logitech.com

English Warranty. Your product comes with a limited hardware warranty. Refer to the Logitech® Warranty Document or go to <http://www.logitech.com/warranty> for more information. **Compliance and Safety.** Your product has been UL tested and should only be used with other UL certified devices. For information regarding power supply and battery usage, go to <http://www.logitech.com/compliance>.

Deutsch Warranty. Your product comes with a limited hardware warranty. Refer to the Logitech® Warranty Document or go to <http://www.logitech.com/warranty> for more information. **Compliance and Safety.** Your product has been UL tested and should only be used with other UL certified devices. For information regarding power supply and battery usage, go to <http://www.logitech.com/compliance>.

Français Warranty. Your product comes with a limited hardware warranty. Refer to the Logitech® Warranty Document or go to <http://www.logitech.com/warranty> for more information. **Compliance and Safety.** Your product has been UL tested and should only be used with other UL certified devices. For information regarding power supply and battery usage, go to <http://www.logitech.com/compliance>.

Italiano Warranty. Your product comes with a limited hardware warranty. Refer to the Logitech® Warranty Document or go to <http://www.logitech.com/warranty> for more information. **Compliance and Safety.** Your product has been UL tested and should only be used with other UL certified devices. For information regarding power supply and battery usage, go to <http://www.logitech.com/compliance>.

Español Warranty. Your product comes with a limited hardware warranty. Refer to the Logitech® Warranty Document or go to <http://www.logitech.com/warranty> for more information. **Compliance and Safety.** Your product has been UL tested and should only be used with other UL certified devices. For information regarding power supply and battery usage, go to <http://www.logitech.com/compliance>.

Português Warranty. Your product comes with a limited hardware warranty. Refer to the Logitech® Warranty Document or go to <http://www.logitech.com/warranty> for more information. **Compliance and Safety.** Your product has been UL tested and should only be used with other UL certified devices. For information regarding power supply and battery usage, go to <http://www.logitech.com/compliance>.

Nederlands Warranty. Your product comes with a limited hardware warranty. Refer to the Logitech® Warranty Document or go to <http://www.logitech.com/warranty> for more information. **Compliance and Safety.** Your product has been UL tested and should only be used with other UL certified devices. For information regarding power supply and battery usage, go to <http://www.logitech.com/compliance>.

Svenska Warranty. Your product comes with a limited hardware warranty. Refer to the Logitech® Warranty Document or go to <http://www.logitech.com/warranty> for more information. **Compliance and Safety.** Your product has been UL tested and should only be used with other UL certified devices. For information regarding power supply and battery usage, go to <http://www.logitech.com/compliance>.

Dansk Warranty. Your product comes with a limited hardware warranty. Refer to the Logitech® Warranty Document or go to <http://www.logitech.com/warranty> for more information. **Compliance and Safety.** Your product has been UL tested and should only be used with other UL certified devices. For information regarding power supply and battery usage, go to <http://www.logitech.com/compliance>.

Norsk Warranty. Your product comes with a limited hardware warranty. Refer to the Logitech® Warranty Document or go to <http://www.logitech.com/warranty> for more information. **Compliance and Safety.** Your product has been UL tested and should only be used with other UL certified devices. For information regarding power supply and battery usage, go to <http://www.logitech.com/compliance>.

Suomi Warranty. Your product comes with a limited hardware warranty. Refer to the Logitech® Warranty Document or go to <http://www.logitech.com/warranty> for more information. **Compliance and Safety.** Your product has been UL tested and should only be used with other UL certified devices. For information regarding power supply and battery usage, go to <http://www.logitech.com/compliance>.

Ελληνικά Warranty. Your product comes with a limited hardware warranty. Refer to the Logitech® Warranty Document or go to <http://www.logitech.com/warranty> for more information. **Compliance and Safety.** Your product has been UL tested and should only be used with other UL certified devices. For information regarding power supply and battery usage, go to <http://www.logitech.com/compliance>.

Πο-русски Warranty. Your product comes with a limited hardware warranty. Refer to the Logitech® Warranty Document or go to <http://www.logitech.com/warranty> for more information. **Compliance and Safety.** Your product has been UL tested and should only be used with other UL certified devices. For information regarding power supply and battery usage, go to <http://www.logitech.com/compliance>.

Magyar Warranty. Your product comes with a limited hardware warranty. Refer to the Logitech® Warranty Document or go to <http://www.logitech.com/warranty> for more information. **Compliance and Safety.** Your product has been UL tested and should only be used with other UL certified devices. For information regarding power supply and battery usage, go to <http://www.logitech.com/compliance>.

Česká verze Warranty. Your product comes with a limited hardware warranty. Refer to the Logitech® Warranty Document or go to <http://www.logitech.com/warranty> for more information. **Compliance and Safety.** Your product has been UL tested and should only be used with other UL certified devices. For information regarding power supply and battery usage, go to <http://www.logitech.com/compliance>.

Po polsku Warranty. Your product comes with a limited hardware warranty. Refer to the Logitech® Warranty Document or go to <http://www.logitech.com/warranty> for more information. **Compliance and Safety.** Your product has been UL tested and should only be used with other UL certified devices. For information regarding power supply and battery usage, go to <http://www.logitech.com/compliance>.



www.logitech.com/support



Location	Hotline	Technical Help
Austria	+43-(0)1 502 221 348	
Belgium	Dutch: +32-(0)2 626 89 60; French: +32-(0)2 626 89 62	
Czech Republic	+420 239 000 335	
Denmark	+45-35 44 55 17	
Eastern Europe	English: +41-(0)21 863 54 01	
Finland	+358-(0)9 817 100 21	
France	+33-(0)1-43 62 34 14	
Germany	+49-(0)69-92 032 166	
Hungary	+36-177-74 853	
Ireland	+353-(0)1-605 8357	
Italy	+39-02-214 08 71	
Netherlands	+31-(0)10-243 88 98	
Norway	+47-(0)23 500 083	
Poland	+48-22-854 11 51	
Portugal	+351-21 316 4124	
Russia	+7(095)-641 3460	
Spain	+34 -91-375 33 69	
Sweden	+46-(0)8-519 920 20	
Switzerland	D +41-(0)21-863 54 11; F +41-(0)21-863 54 31; I +41-(0)21-863 54 61; E +41 (0)21 863 54 01	
United Kingdom	+44 -(0)207-309-01 26	
European, Mid. East, & African Hq, Romanel's/Morges, Switzerland	English: +41-(0)21-863 5401 Fax: +41-(0)21-863 5402	