



Zubehör / Accessories / Accessoires



 
Löttülle (Messing) /  
Soldering tailpiece (brass) /  
Douille à braser



Schweißtülle (Stahl) /  
Welding tailpiece (steel) /  
Douille à souder (acier)



Gewindetülle (Messing) /  
External thread tailpiece (brass) /  
Douille à filet



Entleerungs-Adapter /  
Draining adapter /  
Adaptateur de vidange

MNG Armaturen  
Honeywell AG  
Postfach 20 40  
D-59755 Arnsberg  
Telefon 0 29 32/9 88-0  
Telefax 0 29 32/9 88-2 59




MU2H051GE25-1101  
04.100.70.001.000



Montage- und Bedienungsanleitung /  
Installation and operating instructions /  
Mode d'emploi

Kombi-FC  
V5015

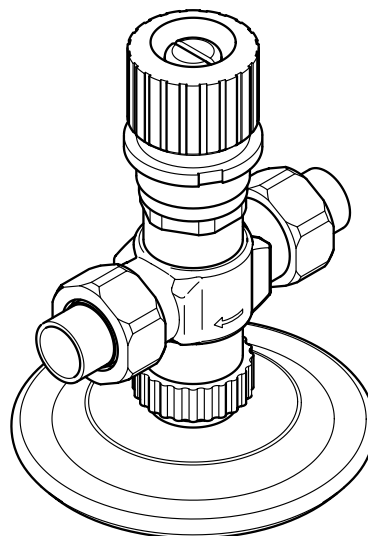


MNG Armaturen  
Honeywell AG  
Postfach 20 40  
D-59755 Arnsberg  
Telefon 0 29 32/9 88-0  
Telefax 0 29 32/9 88-2 59




MU2H051GE25-1101  
04.100.70.001.000


Montage / Installation / Montage

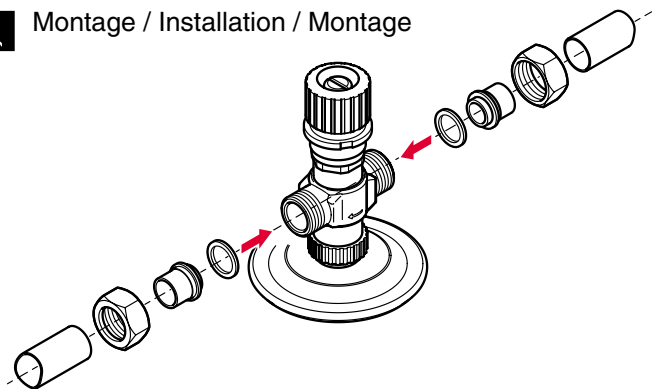


Einbaulage / Fitting position /  
Position de montage

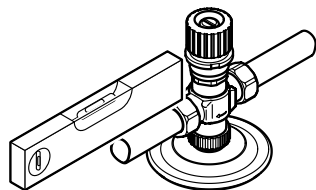



Alternative / Alternative /  
Alternative

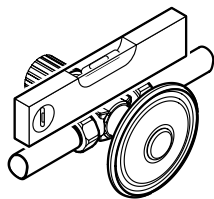

! Durchflußrichtung beachten / Observe flow direction/  
Faire attention à voie d'écoulement

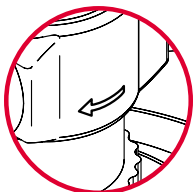


Einstellen/Absperren / Setting/Shutoff /  
Régler/Arrêter

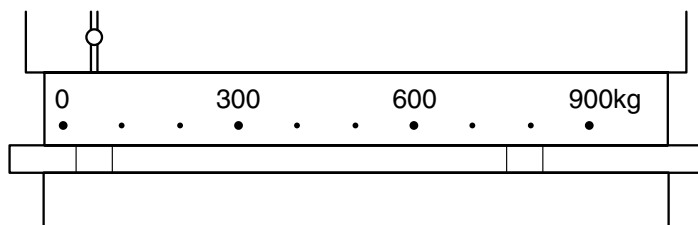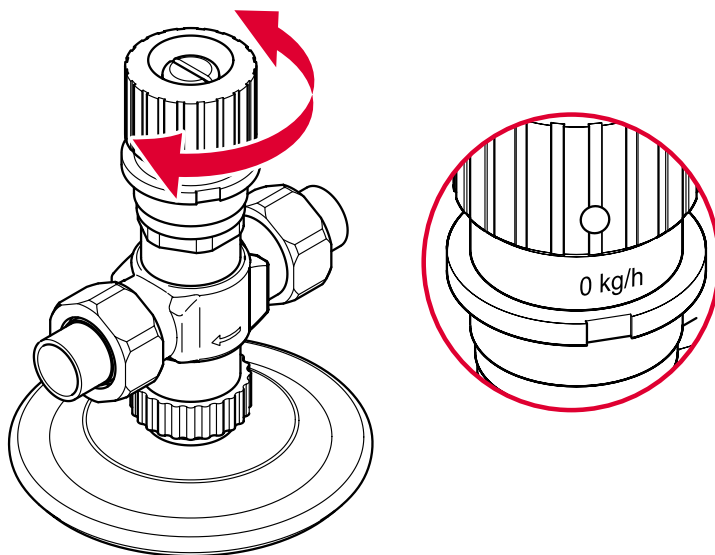


Entleeren - nur im Rücklauf möglich / Draining - only possible in the return / Vidanger - seulement possible à retour


1

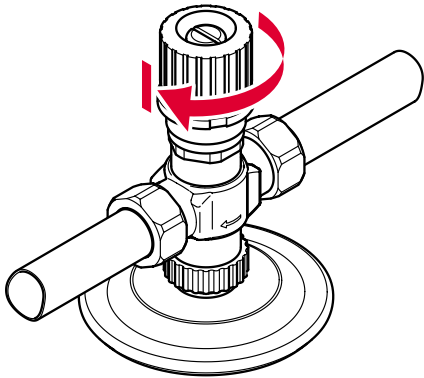


2

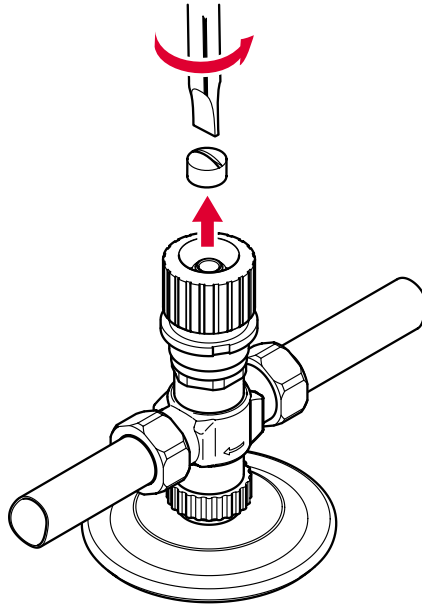


3

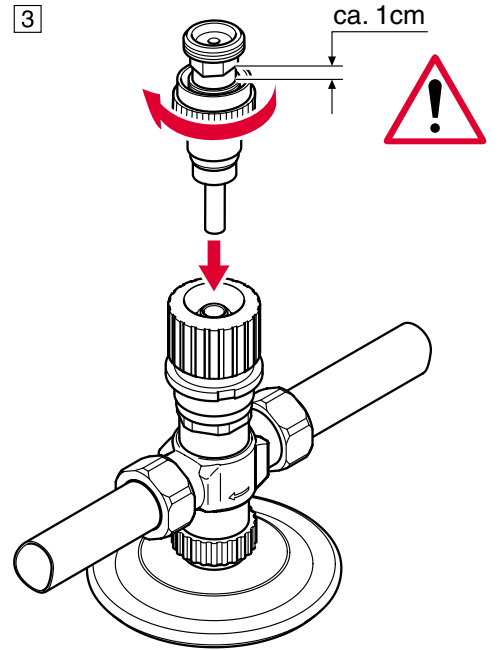

4

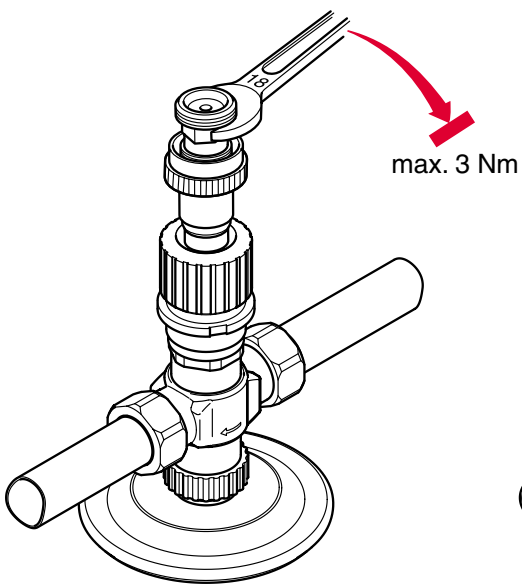

5

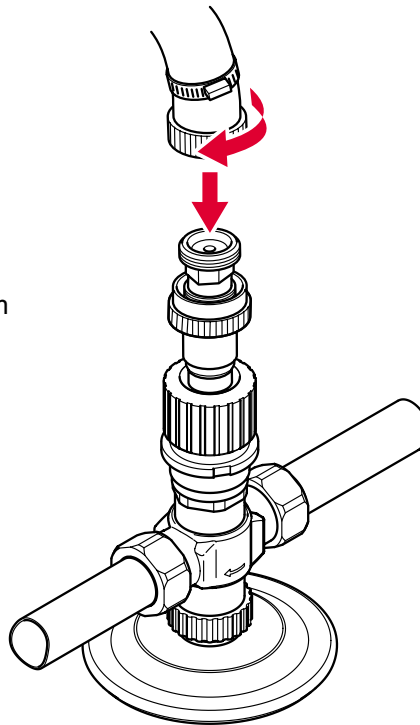

6

