

for
**XBOX
360™**



DG360-1717

dreamGEAR®
www.dreamgear.net

CAMO HEADSET
USER'S GUIDE



CONTENTS:

- Camo Headset
- User's Guide/Warranty Card
- Registration Card

How to Use the Camo Headset:

How to Connect the Camo Headset to the Xbox 360 Controller:

1. Unravel the cord for the Camo Headset.
2. Insert the plug at the end of the cord into the bottom of the Xbox 360 controller.
3. To remove the Camo Headset, pull the plug downward from the controller.

NOTE: Please refer to the User's Guide for your Xbox 360 on how to use your headset for Xbox Live and other features on the Xbox 360.

Camo Headset Controls:

1. To use the microphone, move the switch on the plug of the Camo Headset to the right. To mute the microphone, move the switch to the left.
2. To raise the volume of the headset, turn the dial (located at the bottom of the plug), counter-clockwise, toward the + symbol. To lower the volume of the headset, turn the dial clockwise, toward the - symbol.

NOTE: The Camo Headset can be used with either ear. The microphone can swivel up and down to adjust for comfort.

dreamGEAR®
www.dreamgear.net

**FOR TECHNICAL SUPPORT
PLEASE CONTACT: 1-877-999-DREAM
or support@dreamgear.net**

iSound® WARRANTY CARD dreamGEAR®

You have purchased a quality product that has been subjected to a thorough series of tests to ensure the highest level of dependability and compatibility. It is unlikely that you will experience any problem but if a defect should become apparent during the use of this product, dreamGEAR warrants to the original consumer purchaser that this product will be free from defects in material and workmanship for a period of 120 days from the date of your original purchase. If a defect covered by this warranty occurs dreamGEAR, at its option, will repair or replace the product purchased at no charge.

This warranty does not cover normal wear and tear, abusive use or misuse, modification, tampering or by any other cause not related to either materials or workmanship. This warranty does not apply to products used for any industrial, professional or commercial purposes.

To obtain warranty service send the defective product postage prepaid, along with a copy of the original sales receipt showing purchase date to:

Attention: Returns Department
dreamGEAR, LLC
P.O. Box 478
Torrance, CA 90508

For further information please call our Customer Hotline at 877-999-DREAM (International customers please call 310-222-1045), or visit our websites www.isound.net or www.dreamgear.net. Please allow 4 to 6 weeks for processing.



CONTENIDO DEL PAQUETE:

- Camo Headset
- Guía del usuario / Tarjeta de garantía
- Tarjeta de registro

Cómo Utilizar el Camo Headset:

Cómo Conectar Camo Headset al Controlador Xbox 360:

1. Saque el cable Camo Headset.
2. Introduzca el enchufe del extremo inferior del cable en la parte inferior del controlador Xbox 360.
3. Para desinstalar el Camo Headset, desenchufe el enchufe del controlador.

NOTA: Por favor, consulte la Guía del Usuario de su Xbox 360 sobre cómo utilizar sus auriculares en la Xbox Live y otras características de la Xbox 360.

Controles de Camo Headset:

1. Para utilizar el micrófono, mueva el interruptor del enchufe del Camo Headset hacia la derecha. Para silenciar el micrófono, mueva el interruptor a la izquierda.
2. Para subir el volumen de los auriculares, gire el dial (localizado en la parte inferior del enchufe), en dirección contraria a las agujas del reloj, hasta el símbolo +. Para bajar el volumen de los auriculares, gire el dial en el sentido de las agujas del reloj hacia el símbolo -.

NOTA: El Camo Headset se puede utilizar en cualquiera de los oídos. El micrófono se puede girar hacia arriba o hacia abajo para mayor comodidad.

dreamGEAR®
www.dreamgear.net

**PARA SOPORTE TÉCNICO
CONTACTE AL: 1-877-999-DREAM
o visítenos en la web @ www.dreamgear.net**



CONTENU DU PACK:

- Camo Headset
- Guide d'utilisation/Carte de garantie
- Carte d'enregistrement

Comment Utiliser le casque Camo Casque:

Comment Connecter le Casque Camo Headset à la Manette Xbox 360:

1. Démêler le cordon du casque Camo Headset.
2. Insérez la prise de l'extrémité du cordon en bas de la manette Xbox 360.
3. Pour enlever le casque Camo Headset, tirez sur la prise de la manette vers le bas.

REMARQUE: Reportez-vous au Guide d'utilisation de votre Xbox 360 sur la façon d'utiliser le casque avec Xbox Live et d'autres fonctionnalités de la Xbox 360.

Commandes du Casque Camo Headset:

1. Pour utiliser le microphone, déplacez le commutateur situé sur la prise du casque Camo Headset vers la droite. Pour couper le son du microphone, déplacez le commutateur vers la gauche.
2. Pour augmenter le volume du casque, tournez la molette (située en bas de la prise), dans le sens antihoraire, vers le symbole +. Pour baisser le volume du casque, tournez la molette dans le sens horaire, vers le symbole -.

REMARQUE: Le casque Camo Headset peut être utilisé avec n'importe quelle oreille. Le microphone peut pivoter de haut en bas pour un réglage confortable.

dreamGEAR®
www.dreamgear.net

**POUR ASSISTANCE TECHNIQUE
VEUILLEZ CONTACTER : 1-877-999-DREAM
Ou visitez-nous sur le Web @ www.dreamgear.net**