

Easily fits two decks of cards
Contient aisément 2 jeux de cartes

Shuffle button
Bouton mélangeur

Handsome leatherette shuffling shoe
Sabot-batteur en beau cuir synthétique

Pull the handle down after the card
Shuffler stop working

Requires 4 AA batteries, not included
Nécessite 4 piles, non incluses
Cards not included. Cartes non incluses.

Easily unload your cards as you deal!
Déchargez le sabot facilement tout
en distribuant les cartes !

