

**Package Contents:**

- 6ft Charge/Sync Cable
- 6ft HDMI Cable
- 6ft Ethernet Cable
- User's Guide/Warranty Card
- Registration Card

DIRECTIONS:**Charge/Sync Cable**

1. Plug the mini-USB side of the Charge/Sync Cable to your PS3 Controller.
2. Plug the USB side of the Charge/Sync Cable to any USB port on your PS3 (or any powered USB port).

NOTE: Please refer to the User's Guide for your PS3 Controller for charging times.

HDMI Cable

1. Plug one end of the HDMI Cable to the back of your PS3 System.
2. Plug the other end of the HDMI Cable to the HDMI port of your television.

NOTE: Please refer to the User's Guide of your television for instructions on HDMI port use.

Ethernet Cable

1. Plug one end of the Ethernet Cable to the back of your PS3 System.
2. Plug the other end of the Ethernet Cable to Ethernet jack through a wall outlet or modem/router.



FOR TECHNICAL SUPPORT
PLEASE CONTACT: 1-877-999-DREAM
or support@dreamgear.net

www.dreamgear.net
www.sound.net

Websites:

Consumer Support Email: support@dreamgear.net
877-999-DREAM (3/32) (U.S. and Canada only) or
310-222-1045 (International)

Consumer Support Hotline:

NOTE: dreamGEAR will not process any defective claims without a Return Authorization Number.

For service on any defective product under the 120-day warranty policy, please contact Consumer Support to obtain a Return Authorization Number.

This warranty does not cover normal wear and tear, abusive use or misuse, modification, tampering or by any other cause not related to either materials or workmanship. This warranty does not apply to products used for industrial, professional or commercial purposes.

All dreamGEAR/Sound products come with a limited warranty and have been subjected to a thorough series of tests to ensure the highest level of dependability and compatibility. It is unlikely that you will experience any problem, but if a defect should become apparent during the use of this product, dreamGEAR warrants to the original consumer purchaser that this product will be free from defects in material and workmanship for a period of 120 days from the date of your original purchase. If a defect occurs within this warranty period, dreamGEAR, at its option, will repair or replace the product purchased at no charge. If a replacement is necessary and your product is no longer available, a comparable product may be substituted at the sole discretion of dreamGEAR.

!Sound WARRANTY CARD **dreamGEAR**

MEDIA POWER PACK
USER'S GUIDE

**Contenido del Embalaje:**

- Cable de carga/sincronización de 6 pies
- Cable HDMI de 6 pies
- Cable Ethernet de 6 pies
- Guía de usuario/Tarjeta de garantía
- Tarjeta de registro

INSTRUCCIONES:**Cable de carga/sincronización**

1. Enchufe el lado mini USB del cable de carga/sincronización a su controlador PS3.
2. Enchufe el lado USB del cable de carga/sincronización a cualquier puerto USB de su PS3 (o a cualquier puerto USB con alimentación).

NOTA: Consulte la Guía de Usuario de su controlador PS3 para ver los tiempos de carga.

Cable HDMI

1. Enchufe un extremo del cable HDMI a la parte trasera de su sistema PS3.
2. Enchufe el otro extremo del cable HDMI al Puerto HDMI de su televisor.

NOTA: Consulte la Guía de Usuario de su televisor para ver las instrucciones relacionadas con el uso del puerto HDMI.

Cable Ethernet

1. Enchufe un extremo del cable Ethernet a la parte trasera de su sistema PS3.
2. Enchufe el otro extremo del cable Ethernet al conector Ethernet de una salida de pared o de un módem/router.



PARA SOPORTE TÉCNICO
CONTACTE AL: 1-877-999-DREAM
o visítenos en la web @ www.dreamgear.net

**Contenu de l'emballage:**

- Câble Charge/Sync 1,8 m
- Câble HDMI 1,8 m
- Câble Ethernet 1,8 m
- Guide d'utilisation/Carte de garantie
- Carte d'enregistrement

INSTRUCTIONS:**Câble Charge/Sync**

1. Branchez le connecteur mini-USB du câble Charge/Sync à la manette PS3.
2. Branchez le connecteur USB du câble Charge/Sync à un port USB de votre PS3 (ou tout port USB sous tension).

REMARQUE: Reportez-vous au Guide d'utilisation de votre manette PS3 pour connaître les durées de charge.

Câble HDMI

1. Branchez une extrémité du câble HDMI au panneau arrière de votre système PS3.
2. Branchez l'autre extrémité du câble HDMI au port HDMI de votre téléviseur.

REMARQUE: Reportez-vous au Guide d'utilisation de votre téléviseur pour savoir comment utiliser le port HDMI.

Câble Ethernet

1. Branchez une extrémité du câble Ethernet au panneau arrière de votre système PS3.
2. Branchez l'autre extrémité du câble Ethernet à la prise Ethernet de votre prise murale ou modem/routeur.



POUR ASSISTANCE TECHNIQUE
VEUILLEZ CONTACTER : 1-877-999-DREAM
Ou visitez-nous sur le Web @ www.dreamgear.net