# Portable MiniDisc Player

**Operating Instructions** 





For customers who purchased this

The model number is located at the top and the serial

number is located at the rear of the disc compartment lid. Record the serial number in the space provided below. Refer to them whenever you call upon your Serial.

represent Headphone Stereo products. trademark of Sony Corporation.

product in the USA

Owner's Record

Model No. MZ-E10

Information

Product registration

Please register this product on line at www.sony.com/productregistration

<a href="http://www.sony.com/productregistration">http://www.sony.com/productregistration</a>

Proper registration will enable us to send you

periodic mailings about new products, services and other important announcements. Registering your product will also allow us to contact you in the unlikely event that the product needs adjustment or

This equipment has been tested and found to

comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable

generates, uses, and can radiate radio frequency

protection against harmful interference in a

residential installation. This equipment

nergy and, if not installed and used in

radio or television reception, which can be

the user is encouraged to try to correct the

nterference by one or more of the following

- Reorient or relocate the receiving antenna

- Connect the equipment into an outlet on a

Consult the dealer or an experienced radio/

modifications not expressly approved in this manual could void your authority to operate this

**RECYCLING LITHIUM-ION BATTERIES** 

For more information regarding recycling of

1-800-822-8837, or visit <a href="http://www.rbrc.org/">http://www.rbrc.org/</a>

These operating instructions are written

nainly for models outside of Japan. In the

case of the model for use in Japan, the display indications may differ slightly, but operations

Caution: Do not handle damaged or leaking the

built-in lithium ion batteries.

circuit different from that to which the

Increase the separation between the

You are cautioned that any changes or

equipment and receiver.

You can help preserve ou

your used rechargeable

On this manual

are identical.

batteries to the collection and

recycling location nearest you.

rechargeable batteries, call toll free

accordance with the instructions, may cause

harmful interference to radio communications

However, there is no guarantee that interference

will not occur in a particular installation. If this

ermined by turning the equipment off and on,

*MZ-E10* 





#### To prevent fire or shock hazard, do not expose the unit to rain or moisture.

Do not install the appliance in a confined space, such as a bookcase or built-in

To prevent fire, do not cover the ventilation of the apparatus with newspapers, tablecloths, curtains, etc. And don't place lighted candles on the apparatus.

To prevent fire or shock hazard, do not place objects filled with liquids, such as vases, on

Certain countries may regulate disposal of the battery used to power this product. Please consult with your local authority.

The use of optical instruments with this product will increase eye hazard

CAUTION — INVISIBLE LASER RADIATION WHEN OPEN

DO NOT STARE INTO BEAM OR VIEW DIRECTLY WITH OPTICAL INSTRUMENTS

IN NO EVENT SHALL SELLER BE LIABLE CONSEQUENTIAL DAMAGES OF ANY NATURE, OR LOSSES OR EXPENSE RESULTING FROM ANY DEFECTIVE PRODUCT OR THE USE OF ANY

# **Getting started**

## Slide BUILT-IN BATTERY to ON.

The protection for the built-in lithium-ion rechargeable battery is released, power is supplied to the player and recharging of the built-in rechargeable battery becomes




Keep the switch to ON position. If, however, the player will not be used for 3 months or more, set the switch to OFF to prevent degradation of the battery.

When operating the player using the AC power adaptor or a dry battery The player normally needs to be supplied power from the built-in rechargeable battery Make sure to do the following when using the player:

— Keep BUILT-IN BATTERY set to ON no matter what power source you use.

Charge the built-in rechargeable battery before it is fully drained.

# 2 Charge the rechargeable battery.

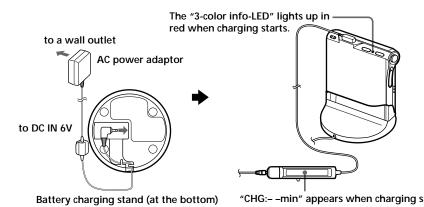

When the player is placed on the battery-charging stand, the "3-color info-LED" lights up in red and charging starts.

• When the "3-color info-LED" turns off after a short time

This means the built-in rechargeable battery is sufficiently charged (the battery is charged • When "CHG:- -min" appears in the display on the remote control


This is the remaining charging time. It usually takes about one hour to sufficiently charge a completely drained battery. At the point the "3-color info-LED" on the player and the display on the remote control go off, the battery is about 80% charged. After about two and

For models supplied with the AC plug adaptor

If the AC power adaptor does not fit the wall outlet, use the AC plug adaptor


• It may take up to one minute for the LED or display indication to go on, depending on the It may take up to one minute for the LED or display indication to go on, depending on the battery condition (i.e., whether the built-in rechargeable battery is drained or not, etc.).
 Charge the battery at a temperature of 0°C (+32°F) to +40°C (+104°F). The charging time may vary, depending on the surrounding temperature.

Playback and other operations can be done on the player and the remote control while the

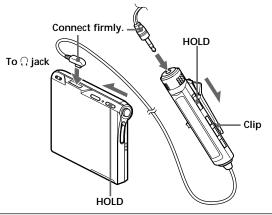


It may be hard for you to read the indications in the display if the remote control is attached upside down with the clip in its current position. In this case, attach the clip in the opposite direction as shown below


2 Attach the clip in the opposite direction

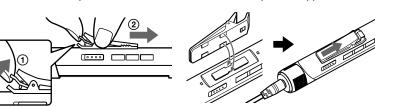

# Playing an MD


# 1 Insert an MD.

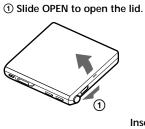

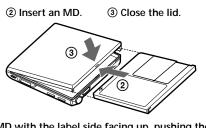

Insert an MD with the label side facing up, pushing the MD to the direction of the arrow in the illustration

# 2 Play an MD.

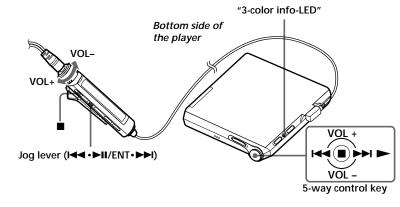

① Press the jog lever (►II) on the remote control. (Press towards ►►I ► on

A short beep sounds in the headphones/earphones. The LED lights up. ② Turn the volume control towards VOL + or – on the remote control to adjust the volume. (Press towards VOL + or - on the player. )

The volume indicator appears in the display, allowing you to check the volume level.

#### To stop play, press ■

A long beep sounds in the headphones/earphones. Playback starts from the point you last stopped playing. To start playback from the beginning of the disc, press and hold the jog lever (►1) for 2 seconds or more on the remote control (Press and hold towards ►► for 2 seconds or more on the player).

10	Do this (Beeps in the headphones/earphones)
Pause	Press the jog lever (►II) on the remote control (continuous short beeps).  Press the jog lever (►II) again to resume play.
Cue to the current track or the previous track	Slide the jog lever towards ◄ on the remote control (three short beeps). (Press towards ◄ on the player.)
Cue to the next track	Slide the jog lever towards ►► on the remote control (two short beeps). (Press towards ►► on the player.)
Go backwards or forward while playing	Slide and hold the jog lever towards ◄ or ► on the remote control. (Press and hold towards ◄ or ► on the player.)
Searching for a specific position while viewing a elapsed time (Time search)	While the player is paused, slide and hold the jog lever towards i◄◄ or ▶▶I on the remote control.

#### Make connections and unlock the controls. Searching for a specific While the player is stopped, slide and hold the jog lever towards track while viewing or less on the remote control


Cue to the beginning of Press  $\Box$  + or – button. every 10th track (only during playback of the disc with no group settings<sup>1)</sup>) Remove the MD 1) For more details, see "Using the group function." Once you open the lid, the point to start play will change to the beginning of the first track (except

Press ■, and then slide OPEN<sup>2</sup>

when the disc information has been stored in the personal disc mem

About the "3-color info-LED" The LED indicates the current operating mode, charging status, and battery condition. For

	echarge the built-in battery" on the back page.
LED color	Operating status
Red	Playing a disc with no group settings
Green	Playing a disc with group settings
Orange	Cueing to another group (Group Skip)

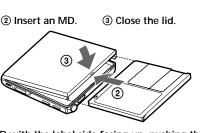

#### Selecting the play mode

5-way control key ( I◀◀ • ▶►I ▶ • ■)

► Various ways of playback

—DISPLAY

—P MODE/⊊

Volume control VOI + -

Jog lever (I◀◀ •►II/ENT•►►I)

Bottom side of the player

You can select from the various play modes using the P MODE/⊊ button on the remote

*♀2003* 13:52

**1** Press P MODE/⊊ repeatedly. Each time you press the button, the play mode changes as follows:

#### Play mode indication

-"3-color info-LED

Display*	Play mode	
(none) (normal play)	All the tracks are played once.	
1 (single-track play)	A single track is played once.	
(Bookmark play)	Bookmarked tracks play back in order of their track number.	
SHUF (shuffle play)	All the tracks are played	

The tracks are played in

specified. Group play mode ( ) appears whenever you details, see "Using the group function."

(program play) the order that you

#### Playing a track repeatedly (Repeat Play)

You can use the repeat function for normal play, single-track play, shuffle play, and program play mode.

1 During playback in the selected play mode, press and hold P MODE/⊊ for "⊊" appears in the display

Repeat play indication *₩003* 13:52


To cancel repeat play Press and hold P MODE/\$\infty\$ for 2 seconds of

By pressing the P MODE/ 

□ button during repeat play, you can change the play mode to be used with repeat play.

#### Listening to selected tracks only (Bookmark play)


You can bookmark tracks on a disc and play them only. The sequence of bookmarked tracks cannot be changed.

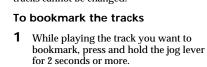

**₩**01/20

#### Flashing slowly The first track for bookmark play is set.

2 Repeat step 1 to bookmark other tracks You can bookmark with up to 20 tracks.

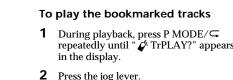

To erase a bookmark

The bookmarked tracks start playing, starting with the smallest track number

While playing the track for which you want to erase the bookmark, press and hold the jog lever for 2 seconds or more

If you open the lid, all bookmarks are

#### Listening to tracks in a desired sequence (Program Play)

repeatedly until "PGM" appears in the

**2** Slide the jog lever repeatedly to select a track, and then press the jog lever to enter that track.

track number programmed sequence **3** Repeat step 2 to program more tracks.

You can program up to 20 tracks After programming the tracks, press The program is stored and playback

starts from the first track. The program play settings will remain in ven after playback finishes or is

All program settings are lost when the lid is

#### Using the group function

playback of discs with group settings. The group function is convenient for playback of MDs on which several albums or CD singles **1** During playback in the selected group have been recorded in MDLP (LP2/LP4) play mode, press and hold P MODE/⊊ for 2 seconds or more.

group play mode. The player can play back tracks in units of groups: that is tracks that have been recorded on a disc as part of separate groups, as shown Repeat play of tracks The "3-color info-LED" lights up in green within a group when a disc with group settings is being □ SHUF □ Repeat shuffle play of tracks within a group Before group settings are made Repeat play for group □ PGM □

(normal play)

The group function is provided to allow

What is a disc with group settings?

1 2 3 4 5 6 7 8 \ 12131415

Track 1 to 5 are assigned to group 1. Track 8 to 12 are assigned to group 2 Track 13 to 15 are assigned to group 3 Track 6 and 7 are not assigned to a

After setting the group (group play)

Group 2 12345 6 7 12345 123 Tracks that were not assigned to a group are

treated as being part of "Group -The player does not support the recording of

tracks to groups. For details, see "Registering

#### Playing a track in group play In group play, all groups are played in order,

starting with group 1, followed by the unassigned tracks ("Group - -"). Playback stops after all the tracks have been played

> repeatedly until "appears in the

#### Cueing to the start of a group (Group Skip)

#### On the remote control

1 During playback, press ☐ + or -.
Pressing the ☐ - button cues to the first track in the current group. Pressing the button again cues to the first track of the previous group. During group skip, the "3-color info-LED" on the player flashes

#### On the player

**1** During playback, press GROUP. The "3-color info-LED" lights up in

2 Press **◄◄** or **▶▶**!

#### Selecting the play mode for group play (Group Play Mode)

The shuffle play and program play function can be used during group play mode.

**1** Press P MODE/

□ repeatedly. After normal playback, the following play modes are displayed:

Display	Play mode
(Normal Group Play)	All tracks in the group play back once (startin with the first track in group 1).
SHUF (In-Group Shuffle)	Shuffle play starts with the group that is currently playing, and continues with the succeeding groups.
PGM (Group Program)	The groups are played the order that you specified.

#### Repeat play for the selected Adjusting the sound group play mode (Group (Virtual-Surround • 6-Band Equalizer)

You can vary the virtual sound to create different acoustics, or modify the sound to suit your taste and store it for later use. The following two effects can be selected. V-SUR (Virtual-Surround VPT Acoustic


Provides 4 kinds of virtual-surround 6-BAND EQUALIZER Provides 6 different sound qualities

#### Varying the virtual sound to create different acoustics (Virtual-Surround)

During playback, press SOUND repeatedly to select "V-SUR."

**2** Press and hold SOUND for 2 seconds

**3** Slide the jog lever repeatedly to select

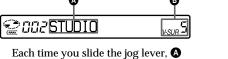

v-sur L

V-SUR C

v-sur A

#### and B change as follows **STUDIO** V-SUR S

**4** Press the jog lever to enter the selected

Selecting the sound quality

1 During playback, press SOUND

**2** Press and hold SOUND for 2 seconds

LIVE

CLUB

ARENA

surround mode.

(6-Band Equalizer)

Refer to the operating instructions of the MD An MD recorder that does not support the

An MD recorder with the group function

Registering groups using an

Playback repeats in the respective

program

Playing groups in a desired

Do the procedure explained in "Listening to

tracks in a desired sequence (Program Play)

to play back groups in a desired sequence

You can program up to 10 groups. The sequence of tracks within the groups cannot

sequence (Group Program

#### The procedure below allows you to assign tracks to a group using the disc name-editing

A Disc name

Track number

Group name

named "Collections

Group name for tracks 1-7:

Group name for tracks 8-17:

Group name for tracks 18-24:

Group name for tracks 25-32:

1-7;My Favorites"2002winter"//

18-24;THE NIGHT BUTTERFLYS/

• The characters ";", "/", and "-" can be used in

• You can register the same group name more

• You can specify a group without entering a group name (©) for it.

Up to 99 groups can be registered on a single MD. The actual number, however, will be less

than 99 if you have entered more characters

• Depending on the specifications of your MD recorder, the group function may not work

than twice on the same MD.

than are allowed per disc.

8-17:Jun&Tac"sunshine head"/

25-32:Dream World/Kiss Me!//

Text string entered

a group name.

Separator between groups

track and the last track

Hyphen placed between the first

(Ex.) Set the following groups for the disc

My Favorites 2002 winte

Jun&Tac"sunshine head

THE NIGHT BUTTERFLYS

Separator between track number and

MD recorder

Specifying groups **1** Change the disc name to the following by using the MD recorder:

0;[Disc name] // [First track of group 1]

[Last track of group 1]; [Name of group 1] // **3** Slide the jog lever repeatedly to select [First track of group 2] - [Last track of group 2] the SOUND mode

[Name of group 2] // .... ₩ BB2 HEAVY

> Each time you slide the jog lever, **A** and **B** change as follows

> > CUSTOM1

CUSTOM2

**HEAVY** SOUND H POPS SOUND P JAZZ SOUND J UNIQUE SOUND U

**4** Press the jog lever to enter the selected SOUND mode

SOUND 1

To cancel the procedure Press and hold the DISPLAY button or the button for 2 seconds or more.

> To cancel the setting Slide the jog lever repeatedly in step 1 above until the indication at **B** disappears.

# "CUSTOM1" and "CUSTOM2."

1 Do steps 1 to 3 above, and then slide the jog lever until "CUSTOM1" or "CUSTOM2" appears.

To modify and store the sound

**2** Press the jog lever.

**3** Slide the jog lever repeatedly to select the

Frequency (100 Hz) From the left, you can select 100 Hz. 250 Hz, 630 Hz, 1.6 kHz, 4 kHz, or

**4** Turn the volume control repeatedly to adjust the level.

> | **∰** @@ ∤c1 □----Level (+10 dB) You can select from among seven levels. -10 dB, -6 dB, -3 dB, 0 dB, +3 dB,

**5** Repeat steps 3 and 4 to adjust the level

+6 dB, +10 dB

**6** Press the jog lever to enter the selection.

### ► Other operations Viewing the track name

and playing time in the display on the remote control You can check the track or disc name, track number, the elapsed playing time of the current track, the number of the tracks

recorded on the MD, the group name, and the total number of tracks in a group. A 0

1 Press DISPLAY on the remote control. Each time you press DISPLAY, the display changes as the follows:

Track number The elapsed time Track number Track name The number of total tracks in the group Disc name The number of total tracks

Track number

Track number

 Depending on whether group play or normal play is selected, the operating conditions, and the disc settings, you may not be able to select certain indications or the indications may

Sound mode

SP/LP mode

• During playback, the SP/LP mode appears momentarily, and is then replaced by the elapsed time of the current track.

# Suppressing the skips of

developed to provide a higher level of shock resistance than that of existing players in order to allow the player to be used while jogging.

The G-PROTECTION function was

The playback sound may skip if:

the player receives stronger continuous
a dirty or scratched MiniDisc is played.

the sound (G-PROTECTION)



### Starting playback quickly (Quick Mode)

After pressing the playback button or cueing to a track, you can start playback quickly This procedure can be done by the remote

- 1 Press and hold DISPLAY for 2 seconds **2** Slide the jog lever repeatedly until
- "OPTION" appears in the display, and then press the jog lever. **3** Slide the jog lever repeatedly until
- "PowerMode" appears in the display, and then press the jog lever.
- **4** Slide the jog lever repeatedly until "QUICK" appears in the display, and then press the jog lever to enter the "QUICK" appears in the display.

To cancel the procedure Press and hold the DISPLAY button or the ■

To cancel the setting

Select "NORMAL" in step 4 above.

## · When the power mode is set to "QUICK," the

power remains on within the player even when othing appears in the display. This leads to a shorter battery life. For this reason, it is nded that you charge the battery dail • If no player operation (including opening or

closing of the lid) occurs for 17 hours, th power in the player automatically turns off. For this reason, the next time you start playback or do another operation, the player will not respond quickly. The unit, however will return to quick mode afterwards.

#### Setting the alarm Changing the playback (Melody Timer) speed (Digital Pitch Control) The alarm is convenient way to remind

The speed control function is useful for language study and other purpose. This function changes the playback speed without changing the playback pitch. The playback speed can be varied from +100% to -50% the normal speed, in 13 steps This procedure can be done by the remot

**1** During playback, press and hold DISPLAY for 2 seconds or more.

**3** Slide the jog lever repeatedly until

- "USEFUL" appears in the display, and **2** Slide the jog lever repeatedly until then press the jog lever. "USEFUL" appears in the display, and **3** Slide the jog lever repeatedly until then press the jog lever
  - "M-TIMER" appears in the display and then press the jog lever.
- "DPC" appears in the display, and **4** Slide the jog lever repeatedly until then press the jog lever. "ON" appears in the display, and then The player changes to speed-setting press the jog lever. mode. Select the speed while listening (•) appears. **₩**00}TIMER 15

**4** Slide the jog lever repeatedly to select the speed, and then press the jog lever to enter the speed. "DPC" appears in the display

To cancel the procedure Press and hold the DISPLAY button or the button for 2 seconds or more

Once you open the lid, the playback speed

When using digital pitch control, you may hear

Storing the settings for

(Personal Disc Memory)

Settings can be memorized for a disc. Once

display, the settings are recalled, and applied

memorized. "PERSONAL" appears in the

reverts back to the normal speed (0%)

noise or an echo in the playback.

individual discs

whenever the disc is inserted.

Play mode

Bookmark

Program setting

The following settings can be stored:

Virtual surround/6-band equalize

• Playback speed (Digital Pitch Control)

This procedure can be done by the remot

**2** Slide the jog lever repeatedly until

**3** Slide the jog lever repeatedly until

"Entry?" flashes in the display

and then press the jog lever

**4** Press the jog lever to enter the

then press the jog lever.

l**≘**88 tEntry?

personal disc memory

information is erased.

appears in the display.

**1** Press and hold DISPLAY for 2 seconds

'USEFUL" appears in the display, and

'PERSONAL" appears in the display,

"Entry OK" appears in the display and

the disc settings are stored in the

To erase the information recorded in

Insert the disc whose information is to be

erased and verify its contents. After step 3

above, slide the jog lever repeatedly to flash

"Erase?" in the display. And then press the

jog lever to enter the selection. "Erase OK"

If you try to erase the disc information of a

disc that has never been stored, "No Entry!"

• Settings can be stored for up to 20 discs. Any

settings for the MD with the oldest playback

If you use another MD recorder to edit or add

tracks to a disc whose settings have been stored

settings stored thereafter will replace the

on the player, the disc will no longer be

information will become useless.

recognizable by the player and the stored

yourself of important times, such as when to

get off the train. The alarm can be set to go

This procedure can be done by the remote

**2** Slide the jog lever repeatedly until

off while the player is stopped

off in 1 to 99 minutes. The alarm will also go

**1** Press and hold DISPLAY for 2 seconds

appears in the display and the disc

the melody, and then press the jog lever.		
Display	Alarm sound	
"TIMER 1"	Classical music 1	
"TIMER 2"	Classical music 2	

**5** Slide the jog lever repeatedly to select

**6** Slide the jog lever repeatedly to specify

"TIMER 3" Classical music 3

<b>₩</b> @###E:01	((•))
Each time you slide the jog	lever, the

"TIME:99" (1 minute to 99 minutes) in one- minute intervals. **7** Press the jog lever to enter the setting.

indication moves from "TIME:01" to

To cancel the procedure Press and hold the DISPLAY button or the button for 2 seconds or more

#### To check the remaining time until the alarm Stop playback. The remaining time will

ear in the display after a short while Do steps 1 to 6 again to display the remaining time during play or play-pause To cancel the alarm settings

Select "OFF" in step 4 above

To stop the alarm Press any button to stop the alarm.

#### • If you end the procedure with step 4, the evious setting is automatically use · After sounding for 1 minute, the alarm will

utomatically stop and the alarm setting will be canceled. If the alarm stops during stop mode then the power will automatically fur off 10 seconds after the alarm stops. If the alarm stops while an MD is playing, the playback will continue uninterrupted

The timer will begin counting from the moment

you select "ON" in step 4. When you change the

alarm setting in step 6, timer will begin counting

Protecting your hearing

AVLS (Automatic Volume Limiter System

**1** During playback, press and hold

DISPLAY for 2 seconds or more.

**2** Slide the jog lever repeatedly until

**3** Slide the jog lever repeatedly until

then press the jog lever.

"OPTION" appears in the display, and

function keeps down the maximum volume

again with the new alarm setting.

(AVLS)

to protect your ears.

- then press the jog lever.
- "Backlight" appears in the display, and then press the jog lever **4** Slide the jog lever repeatedly to select

	0 0
Display	Setting
AUTO	The backlight lights when you operate the player or the remote control, and automatically turns off when no operation is made for a while (factory setting).
ON	The backlight lights while the player is operating.
OFF	The backlight stays off.

### Locking the controls (HOLD)

1 Slide HOLD on the remote control in the direction, and slide HOLD on the player in the ▶ direction. Sliding HOLD on the remote control disables the controls on the remote control. Sliding HOLD on the player disables the controls on the player

To unlock the controls Slide HOLD to the opposite directions of the

### Preserving battery power (Power Save Mode)

This function allows you to maximize the operating life of the battery. Power umption is reduced by turning off the "3-color info-LED" at all times, or by turning off the display when no operation has been made for a while This procedure can be done by the remote

- **1** Press and hold DISPLAY for 2 seconds
- **2** Slide the jog lever repeatedly until "OPTION" appears in the display, and then press the jog lever.

#### Turning off the beep sound

You can set the beep so that it is not emitted when the player and remote control are This procedure can be done by the remote

- **1** Press and hold DISPLAY for 2 seconds
- Slide the jog lever repeatedly until "OPTION" appears in the display, and then press the jog lever. **3** Slide the jog lever repeatedly until
- "BEEP" appears in the display, and then press the jog lever.
- Slide the jog lever repeatedly until "BEEP OFF" appears in the display and then press the jog lever to enter To cancel the procedure

To cancel the setting Select "BEEP ON" in step 4 above.

#### Turning on/off the backlight in the display of the remote control

Press and hold the DISPLAY button or the ■

You can set the backlight in the display on the remote control. This procedure can be done by the remote

**1** Press and hold DISPLAY for 2 seconds

- **2** Slide the jog lever repeatedly until 'OPTION" appears in the display, and
- Slide the jog lever repeatedly until

one of the following settings:

AUTO	The backlight lights when you operate the player or the remote control, and automatically turns off when
	no operation is made for a while (factory setting).
ON	The backlight lights while the

**5** Press the jog lever to enter the setting.

then press the jog lever. **4** Slide the jog lever repeatedly until "AVLS ON" appears in the display and then press the jog lever to enter the selection

"AVLS" appears in the display, and

"AVLS ON" appears in the display.

# To set the AVLS function on the

During playback, slide HOLD in the direction of >, and then while pressing towards VOL slide HOLD in the opposite direction To cancel the AVLS function

On the remote control, select "AVLS OFF" in step 4 above and press the jog lever. On the player, during playback, slide HOLD in the direction of ▶. and then while pressing towards VOL +, slide HOLD in the opposite

#### **3** Slide the jog lever repeatedly until 'PowerMode" appears in the display and then press the jog lever.

To cancel the procedure Press and hold the DISPLAY button or the button for 2 seconds or more.

**4** Slide the jog lever repeatedly until

PowerSave" appears in the display,

and then press the jog lever to enter

The "3-color info-LED" turns off.

To turn on the "3-color info-LED" Select "NORMAL" in step 4 above

### ▶Power sources

the selection

### When to recharge the built-in battery

You can check the battery condition through the battery indicator on the remote control and the "3-color info-LED" on the player while using the player

Indicator on the remote control Weak battery

The battery has gone out. "LOW BATT" flashes in the display, and the power goes off Indicator of the "3-color info-LED" on the

The LED lights up. There is sufficien battery power. The LED flashes slowly. Battery power

The LED flashes quickly. The battery is low The LED will soon supply of power will

• The battery indicator may show the battery to

the battery shorter than the prescribed time will result in a shorter operating time on the • A stronger or weaker battery charge may be indicated when you fast forward or fast reverse an MD, or when you use the player at a very

be fully charged even when it is not. Charging

### cold place. Battery life1)

	(Unit: Approx. hours) (JEITA <sup>2</sup> )		
Batteries	SP Stereo (normal)		LP4 Stereo
Lithium-ion built-in rechargeable battery <sup>3)</sup>	23	33	40

Measured with the power save function on (see 'Preserving battery power") Measured in accordance with the JEITA (Japar Electronics and Information Technology Industries Association) standard (using a Sony

MDW-series Mini-disc). 3) With a fully charged battery The battery life may be shorter than that specified, depending on the operating

## Using house current

ditions, the temperature of the location

You can operate the player even if the built-in hattery is exhausted. To do this connect the battery charging stand to an AC outlet through the AC power adaptor, and then place the player on the stand.

#### ► Additional information 3 Open the lid

**Precautions** 

· Make sure to keep the player in the supplied

or battery charging stand are accidentally

brought into contact with a metallic object

they may short-circuit and begin to heat up.

metallic objects or surfaces. Such contact may

Do not put any foreign objects in the DC IN 6V jack.

· If you will not use the player for a long time

be sure to disconnect the power supply (AC power adaptor or battery charging stand).

When disconnecting the AC power adaptor

On the AC power adaptor (for the

supplied battery charging stand)

• For use in your house: Use the supplied A

power adaptor. Do not use any other AC

power adaptor since it may cause the player to

 $\Leftrightarrow = \bigcirc \bigcirc$ 

mality in the AC power adaptor,

disconnect it from the AC outlet immediately

used only with the MZ-E10. It cannot be used

Charge the built-in battery at a temperature of

0°C (+32°F) to +40°C (+104°F). The charging

nperature. (If the surrounding temperatur

longer. This is a characteristic of the built-in

ocedure; this, however poses no danger

Because of the battery's characteristics, the

capacity of the built-in rechargeable batter

may be smaller than normal when it is used

disuse. In this case, charge and discharge the

battery several times. The normal battery life

for the first time or after a long period of

· If the life of the built-in rechargeable battery

should be replaced. Consult your nearest

• If the player will be unused for a long time.

Before you dispose of the unit, remove the

drops to half the normal length, the battery

remove the player from the battery charging

stand and remove the AC power adaptor from

for 3 months or more, we also recommend that

you turn the BUILT-IN BATTERY switch (for built-in rechargeable battery) on the side of the

the wall outlet. If the player will be unused

time will vary according to the surrounding

is low, the required charging time will be

The battery charging stand and the player

may become hot during the charging

o charge any other models.

lithium-ion battery.)

player off.

On disposing of the unit

built-in rechargeable battery for

Do not remove the screw except when

· Before removing the built-in rechargeabl

pattery, make sure it is completely drained

Do the following procedure to remove the

the battery, use sharp-tipped tweezers.

built-in rechargeable battery. When removing

1 Slide the BUILT-IN BATTERY switch on the

2 Remove the screw to the right of the BUILT-IN

BUILT-IN BATTER

OFF

environmental protection.

disposing of the unit.

from the electrical outlet, grasp the adaptor

Keep the terminals on the player away from

short-circuit the terminals and cause

dangerous heat generation.


plug itself: never pull the cord.

malfunction.


On charging

carrying pouch. If the terminals on the player


On safety

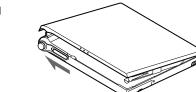


4 Pull up on the battery holder to remov

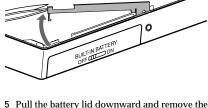


lid and the switch piece

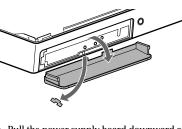


battery and the player.

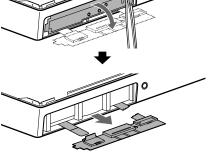

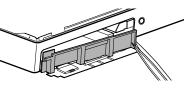

7 Remove the board holder

8 While pulling out the power supply board

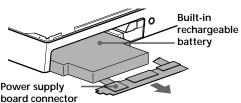

9 Attach a piece of insulating tape over the power supply board connector

## On handling

- Do not drop or bump the player. This may cause the player to malfunction. • Do not pull on the remote control or
- headphones/earphones cords • Do not place the player in the following
- An extremely hot place (over 60°C (140°F)) A place exposed to direct sunlight or near a
- In a car with the windows rolled up (especially in the summer) – În a damp place such as a bathroon Near a source of electromagnetic fields
- such as a magnet, speaker, or TV In a dusty place On heat build-up

Heat may build up in the player when it is charging or operated for a long time. This, On mechanical noise

#### The player emits mechanical noise while operating, which is caused by the powersaving system of the player. This is not a

#### On installation Never use the player where it will be subjected to extremes of light, temperature, isture or vibration.

· Never wrap the player in anything when it is being used with the AC power adaptor. Heat build-up in the player may cause malfunction On the remote control The supplied remote control is designed for

use with the MZ-E10 only. Note also that the



Do not touch the internal disc directly ernal disc.

On the MiniDisc cartridge

player cannot be controlled by remote

controls for other models.

Forcing the shutter open may damage the • When transporting a minidisc, keep it in its

· Do not place the cartridge where it will be subjected to light, temperature, moisture o

Do not affix the label outside of the specified area on the MD. Make sure the label is placed within the recessed space on the disc.

#### Road safety • Do not use headphones/earphones while

On the headphones/earphones

driving, cycling, or operating any motorized vehicle. This may lead to a traffic acciden and is illegal in many areas. It can also be ially dangerous to play your player high volumes while walking, especially at pedestrian crossings. You should exer extreme caution or discontinue using the player in potentially hazardous situa If you experience an allergic reaction to the

upplied headphones/earphones, stop usin them at once and consult a doctor or a Sony

volumes. Hearing experts advise against continuous, loud and extended play. If you Recharge the built-in battery • An MD with nothing recording on it is experience a ringing in your ears, reduce the inserted ("BLANKDISC" appears on volume or discontinue use the remote contro Insert a recorded MD. Caring for others

Keen the volume at a moderate level. This will allow you to hear outside sounds and to be considerate of the people around you.

#### On cleaning After wiping the player casing with a soft

cloth slightly moistened with water, wipe it again with a dry cloth. Do not use any type of abrasive pad, scouring powder or solvent such as alcohol or benzene as this may mar the finish on the casing. • Wipe the disc cartridge with a dry cloth to

Dust on the lens may prevent the unit from

operating properly. Be sure to close the disc compartment lid after inserting or ejecting an 2 Let the player sit for about 30 To maintain good sound quality, use a sof 3 Turn the BUILT-IN BATTERY cloth to clean the plugs of the headphones earphones and remote control. A dirty plug

may cause noise or intermittent breaks in the sound during playback There is no sound output from the headphones/earphones. If you have any questions or problems • The headphones/earphones plug is no concerning your player, please consult you firmly inserted. → Insert the headphones/earphones

#### nearest Sony dealer. (If a trouble occurred when the disc was in the player, we commend that the disc be left in the playe when you consult your Sony dealer so that the cause of trouble may be better

#### **Troubleshooting** The MD does not play normally.

The built-in rechargeable battery does not charge. • The rechargeable battery has been fully charged. (The battery is charged when

→ Check the battery indicator on the remote control for the remaining

 The built-in rechargeable battery is drained. (If the player is on the battery charging stand, the "3-color info-LED" does not light on or the "CHG:-ndication does not appear in the display on the remote control )

 It takes about one minute after placing the player on the battery stand for an indication to appear and charging to start. The surrounding temperature is too

high or too low ("CannotCHG" appears → Charge the battery at a temperature of  $0^{\circ}$ C (+32°F) to +40°C (+ $104^{\circ}$ F).

#### The "3-color info-LED" does not light up even when the player is placed on the battery charging stand • The BUILT-IN BATTERY switch on the

→ Turn the BUILT-IN BATTERY

The player does not work or works • You tried to play with no disc in the

player ("NO DISC" appears on the remote control). → Insert an MD.

controls are locked. (If you press any of

direction of the arrow to release the

• The BUILT-IN BATTERY switch on the

→ Turn the BÜILT-IN BATTERY

• You pressed a button on the player

• Moisture has condensed inside the

Take the MD out and wait for

• The player cannot read the disc. (it's

scratched or dirty) ("READ ERR" or

"TOC ERR" appears on the remote

• While operating, the player received a

abnormal power voltage caused by

1 Turn the BUILT-IN BATTERY

switch on the side of the player

switch on and connect the player

plug firmly to the remote control

→ Cancel the AVLS function. For more

→ Insert the headphones/earphones

plug firmly into the  $\Omega$  jack.

details, see "Protecting your

The player is set to the repeat mode

The MD does not play from the first

→ Open the lid, or while the player is

playing from the first track.

• The player is placed where it receives

→ Place the player at a stable place.

· A very short track may cause sound to

· Strong magnetism from a television or

other device causing interference

→ Move the player away from the

source of strong magnetism

• The sound was recorded in LP4 stereo

compression method used in LP4

mode, noise may be output on very

rare occasions during playback of

sound recorded in this mode

→ Because of the nature of the

stopped, press and hold the jog

lever for 2 seconds or more to star

• The disc stopped playing before

reaching the last track.

The playback sound skips.

continuous vibration.

The sound has a lot of static.

Noise is momentarily heard.

→ Press and hold the P MODE/⊂

button on the remote control until

"

¬" disappears, then start playing

AVLS is on

track.

mechanical shock, too much static,

Restart the player as follows:

to a power source

→ Reinsert or replace the disc.

several hours until the moisture has

while making a setting on the remote control. ("MENU" appears on the

emote control when a button on the

End the setting procedure using the

· The hold function is activated and the

the operation buttons on the player.

HOLD" appears on the remote

→ Slide HOLD in the opposite

hold function.

switch to on.

player is pressed.)

remote control

control.)

side of the player is off.

The group function does not function • A disc that has no group settings is

• Power save mode is activated.

→ Cancel power save mode

not turn on.

→ Insert a disc with group settings

During playback, the "3-color info-LED"

or display on the remote control does

#### **Specifications** Audio playing system

EFM (Eight to Fourteen Modulation

Headphones/earphones: dedicated headphone

Lithium-ion rechargeable battery (Built-in: LIP

External power jack (for the battery charging

See "When to recharge the built-in battery

Approx. 55 g (1.9 oz) (including the built-in

AC power adaptor (for the supplied battery

US and foreign patents licensed from Dolby

Design and specifications are subject to change

AC-E60L (for use in Japan), AC-E60A (for World

model), AC-E60HG (for use outside Japan

MDR series stereo headphones/earphones

\* On the stereo headphones/earphone

unit or to a remote control, use only

microplug cannot be used.

MDR-NC11, and MDR-NC5.)

directly to the player

Whether you should plug the headphones

earphones directly to the \( \hat{\cap} \) jack on the main

eadphones/earphones with stereo mir

Some models of noise cancelling headphones

Your dealer may not handle some of the above

Connecting a headphones/earphones

Headphone adaptor

listed accessories Please ask the dealer for

detailed information about the accessories in

Connect the headphones/earphones and the

supplied headphone adaptor as follows:

Stereo mini plug (supplied)

arphones cannot be used with the MZ-E10

(For Sony products, there are the MDR-NC20

plugs. Headphones/earphones with a

Headphones/earphones with a remote control (1)

Approx.  $81.9 \times 72.2 \times 9.9 \text{ mm (w/h/d)}$ 

remote control jack, maximum output level

5 mW + 5 mW load impedance  $16 \Omega$ 

3WMB. 3.7 V. 340 mAh. Li-ion)

tand): Power rating 6 V DC

Battery operation time

Supplied accessories

Battery charging stand (1)

Optional accessories

SRS series Active Speakers

C power adaptor

vour country.

charging stand) (1) Headphone adaptor (1)

Carrying pouch (1)

MiniDisc digital audio system

Laser diode properties

44.1 kHz

2 stereo channels

monaural channel

Frequency response

20 to 20,000 Hz ± 3 dB

Power requirements


Wavelength:  $\lambda = 790 \text{ nm}$ Laser output: less than 44.6 uW\* This output is the value measured at a distance of 200 mm from the objective lens surface on he optical pick-up block with 7 mm apertur Revolutions Approx. 300 rpm to 2,700 rpm Error correction ACIRC (Advanced Cross Interleave Reed Solomon Code) Sampling frequency

\* has a tactile dot The display window of the remote

Character information display Group play indication

# Parts and controls

The Player

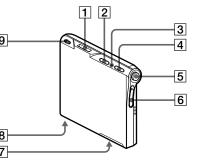

**GROUP** button '3-color info-LED"

HOLD (Locking the control) switch

• **II** • VOL + -) 6 OPEN switch 7 BUILT-IN BATTERY switch (at the


8 Terminals for charging stand (at the 9 Hand strap hole Use the hole to attach your strap



2 Track number display

5 Play mode indication 6 Virtual Surround/6-band equalize indications


7 Battery level indicatio Bookmark indication

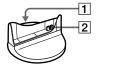

DC IN 6V jack (at the bottom) Terminals for charging

The battery charging stand

The headphones/earphones with a emote control

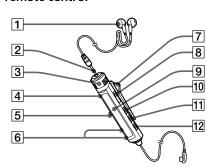

Stereo mini plug 3 Volume control VOL +. -Turn to adjust the volume ■ (stop) button

Headphones/earphone

Jog lever (I◀◀ • ▶II /ENT • ▶►I) (Group) +, - buttor HOLD switch

Display windov DISPLAY button P MODE / (play mode/repeat) button

12 SOUND button

9 Alarm indication

## This warranty is valid only in the United States

LIMITED WARRANTY Portable Audio

PARTS: In addition, Sony will supply, at no charge, new or rebuilt replacements in exchange for defectivents for a period of one (1) year, After 90 days from the date of purchase, labor for removal and installation wallable from Sony authorized service facilities or a Sony Service Center at your expense.

warranty is invalid if the factory applied serial number has been altered or r

THE EAS OF THE SAME THE SAME THE SAME THE EAST OF THE SAME T

To locate the servicer or dealer nearest you, or for service assistance or resolution of a service problem, or for product information or operation, call:

http://www.sonv.net/

#### SONY Tape Cassette Player/Recorder/CD Player/Mini Dis

LABOR: For a period of 90 days from the date of purchase, if this Product is det ony will repair or replace the Product, at its option, at no charge, or pay the labor cha zed service facility. After the Warranty Period, you must pay for all labor charges.

n warranty service, you must take the Product, or deliver the Product freight prepaid, in either its original ng or packaging affording an equal degree of protection, to any authorized Sony service facility. nis warranty does not cover customer instruction, installation, set up adjustments or signal reception pro

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THI CONSUMER, SONY SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR

your convenience. Sony Electronics Inc. has established tel

#### Battery power decreasing evaporated. Polarity of the plug ATRAC (Adaptive TRansform Acoustic Coding) • The built-in rechargeable battery is 6 Pull the power supply board downward and ATRAC3: LP2/LP4 · Connect the AC power adaptor to an easily letach it from the built-in rechargeable Preventing hearing damage weak ("LOW BATT" appears on the accessible AC outlet. Should you notice an Avoid using headphones/earphones at high