

TEMPORIS 08

Guide d’utilisation User guide

	- Accéder au répertoire <ul style="list-style-type: none">- Lancer un appel (le combiné devra être décroché dans les 10 secondes) - Valider un choix dans le menu	
	- Supprimer une fiche du journal des appelants <ul style="list-style-type: none">- Effacer un caractère	
	- Clignote à l'arrivée d'un appel pour signaler un appel non répondu ou un nouveau message sur votre messagerie opérateur *	
	Accéder au Menu principal : <ul style="list-style-type: none">- régler l'heure et la date - sélectionner la langue du menu et le contraste de l'afficheur	
	- Consulter le journal des appelants <ul style="list-style-type: none">- Naviguer dans les menus	
	Mémoriser un numéro dans le répertoire	
	Accéder au répertoire	
	- Rappeler le dernier numéro composé (Bis) <ul style="list-style-type: none">- Insérer une pause en numérotation	

L'afficheur :	
Indicateur du niveau de charge des piles (clignotant = piles à remplacer)	Nouveau message reçu sur la messagerie opérateur
Heure / date	Position dans le journal des appelants (compteur)
	
Appel non répondu et non consulté dans le journal des appelants	

1. PREMIERE UTILISATION

1.1 RECOMMANDATIONS

- Ne pas exposer le téléphone à la lumière du soleil ou à une température excessive.

- Température de fonctionnement comprise entre + 5°C et + 40°C.

- Votre téléphone doit être installé à au moins 1 mètre d'un équipement radio de type télévision, téléphone cellulaire, etc.

Attention : Ne jamais mettre l'appareil au contact de l'eau. Utilisez un chiffon humide pour nettoyer votre téléphone. Ne jamais employer de solvants (trichloréthylène, acétone ...) susceptibles d'endommager les surfaces plastiques, ne jamais vaporiser de produits nettoyants.

En cas d'orage, il est recommandé de ne pas se servir du téléphone.

1.2 INSTALLATION

Votre téléphone **Temporis 08** se compose :

- d'un socle et d'un combiné,
- d'un cordon spiralé et d'un cordon téléphonique,
- d'une étiquette pour les numéros mis en mémoire.

- Connecter le cordon spiralé à l'extrémité du combiné et à la prise située sur le devant de la base.
- Connecter le cordon téléphonique à la prise située sous la base et passer le fil dans la rainure prévue à cet effet. Brancher l'autre extrémité du cordon dans la prise téléphonique murale.

1.3 INSERTION OU REMPLACEMENT DES PILES

Votre téléphone fonctionne avec 4 piles alcalines LR6-AA 1.5 V (sans mercure ni cadmium) qui ne sont pas fournies avec l'appareil. Pour éviter d'endommager le terminal, utilisez des piles étanches.

La durée de vie des piles est d'environ 5 mois dans des conditions d'utilisation normale.

Lorsque les piles sont déchargées, l'icône  clignote sur l'afficheur ; vous devez les remplacer dès que possible.

Pour installer ou remplacer les piles :

Attention : Pour ne pas perdre les numéros mis en mémoire, les réglages personnalisés de votre téléphone ou le contenu du journal des appelants, le remplacement des piles doit se faire rapidement.

- Pour des raisons de sécurité, débrancher le cordon téléphonique de la prise murale.
- A l'aide d'une pointe de stylo par exemple, ouvrir le compartiment des piles situé sur le dessus de la base.

- Retirer une par une les piles usagées en remplaçant au fur et à mesure chaque pile usagée par une pile neuve et en respectant les polarités indiquées  ou .

- Remettre la trappe en place et rebrancher le cordon téléphonique.

- Régler la date et l'heure comme indiqué au paragraphe 5.1.

Nota : Sans piles ou avec des piles complètement déchargées, **Temporis 08** fonctionne comme un téléphone basique. Vous pouvez recevoir et émettre des appels mais les fonctions liées à l'afficheur (répertoire, présentation du nom et du numéro, journal des appels ...) ne sont plus actives.

1.4 FIXATION MURALE

- Retirer l'ergot (petite pièce plastique striée) situé sur la base et le replacer dans la position inverse.

- Faire passer le cordon de ligne dans la rainure située sous la base.

- Percer 2 trous verticaux distants de 83 mm. Insérer des chevilles puis visser des vis à bois (3 mm de diamètre, 30 mm de long) sans les bloquer. Fixer la base sur les 2 vis en la tirant vers le bas.

Pour améliorer la lisibilité de l'afficheur, vous pouvez régler le contraste lumineux de l'écran ; reportez-vous au paragraphe 5.3.

2. TELEPHONER

2.1 RECEVOIR UN APPEL

Pendant la phase de sonnerie et si vos piles sont chargées correctement, le voyant rouge du combiné clignote et vous signale l'arrivée d'un appel si vous avez coupé la sonnerie.

- Pour prendre l'appel, décrocher le combiné.

2.2 REGLER LA SONNERIE

● Déplacer le curseur situé sur le côté de la base. Vous disposez de 3 niveaux sonores : haut () , faible () et sonnerie coupée () (l'indicateur lumineux signalera l'arrivée d'un appel).

2.3 EMETTRE UN APPEL

- Prendre la ligne en décrochant le combiné. Le chronomètre se met en route.

- Numérotar.

- Raccrocher en fin de communication en reposant le combiné sur sa base.

2.4 REGLER LE VOLUME DE L'ECOUTEUR

En cours de conversation,

- Déplacer le curseur situé sur le côté du combiné  . Vous disposez de 3 niveaux sonores : haut, moyen, faible.

2.5 RAPPELER LE DERNIER NUMERO COMPOSE (BIS)

- Décrocher le combiné.

- Appuyer sur  .
 - Le dernier numéro composé (numérotation manuelle ou répertoire) est automatiquement appelé.

2.6 COPIER DANS LE REPERTOIRE LE DERNIER NUMERO COMPOSE

- Décrocher le combiné.

- Appuyer sur  pour rentrer en mode programmation.

- Saisir le numéro de mémoire à attribuer (de 0 à 9).
- Valider en appuyant sur .

- Appuyer sur .

- Valider en appuyant sur .

- Raccrocher le combiné.

3. LE REPERTOIRE

Temporis 08 vous permet d'accéder rapidement à l'un de vos 10 numéros préférés. L'étiquette autocollante livrée avec votre poste vous permet de les identifier, vous pouvez la coller sur la base sur l'emplacement prévu à cet effet, au-dessus du compartiment à piles.

3.1 MEMORISER UN NUMERO

- Décrocher le combiné.

- Appuyer sur  pour rentrer en mode programmation.

- Saisir le numéro de mémoire à attribuer (de 0 à 9).

- Valider en appuyant sur .

- Composer le numéro de téléphone à mémoriser, 16 chiffres maximum.

Pour insérer une pause, appuyer sur  . En cas d'erreur, appuyer sur  pour effacer un chiffre.

- Valider en appuyant sur .

Nota : Pour copier dans le répertoire un numéro du Journal des appelants ou le dernier numéro composé, reportez-vous aux paragraphes 4.5 et 2.6.

3.2 EFFACER UN NUMERO DU REPERTOIRE

- Décrocher le combiné.

- Appuyer sur  pour rentrer en mode programmation.

- Saisir le numéro de mémoire à supprimer (de 0 à 9).

- Effacer par un appui long (3 secondes) sur .

3.3 APPELER A PARTIR DU REPERTOIRE

- Décrocher le combiné.

- Appuyer sur  pour accéder au répertoire.

- Saisir le numéro de mémoire à appeler (de 0 à 9).

ou, lorsque le combiné est raccroché :

- Appuyer sur .

- Appuyer sur  ou  pour faire défiler les numéros du répertoire, lorsque le numéro désiré s'affiche.

- Appuyer sur  pour lancer l'appel. Comme indiqué sur l'afficheur, le combiné doit être décroché dans les 10 secondes.

4. CONSULTER LE JOURNAL DES APPELANTS *

Avec un abonnement auprès de votre opérateur au service "Présentation du Nom" ou "Présentation du Numéro", votre téléphone vous donne accès à la liste des 75 derniers appels reçus (répondus ou non répondus). Vous savez ainsi qui a appelé en votre absence, vous pouvez aussi décider de prendre l'appel ou non avant de décrocher et, si vous êtes en plus abonné au service "Signal d'appel", vous pourrez voir qui cherche à vous joindre tandis que vous êtes déjà en ligne.

Lorsque le combiné est raccroché l'afficheur indique :

 
- "BIENVENUE" : aucun appel n'est resté sans réponse.
- "1 NOUV. APPEL" ou "X NOUV. APPELS" : 1 ou plusieurs appels non répondus sont enregistrés dans le journal. Le voyant lumineux situé sur le dos du combiné clignote. Lors de la consultation du journal, le pictogramme  (pour nouveau) sera associé au numéro de votre correspondant.
- "1 APPEL" ou "XX APPELS" : 1 ou plusieurs appels déjà consultés sont enregistrés dans le journal.

4.1 CONSULTER LE JOURNAL

- Appuyer sur  ou  pour accéder au journal des appelants, le dernier appel reçu apparaît en premier.

- Utiliser ensuite les mêmes touches  ou  pour passer en l'écran indique : "CHOISIR LANGUE".

Quand vous consultez le journal, l'afficheur indique :

Signale un appel non-répondu à la première consultation du journal		Indique le rang de la fiche consultée (compteur du journal)
Heure et date de réception de l'appel		
Nom du correspondant s'il est transmis par le réseau (dans le cas d'un abonnement au service " Présentation du Nom" auprès de votre opérateur) ou, si le n° est enregistré dans le répertoire, le n° de la mémoire correspondante.		Numéro du correspondant ou raison de son absence (appel de l'étranger, le correspondant a masqué son n°, service indisponible ...)

Nom du correspondant s'il est transmis par le réseau (dans le cas d'un abonnement au service " Présentation du Nom" auprès de votre opérateur) ou, si le n° est enregistré dans le répertoire, le n° de la mémoire correspondante.

Numéro du correspondant ou raison de son absence (appel de l'étranger, le correspondant a masqué son n°, service indisponible ...)

4.2 APPELER UN NUMERO DU JOURNAL

- Décrocher le combiné.

- Appuyer sur  ou  pour accéder au numéro souhaité.

- Appuyer sur  pour lancer l'appel.

ou, si vous consultez le journal tandis que le combiné est raccroché :

- Appuyer sur  ou  pour accéder au numéro souhaité.

- Appuyer sur  pour lancer l'appel. Comme indiqué sur l'afficheur, le combiné doit être décroché dans les 10 secondes.

4.3 EFFACER UN NUMERO DU JOURNAL

Quelle que soit la façon dont vous consultez le journal, combiné décroché ou raccroché :

- Appuyer sur  ou  pour accéder au numéro souhaité.

- Appuyer sur  pour effacer le numéro apparaissant à l'écran.

! Attention : L'effacement est immédiat.

4.4 EFFACER TOUS LES NUMEROS DU JOURNAL

Là encore, quelle que soit la façon dont vous consultez le journal, combiné décroché ou raccroché :

- Appuyer sur  ou  pour accéder au journal.

- Appuyer quelques secondes sur  jusqu'à ce que l'afficheur indique : "TOUT EFFACER ?"

- Pour confirmer l'effacement appuyer de nouveau sur .

ou

- Pour annuler l'effacement appuyer sur  ou  ou  ou .

4.5 COPIER DANS LE REPERTOIRE UN NUMERO DU JOURNAL

- Décrocher le combiné.

- Appuyer sur  ou  pour consulter le journal et accéder au numéro souhaité.

- Appuyer sur  pour rentrer en mode programmation.

- Saisir le numéro de mémoire à attribuer (de 0 à 9).

- Valider en appuyant sur .

- Raccrocher le combiné.

4.6 SORTIR DU JOURNAL DES APPELS

A tout moment, pour sortir du journal des appels, appuyer 2 fois sur .

5. PERSONNALISER VOTRE TELEPHONE

En appuyant sur la touche , l'afficheur vous invite à utiliser les touches  ou  pour faire défiler les possibilités de réglages suivants :

- Mettre à jour l'heure et la date.

- Choisir la langue de l'afficheur.

- Régler le contraste lumineux de l'écran.

- Sélectionner le temps de flashing.

- Paramétrer le mode de numérotation.

Lorsque l'option qui vous intéresse s'affiche, valider votre choix en appuyant de nouveau sur .

Si vous souhaitez sortir du menu de réglage, choisissez la dernière option : "SORTIR REGLAGES".

5.1 METTRE A JOUR L'HEURE ET LA DATE

La mise à jour de la date et de l'heure se fera automatiquement à la réception du premier appel si vous êtes abonné au service "Présentation du numéro". Vous pouvez aussi effectuer le réglage manuellement :

- Appuyer sur  et utiliser les touches  ou  jusqu'à ce que l'écran indique : "DATE/HEURE".

- Accéder au sous-menu en appuyant de nouveau sur , l'heure clignote.

- Appuyer sur  pour faire défiler les choix possibles.

- Appuyer sur  pour confirmer et passer au réglage des minutes.

- Procéder de la même façon :  pour sélectionner une valeur et  pour valider et passer au réglage suivant (jour et mois).

- Valider en appuyant sur , lorsque la mise à jour de la date et de l'heure est terminée.

Si vous avez enregistré une mauvaise date (30 février par exemple), "ERREUR" apparaît à l'écran. Vous pouvez alors recommencer le réglage du jour et du mois.

5.2 CHOISIR LA LANGUE DE L'AFFICHEUR

Vous avez le choix entre 4 langues : anglais, français, espagnol et italien. Pour modifier ce réglage :

- Appuyer sur  et utiliser les touches  ou  jusqu'à ce que l'écran indique : "CHOISIR LANGUE".

- Accéder au sous-menu en appuyant de nouveau sur .

- Appuyer sur  ou  pour faire défiler les choix possibles.

- Valider votre sélection en appuyant sur .

5.3 REGLER LE CONTRASTE LUMINEUX DE L'ECRAN

Pour garantir une bonne lisibilité de l'afficheur il vous faudra peut-être régler son contraste lumineux (5 niveaux au choix). Ce réglage dépend de l'endroit où se situe votre téléphone ainsi que de sa position (murale ou posée sur un meuble).

- Appuyer sur  et utiliser les touches  ou  jusqu'à ce que l'écran indique : "REGL. CONTRASTE".

- Accéder au sous-menu en appuyant de nouveau sur .

- Appuyer sur  ou  pour faire défiler les choix possibles.

- Valider votre sélection en appuyant sur .

5.4 SELECTIONNER LE TEMPS DE FLASHING

- Appuyer sur  et utiliser les touches  ou  jusqu'à ce que l'écran indique : "TEMPS DE FLASH".

- Accéder au sous-menu en appuyant de nouveau sur .

- Appuyer sur  ou  pour faire défiler les choix possibles : 100, 300 ou 600

The keys:

-  - Open the speed dial list
-  - Initiate a call (the handset needs to be picked up within 10 seconds)
-  - Validate a menu option

-  - Delete an entry from the call log
-  - Erase a character

-   Flashes to indicate incoming calls, unanswered calls, or new messages in your voicemail *

-  Access to the main menu:
 -  - set date and time
 -  - select menu language and display contrast

-  - Consult call log
-  - Navigate the menus


-  Store a number in the speed dial list

-  Open the speed dial list

-  - Redial last number
-  - Insert pause in dialling



The display:

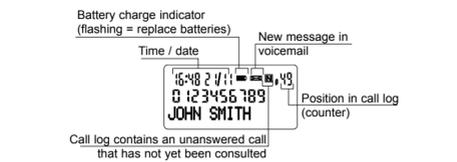

1. FIRST USE

1.1 RECOMMENDATIONS

- Do not expose your telephone to direct sunlight or extreme temperatures.
- Operating temperature: between + 5°C and + 40°C.
- Position the telephone at least 1 meter away from potential sources of interference such as TVs and cell phones.

Caution: Avoid contact with water. Use a damp cloth for cleaning. Never use solvents (trichlorethylene, acetone, etc.) which might damage the plastic surfaces, and never spray cleaning products on your set.

Avoid using the telephone during electrical storms.

1.2 INSTALLATION

Your **Temporis 08** telephone consists of:

- a base and a handset,
- a spiral cord and a telephone cord,
- a label for the numbers stored in memory.

1. Connect one end of the spiral cord to the end of the handset, and the other to the socket at the front of the base.

2. The telephone cord plugs in under the base (there is a groove for holding the cord). Connect the other end of the cord to the wall telephone jack.

1.3 INSERTING OR REPLACING BATTERIES

Your telephone uses 4 LR6-AA 1.5 V alkaline batteries (mercury and cadmium-free), not supplied. To avoid damaging your set, only use leakproof batteries.

The batteries should last about 5 months under normal conditions of use.

When the batteries are running low, the battery icon  starts flashing. Replace the batteries as soon as possible.

To install or replace the batteries:

Caution: To avoid losing your memorized numbers and customized settings, or the contents of the call log, you need to perform the following operation with reasonable speed.

- For safety reasons, unplug the telephone cord from the wall jack.
- Using a pointed object (the end of a pen, for example), open the battery compartment on the top of the base.
- Take the used batteries out one after the other, replacing each one in turn with a new battery. Make sure you put them in the right way round, with the  or  ends as indicated.
- Replace the battery cover and plug the telephone cord back in.
- Set the date and time as shown in 5.1.

Note: Without batteries or with empty batteries, your **Temporis 08** will still function as a basic telephone: you can make and receive calls, but all display-dependent features (speed dial list, caller ID, call log, etc.) will be disabled.

1.4 WALL MOUNTING

- Extract the peg (small serrated plastic part) from its housing under the base and reinsert it upside-down.
- Run the line cord through the groove under the base.
- Drill 2 vertical holes in the wall, 83 mm apart. Insert the anchors then screw in wood screws (diameter: 3 mm; length: 30 mm) without tightening them. Secure the base onto the screws by pulling it downwards.

You can adjust the display contrast to make it easier to read (see 5.3).

2. USING THE TELEPHONE

2.1 RECEIVING A CALL

During the ringing phase and provided the batteries are charged correctly, the red light on the handset flashes, signalling an incoming call if you have cut off the ringer.

- To take the call, pick up the handset.

2.2 ADJUSTING THE RINGING VOLUME

The ringing volume adjustment is located on the side of the base. There are 3 levels: loud () , soft () and ringer off () (the light will flash when a call is received).

2.3 MAKING A CALL

- Pick up the line by lifting the handset. The timer starts.
- Dial.

- When you have finished, hang up by replacing the handset on the base.

2.4 ADJUSTING THE EARPIECE VOLUME

During a call,

- Slide the cursor on the side of the handset . There are 3 levels: loud, medium and soft.

2.5 REDIALLING THE LAST NUMBER

- Pick up the handset
- Press  .
 - The last number called (whether manually or via the speed dial list) is automatically redialed.

2.6 COPYING THE LAST NUMBER DIALLED INTO THE SPEED DIAL LIST

- Pick up the handset.
- Press  to go into programming mode.
- Enter the memory position (from 0 to 9) that you want to assign to the number.
- Press  to confirm.
- Press  .
- Press  to confirm.
- Replace the handset.

3. THE SPEED DIAL LIST

Your **Temporis 08** gives you rapid access to your 10 most useful numbers. Use the included self-adhesive label to identify them: you can stick it in the space provided on the base, above the battery compartment.

3.1 STORING A NUMBER

- Pick up the handset.
- Press  to go into programming mode.
- Enter the memory position (from 0 to 9) that you want to assign to the number.
- Press  to confirm.
- Key in the telephone number (max. 16 digits).
 - To insert a pause, press  . If you make a mistake, press  to erase the last digit.
- Press  to confirm.

Note: To copy the last number dialled, or a number from the call log, into the speed dial list, see sections 2.6 or 4.5 respectively.

3.2 DELETING A NUMBER FROM THE SPEED DIAL LIST

- Pick up the handset.
- Press  to go into programming mode.
- Enter the memory position (from 0 to 9) to be cleared.
- Press  for 3 seconds to erase the number.

3.3 USING THE SPEED DIAL LIST TO MAKE A CALL

- Pick up the handset.
- Press  to open the speed dial list.
- Key in the desired memory position (from 0 to 9).

or, when on-hook:

- Press  .
- Press  or  to scroll through the speed dial list until you reach the desired number.
- Press  to initiate the call. As indicated on the display, the handset must be picked up within 10 seconds.

4. THE CALL LOG*

If you subscribe to your network operator's "caller ID" or "number announcement" service, your telephone will list the last 75 calls received (answered or unanswered). This will tell you who called while you were away, and you can also decide whether or not to take a particular call. If you also subscribe to the "call waiting" service, you can see who is trying to get through to you while you are already on the line.

When on-hook, the display shows:

- "WELCOME": no unanswered calls.

- "01 NEW CALL" or "XX NEW CALLS": there are one or more unanswered calls in the log. The lamp on the back of the handset flashes. When you consult the log, the icon  (for "new") will be displayed alongside the caller's number.


- "01 CALL" ou "XX CALLS": the log contains one or more calls that you have already consulted, but no new calls.

4.1 CONSULTING THE CALL LOG

- Press  or  to open the call log. Calls are listed in reverse chronological order.

- Use the same keys  or  to scroll through the log. When you are at the beginning or end of the list the display shows: "START/END".

When you consult the log, the display looks like this:

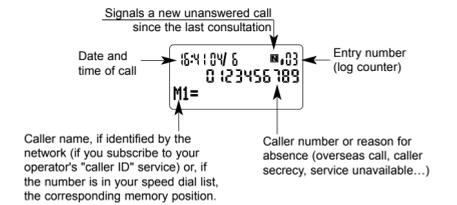

4.2 CALLING A NUMBER FROM THE LOG

- Pick up the handset.
- Press  or  to select the number you want.
- Press  to initiate the call.
- or, if consulting the log while on-hook:
 - Press  or  to select the number you want.
 - Press  to initiate the call. As indicated on the display, the handset must be picked up within 10 seconds.

4.3 DELETING A NUMBER FROM THE LOG

Whether consulting the log on-hook or off-hook:

- Press  or  to select the number you want.
- Press  to delete the number on the display.

! Caution: The number is deleted immediately.

4.4 DELETING ALL THE NUMBERS IN THE LOG

Likewise, whether consulting the log on-hook or off-hook:

- Press  or  to open the log.
- Press  for several seconds until the display shows: "ERASE ALL?"
- To confirm, press  again.

or

- To cancel, press  or  or  or .

4.5 COPYING A NUMBER FROM THE LOG INTO THE SPEED DIAL LIST

- Pick up the handset.
- Press  or  to consult the log and select the number you want.
- Press  to go into programming mode.
- Enter the memory position (from 0 to 9) that you want to assign to the number.
- Press  to confirm.
- Replace the handset.

4.6 QUITTING THE CALL LOG

You can quit the call log at any time by pressing  twice.

5. CUSTOMIZING YOUR TELEPHONE

When you press  , the display prompts you to use the  or  keys to scroll through the following settings options:

- Set time and date.
- Select display language.
- Adjust display contrast.
- Adjust flash rate.
- Set dialling mode.

When the desired option appears, press  again to confirm.

To quit the settings menu, select the last option: "EXIT SETUP".

5.1 SETTING THE TIME AND DATE

If you subscribe to the "number announcement" service, the date and time are adjusted automatically when you receive your first call. You can also adjust them manually:

- Press  and use the  or  keys until the screen shows: "DATE/TIME".
- Press  again to open the sub-menu. The time flashes.
- Press  to scroll through the options.
- Press  to confirm and move on to the minutes.
- Repeat the process:  to select a value and  to confirm and move on to the next adjustment (day and month).
- Once you have finished adjusting the date and time, press  to confirm.

If you enter an invalid date (30 February, for example), "ERROR" appears on the screen. You can then correct the day and month settings.

5.2 SELECTING THE DISPLAY LANGUAGE

You have a choice of 4 languages: English, French, Spanish and Italian.

To select your preferred language:

- Press  and use the  or  keys until the screen shows: "CID LANGUAGE".
- Press  again to open the sub-menu.
- Press  or  to scroll through the options.
- Press  to confirm your selection.

5.3 ADJUSTING THE CONTRAST

In order to be able to read the display comfortably, you may want to adjust the contrast (you have a choice of 5 levels). The optimal setting will depend on where your telephone is located and how it is positioned (i.e. wall-mounted or horizontal).

- Press  and use the  or  keys until the screen shows: "SELECT CONTRAST".

- Press  again to open the sub-menu.

- Press  or  to scroll through the options.

- Press  to confirm your selection.

5.4 ADJUSTING THE FLASH RATE

- Press  and use the  or  keys until the screen shows: "FLASH TIME".

- Press  again to open the sub-menu.

- Press  or  to scroll through the options: 100, 300 or 600 ms.

- Press  to confirm your selection.

Note: The standard setting for France is 300 ms.

5.5 SETTING THE DIALLING MODE

This setting, and the previous (flash rate) setting, only concern particular types of installation such as, for example, behind an enterprise telephony system (PBX).

- Press  and use the  or  keys until the screen shows: "T/P DIAL MODE".

- Press  again to open the sub-menu.

- Press  or  to scroll through the options: voice frequency or pulse.

- Press  to confirm your selection.

Note: The standard setting for France is "TONE DIAL".

6. ACCESSING YOUR OPERATOR'S SERVICES

6.1 VOICEMAIL

If you subscribe to a voicemail service as well as caller ID (ask your operator), the screen will signal the presence of a new message by displaying the icon  .

To listen to the message, call your voicemail service. Once you are connected, a voice prompt will guide you through the process.

6.2 OTHER SERVICES

The ,  and  keys provide access to additional services. Ask your operator or installer for details.

7. WHAT TO DO IF ...

PROBLEM	SOLUTION
There is no tone.	Check that the line cord is correctly connected to the wall jack and the base.
The telephone doesn't ring.	Check that the ringer is not switched off (see 2.2).
You cannot hear your correspondent.	Check that another extension on the installation is not being used at the same time.
The screen contrast is too weak.	Adjust the contrast (see 5.3).
The screen is blank.	The batteries are flat and need replacing (see 1.3).

The store where you bought your telephone can also provide assistance and after-sales service.

8. GUARANTEE

We would remind you that **TEMPORIS 08** is approved in conformity with European regulations, as certified by the  marking.

You are covered by a legal warranty on this product and for all information concerning this warranty, please contact your reseller.

Regardless of the legal warranty on the product, the reseller guarantees conformity of the products with their technical specifications for a period of twelve (12) months, parts and labour, starting from the date on the proof of purchase of the product. You should therefore keep your invoice or till receipt specifying the date of purchase of the product and the name of the reseller. However, if the legal warranty in your country exceeds twelve (12) months, the legal warranty alone then applies. The non-conforming part or product will be repaired or replaced free of charge, by an identical part or product, or one at least equivalent in terms of function and performance. If repair or replacement were to prove impossible, you would receive a refund for the product.

The spare product or part, which may be either new or reconditioned, is guaranteed for a period either of three months from the date of repair, or up to the end of the initial warranty period if this is longer than three months. All parts or products returned and replaced become the property of the manufacturer.

However, this warranty becomes null and void in the following cases:

- installation or use other than as instructed in this guide;
- incorrect connection or abnormal use of the product, in particular with accessories not specifically recommended;
- products which have been knocked or dropped;
- products damaged by lightning, voltage surge, source of heat or radiation, water damage, exposure to excessive humidity, or any other cause outside the product itself;
- normal wear and tear;
- defective maintenance, negligence;
- failure to comply with local technical and safety standards;
- maintenance, modification or repair by a person not approved by the manufacturer or reseller.

SUBJECT TO LEGAL PROVISIONS, ALL WARRANTIES OTHER THAN THOSE DESCRIBED HEREIN ARE EXPRESSLY EXCLUDED.

9. SAFETY / ENVIRONMENT

 Used handset batteries must be disposed of in compliance with current environmental protection regulations. You should return your batteries to your reseller or dispose of them in an approved recycling centre.

Do not attempt to open the batteries as they contain chemical substances. In the event of leakage, avoid contact with the skin, eyes and mouth. If necessary, rinse the affected part for several minutes in running water. Clean the product with absorbent paper or a dry cloth and contact your reseller for replacement batteries.

10. TECHNICAL SPECIFICATIONS / DECLARATION OF CONFORMITY

The **TEMPORIS 08** is designed to send and receive telephone communications and for connection to the public telecommunications network.