 
 


M1220

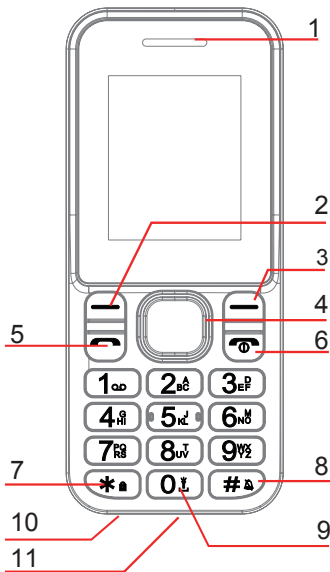 


AEG


Insert SIM1 Card

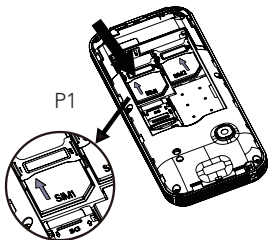

Insert SIM2 Card

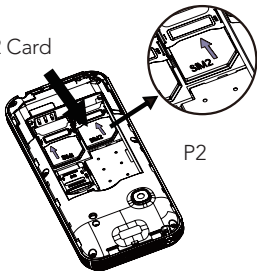

Insert Micro-SD Card

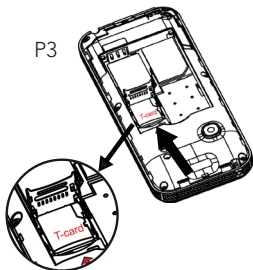 

1 BECAUSE WE CARE

Thank you for purchasing this product. This product has been designed and assembled with utmost care for you and the environment. This is why we supply this product with a quick installation guide to reduce the number of paper (pages) and therefore save trees to be cut for making this paper. Thank you for supporting us to protect our environment. You can find the full user guide on **www.aegtelephones.eu**.

2 SAFETY AND PRECAUTIONS

When using your telephone, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury, including the following:

1. Switch off the phone in the vicinity of chemical plants, gas stations and other locations containing explosive objects.
2. When driving, please use the hands free calling device (to be purchased separately) to ensure safety. Please park the car on the

roadside for communication except in case of emergency.

3. Switch off the phone when boarding an airplane and do not switch the phone on during the flight.
4. Be careful when using the mobile phone in the vicinity of devices such as pacemakers, hearing aids and other electro-medical equipment, which may be interfered by the mobile phone.
5. Never attempt to disassemble the phone by yourself.
6. Do not recharge the phone without battery being installed.
7. Charge the phone in well-ventilated environment and keep away from inflammable and highly explosive elements.
8. To avoid demagnetization, keep the handset away from magnetic substances, such as magnetic discs or credit cards.
9. Keep the phone away from liquid. If soaking or erosion occurs, take the battery out and contact the supplier.
10. Avoid using the phone in extremely high or low temperature environments. Never leave

the phone exposed under direct sunlight, in high humidity or in a dusty environment.

11. Do not use liquid or anything wet with strong detergents to clean the handset.

2.1 Medical units

The use of equipment that transmits radio signals, e.g. mobile phones, can interfere with insufficiently protected medical apparatus. Consult a doctor or the manufacturer of the apparatus to determine if it has adequate protection against external radio signals, or if you have any questions. Wherever there are notices to forbid use of mobile phones, you should comply. Hospitals and other health care facilities sometimes use equipment that can be sensitive to external radio signals.

2.2 Pacemaker

Pacemaker manufacturers recommend a distance of at least 15 cm. between a mobile phone and a pacemaker to avoid the risk of interference with the pacemaker. These recommendations are in accordance with independent research and recommendations from Wireless Technology Research. People with pacemakers should:

- not carry the unit in a breast pocket

- hold the unit against the ear on the opposite side from the pacemaker to reduce the risk of interference

If you suspect that there is a risk of interference, turn off the unit and move it further away.

2.3 Areas with explosion risk

Always turn off the unit when you are in an area where there is a risk of explosion and follow all signs and instructions. An explosion risk exists in areas such as where you are normally requested to turn off your car engine. Within such an area, sparks can cause explosions or fire, which can lead to personal injury or even death.

Turn off the unit at filling stations (i.e. near petrol pumps and garages). Follow the restrictions that are in force on the use of radio equipment near places where fuel is stored and sold, chemical factories and places where blasting is in progress.

Areas with risk for explosion are often

– but not always – clearly marked. This also applies to below decks on ships; the transport or storage of chemicals; vehicles that use liquid fuel (such as propane or butane); areas where the air contains chemicals or particles, such as grain, dust or metal powder.

2.4 Emergency calls

Important!

Mobile phones use radio signals and the mobile phone network. This means that connection in all circumstances cannot be guaranteed.



Important Safety Instructions

To prevent possible hearing damage, do not listen at high volume levels for long periods.

3 BOX CONTENT

In the box you will find:

- 1 mobile handset
- 1 main power adapter with micro-USB cable
- 1 handset back cover
- 1 quick start guide

Keep the packing materials in a safe place in case you later need to transport the device.

IMPORTANT

Your handset is not supplied with a SIM card, you will need to insert a SIM card for the handset to work correctly.

4 SET HANDSET LANGUAGE

- Press **Menu** (☰) and (⬆)/ (⬇) to select **"Settings"**, then press **OK**.
- Press (⬆)/ (⬇) to select **"Phone settings"**, then press **OK**.
- Press (⬆)/ (⬇) to select **"Language Setting"**, then press **OK**.
- Press (⬆)/ (⬇) to select your language, press **OK** to confirm.

5 GETTING TO KNOW YOUR PHONE










5.1 Keys and parts (see P1)




#		Function
1	Earpiece	
2	Left Softkey	Performs the function displayed on the screen above this key.
3	Right Softkey	Performs the function displayed on the screen above this key.

4	Up/Down and Enter Key	<ul style="list-style-type: none">• Press to adjust receiver volume during a call.• Press to scroll to names, phone numbers, menus and settings.• Press to enter or confirm a selection.
5	Talk Key	<ul style="list-style-type: none">• Press to answer a phone call.• Press to enter the call log.
6	End Call / Power On/Off button	<ul style="list-style-type: none">• Press to end or reject a call.• Press to return to standby mode.• Press and hold to switch the phone on/off.
7	* Key	<ul style="list-style-type: none">• In dialling mode: Press to input “*”. Press repeatedly to input “+”/“P”/“W” accordingly.• In edit mode: Press to input symbols.
8	# Key	<ul style="list-style-type: none">• Press and hold to switch user profiles.• In edit mode : Press to change input method.
9	Torch Key	<ul style="list-style-type: none">• Press and hold “0” to turn the torch on/off.

5.2 Display icons and symbols

The default standby screen shows the following information:

	Meaning
	Radio link On with signal strength when linked.
	Battery charge level Internal segments cycle when the battery is charging.
	Call divert You have activated call forwarding.
	Alarm
	Ring and Vibrate off
	Vibrate on
	New SMS Indicates that you have new unread text messages.
	Missed call
	Missed calls Indicates number of missed calls.

	SIM card missing Indicates SIM card 1 or 2 not inserted.
	Headset Indicates a headset is plugged in.
	Bluetooth Indicates Bluetooth is turned on.

6 INSTALLATION AND SETUP

6.1 Installing the SIM/SD card and battery

- Switch off the phone, disconnect the power adaptor and remove the battery.
- Remove the back cover by lifting it up from the bottom left side.
- Remove the battery by lifting in the middle at the top.
- Carefully slide the SIM/ SD card into the holder with the gold contacts facing downwards, as shown on page 2.
- Replace the battery by aligning the gold contacts on the battery with those on the phone, and push the battery down until it clicks into place.

- Replace the back cover by placing it flat on the back of the handset and pushing down until it clicks into place.

6.2 Charging the battery

Warning:



Use only the supplied/approved battery and charger. Using other batteries or chargers may be dangerous and will invalidate any approvals or warranty. A battery must be fitted. Do not charge with the back cover removed.

- Connect the charger lead firmly into the micro-USB socket.
- Plug the mains power adapter into an AC mains socket. If the handset is turned on, "**Charging**" displays for a few seconds, and the battery symbol bars scroll to indicate that charging has started. If the handset is turned off, the display shows a battery symbol with the segments cycling to indicate charging has started.
- It may take up to 2 hours to charge the battery fully.
- If "**Charging**" does not display, disconnect and retry.
- The battery is fully charged when the bars within the battery symbol are continuously on.

Disconnect the charger from the phone and the AC outlet. “**Charger is plugged out**” displays for a few seconds to indicate that charging has stopped.

6.3 Switching the phone on and off

To switch the phone on and off:

- When the phone is off, press  and hold until the display turns on.
- When the phone is on, press  and hold until the display turns off.

Warning:

Do not switch on when mobile phone use is prohibited or if it may cause interference or danger.

6.4 Use headset

- Plug in the headset into the headset socket, the headset icon shows on the screen.

6.5 Keypad lock

The keypad lock automatically switches on by default if no buttons are pressed, but can be disabled or the time adjusted by using **Menu > Settings > Security > Auto keypad lock**.

To unlock the keypad, press **[--]Unlock**, then *.

6.6 Display backlight

The display backlight automatically turns off if no buttons are pressed, but can be adjusted for a different time or to stay on always, by using **Menu > Settings > Display > Backlight Time**.

6.7 Sound Profiles

You can select from 5 different sound profiles or create your own, to give different ring settings, volumes, types and other alerts, by using **Menu > Settings > Profiles**.

Also, when in the home screen you can switch quickly between **Silent**, **Meeting** and **Normal** by pressing and holding the # key.

6.8 Reset to factory default

If you want to clear all data in your phone and reset it to the factory settings, use **Menu > Settings > Phone settings > Restore factory settings**.

- Press **OK** and then input the phone password (Default = 0000), followed by **OK**.
- Press **OK** again to confirm the reset or **Cancel** to cancel it.

7 USING YOUR PHONE

7.1 Make a call

- In idle , enter the complete telephone number and then press Talk Key.

Note:

Press the right soft key Delete to correct a number.

7.1.1 Make a call from the phone book

- Press right soft key to open the phonebook, scroll to the desired name, or enter the first letters of the name and scroll to the desired name.
- To call the number, press talk key.

7.2 Answer or reject a call

7.2.1 Answer a call

- When your phone is ringing, press talk key to answer the call

7.2.2 Reject a call

- When the phone is ringing, press the end key to reject the call.

7.2.3 End a call

- During a call, press the end key to end the call.

8 PHONEBOOK

You may save the contacts in the phone or SIM card.

8.1 Add new contact

Direct entry :

- In the standby mode, input the number, then press OK-> Save to phone book.
- Fill in the fields you need and select OK.

From call history

- From call history select a number -> Option -> OK -> Save to Phonebook or SIM card.

and fill in the fields and press ok to save

8.2 All phone book

You can press the right soft key Names enter the phone book .

Or you can press the left soft key Menu select the Phone book .

In the phone book interface press the left soft key Options :

- **New:** You can add new phonebook.
- **Delete multiple:** You can delete multiple .
- **Import/Export:** You can Copy phone book, Import phonebook, Export phonebook.

- **Other:** You can setting Speed dial, edit Own number, Service number, view Memory status.
In the phone book interface press the up/down key select phonebook then press left key Options :
- **New:** You can add new phonebook.
- **Write message:** You can write and send message to the number.
- **Call:** You can call the number.
- **Delete:** You can delete the number.
- **Delete multiple:** You can delete multiple the number.
- **Import/Export :** You can Copy the number, Import the number, Export the number.
- **Send v Card :** You can send the number to someone.
- **Other :** You can setting Speed dial, edit Own number, Service number, view Memory status.

8.3 Groups

You can add new group and edit the group with group name.

9 MESSAGE

Your phone can send, receive **SMS, MMS, broadcast message** and so on. These are network services, please contact your network operator or service provider before using it.

Messages are saved in phone or SIM card. If one of them is full messages will be saved in the other. When both of their limits are reached, the **message icon** will blink, please delete some messages, otherwise the new message will not be received.

9.1 Write message

Your phone can edit and send message.

- In the idle mode, press Menu -> Message ->Write message.
- Select Text message (SMS) or Multimedia message (MMS)
- Press # to change input method.
- After finish the SMS, press Options:
- **Send:** You can select the recipient from phonebook, or enter recipient number directly. You can send to one person, or to several people.
- **Insert template:** You can insert template

- **Add contact info:** You can add contact number.
- **Add Phiz :** You can add Phiz
- **Save to draft:** You can select save to drafts for future use.
- **Exit :** You can exit write message.

9.2 Inbox

All received messages are saved in the inbox, you can view ,edit or forward message.

Select Message, Inbox then press select left soft key option to display the options:

- **Reply:** Reply this message to the sender.
- **Delete:** Delete the current message.
- **Call:** make phone call to the sender.
- **Lock:** lock the current message.
- **Move:** move the current message.
- **Copy:** copy the current message.
- **Mark:** mark the current message.
- **Sort:** sort the current message.
- **Import SMS:** You can Import SMS.
- **Export SMS:** You can Export SMS.
- **Add sender to:** You can add sender to the phonebook.
- **Delete repeated numbers:** You can delete repeated numbers.
- **Add to blacklist:** You can add to blacklist.

9.3 Outbox

The outbox folder is a temporary storage place for messages that are waiting to be sent.

- **Resend:** Resend this message to the sender.
- **Delete:** Delete the current message.
- **Lock:** lock the current message.
- **Move:** move the current message.
- **Copy:** copy the current message.
- **Mark:** mark the current message.
- **Sort:** sort the current message.

9.4 Drafts

The drafts is a temporary storage place for messages that can be sent later.

- Select Message, Drafts.
- In the message body, press Options to select through the Option: **Delete, Edit, Lock, Move, Copy, Mark, Sort.**

9.5 Sent box

All sent messages are saved in the sent messages. Select Messages-> Sent box, then press Select Options:

Delete , Forward, Lock ,Move ,Copy ,Mark ,Sort .

9.6 Security inbox

All inbox messages are save in security mailbox ,the security password number is : 0000 .

9.7 Templates

You can select the templates when write message.

9.8 Voice mail server

You can use and edit the voice mail server . in idle long press 1 number key call the voice mail server number.

10 CALL LOGS

10.1 Missed calls

If you have a missed calls, in the idle will display "Missed Call", press the left soft key to read the phone number.

- To view a list of the last 20 phone numbers from which somebody has tried to call you, select Menu -> Call Logs.
- In the list, select Missed Calls.
- **Select a phone number -> Option:**
- **Details :** View the number details .
- **Call:** Dial the current number.

- **Write message:** Send text message to the number
- **Add to Phonebook:** Save the phone number to phone book.
- **Add to blacklist :** Save the phone number to blacklist.
- **Delete:** Delete the current log.
- **Delete all:** Delete all the current log.
- **Mark :** Mark the current log.

10.2 Dialed calls

To view the 20 phone numbers that you have most recently called or attempted to call, select Menu -> Call logs -> Dialed Calls.

10.3 Received calls

To view a list of the last20 phone numbers or names from which you have most recently accepted calls, select Menu -> Call logs -> Received Calls.

10.4 Rejected calls

To view a list of the last20 phone numbers or names from which you have most recently rejected calls, select Menu -> Call logs -> Rejected Calls.

10.5 Delete call

You can delete the missed calls, dialed calls, received calls, rejected calls or delete all.

10.6 Call timers

To view the duration of your incoming and outgoing calls, select Menu -> Call history -> Call timers.

10.7 GPRS counter

You can view SIM GPRS counter on screen.

11 SETTINGS

11.1 Call settings

• Dual SIM:

you can select Standby mode, Reply by original SIM, Set SIM name .

• Call divert:

You can set divert Call forwarding unconditional , Call forwarding on busy , Call forwarding on no reply, Divert If unreachable, Cancel All Diverts.

• Call waiting

To set the network to notify you of a new incoming call while you have a call in progress.

To request the network to activate call waiting, select **Activate**.

To request the network to deactivate call waiting, select **Off**

To check whether the function is active, select **Check Status**.

- **Call barring**

Call barring allows you to restrict the calls that you make and receive with your phone. You can set **All outgoing calls**, **All incoming calls**, **Incoming calls when roaming**, **ISD calling**, **Dial when INTL roaming**, **Cancel all barring**, **change password**.

- **Others :**

You can settings **Call time minute reminder**, **Auto redial**, **Reply SMS after reject**, **Auto record voice call**.

- **Blacklist**

You can setting and editing the blacklist

11.2 Phone setting

11.2.1 Time & date

- **Set time:** You can set time..
- **Set Date:** You can set date .
- **Time Format:** You can select 12-hour or 24-hour. Pressing up and down to select.

- **Date Format:** You can select Date Format.
- **Auto update time:** You can Activate / Off Auto update time .

11.2.2 Language settings

You can select display language and input language.

11.2.3 Shortcut settings

You can select shortcut settings.

11.2.4 Restore factory settings

You can restore factory setting use password number: 0000.

11.3 Display

You can set **Wallpaper, Idle display settings, Contrast, Backlight, Keypad backlight.**

- **Wallpaper:** You can set your phone to display a background picture, when the phone is in idle mode.
- **Idle display settings:** You can idle display settings
- **Contrast:** You can setting contrast
- **Backlight Time :** You can setting backlight time.
- **Keypad backlight time:** You can setting keypad backlight time.

11.4 Security

11.4.1 PIN

Set SIM lock to on or off need enter PIN code.

- On: To activate the PIN, the phone request the code each time the phone is switched on.
- Off: To switch off the PIN.
 - > If you input the wrong PIN code for thrice that the phone will request to input the PUK code. If the PUK code is not provided, please contact your network operator.

11.4.2 Modify PIN2

You can modify pin2.

11.4.3 Phone lock

If you set on that the phone will request the password each time the phone is switched on. The default is off. Set on or off need enter password. The factory setting for the lock code is 0000.

11.4.4 Modify the cell phone password

You can modify the cell phone password.

11.4.5 Auto keypad lock

You can setting keypad lock.

11.5 Profiles

Profiles allow quick changes to your M1220 phone sounds, and to customise them to suit your situation.

There are 5 preset profiles – **Normal, Silent, Meeting, Indoor, Outdoor.**

You can set the profile mode **Rename, Ring setting, Adjust volume, Ring type, Other alert rings.**

11.6 Connections

Network settings. You can select Auto select, Manual select.

12 CAMERA

12.1 Taking photos

- Aim the object and press OK, photo is taken. Then press left key to save the photo.

12.2 Image viewer

In the camera interface Press left soft key to access Options ->Image viewer, you can view images, press Options:

- **Set as wallpaper:** You can set the photo as wallpaper.

- **Set as contact icon** : You can set the photo as contact icon .
- **Delete**: You can delete the current photo.
- **Share**: You can share the photo to the Bluetooth.
- **Rename**: You can rename the current photo.
- **Slide play** : You can slide play the photo .
- **Details**: You can view the photo details.

12.3 Effect

In the camera interface Press left soft key to access Options ->Effect, you can setting effect press Ok:

Press up/down key select **Normal ,B&W, Blue, Green, Yellow, Red, Sepia, Negative.**

12.4 Settings

In the camera interface Press left soft key to access Options ->Settings, you can setting camera ,press up/down key select Size ,Quality, Banding, Shutter sound, Auto save, Memory card.

13 APPLICATION

13.1 Games

Press Menu to Game interface and select Snake . In the game interface press left key "OK" select list:

- **New Game:** To play new game.
- **High score:** To view the game high score.
- **Level:** You can select game level.
- **Help:** Display the introduction about how to play the game. If the game has not end, you can select Resume to continue the game.

13.2 Alarm

You can set 3 alarm. In the edit alarm interface, you can set On or Off, Time , Repeat, Snooze and Alert type.

13.3 Calculator

You can use the calculator.

Press up and down key to enter "+", "-", "x" and "/".

"#"key: To enter "-".

OK key: To enter "=".

Right soft key: To clear the input character one by one.

13.4 Word clock

You can select word clock.

13.5 Timer

You can use the timer.

13.6 Unit Conversion

You can use the unit conversion

13.7 Bluetooth

- Press Menu to Application interface and select Bluetooth, press left key OK enter the Bluetooth,
- **Power:** To power Activated/close the Bluetooth.
- **Bluetooth visibility:** Set the Bluetooth Device is visible by other Bluetooth devices.
- **Paired device:** To find available BT devices and open your device to pair.
- **Device name:** Display the Bluetooth name.
- **Bluetooth file storage:** To select Memory card
- **Help:** You can view the Bluetooth specification
- **Note:** The connection can be subject to interference from obstructions such as walls or from other electronic devices.

13.8 Torch

You can open On /Off the torch .

13.9 Image

You can view Image.

13.10 FM radio

- Press Menu to FM radio interface :
- Press ok key to turn FM on/off.
- Press left key to adjust the frequency.
- Press the right key to adjust the frequency.
- Press the side key to adjust the volume.
- Press the left key for Options list:

Auto search and save : To start automatic tuning the radio station and save them.

Channel List: You can edit channel name and frequency.

Save :You can save the channel.

Manual search : You can input the frequency of the radio station.

- **Open speaker:** You can open / close speaker when you plug into headset.
- **Background play:** You can play the frequency in background.
- **Record :** You can record the schedule.
- **Record file list:** You can view the record file list.

13.11 Recorder

You can sound recorder.

14 INTERNET

Press Menu to enter Internet select Open :

- **Homepage:** You can access the homepage.
- **Input URL:** To enter address of webpage.
- **Book marks:** To display the bookmark.
- **History:** to view history. list
- **Offline pages:** to view offline pages list.

15 FILE MANAGER

Can insert SD card function. Press Menu to File Manager and press the left soft key "Option" you can open list :

- **New folder:** You can create new folder.
- **Delete:** You can delete folder
- **Details:** You can see the folder details.
- **Rename:** You can see the rename the folder.
- **Copy:** You can copy the folder.
- **Search:** You can search folder .
- **Sort:** You can sort folder
- **Mark:** You can mark folder.
- **Memory status:** You can view Memory card capacity, Format Memory card or Rename Memory card .

16 CALENDAR

Press Menu to Calendar and press Options list:

- **Add new schedule:** You can add new schedule:
- **View schedules:** You can view tasks list of today.
- **All schedules:** You can view all tasks list of all days.
- **Clear today's tasks:** You can clear today's tasks:
- **Clear all:** You can clear all event
- **Go to date:** Input date today
- **Weekly:** You can switch go to monthly view and go to weekly view.
- **Daily:** You can daily

17 GUARANTEE AND SERVICE

The phone is under warranty for 24 months from the date of purchase shown on your sales receipt. This guarantee does not cover any faults or defects caused by accidents, misuse, fair wear and tear, neglect, lightning, tampering with the equipment, or any attempt at adjustment or repair other than through approved agents.

Please keep your sales receipt; this is your proof of guarantee.

17.1 While the unit is under Guarantee

- Pack up all parts of your phone system, using the original package.
- Return the unit to the shop where you bought it, making sure you take your sales receipt.
- Remember to include the main adapter.

17.2 After the Guarantee has expired

If the unit is no longer under Guarantee, contact us via **www.aegtelephones.eu**

18 CE DECLARATION

This product is in compliance with the essential requirements and other relevant provisions of the R&TTE directive 1999/5/EC.

The Declaration of conformity can be found on: **www.aegtelephones.eu**

CE 1313

Standard	GSM Mobile
Frequency Band	GSM 850/900/1800/1900
System	Phase 2+
Operating Time (with fully charged battery)	Standby: > 200 hours Talking: > 4 hours
Charging Time	< 2 hours
Temperature range	Operating: 0°C to 40°C Storage: -20°C to 60°C
Electrical power Handset battery	BI-5C li-ion 3.7V DC, 600mAh, Battery Pack
Travel charger	UK adaptor: CSGN-CSC01-500-L EU adaptor: CSGN-PT001-500-X Input 100-240V AC 50/60Hz MAX 0.15A Output 5.0V DC:500mA
SAR value	Maximum Head:0.61W/Kg Body:1.21W/Kg

*Variation in operation times may occur depending on SIM card, network, and usage settings, usage style and environments.

20 DISPOSAL OF THE DEVICE (ENVIRONMENT)

At the end of the product lifecycle, you should not throw this product into the normal household garbage but bring the product to a collection point for the recycling of electrical and electronic equipment. The symbol on the product, user guide and/or box indicates this. Some of the product materials can be re-used if you bring them to a recycling point. By reusing some parts or raw materials from used products you make an important contribution to the protection of the environment. Please contact your local authorities in case you need more information on the collection points in your area.

Batteries must be removed before disposing of the device. Dispose of the batteries in an environmental manner according to your country regulations.



