DP-CMX1

Instruction Manual

Read this first 2



Playing Music 56



Telephone function 124



Using the camera 139



Settings 153

Others 161








Read this first

- Names of the parts 3
- Recharging 9
- Insert the SIM card 11
- Initial settings 14
- ► APN settings 28
- Screen composition 33
- Customizing the home screen 45
- Entering text 55

Names of the parts

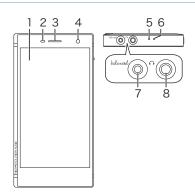

- Display
- 2. Brightness sensor

This detects the ambient brightness when using the feature that automatically adjusts the brightness of the screen.

- 3. Telephone speaker
- Front camera
 Use to take photographs of subjects in front


40

- of the phone.
- Call lamp
 Blinks blue when there was an unanswered call or mail was received. While charging, it turns red, then orange, then green according to the charge in the battery.
- Microphone
- Headphone jack (balanced)
 Connect headphones compatible with balanced output. (2.5 mm/4-conductor)
- Headphone jack ()
 Connect regular headphones. (3.5 mm/4-conductor, microphone compatible)
- Not all headphones are guaranteed to work.
- This unit does not support simultaneous use of the balanced headphone jack (7) and the headphone jack (8). Using both jacks at the same time may result in damage.



HOLD switch
 This locks the unit to prevent operations.

- 10. Power button (())
 - Press and hold the power button to turn the power on. After the unit starts, swipe up from the bottom of the screen to display the home screen. To turn the power off, press and hold the power button, then tap "Power off". To turn the display on or off, just press the button.
- Skip (►►) button
 Skip to the next track.
- 12. Play/pause (►/▮▮) button
- Skip (I◄◄) button
 Skip to the beginning of the track or to the previous track.

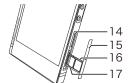


micro SD card slot Take the slot tray (15) out to insert a micro SD card.

15. Slot tray

Use the included slot tray ejector pin to push into the small hole in the slot tray to open it.

- 16. nano SIM card slot 1 (4G LTE, 3G)
- 17. nano SIM card slot 2 (3G, 2G)
 - nano SIM card slot 2 is not compatible with LTE communication.

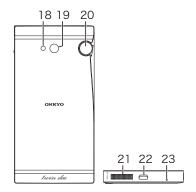

- 18. Flash/light
- 19. Main camera
- 20 Volume dial
 - Turn the dial to adjust the volume.
 - When you put this unit in a pocket or case while playing music, the volume dial may turn accidentally, changing the volume. Set

"Volume lock" to ON to disable volume control with the volume dial.

For details (→ 158)

21. Speaker


22. micro USB port

23. Microphone



Recharging

The battery is not charged at the time of purchase. First charge the unit with the supplied micro USB cable and AC adapter before use. Connect so the wider side of the plug is down when inserting into this unit's micro USB port.

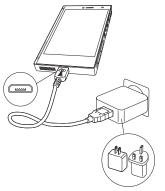


 If you turn this unit off for recharging, the recharging mark is displayed on the screen.

- The recharging mark may not appear immediately depending on the condition of this unit. When this occurs, the recharging mark is displayed as recharging occurs, so please wait for a few minutes.
- You can also recharge while the unit is on.
 The time for recharging may increase in this case.
- Use the supplied AC adapter to charge the unit. Charging will take longer if you use anything other than the supplied AC adapter for charging.
- Operation is not guaranteed if you use anything other than the supplied AC adapter.


Insert the SIM card

This unit uses nano SIM cards. When inserting the SIM card, turn this unit off first.

 Use the included slot tray ejector pin and push into the small hole in the slot tray to open it.

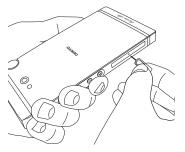


2 Make sure you insert the SIM card the correct way when putting it into the slot tray.

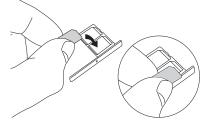


- Two SIM cards can be inserted into the slot tray.
- nano SIM card slot 2 is not compatible with LTE communication.

Push the slot tray straight in horizontally to close it.

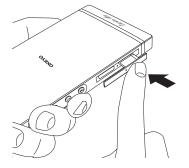

Initial settings

When the unit is turned on for the first time, the setup wizard is automatically displayed. Follow the on-screen instructions to setup the unit. The setup wizard allows you to select the display language, make Wi-Fi[®] settings, enter user information, setup a Google™ account, and make other initial settings.

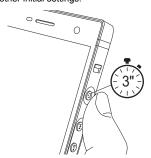

To turn the power on, press and hold the power button $(\binom{1}{1})$ for 3 or more seconds. It takes about

2 minutes for the settings screen to be displayed.

■ Select the language



- 1 Tap ▼ to select the language then tap ④.
- A SIM error message is displayed when the SIM card is not inserted correctly. Make sure that the SIM card is correctly set.

Select Wi-Fi



- Select the SSID of the access point you want to connect from the list of networks.
- 2 Enter the password of the access point, then tap "CONNECT".
- For how to enter text (→55)



Got another device?



If you are already using an Android device, you can copy the Google account settings, apps, etc., to this unit.

- 1 To copy, select "Copy your —". If you do not want to copy, select "No thanks". Then tap "NEXT".
- If you selected "Copy your —", follow the on screen instructions to proceed. For "Google setting" apps that require operations on the

other device, you can select the app in the app list screen.

19

Add your account



You can register a Google account you already have on this unit or create a new Google account.

1 To register a Google account that has already been set up, enter the email address registered in the Google account. To create a new Google account, tap "Or create a new account", then follow the on screen instructions to enter the information.

Google services



You can select the Google services to use.

1 Select the Google service to use, then tap "NEXT".

Set up payment info



You can make settings for payments.

1 Either select the payment information, or select "No thanks" if you do not intend to use paid services, then tap "CONTINUE". To enter payment information, follow the on screen instructions to enter the information.


Set up email



You can set an email address other than the one for the Google account you set.

1 To use an email address other that the one for the Google account on this unit, tap the appropriate item and enter the information. When one is not to be used, tap "Not now".

■ Protect your phone

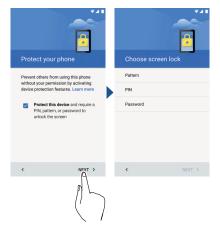


You can set up a screen lock, etc., to protect the device.

1 To use protection features, then with the check mark in place, tap "NEXT". Remove

- the check mark and tap "NEXT" if you do not want to use these features.
- It is recommended to use the protection features to protect your personal information.
- "Pattern" is where you create a pattern by joining four or more points. "PIN" is a number of four or more digits. "Password" is a combination of four or more letters, numbers, or symbols.



Accelerated location

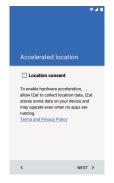

You can make settings to accelerate the determining of your location.

1 To enable the setting, put a check mark in the check box and click "NEXT".





■ This completes the initial settings



If the home screen is displayed, tap "GOT IT". This completes the initial settings.

APN settings

You need to make the APN settings corresponding to the SIM card you are using in order to transmit data. Depending on your telecommunications provider, the connection may be established automatically when you insert the SIM card. You will need to enter the information yourself if it is not set automatically.

1 Tap "Settings" in the home screen.



2 Tap "More".





3 Tap "Cellular networks".



4 Tap "Access Point Names".



5 Make sure the telecommunications provider you are contracted to is selected in the list.



The process is complete if the telecommunications provider is selected. Proceed to step 6 if your telecommunications provider is not in the list.

6 If the telecommunications provider you are contracted to is not in the list, click the icon at the top right of the screen, then enter the required information.



The information required depends on the telecommunications provider. Contact your telecommunications provider for details.

32

Screen composition

This unit is an audio smartphone running on the Android™ OS. The basic screens are the home screen and the app list screen. Tap the icons at the bottom of the screen to switch between the screens.

Home screen

App list screen





These icons are shown even if you switch screens.



Returns to the previous screen.



Switches to the home screen.



Displays a thumbnail list of apps you have recently used. You can delete the app from the list by tapping on the " X " on the upper right of the thumbnail or flicking the thumbnail left to right.



The home screen

The screen that appears immediately after you turn the unit on is called the home screen. Flick left to right to switch the home screen.







Home screen 2

Home screen 1



1. Status bar

2.



A folder containing a collection of Google[™] apps, such as the Google Chrome browser to view web pages and the YouTube[™] app.



Gives you access to this document.



A collection of installers to download apps. This is an introduction to a selection of these. Some apps may not be available for use in some areas.

Onkyo Music

An app to help you access the Onkyo Music site, where high-res sources are distributed.

Onkyo Remote

An app that enables you to wirelessly stream music from this unit to Onkyo audio devices. You can also use this unit as a remote controller.



Pioneer ControlApp

An app that allows you to use this unit as a remote controller to operate Pioneer audio products.

iControlAV5

An app that allows you to use this unit as a controller to operate Pioneer AV receivers and BD players.

Integra remote

An app that enables you to wirelessly stream music from this unit to an Integra receiver.

You can also use this unit as a remote controller.

SX-N30 Control App (Except for Japan)

An app that allows you to use this unit as a remote control to operate SX-N30.



lay Store

Gives you access to the "Google Play Store" where you can download apps for the Android OS. You may not be able to access this store in some areas.



You can make calls or register entries in a phone book.



The Music app for playing music.



Switches to the app list screen.



Takes you to the settings screen where you can set "Wi-Fi", "Language & input", "Date & time", etc.



You can take photographs or videos.



Home screen 2



 Music widget You can play music, pause, skip, etc.



4.



You can switch the headphone output to the line output mode to connect external equipment.



You can improve sound quality by turning off Wi-Fi®, the Bluetooth® function, and the LCD.



A mode for balanced headphones. When you connect balanced headphones, either this mode or the following ACG (mode) is automatically selected. Compared to the normal single-ended operation, you can get a larger output and the high voltage is not grounded together with the small signal in this mode, so you can anticipate a superior effect in the background of the music. Because you get a larger output, you can

drive headphones with a higher impedance.



A mode for balanced headphones. You can switch to this ACG (mode) from Balanced (mode). The basic operating method is the same as the balanced mode, but uses technology to even more forcefully fix grounding standards, so you can enjoy a sound quality with improved clarity and more stability than the balanced mode. Output volume is the same as the regular single-ended operation, however.

■ The app list screen

When you tap the app list icon in the home screen, the app list screen is displayed.





When there are a lot of apps, flick up or down to change the screen.





Customizing the home screen

You can put shortcuts for apps and widgets* such as clocks on the home screen, and you can customize it to suit yourself.

* Widgets are small apps that you can put in the home screen so that a clock is shown all the time or shortcuts to your favorite home pages can be shown.



Creating an app shortcut on the home screen

1 Tap the app list icon in the home screen.



2 Long tap on the app in the app list screen.





3 The background changes to the home screen, so drag to the desired position and release your finger.



Adding a widget to the home screen

1 Long tap in an area of the home screen where there is nothing.



2 Tap "WIDGETS".



3 Long tap the widget you want to add.



4 The background changes to the home screen, so drag to the desired position and release your finger.



• Some widgets allow you to change their size with a long tap.

Changing the wallpaper in the home screen

 Long tap in an area of the home screen where there is nothing.







2 Tap "WALLPAPERS".

• Select "My photos" to set a favorite photo or image as your wallpaper. To take a screen shot, press and hold the power button (₺) and the skip button (◄◄) at the same time.



3 Tap the wallpaper you want to change to.



4 Tap "Set wallpaper".



■ Deleting shortcuts and widgets

 Long tap the shortcut or widget you want to delete.



2 Drag to "Remove" and release your finger.



Entering text

When you tap a text box or other place to enter text, a keyboard is automatically displayed.



- 1. Tap to enter text.
- Tap to switch between upper case and lower case. Double-tap to lock upper-case.
- 3. Tap to change the type of text.
- 4. The method of entry changes.
- Enters a space.
- Removes a character on the left of the cursor.
- Tap to confirm.






Playing Music

- ▶ Playing from a micro SD card 57
- ► Copying from a computer and playing 62
- ► Play operation details 82
- Editing a play list 92
- Equalizer settings 100
- Slide menu 107
- ▶ USB output 117
- ► Bluetooth® function 120

Playing from a micro SD card

Insert a micro SD card that has music files on it and play them.

1 Turn off this unit, then insert the slot tray ejector pin and into the small hole in the slot tray to open it.

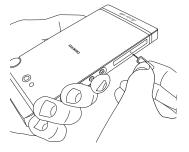



2 Insert the micro SD card into the card slot. With the contacts facing up, push in completely so the card clicks into place.



3 Push the slot tray straight in horizontally to close it.

4 Tap Music in the home screen.



 Do not connect headphones that have an impedance outside the rated range as this may result in damage.

See here for headphone ratings (→162)





- 5 In the library, tap the track you want to play.
 - It may take some time for tracks to be displayed in the library.



Tap or click here Play operation details. (→82)

■ Removing the micro SD card

Unmount the micro SD card using the following procedure before removing it. The card can be damaged or may stop working properly if you fail to unmount the card first.

1 Tap "Settings" in the home screen.



- 3 Turn off this unit, then insert the slot tray ejector pin and into the small hole in the slot tray to open it.
- 4 Push the micro SD card in until you hear a click and then pull straight out. The micro SD card will spring out so take care not to lose it.
- **5** Push the slot tray straight in horizontally to close it.

Copying from a computer and playing


You can copy music data stored on your computer to the built-in storage on this unit or to a micro SD card in this unit.

Copy with the data copying software "X-DAP Link" and play

X-DAP Link is compatible with Windows 10 (32 bit/64 bit), Windows 8/8.1 (32 bit/64 bit), Windows 7 (32 bit/64 bit), and Mac OS X 10.11 and OS X 10.10.

- Start your computer and download the installer for X-DAP Link from the following site.
 - http://www.jp.onkyo.com/audiovisual/dap/
- On a Windows computer double-click
 "setup.exe" and on a Macintosh computer
 double-click "XDAPLink.pkg" to install.
 Follow the on-screen instructions to install. A
 shortcut is created on the desktop after
 installation on a Windows computer. On a
 Macintosh computer, "X-DAP Link.app" is
 added within the "Applications" folder.

- **3** Turn on the power of the unit.
 - To copy to a micro SD card, insert a micro SD card into the card slot. When inserting a micro SD card, turn this unit off before opening the slot tray.
- 4 Connect this unit to the computer with the supplied micro USB cable. Connect so the wider side of the plug is down when inserting into this unit's micro USB port. You may damage the plug or jack if you try to insert it the wrong way.

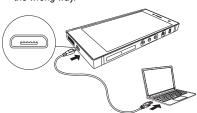

5 In the home screen of this unit, swipe from top to bottom and tap "USB for charging".







6 Tap "File transfers".



 If the message such as "Connection of the device is not recognized" is displayed on the unit, close all running applications and retry starting at step 3.

7 Start X-DAP Link.



8 Click 1 and select the folder that contains the files you want to copy. If the folder you want to copy is already displayed, start selecting from 2.



onkyo music

If there are files you have downloaded from onkyo music (a site that distributes music files), select this folder.

iTunes Media

If you are using iTunes®, a play list and content are displayed. If iTunes cannot be selected, open "Preferences" - "Advanced" in iTunes, then put a check mark next to "Share

iTunes Library XML with other applications".

 There may be some differences in the operations screens and how operations are performed depending on the iTunes version. For details, see the operating instructions for iTunes.

- 9 Click 3 to select built-in storage or SD card as the copy destination, then click "OK". You can also click 4 to specify different copy destinations to 3.
 - The copy destinations for this unit are the built-in storage and SD slot ×1, so s is not available for use.





- 10 The following message may be displayed on your computer. To select and copy only certain files to add, select "No" in this screen. Select "Yes" to reflect files that have already been copied to the list. If you do this, music files that you have deselected will be deleted from this unit during copying.
 - The screen displayed depends on the OS and language of your computer.





11 Select the music files you want to copy according to the copy destination.



When this copy destination is selected:





When this copy destination is selected:



12 Click the copy button with the same color as the one you selected in step 11, then click "OK" in the confirmation screen. The selected music files are copied to this unit.



13 Tap Music in the home screen of this unit.



 Do not connect headphones that have an impedance outside the rated range as this may result in damage.

See here for headphone ratings (→162)




- 14 In the library, tap the track you want to play.
 - It may take some time for tracks to be displayed in the library.



Tap or click here Play operation details. (→82)

■ Drag and drop to copy and play

1 Use the supplied micro USB cable to connect this unit to a computer. Connect so the wider side of the plug is down when inserting into this unit's micro USB port. You may damage the plug or jack if you try to insert it the wrong way.

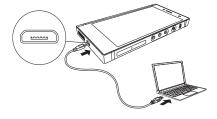

2 In the home screen of this unit, swipe from top to bottom and tap "USB for charging".







3 Tap "File transfers".



- If "AutoPlay" or similar is displayed on your computer, select "Open folder to view files" and then proceed to step 5.
- **4** Select this unit from the "PC" option on your computer.

- 5 Open the folder you want to save to. To copy to the built-in storage, open the "Music" folder in the built-in storage. To copy to a micro SD card, open the folder for the micro SD card you want to copy to.
 - The screen displayed depends on the OS and language of your computer.



6 Drag and drop the folder on your computer that contains the music files that you want to copy to the copy destination folder.



7 Tap Music in the home screen of this unit.



 Do not connect headphones that have an impedance outside the rated range as this may result in damage.

See here for headphone ratings (→162)





- In the library, tap the track you want to play.
 - It may take some time for tracks to be displayed in the library.



Tap or click here Play operation details. (→82)





Play operation details

Library display

When Music starts the library (a list of tracks synched with Music) is displayed. Flick the library screen left or right to change the categorization.



Folder

All tracks saved in the same folder level are displayed.

Playlists

Displays a list of play lists you have created.

Artists

Displays by artist.

Albums

Displays by album.

Songs

Displays all tracks.

Genres

Displays by genre.

Compilations

Displays by compilation albums.

Composers

Displays by song writer.

Format

Displays by data format.

- Tap the search icon Q above the list screen to search for a track.
- When "Auto sync" or "Music Folders" have not been set up, tracks may not be displayed.

For details about "HD Library Sync" (➡110)

Play operations

When you tap the track you want to play in the library, the screen changes to the play screen and play starts. Tap < to return to the library.







Play/pause

Tap inside the displayed circle.







Skipping tracks

Flick the play screen side to side.







Adjusting the volume

The volume bar is displayed on the screen when you turn the volume dial. You can then adjust the volume by dragging the bar up or down. You can also adjust the volume with the volume dial.





■ The play screen











- Move to the queue.
 The currently playing tracks and songs in the album are displayed in order in a queue.
- The lyrics of the songs are automatically obtained and displayed. If the unit is not connected to the internet or "Obtain synchronized lyrics" is not On, the unit displays the lyrics in the tags in the music

files. Tap the icon at the top left to return to the previous screen.

For Obtain synchronized lyrics (→114)

- 3. Displays the slide menu where you can change play and sound settings.
- Seek bar

Progresses along with the track's progress. Tap on the edge of the circle to skip to that position in the track.





- 5. The track being played is added to the playlist.
- Tap to see details about the track.
- Repeat mode Tap to change the mode: 1 track repeat → all
- track repeat → no repeat. Shuffle mode
- Tap to turn random play on or off. 9. Move to the equalizer setting screen.
- 10. Tap to turn the equalizer on or off.






Editing a play list

Creating a play list

Select the tracks you like to create your own play list.


1 In the library, tap the icon at the right of the screen for the track you want to add to the play list to display the list menu. The list menu is also displayed when you long tap a track that you want to add.

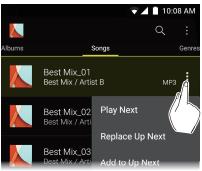

- 2 Tap "Replace Up Next".
- 3 Tap the icon at the right of the screen for the track you want to add next to display the list menu, then tap "Play Next".



- **4** Repeat step 3 to make a list of tracks you want to save as a play list.
- **5** Tap the jacket image icon at the top left of the screen to move to the play screen.

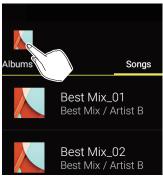




Tap the icon at the top left of the screen to move to the queue.



7 Tap "Save as playlist", enter a title and tap "SAVE".

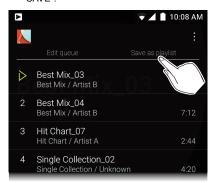


 New play lists cannot be created from play lists created outside of Music, for example with iTunes.



Editing a play list

Editing a play list

Display the list of play lists from the library and tap "Edit".

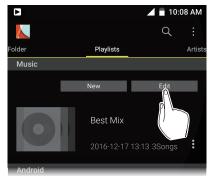

To delete a play list:

Tap the icon of the play list you want to delete then tap "OK".







To change the order of a play list:

Drag the icon of the play list you want to reorder.



To change the name of a play list:

Tap the play list you want to rename, enter the name and tap "OK".


To finish editing:

Tap "Done".



Editing tracks in a play list

Display the list of play lists from the library, tap the play list you want to edit, and tap "Edit".

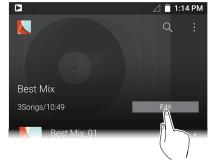

To delete a track from a play list:

Tap the icon of the track you want to delete then tap "OK".







To change the order of tracks in a play list:

Drag the icon of the track you want to reorder.



To finish editing: Tap "Done".

· Tracks are not deleted from the unit even if you delete them from a play list.





Equalizer settings

You can adjust the sound quality how you like by setting the equalizer.

Switching to the equalizer screen

Tap the equalizer screen icon in the play screen to move to the equalizer screen.



Selecting preset equalizers

1 Tap "Preset EQ" in the equalizer screen.



2 Tap the equalizer you want to set. Flat/11Band/Dance/Jazz/Pop/Rock/Vocal **3** Tap the icon at the top left of the screen to return to the play screen.



• Tap the icon to turn the equalizer on or off.







Equalizer off

Selecting equalizers created by famous musicians

1 Tap "Featured EQ" in the equalizer screen.





- 2 Tap the equalizer of the musician that interests you.
 - Tap the icon to turn the equalizer on or off.





Equalizer on

Equalizer off

· Click the icon of the musician to view the profile of the musician.



Modifying the equalizer


You can make your own original equalizer settings by modifying the equalizer curves. You can give the equalizer you modified a name and save it.

1 Turn the equalizer on or select any equalizer.






2 Drag the points on the equalizer curve side to side to change the frequency and up or down to change the boost.

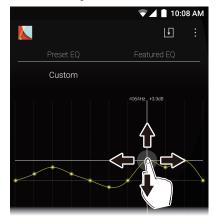



- You can add a point by tapping on the curve where there isn't a point.
- You can move all equalizer points up or down by dragging from a point off the equalizer curve.
- 3 Tap the save icon at the top right of the screen, enter a name, and tap "SAVE".

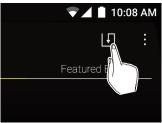


To delete a saved equalizer

Tap the icon of the equalizer you want to delete from "Preset EQ" and tap "Delete".



Slide menu

Tap the icon at the top right of the Music screen to display the slide menu which allows you to make settings for the Music app.

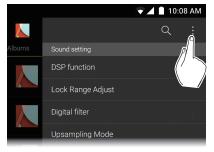



Sound setting

DSP function

Use to turn on or off the equalizer and other items in the slide menu at once ("Upsampling Mode" and "Real-time DSD Conversion").

Lock Range Adjust

You can improve sound quality by adjusting the lock range of the audio input signal's jitter (modulation). The lock range can be adjusted from the more precise Narrow up to Wide in seven steps.

 If you change the lock range and the sound is interrupted, adjust to the Normal or Wide ends.

Digital filter

By modifying the filter characteristics of the built-in digital converter you can modify the audio sound quality for output to headphones.

SHARP/SLOW/SHORT

Upsampling Mode

You can upsample the sampling frequency of tracks to suit the specifications of the unit or a



device connected via USB. (The initial setting is a maximum of 192 kHz.)

Off/On

Upsampling upper limit

Set the limit for upsampling.
96 kHz/192 kHz/384 kHz (USB audio only)

■ External device Select playback device

A list of output destinations is displayed, including headphones, *Bluetooth* enabled device, and USB devices. Select from the list to change the audio output destination.

 Tap "SEARCH FOR USB DEVICES" to search for USB devices connected to this unit

Settings

Settings

HD Library Sync

Auto sync

Automatically synchronize music files you have copied to this unit from a computer or music files on a micro SD card with the files in the library.

Music Folders

You can select a folder to synchronize with the library.

Sync Now

Manually synchronize music files you have copied to this unit from a computer or music files on a micro SD card with the files in the library.

SYNC ALL:

Select to synchronize all transferred tracks.

SYNC ADDED SONGS:

Select to synchronize only tracks that have been added.

FAQ

Display a list of frequently asked questions and their answers.

Playback

Crossfade

At the point where one song ends and another begins, you can fade out the song ending and fade into the song beginning.

DSD → PCM Gain setting

You can set the volume level when converting DSD format music files to PCM. 0 db/-3 db

Always keep screen on

Turns the function that keeps the light on all the time on or off.

Output Audio Route

A list of output destinations is displayed, including headphones, *Bluetooth* enabled device, and USB devices. Select from the list to change the audio output destination.





 Tap "SEARCH FOR USB DEVICES" to search for USB devices connected to this unit.

SEARCH FOR USB DEVICES

Searches for USB devices connected to this unit.

USB Audio

USB Host Audio Driver is valid.

You can output high-res sources by USB when you enable this setting.

Enables volume control in the background.

This setting allows you to control the volume of a connected USB device with this unit

DSD Output Format

This allows you to select the format output from the USB when playing DSD format music files.

PCM/DoP/Direct Transfer

 You need to have a device that supports direct transferring before you can use



"Direct Transfer". (Supported devices: DAC-HA300, XPA-700)

Direct transfer output frequency maximum

Set the upper limit for frequency when "Direct Transfer" is selected in "DSD Output Format". Select the frequency that your connected USB device can process.

Auto/2.8 MHz/5.6 MHz/11.2 MHz

DoP Pause Operation

When you select "Output DSD Zero", you can reduce the reoccurrence of noise when DoP is paused by outputting a muted DSD signal for a maximum of 10 minutes even while sound is not being output.

Stop Output/Output DSD Zero

Output DSD 3/6 MHz via DoP

Outputs DSD format music files as DoP format. When the setting is canceled, even if DoP is selected in "DSD Output Format", only DSD 3 MHz and 6 MHz are automatically converted to PCM.



Real-time DSD Conversion

Converts in real time music files such as MP3, WAV, and FLAC to DSD. You can enjoy non-high-resolution music files with high quality sound.

Off/DSD 2.8 MHz/High-Precision DSD 2.8 MHz/DSD 5.6 MHz/High-Precision DSD 5.6 MHz

 You can enjoy a better sound quality if you select one of the high-precision modes, but the burden on the CPU increases and power consumption rises, which may lead to some jumping of the sound under some usage conditions.

Other

Obtain synchronized lyrics

The lyrics information for tracks is obtained automatically if the unit is connected to the internet. When playing tracks that support synchronized lyrics, the lyrics will change color as the song plays.

 It may not be possible to obtain lyrics automatically with some tracks.



Home screen wallpaper setting

Makes the wallpaper of the home screen the jacket image.

Headphone Type

Plays using the optimum frequency characteristics when using Onkyo headphones. Select from the model numbers displayed on the screen.

About

Displays the licenses for open source software.

Version

Displays the version information for this unit

Build

Displays the Build Number.

Reset Settings

Reset the settings for Music to the initial settings.





Peeping prevention

The jacket images of the album being played are shown darkened to make it harder for someone peeping to read.

Change playback screen mode Select playback screen mode

Select the desired mode from two types.

edit tab

You can edit the display or hide settings for the tab categories displayed in the library and also change the display order.

SNS

You can post the track currently playing to a social network.


A list of usable SNS apps is displayed.

 You need to install an SNS app to use the SNS service.



USB output

You can connect a headphone amplifier or D/A converter, for example, that has a USB connector. You will need a USB OTG (On-The-Go) cable (commercially available) to connect to this unit. Make sure you have the correct type of USB cable for the USB port of the device you are connecting to the OTG cable. (If it is a micro USB port, you can use the micro USB cable included with this unit.)

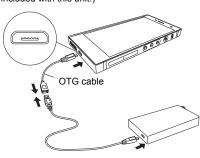

If the device connected supports high-res sources, connect after performing the following procedure to enable high-res output. Proceed to step 4 if not supported.

1 Tap Music in the home screen.



2 Tap the icon at the top right of the screen.



- **3** Tap "Settings" "USB Host Audio Driver is valid." to turn on.
- 4 Turn on the device you are connecting to this unit and connect, using an OTG cable, etc. Make sure you plug the cable in the right way up when connecting. You may damage the plug or jack if you try to insert it the wrong way.

5 A message is displayed on the unit's screen. Tap "OK".



 You can make other settings such as selecting the output format and setting the upper limit for the frequency.

For details about "USB Audio" (→112)





Bluetooth® function

You can listen to music wirelessly by using Bluetooth enabled devices such as headphones or speakers. Reception is possible over a distance of 10 m with a clear line of sight. The communication distance will be reduced in some conditions.

This unit supports aptX HD. You can enjoy higher quality wireless sound by connecting headphones and wireless speakers that support aptX HD.


 Playback will be aptX when connected with a Bluetooth enabled device that supports aptX, and aptX HD when connected with a Bluetooth enabled device that supports aptX HD.

Pairing for play

Pairing is necessary when connecting the Bluetooth enabled devices for the first time. Make sure the Bluetooth enabled device you want to connect is ready to be detected. 1 Tap "Settings" in the home screen.



- 2 Tap "Bluetooth". If it is "Off", tap it to turn it "On".
- **3** Tap the equipment to be connected.

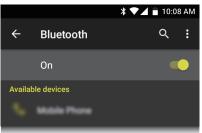

4 Pairing will end after a short time.

5 Tap Music in the home screen.



6 Tap the track you want to start play.

When connecting after the first time

1 Tap "Settings" in the home screen.



2 Tap "Bluetooth" and tap the device you want to connect in "Paired devices".

Canceling a connection

1 Tap "Settings" in the home screen.



- 2 Tap "Bluetooth".
- 3 Select the device you want to disconnect and tap "OK".
- Pairing information is not deleted even if you cancel the connection. Tap the icon displayed with the device whose pairing information you want to delete and tap "FORGET".



Telephone function

- Make or take a call 125
- Register a contact in the phone book 133



Make or take a call

Make a call

1 Tap Phone in the home screen of this unit.



2 Tap the keypad icon.



Tap the dial pad to enter the telephone number, then tap the icon.



4 Tap the icon when the call is finished.



 You can also make calls to contacts in the phone book.

To "Make a call from the phone book" (→136)



Take a call

When in sleep mode

1 When you receive a call, an icon is displayed on the screen. Flick the icon to the right to take the call.



To refuse the call, flick the icon to the left.





2 Tap the icon when the call is finished.




When operating

1 When you receive a call, an icon is displayed on the screen. Tap the icon to take the call.



• Tap " × " to refuse the call.

The call screen

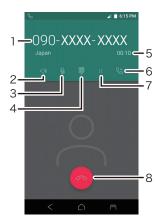

- The phone number you are in a call with is displayed.
- 2. You can use the speaker for hands free calls.
- 3. You can stop the other party from hearing your voice.

- 4. You can display the dial pad to send push signals while in a call.
- 5. The call time is displayed.

8. End the call.

- 6. Display the dial pad to call another party.
- 7. Put the call on hold.

131

■ The home screen for the telephone

Flick the screen left or right to change the display.



- Enter a name or phone number to search for a contact in the phone book.
- 2. Display contacts registered as favorites.
- Display the log of calls made or received.
 The phone book is displayed.

Register a contact in the phone book

Register the information for contacts, such as names and numbers, in the phone book.

1 Tap Phone in the home screen of this unit.



2 Tap the icon at the top right of the screen to display the contacts screen.







3 Tap the add contacts icon at the bottom right of the screen to move to the input screen.



- 4 Enter the required items. Tap "More Fields" to enter information other than just the phone number and email address.
- 5 When you are finished entering the contact information, tap the icon to the right of "Add new contact" on the screen to save the contact.



To edit phone book entries:

Tap the contact you want to edit in the list of contacts, then tap the icon.



To delete a contact:

Tap the icon of the contact you want to delete then tap "Delete".







■ Make a call from the phone book

Tap the icon at the top right of the screen to display the list of contacts.



Tap the contact you want to call, then tap the phone number.



■ Register contacts as favorites

You can register contacts you use frequently as favorites.

 Tap the icon at the top right of the screen to display the list of contacts.



2 Tap the contact you want to register as a favorite, then tap the icon.



The contact is registered in the list of favorites.



Using the camera

- ► Taking photographs 140
- ► Taking videos 145
- ► Taking panorama photographs 149
- To view the images or videos you have taken 151



Taking photographs

1 Tap Camera in the home screen of this unit.





2 Tap the regular photograph icon at the top right of the screen.




3 Tap the point on the screen you want to focus on. The focus display inside the ring turns green when the camera is focused.



4 Tap the shutter icon.



■ The shooting screen

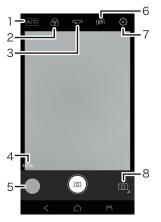

- You can change the camera settings to suit different scenes, such as "Portrait", "Sports", etc.
- You can add effects such as "Mono", "Sepia", etc. to photos when shooting.

- 3. Switch between the main camera and the front camera.
- 4. This gives you a guide to the number of images that can be recorded.
 - 5. Check the images or videos you have taken.
 - This takes two photographs with one shot. One with normal settings and one with clearer brightness and contrast.
- You can make settings for the flash, locations to save photos, etc.
- 8. Switch between normal photography, panorama photography, and video.

Taking videos

1 Tap the icon at the bottom right of the screen, then tap the video icon.




2 Tap the shutter icon to start shooting.



Tap the shutter icon again to stop shooting.



■ The shooting screen

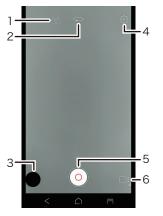

- You can add effects such as "Mono", "Sepia", etc. to videos when shooting.
- Switch between the main camera and the front camera.
- Check the images or videos you have taken.

- You can change settings such as the shooting quality, recording time, etc.
- 5. Tap to start and stop shooting.6. Switch between normal photography,
- panorama photography, and video.



Taking panorama photographs

1 Tap the icon at the bottom right of the screen, then tap the panorama icon.



2 Tap the shutter icon, then move the unit either horizontally or vertically.



 Move the unit at a steady speed. Moving the unit too fast may result in a poor photograph. 3 Tap the shutter icon again to stop shooting.




 Shooting also stops automatically once you have moved the unit approximately 180° from the starting position.

To view the images or videos you have taken

1 Tap the icon at the bottom left of the screen.



2 Flick the list left or right.

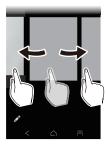

ullet To return to the shooting screen, tap < .

To delete the images or videos you have taken:

Select the image or video you want to delete from the list, and tap the icon at the top right of the screen.





Settings



Tap ot to enable settings for Wi-Fi and Bluetooth, settings for audio output, security settings, firmware updates, and a variety of other settings. This manual explains settings related to music playback.

- Make sound and output settings 154
- ▶ Updating 159
 - ▶ Backing up and resetting 160



Make sound and output settings

This section explains the items in "Sound & notification" in "Settings" that help you enjoy high-quality sound.

1 Tap "Settings" in the home screen.



2 Tap "Sound & notification" and select the item to change the setting.

Output select

Switching the headphone output.

Balanced

A mode for balanced headphones. When you connect balanced headphones, either this mode or the following ACG (mode) is automatically selected. Compared to the normal single-ended operation, you can get a larger output and the high voltage is not grounded together with the small signal in this mode, so you can anticipate a superior effect in the quality of the music, which

means you can drive headphones that have a high impedance.

A.C.G.

A mode for balanced headphones. You can switch to this ACG (mode) from Balanced (mode). The basic operating method is the same as the balanced mode, but uses technology to even more forcefully fix grounding standards, so you can enjoy a sound quality with improved clarity and stability than the balanced mode.

Output volume is the same as the singleended operation, however.

- If Auto Volume is turned ON, the volume is automatically set to a level between Balanced and A.C.G. to moderate the volume level.
- This unit does not support simultaneous use of the balanced headphone jack and the headphone jack. Using both jacks at the same time may result in damage.

Fixed line out mode

You can switch the headphone output to the line output mode to connect external equipment.





 When you have "Fixed line out mode" on, output through the headphone jack is at maximum volume, so do not use headphones. Adjust the volume on the connected device.

L/R balance

Change the left and right volume balance between 0 and 20. If you set R to 20, no sound is heard from the left speaker.

Stand-alone mode

You can improve sound quality by turning off Wi-Fi, the *Bluetooth* function, and the LCD.

 The "Stand-alone mode" is canceled when you press the power button to turn the screen on

Digital filter setting

By modifying the filter characteristics of the built-in digital converter you can enjoy three different types of modified sound quality.

SHARP/SLOW/SHORT





Lock range adjust

You can improve sound quality by adjusting the lock range of the audio input signal's jitter (modulation). The lock range can be adjusted from the more precise Narrow up to Wide in seven steps.

 If you change the lock range and the sound is interrupted, adjust to the Normal or Wide ends.

Volume Limiter

Set the limit for maximum volume.

Gain setting

You can select the headphone output level to suit your headphones.

HIGH/NORMAL/LOW1/LOW2

- Lower the volume first if you intend to select "HIGH".
- When connecting a pair of headphones for the first time, set to "LOW1" and change the volume level gradually.





Volume lock

Disables volume control with the volume dial on this unit. The effect works when the screen is off.

 It is recommended to turn this ON to avoid unexpected changes in volume during use.

Headphone jack auto detect

Set whether to detect if a headphone has been connected to the headphone jack or not.



Updating

Updates the software on this unit to the latest version. A message is displayed on the screen when an update file is released for the software. Tap the message and follow the on screen instructions to update.

Check whether there is an update file

You can check whether there is an update file for the software.

1 Tap "Settings" in the home screen.



2 Tap "About phone" - "System updates".

Backing up and resetting

■ Backing up

You can back up your apps and settings to a Google server.

1 Tap "Settings" in the home screen.



2 Tap "Backup & reset" and set "Back up my data" to "On".

Resetting

Reset the unit to the condition it was in when you purchased it. All data, downloads, etc. are deleted when you reset the unit.

1 Tap "Settings" in the home screen.



2 Tap "Backup & reset" - "Factory data reset" - "RESET PHONE".

Others

- Specifications 161
- Supported playback formats 164
- Continuous play time 165
- Number of music files recordable 165
- Cautions for use 166
 - License and Trademark Information 169

Specifications

Platform:

Android6.0

Display:

5.0-inch, 1920 × 1080 dot resolution

Interfaces and input/output jacks:

- Headphone jack
 4-conductor, ø3.5 mm microphone compatible*¹, impedance: 16 to 300 Ω*²
- Headphone jack (balanced output)
 4-conductor, Ø2.5 mm, impedance: 32 to 600 Q*2
 - *1 Not all headphones are guaranteed to work.
 - *2 Do not connect headphones that have an impedance outside the rated range as this may result in damage.
- 1 micro USB port, 1 micro SD card slot, 2 SIM slot (nano SIM, dual SIM dual standby)

Network Section:

- Wireless LAN: IEEE802.11 a/b/g/n/ac compliant
- Bluetooth: A2DP, AVRCP, HSP, OPP, HID, PAN, SPP, PBAP, HOGP

Battery power:

3,000 mAh

Operating temperature: 5 °C to 35 °C

Internal memory:

128 GB (including system area for Android)

· Main camera: 16 mega pixels

- Front camera: 8 mega pixels
- Mass of main unit:

234 q

Camera pixels:

External dimensions (excluding protrusions):

142.3 mm × 72.0 mm × 11.9 mm (height/width/depth)

Supplied Accessories: micro USB cable

- AC Adapter
- · Slot Tray Eject Pin
- Quick Start Guide

This document is an online instruction manual. It is not included as an accessory. Specifications and features are subject to

change without notice.





Supported playback formats

- MP3/AAC (up to 48 kHz)*1
- DSD/DSF/DSDIFF (2.8 MHz/3 MHz/5.6 MHz/ 6 MHz/11.2 MHz PCM conversion/DoP output)*2
- FLAC/ALAC/WAV/AIFF/MQA (up to 384 kHz), OggVorbis (up to 192 kHz)
 *1 Files that are protected by DRM cannot
 - *1 Files that are protected by DRM cannot be played.
 - *2 Converted to PCM for playback on the main device.

Continuous play time

Times shown are a guide. Playback times depend on settings.

- FLAC 24 bit 96 kHz* In standby mode during unbalanced connection: 26 hours
 - With the screen off, playing with Music, and using a 4-contact ø3.5 mm headphone connection

Number of music files recordable

This is a guide to the number of music files you can record to the internal memory of this unit.

- Internal memory
 - Approximately 21,400 tracks (available space: approximately 107 GB, MP3 format: when 5 MB)
 - Approximately 535 tracks (available space: approximately 107 GB, FLAC lossless 24 bit/ 192 kHz: when 200 MB)

Cautions for use

This unit

- The 2.5 mm diameter headphone jack of this unit is compatible with 4-conductor plugs and the 3.5 mm diameter headphone jack is compatible with 4-conductor plugs supporting microphone input, but there is no guarantee of operation for any headphone connected.
- This unit does not support simultaneous use of the balanced headphone jack and the headphone jack. Using both jacks at the same time may result in damage.
- Take care that dust and foreign objects do not get into the entrance of the micro SD card slot, as this can cause a malfunction.
- Do not press down with force on the unit when the unit is placed with the screen facing down. This can damage the LCD.

Screen displays

 There may be some differences in operations and displays, etc., depending on the version of Android you are using.





Playing audio

- Play may stop momentarily when you turn the Bluetooth function OFF while using balanced headphone output. If this happens, start play again.
- Play may stop momentarily when you turn "Stand-alone mode" ON. If this happens, start play again.
- If you have connected a USB device and are in the middle of playing it, sound may cease to be output if you switch the output to "Balanced". Disconnect the USB device to play in this case.

Copying music files

 When copying a music file with X-DAP Link and an error message is displayed, restart this unit and perform the copy operation again. If the error message is displayed again, use your computer to delete the "xdaplink" folder from the built-in storage of this unit.

FCC electronic authorization labeling

You can confirm information related to authorizations using the following procedure:

1 Tap "Settings" in the home screen.



2 Tap "About phone" - "Legal information" - "Certification".

License and Trademark Information



Qualcomm aptX is a product of Qualcomm Technologies International, Ltd.
Qualcomm is a trademark of Qualcomm Incorporated, registered in the United States and other countries, used with permission. aptX is a trademark of Qualcomm Technologies International, Ltd., registered in the United States and other countries. used with permission.





Qualcomm Quick Charge is a product of Qualcomm Technologies, Inc.

Qualcomm is a trademark of Qualcomm Incorporated, registered in the United States and other countries.

Quick Charge is a trademark of Qualcomm Incorporated. All Qualcomm Incorporated trademarks are used with permission.

Bluetooth

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc.

Windows 7, Windows Media, and the Windows logo are trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries.



The Wi-Fi CERTIFIED Logo is a certification mark of Wi-Fi Alliance[®].

iTunes is a trademark of Apple Inc., registered in the U.S. and other countries.

Google, Android, Google Play and other marks are trademarks of Google Inc.

DSD and the Direct Stream Digital logo are trademarks of Sony Corporation.





The product with this logo is conformed to Hi-Res Audio standard defined by Japan Audio Society. This logo is used under license from Japan Audio Society.

All other trademarks are the property of their respective owners.

