

BOP 210/211

Oven

Table of contents

Important safety information	3
Causes of damage	5
Environmental protection	5
Environmental protection	5
Tips for saving energy	5
Getting to know the appliance	6
Oven	6
Display and operating controls	7
Symbols	7
Colours and display	8
Additional information i and i [®]	8
Cooling fan	8
Function selector positions	9
Accessories	10
Special accessories	10
Before using for the first time	10
Setting the language	10
Setting the time format	11
Setting the clock	11
Setting the date format	11
Setting the date	11
Setting the temperature format	11
Ending initial set-up	12
Heating up the oven	12
Cleaning accessories	12
Activating the appliance	12
Standby	12
Activating the appliance	12
Operating the appliance	13
Cooking compartment	13
Inserting accessories	13
Switching on	13
Rapid heating	13
Safety shut-off	13
Timer functions	14
Calling up the timer menu	14
Timer	14
Stopwatch	14
Cooking time	15
End of cooking time	16
Long-term timer	16
Setting the long-term timer	16
Individual recipes	17
Recording a recipe	17
Programming a recipe	18
Entering names	18
Starting recipes	18
Change recipe	19
Deleting recipes	19

Child lock	19
Activate the child lock	19
Deactivating the child lock	19
Basic settings	20
Cleaning and maintenance	22
Cleaning agents	22
Removing the rails	23
Catalytic cleaning (self cleaning)	24
Preparing catalytic cleaning	24
Starting catalytic cleaning	24
Trouble shooting	25
Power cut	25
Demo mode	25
Replacing the oven light bulb	26
After-sales service	26
Settings table and tips	27
Baking table	27
Baking tips and tricks	28
Roasting table	29
Roasting tips and tricks	30
Grilling table	30
Defrosting	31
Acrylamide in foodstuffs	31

Additional information on products, accessories, replacement parts and services can be found at **www.gaggenau.com** and in the online shop **www.gaggenau-eshop.com**

Important safety information

Read these instructions carefully. Only then will you be able to operate your appliance safely and correctly. Retain the instruction manual and installation instructions for future use or for subsequent owners.

This appliance is only intended to be fully fitted in a kitchen. Observe the special installation instructions.

Check the appliance for damage after unpacking it. Do not connect the appliance if it has been damaged in transport.

Only a licensed professional may connect appliances without plugs. Damage caused by incorrect connection is not covered under warranty.

This appliance is intended for domestic use only. The appliance must only be used for the preparation of food and drink. The appliance must be supervised during operation. Only use this appliance indoors.

This appliance may be used by children over the age of 8 years old and by persons with reduced physical, sensory or mental capabilities or by persons with a lack of experience or knowledge if they are supervised or are instructed by a person responsible for their safety how to use the appliance safely and have understood the associated hazards.

Children must not play with the appliance. Children must not clean the appliance or carry out general maintenance unless they are at least 8 years old and are being supervised.

Keep children below the age of 8 years old at a safe distance from the appliance and power cable.

Always slide accessories into the cooking compartment correctly. See description of accessories in the instruction manual.

Risk of fire!

- Combustible items stored in the cooking compartment may catch fire. Never store combustible items in the cooking compartment. Never open the appliance door if there is smoke inside. Switch off the appliance and unplug it from the mains or switch off the circuit breaker in the fuse box.
- A draught is created when the appliance door is opened. Greaseproof paper may come into contact with the heating element and catch fire. Do not place greaseproof paper loosely over accessories during preheating. Always weight down the greaseproof paper with a dish or a baking tin. Only cover the surface required with greaseproof paper. Greaseproof paper must not protrude over the accessories.

Risk of burns!

- The appliance becomes very hot. Never touch the interior surfaces of the cooking compartment or the heating elements. Always allow the appliance to cool down. Keep children at a safe distance.
- Accessories and ovenware become very hot. Always use oven gloves to remove accessories or ovenware from the cooking compartment.
- Alcoholic vapours may catch fire in the hot cooking compartment. Never prepare food containing large quantities of drinks with a high alcohol content. Only use small quantities of drinks with a high alcohol content. Open the appliance door with care.

Risk of scalding!

- The accessible parts become hot during operation. Never touch the hot parts. Keep children at a safe distance.
- When you open the appliance door, hot steam may escape. Open the appliance door with care. Keep children at a safe distance.
- Water in a hot cooking compartment may create hot steam. Never pour water into the hot cooking compartment.

Risk of injury!

Scratched glass in the appliance door may develop into a crack. Do not use a glass scraper, sharp or abrasive cleaning aids or detergents.

Risk of electric shock!

- Incorrect repairs are dangerous. Repairs may only be carried out and damaged power cables replaced by one of our trained after-sales technicians. If the appliance is defective, unplug the appliance from the mains or switch off the circuit breaker in the fuse box. Contact the after-sales service.
- The cable insulation on electrical appliances may melt when touching hot parts of the appliance. Never bring electrical appliance cables into contact with hot parts of the appliance.
- Penetrating moisture may cause an electric shock. Do not use any high-pressure cleaners or steam cleaners.
- When replacing the cooking compartment bulb, the bulb socket contacts are live. Before replacing the bulb, unplug the appliance from the mains or switch off the circuit breaker in the fuse box.
- A defective appliance may cause electric shock. Never switch on a defective appliance. Unplug the appliance from the mains or switch off the circuit breaker in the fuse box. Contact the after-sales service.

Risk of burns!

The appliance will become very hot on the outside during the cleaning function. Never touch the appliance door. Allow the appliance to cool down. Keep children at a safe distance.

Causes of damage

Caution!

- Accessories, foil, greaseproof paper or ovenware on the cooking compartment floor: do not place accessories on the cooking compartment floor. Do not cover the cooking compartment floor with any sort of foil or greaseproof paper. Do not place ovenware on the cooking compartment floor if a temperature of over 50 °C has been set. This will cause heat to accumulate. The baking and roasting times will no longer be correct and the enamel will be damaged.
- Water in a hot cooking compartment: do not pour water into the cooking compartment when it is hot. This will cause steam. The temperature change can cause damage to the enamel.
- Moist food: do not store moist food in the cooking compartment when it is closed for prolonged periods. This will damage the enamel.
- Fruit juice: when baking particularly juicy fruit pies, do not pack the baking tray too generously. Fruit juice dripping from the baking tray leaves stains that cannot be removed. If possible, use the deeper universal pan.
- Cooling with the appliance door open: only allow the cooking compartment to cool when it is closed. Even if the appliance door is only open a little, front panels of adjacent units could be damaged over time.
- Very dirty door seal: If the door seal is very dirty, the appliance door will no longer close properly when the appliance is in use. The fronts of adjacent units could be damaged. Always keep the door seal clean.
- Appliance door as a seat, shelf or worktop: Do not sit on the appliance door, or place or hang anything on it. Do not place any cookware or accessories on the appliance door.
- Inserting accessories: depending on the appliance model, accessories can scratch the door panel when closing the appliance door. Always insert the accessories into the cooking compartment as far as they will go.
- Carrying the appliance: do not carry or hold the appliance by the door handle. The door handle cannot support the weight of the appliance and could break.

Environmental protection

Unpack the appliance and dispose of the packaging in an environmentally-responsible manner.

Environmental protection



This appliance is labelled in accordance with the European Directive 2012/19/EU concerning used electrical and electronic appliances (WEEE – waste electrical and electronic equipment). The guideline determines the framework for the return and recycling of used appliances as applicable.


Tips for saving energy

- Open the appliance door as little as possible while cooking, baking or roasting.
- Use dark, black lacquered or enamelled baking tins for baking. They absorb the heat particularly well.
- It is best to bake several cakes one after the other. The oven will still be hot. This reduces the baking time for the second cake. You can also place two loaf tins next to each other.
- In the hot air mode, you can bake on several levels at the same time.
- If the cooking time is relatively long, you can switch off the oven 10 minutes before the end of the cooking time and use the oven's residual heat to complete the cooking process.

Getting to know the appliance

Use this section to familiarise yourself with your new appliance. The control panel and the individual operating controls are explained. You will find information on the cooking compartment and the accessories.

Oven

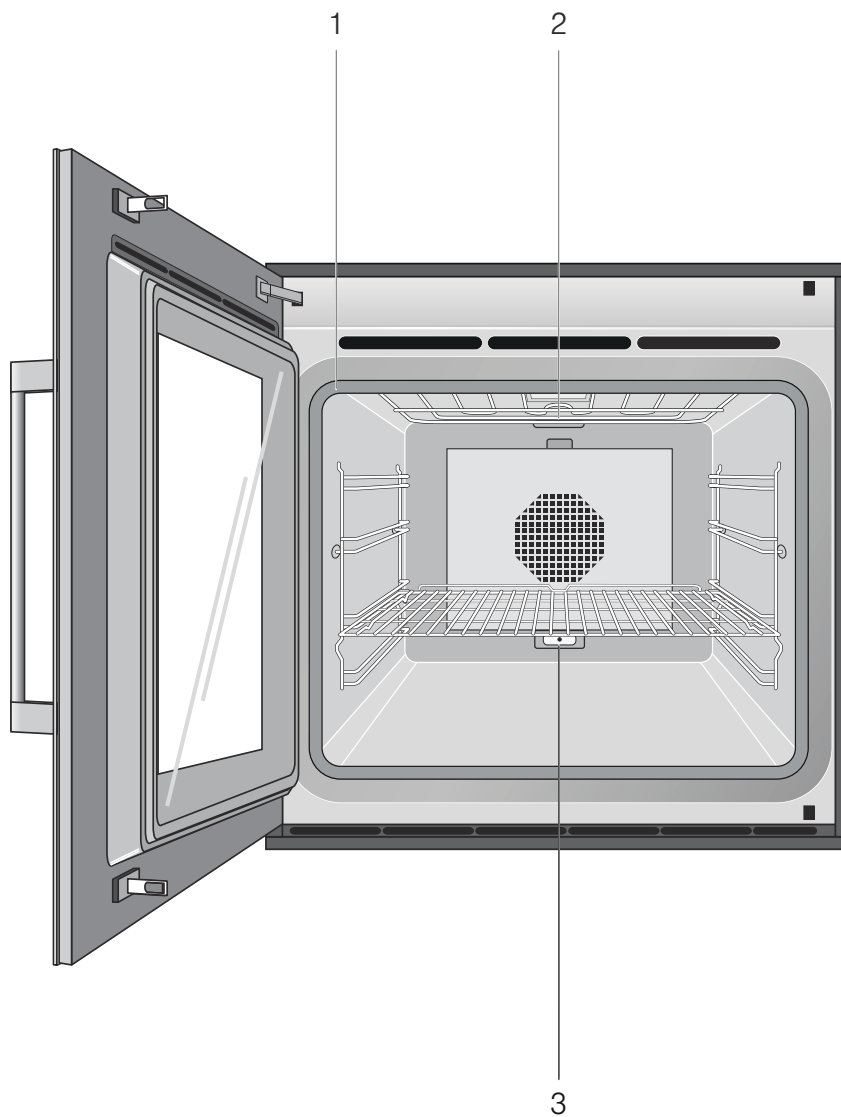


1	Door seal
2	Grill heating element
3	Socket for additional heating element (special accessory for baking stone and roaster)

Display and operating controls

These instructions are valid for different versions of the appliance. There may be minor differences depending on the appliance model.

All versions of the appliance are operated in an identical manner.

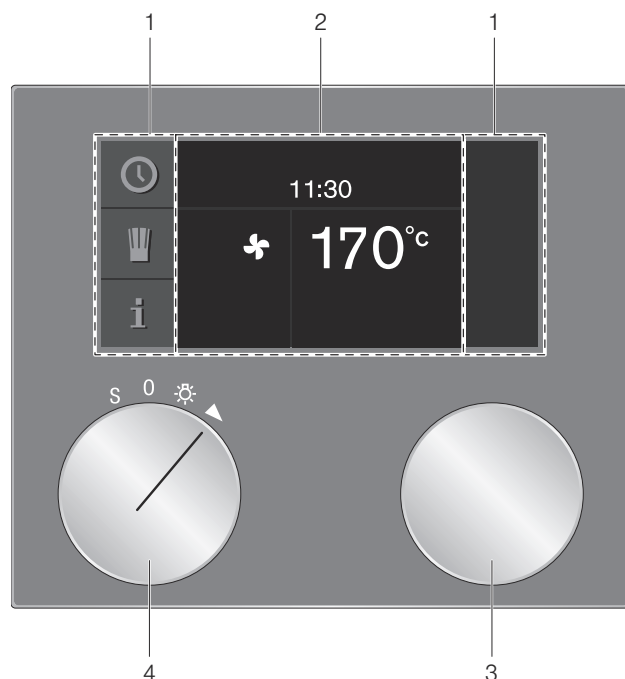

1	Control panel	These areas are touch sensitive. Touch a symbol to select the corresponding function.
2	Display	The display shows, for example, current settings and options.
3	Rotary selector	You can use the rotary selector to set the temperature and to make further settings.
4	Function selector	The function selector is used to select the type of heating, the cleaning function or the basic settings.

Symbols

Symbol	Function
▶	Start
■	Stop
	Pause/End
X	Cancel
C	Delete
✓	Confirm/save settings
>	Selection arrow
i	Call up additional information
⤴	Heating up with status indicator
👤	Call up individual recipes
rec ●	Record menu
🔧	Edit settings
> A [^]	Enter name
✂	Delete letters
🔒	Child lock
🕒	Call up timer menu
🕒	Call up long-term timer
🚫	Demo mode

Colours and display

Colours


The different colours are used to guide the user in the relevant setting situations.

Orange	Initial settings Main functions
Blue	Basic settings Cleaning
White	Values which can be set

Display

The appearance of the symbols, values or the entire display changes depending on the situation.

Zoom	The setting which is currently being changed is displayed in an enlarged format. A cooking time that is coming to an end is shown in an enlarged format shortly before running out (e.g. the last 60 seconds of the timer).
Reduced display	After a short time, the display is reduced and only the most important information is displayed. This function is preset and can be changed in the basic settings.

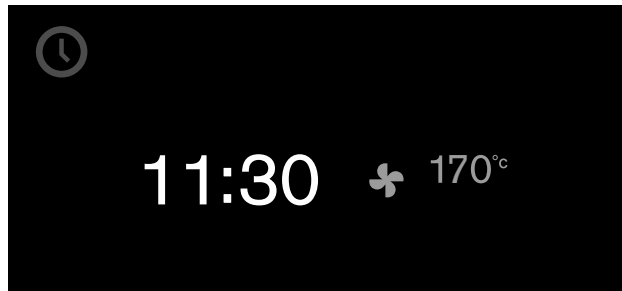

Additional information i and i[Ⓢ]

By touching the **i** symbol, you can call up additional information.

The **i[Ⓢ]** symbol appears for important information and indicates that an action is required. Important information on safety and operation mode are also intermittently shown automatically. These messages disappear automatically after several seconds or must be confirmed with **✓**.

Before starting, you are shown information, for example, on the type of heating which has been set. This allows you to check if the current setting is suitable for your meal.

During operation, you are shown information, for example, on the elapsed and remaining time and/or on the current cooking compartment temperature.

Note: Once the oven has heated up, slight deviations in temperature are normal during continuous operation.


Cooling fan







Your appliance has a cooling fan. The cooling fan switches on during operation. Depending on the appliance version, the hot air escapes above or under the door.

After removing cooked food, keep the door closed until the appliance cools down. The appliance door must not be left ajar, as adjoining kitchen furniture may be damaged. The cooling fan continues to run for a certain time after operation and then switches off automatically.

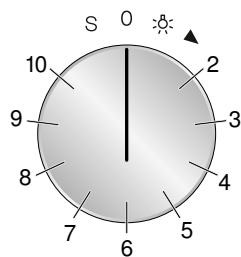Caution! Do not cover the ventilation slots. Otherwise, the appliance will overheat.

  Function selector positions




Position	Function/type of heating	Temperature	Use
0	Off position		
☀	Light		
2	 Hot air	50 - 300 °C Default temperature 170 °C	Hot air: For cakes, biscuits and bakes on several levels. The fan in the back wall of the oven distributes the heat evenly throughout the cooking compartment.
3	 Eco hot air*	50 - 300 °C Default temperature 170 °C	Energy-saving hot air mode for cakes, biscuits, bakes and gratins. The oven lighting remains off.
4	--- Top + bottom heat	50 - 300 °C Default temperature 170 °C	For cakes in tins or on a baking tray, bakes, roasting.
5	--- Top heating	50 - 300 °C Default temperature 170 °C	Targeted heat from above, for example grilling fruitcake with meringue.
6	--- Bottom heating	50 - 300 °C Default temperature 170 °C	For the final baking stage (such as for moist fruitcakes), for preserving, for dishes in a bain marie.
7	 Hot air + bottom heat	50 - 300 °C Default temperature 170 °C	Additional heat from below for moist cakes, such as fruitcake.
8	 Full surface grill + circulated air	50 - 300 °C Default temperature 220 °C	Even, all-round heating for meat, poultry and whole fish.
9	~~~~~ Full surface grill	50 - 300 °C Default temperature 220 °C	To grill flat pieces of meat, sausages or fillets of fish. Grilling and gratinating.
10	~~~~~ Baking stone function	50 - 300 °C Default temperature 250 °C	Baking stone only available as a special accessory Baking stone heated from below for crisp stone-baked pizza, bread or bread rolls.
S	 Basic settings		Your appliance can be individually adjusted in the basic settings.
	 Catalytic cleaning	300 °C	Self-cleaning

* Type of heating used to determine the energy efficiency class according to EN50304.

Accessories

Use only the accessories supplied with the product or available from the after-sales service. They are specially designed for your appliance. Ensure that you always insert the accessories into the cooking compartment the right way round.

Your appliance is equipped with the following accessories:

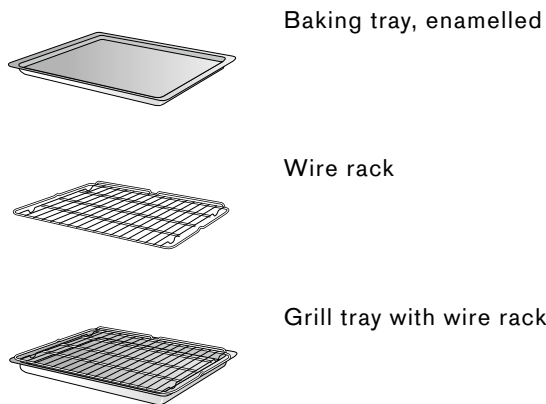

Special accessories

You can order the following special accessories from your specialist dealer:

- BA 036 100 Wire rack, chromium-plated, without opening, with feet
- BA 046 113 Glass tray, 24 mm deep
- BA 056 113 Heating element for baking stone and roaster
- BA 056 130 Baking stone
Including baking stone support and pizza paddle (order heating element separately)
- BA 216 102 Telescopic extension rail
- BA 226 100 Grill tray, enamelled, 37 mm deep
- BA 226 110 Baking tray, enamelled, 24 mm deep
- BS 020 002 Pizza paddle, set of 2

Only use the accessories as specified. The manufacturer accepts no liability if these accessories are used incorrectly.

Before using for the first time

Here you will find everything you need to do before using the appliance to prepare food for the first time. First read the section on *Important safety information*.

After connection to the mains, the "Initial settings" menu appears in the display. You can now make settings for your new appliance.

- Language
- Time format
- Time
- Date format
- Date
- Temperature format

The appliance must be fully installed and connected to the mains.


Notes

- The "Initial settings" menu appears only when the appliance is switched on for the first time after being connected to the mains or when the appliance has been without electricity for several days.
After the appliance is connected to the mains, the GAGGENAU logo is displayed for approx. 30 seconds before the "Initial settings" menu is automatically displayed.
- You may change the settings at any time (refer to the *Basic settings* section).

Setting the language

The preset language appears in the display.

- 1 Turn the rotary selector to select the required display language.
- 2 Confirm with ✓.

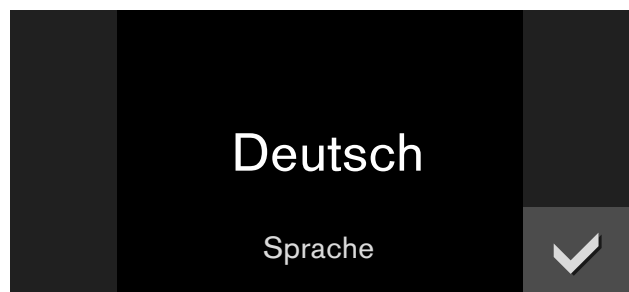


Note: If the language is changed, the system restarts. This takes a few seconds.

Setting the time format

The two possible formats 24h and AM/PM appear in the display. The default is the 24h format.

- 1 Use the rotary selector to select the desired format.
- 2 Confirm with ✓.

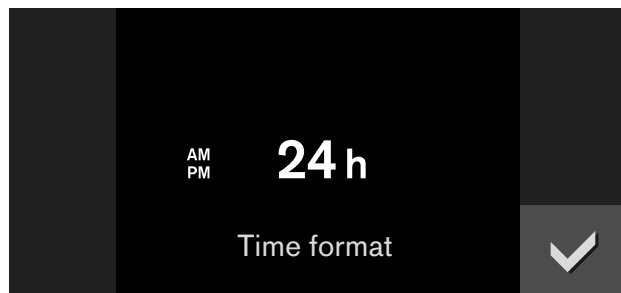

Setting the clock

The time is shown in the display.


- 1 Set the desired time using the rotary selector.
- 2 Confirm with ✓.



Setting the date format

The three possible formats D.M.Y, D/M/Y and M/D/Y appear in the display. The default is the D.M.Y format.


- 1 Use the rotary selector to select the desired format.
- 2 Confirm with ✓.

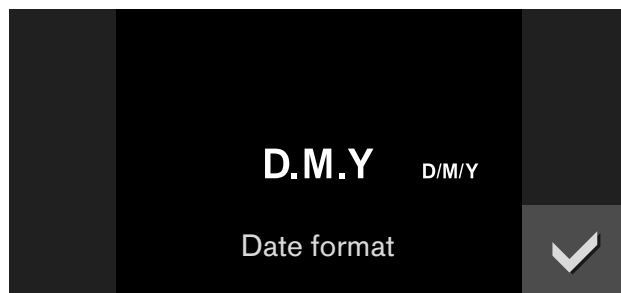

Setting the date

The preset date appears in the display. The day setting is already active.


- 1 Set the day using the rotary selector.
- 2 Touch the > symbol to switch to the month setting.
- 3 Set the month using the rotary selector.
- 4 Touch the > symbol to switch to the year setting.
- 5 Set the year using the rotary selector.
- 6 Confirm with ✓.

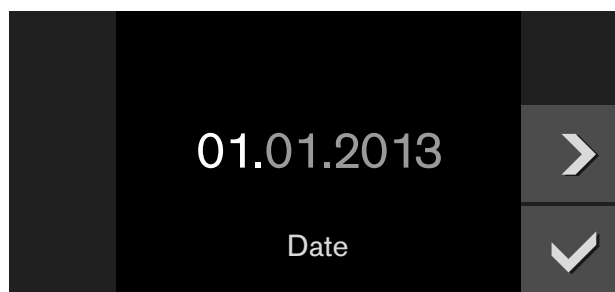

Setting the temperature format

The two possible formats °C and °F appear in the display. The default setting is °C.


- 1 Use the rotary selector to select the desired format.
- 2 Confirm with ✓.

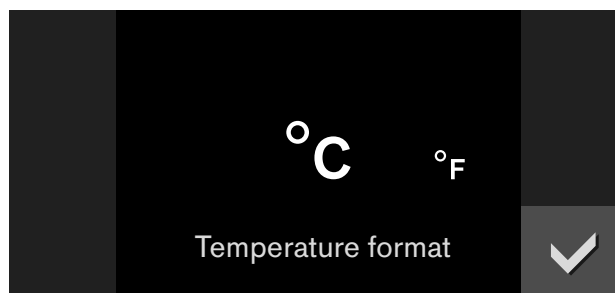

Ending initial set-up

"Initial set-up complete" appears in the display.

Confirm with ✓.

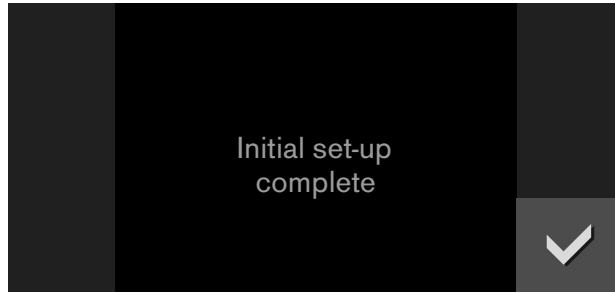

The appliance enters standby mode and the standby screen appears. The appliance is now ready for operation.

Heating up the oven

Ensure that no packaging remnants have been left in the cooking compartment.

To remove the new cooker smell, heat up the oven when it is empty and closed. One hour with 🔥 Hot air at 200°C is ideal. For instructions on how to set this type of heating, refer to the *Operating the appliance* section.

Cleaning accessories

Before using the accessories for the first time, clean them thoroughly using hot detergent solution and a soft cloth.

Activating the appliance

Standby

The appliance goes into standby mode if no function has been set or the child lock is activated.

The brightness of the control panel is dimmed in standby mode.



Notes

- Different displays are available for standby mode. The default setting is the GAGGENAU logo and the clock. To change the display, refer to the *Basic settings* section.
- The brightness of the display depends on the vertical viewing angle. You can adjust the display using the "Brightness" setting in the basic settings.

Activating the appliance

To exit standby mode, you can either

- Turn the function selector,
- Touch a control panel,
- Open or close the door.

You can now set the desired function. You can read about how to set functions in the respective chapters.


Notes

- When "Standby screen = off" is selected in the basic settings, you must turn the function selector to exit standby mode.
- The appliance returns to the standby screen if you have not made any settings for a long time after activation.
- When the door is open, the interior lighting switches off after a short time.

Operating the appliance

Cooking compartment

The cooking compartment has four shelf positions. The shelf positions are counted from the bottom up.

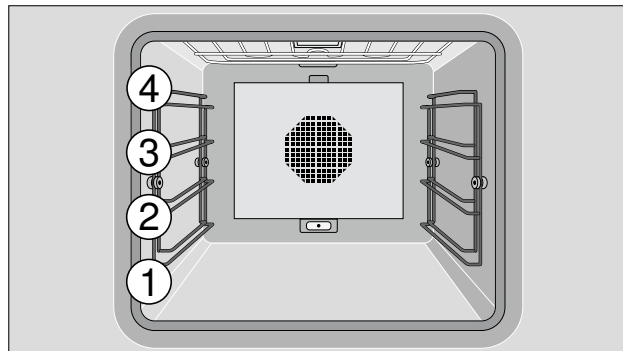

Caution!

- Do not place anything on the cooking compartment floor. Do not cover it with aluminium foil. A build-up of heat could damage the appliance.
- Do not slide any accessories between the shelf positions, or they may tip.


Always fully open the appliance door to the stop. In this position, the open door will not swing back by itself.

Inserting accessories

The accessories are equipped with a locking function. The locking function prevents the accessories from tilting when they are pulled out. The accessories must be inserted into the cooking compartment correctly for the tilt protection to work properly.

When inserting the wire rack, check

- that the lug (a) is pointing downwards
- that the safety bar on the wire rack is at the back and facing upwards.

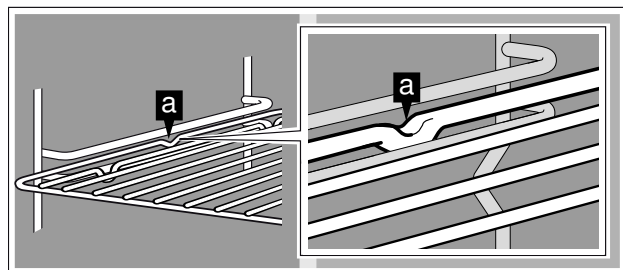

Switching on

- 1 Set the required heating mode using the function selector. The chosen heating mode and the default temperature are displayed.
- 2 If you want to change the default temperature: set the required temperature with the rotary selector.

The preheating symbol $\hat{=}$ appears on the display. The bar continuously shows the preheating status. When the set temperature is reached, a signal sounds and the preheating symbol $\hat{=}$ goes off.

Note: The oven interior lighting stays switched off at a temperature setting below 70°C

Switching off:

Turn the function selector to **0**.

Rapid heating

The "Rapid heating" function brings your appliance to the desired temperature quickly.

To ensure an even cooking result, only put your food in the cooking compartment when the "rapid heating" phase is complete.

You must activate the "Rapid heating" function in the basic settings (refer to the *Basic settings* section).

Safety shut-off

For your protection, the appliance is equipped with an automatic safety shut-off. Any heating process is switched off after 12 hours if the oven is not operated in this time. A message appears in the display.

Exception:

The long-term timer has been programmed.

Set the function selector to **0**, then the appliance can be operated again as usual.

Timer functions

You use the timer menu to make the following settings:

- ⌚ Short-term timer
- ⌚ Stopwatch
- 🕒 Cooking time (not in standby mode)
- 🕒 Cooking time end (not in standby mode)

Calling up the timer menu

You can call up the timer menu from any mode. Only from the basic settings, function selector is set to **S**, the timer menu is not available.

Touch the 🕒 symbol.




The timer menu is displayed.

Timer

The timer runs independently of the other appliance functions. You can enter a maximum of 90 minutes.


Setting the timer

- 1 Call up timer menu.
The "Timer" ⌚ function is displayed.
- 2 Turn the rotary selector to set the required cooking time.

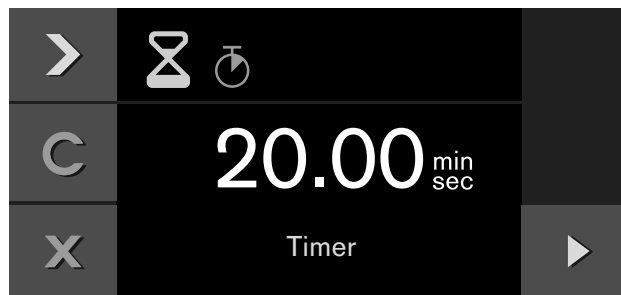

- 3 Start with ▶.

The timer menu closes and the time begins to count down. The ⌚ symbol and the countdown appear in the display.

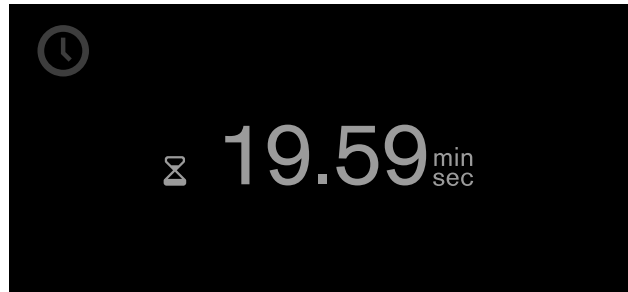

A signal sounds once the time has elapsed. Touch the ✓ symbol to silence.

You can exit the timer menu at any time by pressing the ✕ symbol. This erases the settings.

To stop the timer:

Call up timer menu. Touch ▶ to select the "Timer" ⌚ function and touch the || symbol. To allow the timer to continue counting down, touch the symbol ▶.

Switching off the timer early:

Call up timer menu. Touch ▶ to select the "Timer" ⌚ function and touch the C symbol.

Stopwatch


The stopwatch runs independently of the other appliance functions.

The stopwatch counts from 0 seconds up to 90 minutes.


It also has a pause function, which enables you to temporarily stop the clock.


Starting the stopwatch

- 1 Call up the timer menu.
- 2 Touch ▶ to select the ⌚ "Stopwatch" function.

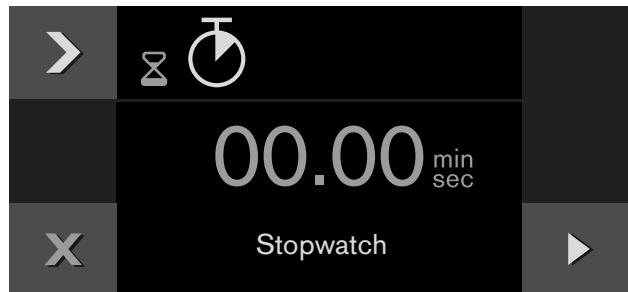





- 3 Touch ▶ to start.

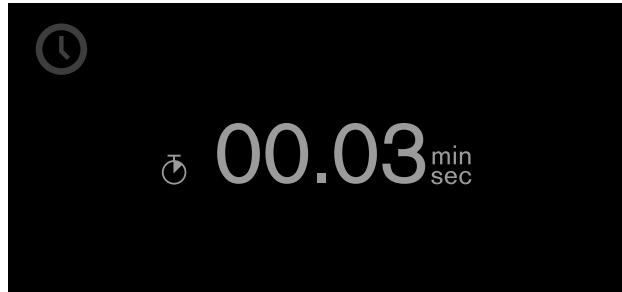 
The timer menu is closed and the timing begins. The  symbol and the elapsed time are shown in the display.





Pausing and restarting the stopwatch

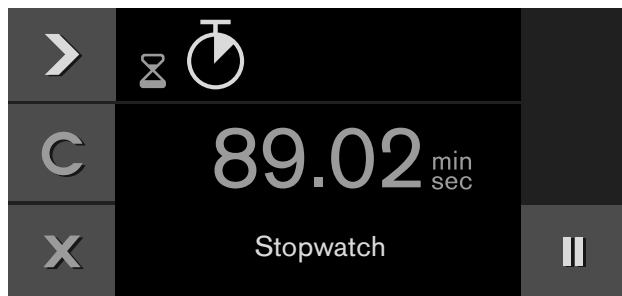- 1 Call up the timer menu.
- 2 Touch  to select the  "Stopwatch" function.
- 3 Touch the  symbol.






The time stops. The symbol changes to  Start.

- 4 Touch  to start.

The time continues to run. When 90 minutes is reached, the display pulsates and signal sounds. The signal stops when you touch the  symbol. The  symbol on the display goes out. The process has finished.

To switch off the stopwatch:

Call up the timer menu. Touch  to select the  "Stopwatch" function and touch the  symbol.




Cooking time

If you set a cooking time for your meal, the appliance switches off heating automatically after the selected time.

You can set a cooking time from 1 minute to 23 hours 59 minutes.

Setting a cooking time

You have set the heating mode and temperature and you have placed your dish in the oven.

- 1 Touch the  symbol.
- 2 Use  to select the  "Cooking time" function.

- 3 Set the desired cooking time using the rotary selector.





 
- 4 Press  to start.

The appliance starts. The timer menu is closed. The settings for temperature, heating mode, elapsing time and cooking time end are shown in the display.

 


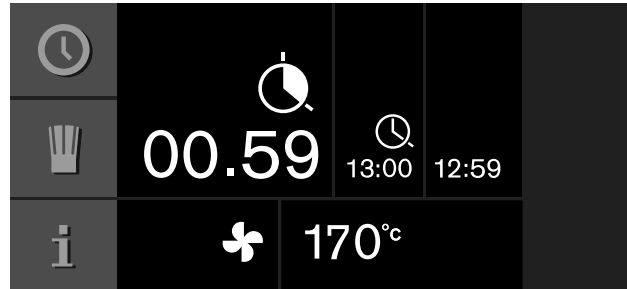

During the last minute of the cooking time the remaining time is displayed in an enlarged format.





The appliance switches off after the cooking time has elapsed. The  symbol flashes and a signal sounds. The signal stops when you touch the  symbol, open the appliance door, or switch the function selector to **0**.

Changing the cooking time:

Call up the timer menu. Use  to select the  "Cooking time" function. Change the cooking time using the rotary selector. Press  to start.

 Clearing the cooking time:

Call up the timer menu. Use  to select the  "Cooking time" function. Clear the cooking time with **C**. Return to normal operation with **X**.

Cancelling the entire operation:

Set the function selector to **0**.

Note: You can also change the heating mode and temperature during the cooking time.

End of cooking time

You can delay the cooking time end to a later time.




Example: it is 14:00. The dish requires a cooking time of 40 minutes. You want it to be ready at 15:30.

Enter the cooking time and delay the cooking time end until 15:30. The electronics system calculates the start time. The appliance starts automatically at 14:50 and switches off at 15:30.


Bear in mind that food which spoils easily should not be left in the cooking compartment for too long.

Delaying the cooking time end

You have set the heating mode, temperature and cooking time.


- 1 Touch the  symbol.
- 2 Use  to select the  "Cooking time end" function.

 



- 3 Set the desired cooking time end using the rotary selector.
- 4 Press  to start.






The appliance switches to standby. The heating mode, temperature, cooking time and cooking time end appear in the display. The appliance starts at the calculated time and switches off automatically when the cooking time has elapsed.

Note: If the  symbol flashes: You have not set the cooking time. Always set the cooking time first.

Once the cooking time has elapsed, the appliance switches off. The  symbol flashes and an audible signal sounds. The signal stops early if you touch the  symbol, open the appliance door, or set the function selector to 0.

To change the cooking time end:

 Call up the timer menu. Use  to select the .

"Cooking time end" function. Set the desired cooking time end using the rotary selector. Press  to start.

To terminate the whole procedure:

Set the function selector to 0.

Long-term timer




With this function, the appliance maintains a temperature between 50 und 230 °C with the "Hot air" heating function.


You can keep food warm for up to 74 hours without having to switch the appliance on or off.




 
 
 


Bear in mind that food which spoils easily should not be left in the oven for too long.


Note: You must set the long-term timer to "available" in the basic settings (refer to the *Basic settings* section).

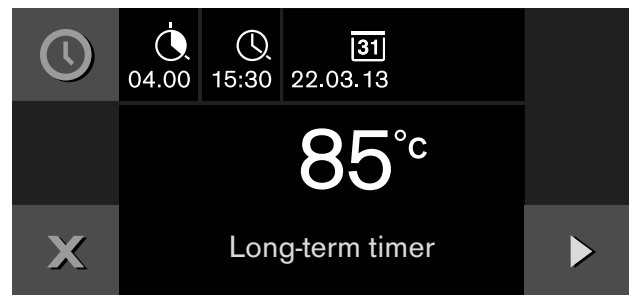Setting the long-term timer

- 1 Set the function selector to .
- 2 Touch the  symbol.
The default value 24 hrs at 85 °C appears in the display. Press  to start
-or-
Change the cooking time, the cooking time end, the switch-off date and the temperature.



- 3 Changing the cooking time :
Touch the  symbol. Set the required cooking time using the rotary selector.
- 4 Changing the cooking time end :
Touch the  symbol. Set the required cooking time end using the rotary selector.
- 5 Changing the switch-off date :
Touch the  symbol. Set the required switch-off date with the rotary selector. Confirm with .
- 6 Changing the temperature:
Set the required temperature with the rotary selector.
- 7 Press  to start.

The appliance starts.  and the temperature appear in the display.

The oven and display lighting are switched off. The control panel is locked; no key tone sounds when you touch the touch keys.

Once the set time has elapsed, the appliance stops heating. Turn the function selector to **0**.

Switching off:




To end the process, turn the function selector to **0**.


Individual recipes

 
It is possible to save up to 50 individual recipes. You can record a recipe. These recipes can be given a name so that they can be called up quickly and conveniently when required.

Recording a recipe

It is possible to consecutively set up to 5 phases and to record at the same time.

- 1 Select the required heating mode using the function selector.
The  symbol is displayed.
- 2 Touch the  symbol.
- 3 Select a free memory location by turning the rotary selector.
- 4 Touch the  symbol.

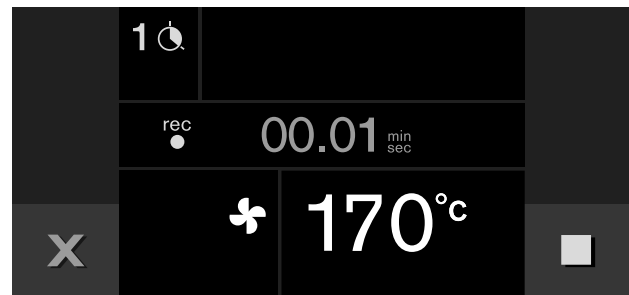



- 5 Select the required temperature using the rotary selector.
- 6 The cooking time is recorded.
- 7 To record another phase:
Select the required heating mode using the function selector. Set the temperature using the rotary selector. This begins a new phase.
- 8 If the dish has achieved the desired cooking result, touch the  symbol to finish the recipe.
- 9 Enter the name in "ABC" (refer to the *Entering names* section).

Notes





- Recording of a phase starts only once the selected temperature has been reached.
- The minimum duration of each phase is 1 minute.
- During the first minute of a new phase it is possible to change the heating mode or the temperature.


Set a core temperature for a phase:





Connect the core temperature probe to the socket in the oven. Set the heating mode and the temperature. Touch the  symbol. Select the core temperature using the rotary selector and touch  to confirm.

Programming a recipe




You can programme and save up to 5 preparation phases.

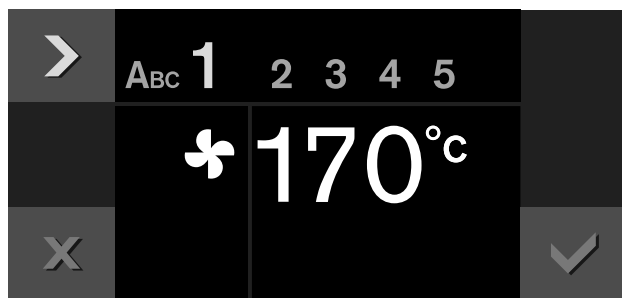- 1 Turn the function selector to the desired type of heating. Turn the rotary selector to set the desired temperature. The  symbol is displayed.
- 2 Touch the  symbol.
- 3 Use the rotary selector to select a free memory location.
- 4 Touch the  symbol.
- 5 Enter the name in "ABC" (see chapter *Entering names*).
- 6 Use the  symbol to select the first phase. The initial type of heating and temperature is displayed. You can change the type of heating and the temperature by using the rotary selectors.

 

- 7 Use the  symbol to select the time setting.
- 8 Turn the rotary selector to set the required cooking time.
- 9 Use the  symbol to select the next phase.
- or -
If preparation is complete, finish making entries.
- 10 Save with .
- or -
Cancel with  and exit the menu.

  
Setting the core temperature for a phase:




Use the  symbol to select the next phase. Setting the type of heating and temperature. Touch the  symbol. Use the rotary selector to set the desired core temperature and confirm with .



Note: Cooking time can not be set for phases with a programmed core temperature.

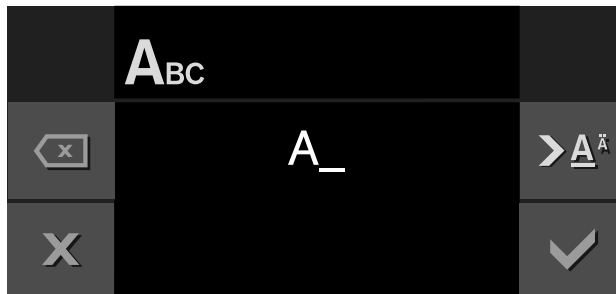Entering names

- 1 Enter the name of the recipe in "ABC".







Rotary selector	Select letters A new word always begins with a capital letter.
	Press briefly: moves the cursor right Press and hold: shifts to umlauts and special characters Press twice: accepts the change
	Press briefly: moves the cursor right Press and hold: shift to normal characters Press twice: accepts the change
	Deletes letters

- 2 Save with .
- or -
Cancel with  and exit the menu.

Note: For entering a name, Latin characters, certain special characters and numbers are available.

   Starting recipes

- 1 Set the function selector to any heating mode. The  symbol is displayed.
- 2 Touch the  symbol. Use the rotary selector to select the required recipe.
- 3 Press  to start.
Operation starts. The cooking time starts counting down in the display.
The settings for each phase are shown in the display.

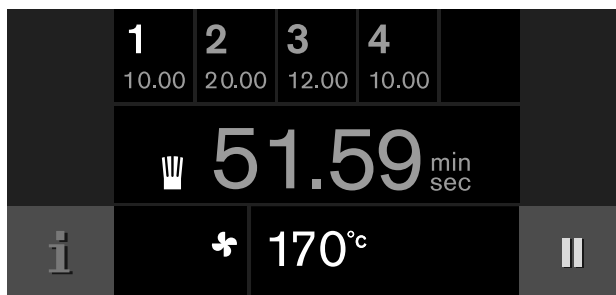


 




Notes





- The cooking time does not start counting down until the appliance has reached the set temperature.
- You can use the rotary selector to change the temperature while the recipe is in progress. This does not change the saved recipe.

Change recipe

You can change the settings of a recorded or programmed recipe.

- 1 Turn the function selector to the any type of heating.
The  symbol is displayed.
- 2 Touch the  symbol.
- 3 Use the rotary selector to select the desired recipe.
- 4 Touch the  symbol.
- 5 Use the  symbol to select the desired phase.
The programmed type of heating, temperature and cooking time are displayed. You can use the rotary selector or function selector to change the settings.
- 6 Save with .
- or -
Cancel with  and exit the menu.

Deleting recipes

- 1 Set the function selector to any type of heating.
The  symbol is displayed.
- 2 Touch the  symbol.
- 3 Use the rotary selector to select the desired recipe.
- 4 Delete the recipe with .
- 5 Confirm with .

Child lock

The appliance has a child lock to prevent children operating it accidentally.


Notes


- You must set the child lock to "Available" in the basic settings (refer to the *Basic settings* section).
- If there is a power cut when the child lock is active, the child lock may be deactivated when the power supply returns.


Activate the child lock

Prerequisite:

The function selector is set to 0.

Touch and hold the  symbol for at least 6 seconds.

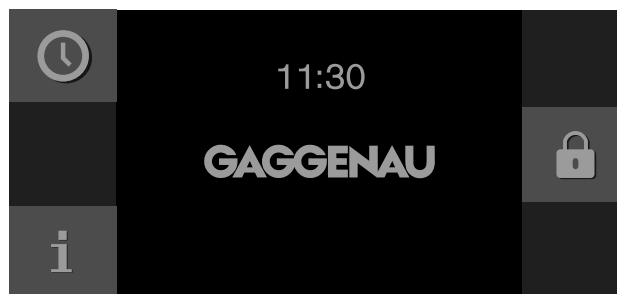


The child lock is activated. The standby screen appears. The  symbol is shown at the top of the display.

Deactivating the child lock

Prerequisite:

The function selector is set to 0.


Touch and hold the  symbol for at least 6 seconds.

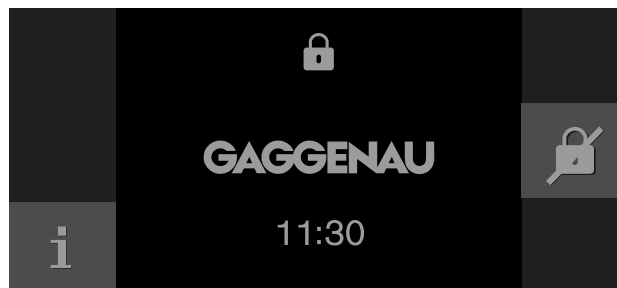




The child lock is deactivated. You can set the appliance as usual.



 

 








Basic settings








Your appliance can be individually adjusted in the basic settings.

- 1 Turn the function selector to **S**.
- 2 Select "Basic settings" using the rotary selector.
- 3 Touch the  symbol.
- 4 Turn the rotary selector to select the required basic setting.

- 5 Touch the  symbol.
- 6 Set the basic setting using the rotary selector.
- 7 Save with  or cancel with  and exit the current basic setting.
- 8 Turn the function selector to **0** to exit the basic settings menu.

The changes are saved.

	Basic setting	Permitted settings	Explanation
	Brightness	Level 1, 2, 3, 4, 5*, 6, 7, 8	Sets the display brightness
	Standby screen	On*/Off - Clock - Clock + GAGGENAU logo* - Date - Date + GAGGENAU logo - Clock + date - Clock + date + GAGGENAU logo	Appearance of the standby screen. Off: No display. Use this setting to reduce the standby consumption of your appliance. On: Several displays can be set, confirm "On" with  and use the rotary selector to select the desired display. The selection is displayed.
	Display screen	Reduced* / Standard	If set to <i>Reduced</i> , after a brief period only the most important information is shown.
	Touch field colour	Grey* / White	Selects the colour of the symbols on the touch fields
	Touch field tone	Tone 1* / Tone 2 / Off	Selects an audible signal for when a touch field is touched
	Touch field tone volume	Level 1, 2, 3, 4, 5*, 6, 7, 8	Sets the volume of the touch field tone
	Preheating speed/signal	Heating-up with audible signal* Rapid heating with audible signal Heating-up without audible signal Rapid heating without audible signal	The signal tone sounds when the cooking compartment has heated up to the required temperature. With rapid heating, the required temperature is reached particularly quickly.
	Signal volume	Level 1, 2, 3, 4, 5*, 6, 7, 8	Sets the volume of the audible signal
	Time format	AM/PM / 24 h*	Display the clock in 24 or 12-hour format
	Time	Current time	Setting the clock
	Clock change	Manual* / Automatic	Automatically changes the clock to daylight-savings time. If automatic: Setting the month, day and week for when the time should be changed over. To be set for both summer and winter time.
	Date format	D.M.Y* D/M/Y M/D/Y	Sets the date format

	Date	Current date	Sets the date. You can switch between year/month/day using the symbol >.
	Temperature format	°C* / °F	Sets the temperature unit
	Language	German* / French / Italian / Spanish / Portuguese / Dutch / Danish / Swedish / Norwegian / Finnish / Greek / Turkish / Russian / Polish / Czech / Slovenian / Slovakian / Arabic / Hebrew / Japanese / Korean / Thai / Chinese / English US / English	Select language for text display Note: If the language is changed, the system restarts. This takes a few seconds. The basic settings menu is also closed.
	Factory settings	Restore appliance to factory settings	Confirm the question "Delete all individual settings made and reset to factory settings?" by pressing ✓ or cancel by pressing X. Note: Individual recipes will also be deleted if the appliance is restored to factory settings. After restoring factory settings, the "Initial settings" menu is displayed.
	Demo mode	On / Off*	Only for presentation purposes. The appliance does not heat up in demo mode, all other functions are available. The "Off" setting must be activated for normal operation. The setting is only possible in the first 3 minutes after connecting the appliance to the mains.
	Long-term timer	Not available* / Available	Available: Long-term timer can be set; refer to the <i>Long-term timer</i> section.
	Child lock	Not available* / Available	Available: The child lock can be activated (refer to the <i>Child lock</i> section).
* Factory setting			

Cleaning and maintenance

With thorough care and cleaning your appliance will retain its looks and remain in good order. We will explain here how you should care for and clean your appliance correctly.

Risk of burns!

The appliance becomes very hot. Never touch the interior surfaces of the cooking compartment or the heating elements. Always allow the appliance to cool down. Keep children at a safe distance.

Risk of electric shock!

Penetrating moisture may cause an electric shock. Do not use any high-pressure cleaners or steam cleaners.

Risk of injury!

Scratched glass in the appliance door may develop into a crack. Do not use a glass scraper, sharp or abrasive cleaning aids or detergents.

Cleaning agents

Pay attention to the information in the table to avoid damaging the various surfaces by incorrect cleaning agents.

Do not use

- harsh or abrasive cleaning agents
- metal or glass scrapers to clean the glass on the appliance door
- metal or glass scrapers to clean the door seal
- hard abrasive pads or cleaning sponges

Thoroughly rinse out new sponge cloths before use.

Area	Cleaning agent
Door panels	Clean with a soft cloth or a microfiber cloth. Do not use any glass scrapers.
Display	Wipe off with a microfiber cloth and a slightly moistened cloth. Do not wipe it off wet.
Stainless steel	Hot soapy water: clean with a dishcloth and dry with a soft cloth. Remove scale, grease, starch and protein stains immediately. Corrosion can form under such stains. Special stainless steel cleaners are available from after-sales service or specialist dealers.
Aluminium	Clean with a mild window cleaning agent. With a window cleaning cloth or a lint-free microfiber cloth, wipe horizontally over surfaces without applying pressure.
Appliance interior	Hot soapy water: clean with a dishcloth and dry with a soft cloth.

Area	Cleaning agent
Heavily soiled oven interior	Oven cleaner gel (order number 463582 from after-sales service or in the online shop). Please note: <ul style="list-style-type: none">● Avoid contact with the door seal!● Allow it to act for no more than 12 hours● Do not use on hot surfaces.● Rinse thoroughly with water.● Pay attention to manufacturers' specifications.
Glass cover of oven interior lamp	Hot soapy water: clean with a dishcloth.
Door seal Do not remove!	Hot soapy water: clean with a dishcloth. Do not scrape. Do not use any metal or glass scrapers for cleaning.
Accessories	Hot soapy water: soak and clean with a dishcloth or a brush.
Slide-in racks	Dishwasher. See Section entitled <i>Removing slide-in racks</i>
Telescopic pull-out rack (special accessory)	Hot soapy water: clean with a dishcloth or a brush. Do not soak or clean in a dishwasher.
Baking stone (special accessory)	Remove burned-in residues with a brush. Never clean the baking stone wet.

Microfibre cloth


The honeycomb microfibre cloth is particularly suitable for cleaning sensitive surfaces such as glass, glass ceramic, stainless steel or aluminium (product no. 460770, also available from our online eShop). It removes liquid and greasy deposits in one go.

Removing the rails

The rails can be removed for cleaning.

Detaching the rails


- 1 Lift up the front of the rail and unhook it (figure A).
- 2 Then pull the whole rail forward and remove it (Fig. B).

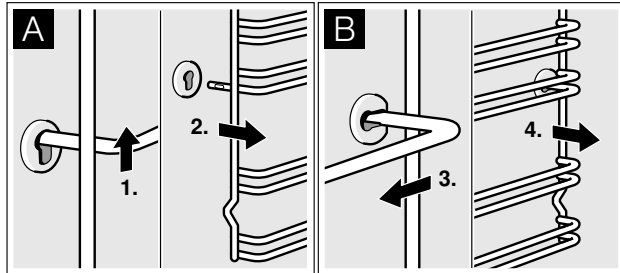

Clean the rails with cleaning agent and a sponge. For stubborn deposits of dirt, use a brush.

Refitting the rails

- 1 First insert the rail into the rear socket and press it to the back slightly (figure A).
- 2 Then hook it into the front socket (figure B).

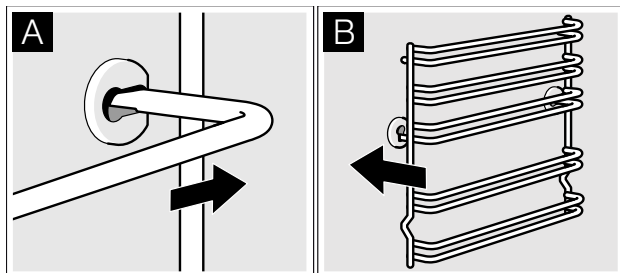

The rails fit both the left and right sides. Ensure that, as shown in figure B, the recess is below.

Catalytic cleaning (self cleaning)

The rear and top interior panels in the oven are coated with catalytic special enamel. The high temperatures during catalytic cleaning remove soiling.

The bottom and side interior parts, the inside of the door and the glass panel are not cleaned during catalytic cleaning.

You can move the catalytic cleaning switch-off time (for example, if you would like it to run at night).





 
Risk of burns!


The appliance will become very hot on the outside during the cleaning function. Never touch the appliance door. Allow the appliance to cool down. Keep children at a safe distance.

Preparing catalytic cleaning

- Remove coarse soiling and food remainders from the oven.
- Clean the oven interior base and side walls manually, the door seals, the inside of the door and the glass panel because the catalytic cleaning process does not clean these parts.
- Remove all loose interior parts from the oven interior. There must be no objects left in the interior.
- Close the oven door.

Starting catalytic cleaning

- 1 Set the function selector to **S**.
- 2 The + symbol is displayed. Confirm with .
- 3 The switch-off time, when catalytic cleaning will be finished, is displayed. If required, move the switch-off time with the rotary selector. Confirm with .
- 4 Remove all accessories and coarse soiling from the oven interior. Confirm with .
- 5 Press  to start. The cleaning time elapses on the display. If the switch-off time has been shifted, the time up to the start of catalytic cleaning elapses in the display. The lamp in the oven interior stays off.

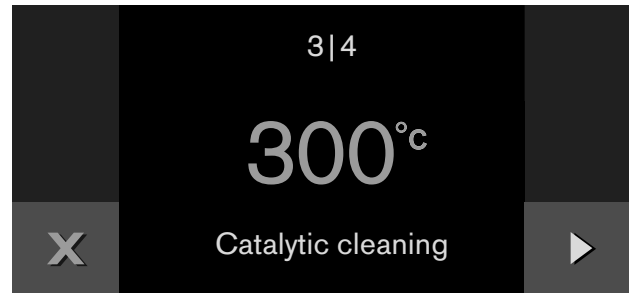




A signal sounds after the catalytic cleaning has expired. A message appears in the display. Leave the appliance to cool down.

Trouble shooting

Malfunctions often have simple explanations. Please read the following notes before calling the after-sales service.

Risk of electric shock!

Incorrect repairs are dangerous. Repairs may only be carried out by one of our trained after-sales engineers. If the appliance is faulty, unplug the mains plug or switch off the fuse in the fuse box. Contact the after-sales service.

Disruption	Possible cause	Solution
Appliance not working, no display	Plug not inserted	Connect the appliance to the electricity mains
	Power failure	Check whether other kitchen appliances are working
	Fuse defective	Check in the fuse box whether the fuse for the appliance is in working order
	Operating error	Switch off the fuse for the appliance in the fuse box and switch it on again after about 60 seconds
Appliance cannot be started	Appliance door is not quite closed	Close appliance door
Appliance does not work, display does not respond.  appears in the display	Child lock activated	Deactivate the child lock (refer to <i>Child lock</i> section)
Appliance switches off on its own	Safety shut-off: the appliance has not been operated for longer than 12 hours	Confirm the message with  , switch off the appliance and set it again.
Appliance does not heat up,  appears in the display	Appliance is in demo mode	Deactivate the demo mode in the basic settings
Error message "Exxx"		If an error message is displayed, turn the function selector to 0 ; if the display goes out, there was a non-recurring problem. If the error occurs repeatedly or the display remains on, please contact the after-sales service and inform them of the error code.


Power cut

Your appliance can bridge a power cut of a few seconds. Operation continues.

If the power cut was for a longer period and the appliance was in operation, a message appears in the display. Operation is interrupted.

Set the function selector to **0**, then the appliance can be operated again as usual.

Demo mode

If the  symbol appears in the display, the demo mode is activated. The appliance does not heat up.

Briefly disconnect the appliance from the mains (switch off the household fuse or the circuit breaker in the fuse box). Following this, deactivate the demo mode in the **Basic settings** within 3 minutes (refer to the *Basic settings* section).

Replacing the oven light bulb

It is possible to replace the oven light. Heat-resistant halogen bulbs (60 W/230 V/G9) can be obtained from the after-sales service or from a specialist retailer. Only use halogen bulbs of the same type.

Risk of electric shock!

When replacing the cooking compartment bulb, the bulb socket contacts are live. Before replacing the bulb, unplug the appliance from the mains or switch off the circuit breaker in the fuse box.

Note: Always remove the new halogen bulb from the packaging using a dry cloth. This increases the service life of the bulb.

Proceed as follows

- 1 Loosen the screw on the lamp cover. Tilt down the lamp cover.
- 2 Pull out the bulb. Insert the new bulb.
- 3 Tilt the lamp cover up and screw it back on.
- 4 Switch the circuit breaker back on.

Replacing the glass cover

If the glass cover in the oven is damaged, it must be replaced. You can obtain covers from the after-sales service. Please supply your appliance's E number and FD number.

After-sales service

In the event of repairs please contact our after-sales service. We are committed to find the best solution also in order to avoid an unnecessary call-out.

Please quote the E number (product number) and the FD number (production number) of your appliance when contacting the after-sales service. The rating plate bearing these numbers can be found on the front side when you open the appliance door.

For future reference you can note the data of your appliance and the telephone number of our after-sales service below.

E-Nr.

FD-Nr.

After-sales service

Please note that calling out an after-sales service technician is not free of charge, even within the warranty period, should the problem result from an operating error.

Please find the contact data of all countries in the enclosed customer service list.

To book an engineer visit and product advice

GB 0844 89289988
Calls from a BT landline will be charged at up to 3 pence per minute. A call set-up fee of up to 6 pence may apply.

IE 01450 2655
0.03 € per minute at peak. Off peak 0.0088 € per minute.

AU 1300 727 421

NZ 09 477 0492

Trust the expertise of the manufacturer, and rest assured that the repair will be carried out by trained service technicians using original spare parts for your domestic appliance.

Settings table and tips

Notes

- The specified values are for your orientation. The temperature and duration depend on the quality and condition of the food.
- Always preheat the oven. This ensures you achieve the best cooking results. The specified cooking times apply to a preheated appliance.
- Pay attention to only opening the door of the preheated oven briefly and to filling the appliance swiftly.
- Temperature ranges are specified in the tables. We recommend that you begin with the lowest temperature. If required, set it higher the next time. A lower temperature produces more even browning.
- The recommended mode is printed in bold.

Baking table

- It is best to use dark-coloured metal baking tins because they absorb the heat better.
- To find out whether your sponge cake is baked through, insert a cocktail stick into the cake at its deepest point. If the cocktail stick comes out clean, the cake is ready.
- Use the hot air mode for baked items using yeast dough.

Baked items	Shelf levels for 4 levels (for 5 levels)	Hot air Temperature in °C	Eco hot air Temperature in °C	Hot air + bottom heat Temperature in °C	Top heat + bottom heat Temperature in °C	Baking time in min.
Swiss roll	2 (3)				210	7 - 9
Sponge flan base	2 (3)				165 - 175	30 - 35
Fruit flan on yeast dough	2 (3)	165			165 - 175	40 - 45
Fruit flan on shortcrust pastry	2 (3)	165	165	165	165 - 175	40 - 45
Small puff-pastry baked items	2 / 1+3* (3 / 2+4*)	180	180		190	15 - 20
Cheesecake (tall)	2 (3)	165	165	165	165 - 170	90 - 100
Cheesecake slice (flat)	2 (3)	165	165	165	165 - 175	45 - 50
Sponge cake (round)	2 (3)	160 - 170	160 - 175		170 - 175	50 - 60
Loaf cake	2 (3)	160 - 170	160 - 175		170 - 175	50 - 60
Ring cake (tall)	1 (2)	160 - 175			165 - 175	40 - 50
Biscuits	2 / 1+3* (3 / 2+4*)	160 - 175	160 - 175		165 - 170	15 - 20
Plaited loaf	2 (3)	165			165 - 170	30 - 40
Tray bake (dry topping)	2 (3)	165 - 170	165 - 170		165 - 170	40 - 50
Tray bake (moist topping)	2 (3)	165 - 170	165 - 170	170	165 - 170	40 - 50
Cream puffs	2 / 1+3* (3 / 2+4*)	180	180		180 - 190	20 - 25
Multigrain bread	2 (3)	200/170**			210/170**	40 - 50

* In the Eco hot air and Hot air operation modes, you can bake on more than one level at the same time.

** Preheat the appliance to the specified temperature. Switch back to the second temperature indicator when sliding the food in.

Baking tips and tricks

What to do if...	The solution
... your cake baked on a tray is too light at the bottom?	Insert the cake one level lower and remove all other accessories from the oven.
... your cake baked in a tin is too light at the bottom?	Do not insert the baking tin in the oven on the tray, but on the rack.
... your cake/biscuits are too dark at the bottom?	Insert the cake/biscuits at a higher level.
... your cake is too dry?	Set the oven temperature slightly higher. Preheat the oven.
... your cake is too moist inside or if meat is not done inside?	Set a slightly lower baking or roasting temperature. Note: you cannot shorten baking or roasting times by increasing temperatures. It is better to choose a slightly longer baking or roasting time and to allow the dough to rise longer.
... your tin-baked or loaf cake is too dark at the back when using hot air?	Don't place the cake pan directly in front of the oven's rear wall, but in the center.
... the cake sinks?	Next time, use less liquid or set the oven temperature lower by 10°C. Pay attention to the mixing times specified in the recipe. Do not open the oven door too early.
... the cake has risen in the middle and is lower at the sides?	Grease the spring form's edge. After baking, loosen the cake carefully with a knife.
... your cake is too dark at the top?	Insert it at a lower level, choose a lower temperature and bake the cake slightly longer.
... your cake is too dark at the bottom?	Insert it at a higher level and choose a lower temperature the next time.
... your fruit flan becomes too light at the bottom and fruit juices spill over?	Use the deeper grill tray for baking next time.
... your cake is too dry at the bottom?	Use a toothpick to pierce small holes in the finished cake. Then trickle fruit juice or an alcoholic beverage over it. The next time, choose a temperature 10°C higher and shorten the baking time.
... your bread or cake looks good (done) from the outside, but is doughy or too moist on the inside?	Next time, use a little less liquid and bake a little longer at a lower temperature. In the case of cakes with a moist topping, pre-bake the base first, scatter almonds or breadcrumbs over it and then add the topping. Pay attention to recipes and baking times.
... you have baked on several levels and the result on the top tray is darker than on the lower one?	Choose a slightly lower temperature and the result will be evenly brown. Trays you have inserted at the same time need not be finished at the same time. Leave the bottom trays to bake a little longer for 5 - 10 minutes or insert them earlier.
... biscuits do not come off the tray?	Briefly place the tray in the oven again and immediately remove the biscuits.
... your cake does not come off when you turn it out?	Carefully loosen the edge with a knife. Turn out the cake again and cover the tin several times with a wet, cold cloth. Next time, grease the tin well and additionally scatter breadcrumbs into it.

Roasting table

- You can use any heat resistant ovenware. Place the ovenware in the middle of the rack. For large roasts, you can also use the grill tray.
- You can remove the side slide-in racks to prepare bulky food. Place the wire rack directly on the bottom of the oven and then place the food or the roaster on the wire rack. Do not place the food or the roaster directly on the enamelled bottom.
- When removing it, place glass cookware on a dry dishcloth or rack and not on a cold or wet surface. The glass could crack.
- Once the roast is finished, you should leave it for another 10 minutes in the switched off, closed oven. This way, meat stays juicier.
- Poultry becomes crispy brown if you coat it with butter, salty water, dripped off fat or orange juice towards the end of the cooking time.
- In the case of duck or goose, pierce the skin under the wings to allow the fat to drip off.
- Use the insert rack (depending on the version, an accessory or special accessory) in the grill tray for roasting. If you add a little water to the grill tray, the meat juice will be collected and the oven will stay cleaner.

Dishes	Shelf levels for 4 levels (for 5 levels)	Hot air Temperature in °C	Full surface grill + circulated air Temperature in °C	Top heat + bottom heat Temperature in °C	Cooking time in min.	Core temperature in °C
Beef						
Beef joint (1.5 kg)*	2 (3)	180		180	60 - 90	
Sirloin, rare (1.5 kg)	2 (3)	230/180**	230/180**		45 - 50	45 - 50
Sirloin, medium (1.5 kg)	2 (3)	230/180**	230/180**		60 - 70	55 - 65
Sirloin, well-done (1.5 kg)	2 (3)	230/180**			90 - 100	70 - 80
Pork						
Pork joint (1.5 kg)	2 (3)	230/180**	230/180**		60 - 70	75 - 80
Pork joint with crackling (1.5 kg)	2 (3)	180/200***	180/200***		60 - 70	75 - 80
Smoked pork (1.5 kg)	2 (3)	180/160**			40 - 50	65 - 70
Pork knuckle	2 (3)	150/200***	150/200***		50 - 60	80 - 85
Rolled joint	2 (3)	230/180**	230/180**		60 - 70	75 - 80
Veal						
Roast veal	2 (3)	230/180**		230/180**	60 - 70	75 - 80
Veal knuckle	2 (3)	150/180***	150/180***		50 - 60	75
Veal loin	2 (3)	160 - 170			20	70 - 75
Stuffed breast of veal*	2 (3)	120 - 130			120	75 - 80
Game						
Wild boar joint*	2 (3)	170 - 180			60 - 90	
Leg of roe venison*	2 (3)	170 - 180			60 - 80	75 - 80
Saddle of venison	2 (3)	165 - 175		170 - 180	20 - 25	65 - 70
Leg of lamb*	2 (3)	180 - 200			35 - 45	65 - 75
Poultry						
Duck (2 - 3 kg)	2 (3)	160/190***		160/190***	100 - 120	80 - 85
Duck breast	2 (3)	160		160	15 - 20	70

* First, sear the meat on all sides in a casserole dish on the hob.

** Sear the meat at a high temperature and switch back to a lower temperature after 15 - 20 minutes.

*** Cook the meat at a low temperature and increase the temperature for the last 15 - 20 minutes.

Dishes	Shelf levels for 4 levels (for 5 levels)	Hot air Temperature in °C	Full surface grill + circulated air Temperature in °C	Top heat + bottom heat Temperature in °C	Cooking time in min.	Core temperature in °C
Goose (2 - 3 kg)	2 (3)	160/190***		160/190***	100 - 120	85 - 90
Turkey (3 - 4 kg)	2 (3)	160/190***		160/190***	120 - 180	85 - 90
Roast chicken	2 (3)	180	180		50 - 60	85

* First, sear the meat on all sides in a casserole dish on the hob.

** Sear the meat at a high temperature and switch back to a lower temperature after 15 - 20 minutes.

*** Cook the meat at a low temperature and increase the temperature for the last 15 - 20 minutes.

Roasting tips and tricks

What to do if...	The solution
... the roast is too dark and the crust is burnt in places?	Check the insertion level and the set roasting temperature.
... the roast looks good, but the sauce is burnt ?	Choose smaller roasting cookware the next time and add more liquid.
... the roast looks good, but the sauce is too light and watery?	Choose larger roasting cookware the next time and use less liquid.
... the table does not contain any data for the weight of the roast?	Choose the data according to the next lowest weight and extend the time.

Grilling table

Caution! Only grill with the oven door closed.

- For roasting use the wire rack that fits the grilling tray (accessory or special accessory, depending on the version). Pour a small amount of water into the grilling tray to collect dripping fat and keep the oven clean.
- The pieces of meat should be evenly thick (at least 2 - 3 cm). Thus they will brown evenly and remain juicy inside. Do not salt steaks before grilling. Place the food directly on the wire rack.

Dishes	Shelf levels for 4 levels (for 5 levels)	Temperature in °C	Full surface grill in min. 1st side/2nd side	Full surface grill + circulated air in min. 1st side/2nd side	Total cooking time in min.
Sliced pork belly	3 (4)	180 - 200	6 / 4	5 / 5	10
Shish kebab	3 (4)	190		8 / 8	16
Sausage	3 (4)	200	5 / 4		9
Merguez (grilled sausage)	3 (4)	200		6 / 6	12
Roast chicken*	2 (3) do not preheat	180		30 / 30	60
Chicken legs	3 (4)	180	20 / 20	15 / 15	30 - 40
Spare ribs	3 (4)	180 - 200	15 / 15	12 / 12	24 - 30
Pork knuckle**	2 (3)	150/200			50 - 60

* For appliances that have a rotary spit, it is best to use the rotary spit in the Grill operation mode.

** Do not turn the pork knuckles. Increase the temperature for the last 15 - 20 minutes.

*** These dishes must be gratinéed or browned as desired.

Dishes	Shelf levels for 4 levels (for 5 levels)	Temperature in °C	Full surface grill in min. 1st side/2nd side	Full surface grill + circulated air in min. 1st side/2nd side	Total cooking time in min.
Trout	3 (4)	180 - 200	8 / 8		16
Vegetable skewers	3 (4)	200	7 / 7		14
Prawn skewers	3 (4)	175	7 / 7		14
Browning and "au gratin"					
Toasted sandwich	3 (4)	190			5 - 7
Crème caramel***	4 (5) do not preheat	250			
Crème brûlée***	4 (5) do not preheat	250			
Cake with meringue***	3 (4) do not preheat	250			
* For appliances that have a rotary spit, it is best to use the rotary spit in the Grill operation mode.					
** Do not turn the pork knuckles. Increase the temperature for the last 15 - 20 minutes.					
*** These dishes must be gratinéed or browned as desired.					

Acrylamide in foodstuffs

Which foods are affected?

Acrylamide is mainly produced in grain and potato products that are heated to high temperatures, such as potato crisps, chips, toast, bread rolls, bread, fine baked goods (biscuits, gingerbread, cookies).

Tips for keeping acrylamide to a minimum when preparing food	
General	Keep cooking times as short as possible. Cook meals until they are golden brown, but not too dark. Large, thick pieces of food contain less acrylamide.
Baking	With Hot air, max. 180 °C.
Biscuits	Egg or egg yolk reduce the formation of acrylamide. Spread out a single layer evenly on the baking tray.
Oven chips	Cook at least 400 g at once on a baking tray so that the chips do not dry out.

Gaggenau Hausgeräte GmbH
Carl-Wery-Straße 34
D-81739 München
www.gaggenau.com

GAGGENAU



9000913494 en (930702)