

SONY®

Remote Commander

RM-V111T

3-230-683-11(2)

Operating Instructions Mode d'emploi (au verso)

Sony Corporation © 2001 Printed in Malaysia

English

About this Remote Commander

You can set up this Remote Commander to operate the following components of almost all major brands including Sony.

Position	Factory setting	Component that can be preset
TV	Sony TV	TV
VCR	Sony VHS VCR (VTR3)	VCR

Specifications

- Operable distance**
Approx. 7 m (23 ft) (varies depending on the component of each manufacturer)
- Power requirements**
Two R6 (size AA) batteries (not supplied)
- Battery life**
Approx. 6 months (varies depending on frequency of use)
- Dimensions**
Approx. 51.8 × 195 × 31 mm (w/h/d) (2 1/8 × 7 3/4 × 1 1/4 in.)
- Mass**
Approx. 100 g (3.5 oz.) (not including batteries)

Design and specifications are subject to change without notice.

Setting the Component Codes

To use this Remote Commander with a Sony brand component that is already preset at the factory (see the table on the left), you can skip this procedure. If you are using other brand's component or if you cannot operate even a Sony brand component, follow this procedure.

Setting by Entering the Code Number

See the supplied "Component Code Numbers" and find the code for your component.


- 1 Press the S (Set) button.



- 2 Press the button of the component that you want to set up.



- 3 Enter the three-digit component code in the "Component Code Numbers" table. For example, to set a Philips' TV, press 0 8 6.

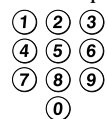

- 4 Press the ⇨ button.



- 5 Aim this Commander to your component and check if you can operate it using this Commander.

Go through the same procedure for each component you want to set up.

If you cannot operate your component...

- First, try repeating these set up procedures using the other codes listed for your component (see "Component Code Numbers").
- If — after trying all the codes listed for your component — you still cannot get the Commander to work properly, try the search method described under "Setting by Searching for the Correct Code".

Note

Be sure to proceed to each next step in the above procedure within 10 seconds; otherwise, the setting mode will be canceled.

Tip

You can write down the code number on the label inside the battery compartment lid.

Operating a Component

- 1 Press the button of the desired component on the Commander.



- 2 Point the Commander directly to your component and press the button for the desired function. See "Remote Button Descriptions" for details.

Notes on using the Commander

- Using this Commander will not add new functions to your components. The functions of the Commander are limited to the functions of the component itself. For example, if your TV does not have a mute function, the Ⓜ button on this Commander will not function with your TV.
- Do not forcibly remove or tear off the corner protector.


Troubleshooting

If you're having problems setting up or using the Remote Commander:

- When setting up the Commander, carefully go through the procedures described under "Setting the Component Codes". If the code that's listed first for your component doesn't work, try all the codes for your component — in the order in which they're listed. If all the codes fail to work (or if your component is not listed), try using the procedures under "Setting by Searching for the Correct Code".
- Check that you're aiming the Commander directly at the component, and that there are no obstructions between the Commander and the component.
- Make sure the batteries you're using are not worn out, and that they're inserted correctly.
- Check that the button of the TV or VCR is pressed to choose your desired component.
- Check that the component has infrared remote capability. For example, if your component didn't come with a remote control, it probably isn't capable of being controlled by the Remote Commander.
- Should any problem persist, reset the Commander to the factory setting by pressing the ⇩, ⇨ and ⇧ buttons simultaneously.

If you have any questions or problems concerning the Remote Commander that are not covered in this manual, please call the telephone number in the warranty.

Remote Button Descriptions

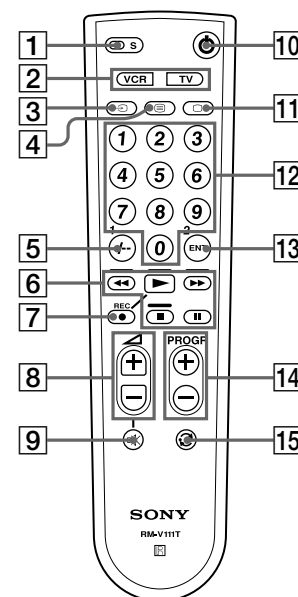

General

- 1 To set up the Commander.
- 2 Component select buttons. To switch to the operations of each component, press the button on which that component is assigned.
- 3 TV: To change the input mode. VCR: To switch the signals supplied to the TV.
- 4 TV: To switch to Teletext. VCR: To expose the on-screen display.
- 5 TV/VCR: To select double-digit numbers. Works in the same way as your TV's commander or VCR's commander.
- 6 and 7 TV: ►, ■, ◀◀, ▶▶: Fasttext buttons. VCR: ►: To play. ■: To stop. ◀◀: To rewind. ▶▶: To fast-forward. ●REC: To record, press ► while pressing ●.
- 8 Volume up: + Volume down: -
- 9 To mute the volume on TV.
- 10 To turn on and off the power of the selected component.
- 11 TV: To turn on. To return from Teletext to TV. VCR: To change the input mode.
- 12 To change the programme. Also to turn on the power.
- 13 TV/VCR: To select a number between 20 and 29.
- 14 Programme up: + Programme down: -
- 15 To operate JUMP, FLASHBACK or CHANNEL RETURN function on the TV depending on the setting of the TV's manufacturer.

Operating a TV, VCR

