

CONTENTS

GB

BEFORE USING THE DISHWASHER

PAGE 10

PROTECTING THE ENVIRONMENT

PAGE 10

PRECAUTIONS AND GENERAL RECOMMENDATIONS

PAGE 10

CONNECTIONS

PAGE 11

HOW TO FILL THE SALT CONTAINER

PAGE 12

HOW TO FILL THE RINSE AID DISPENSER

PAGE 13

HOW TO FILL THE DETERGENT DISPENSER

PAGE 14

CARE AND MAINTENANCE

PAGE 15

To make the most of your new dishwasher, please read these user instructions and the quick reference guide carefully.

BEFORE USING THE DISHWASHER

1. Removing the packaging and check



After unpacking, make sure that the dishwasher is undamaged and that the door closes correctly. If in doubt, contact a qualified technician or your local retailer.

- Keep the packaging materials (plastic bags, polystyrene parts, etc.) out of reach of children, as they are potentially dangerous.

2. Water and electrical connections

- All water and electrical connections must be carried out by a qualified technician in compliance with the manufacturer's instructions (refer to the enclosed installation booklet) and current local safety regulations.




The appliance must only be used in the household for the prescribed uses.

PROTECTING THE ENVIRONMENT

1. Packing



The packing box may be fully recycled as confirmed by the recycling symbol .

2. Energy and water saving tips

- Do not rinse crockery under running water.
- Always fully load the dishwasher before switching on or set the wash programme to half load (if available) if **one** rack only is loaded.
- If ecological energy sources are available, such as solar panel heating, heat pumps or centralised heating systems, the appliance may be connected to the hot water mains up

to a maximum temperature of 60° C. Make sure the water inlet hose is of the correct type. Refer to the chapter "Connections" in these user instructions.

3. Disposing of packaging and old machine

The appliance is built from reusable materials. If you decide to scrap the dishwasher, it must be disposed of in compliance with local waste disposal laws.



Before scrapping, cut off the power cable so that the appliance cannot be connected to the mains.

PRECAUTIONS AND GENERAL RECOMMENDATIONS

1. Child safety:



Children must not be allowed to play with the dishwasher.



Store the detergent, rinse aid and salt in a dry place out of the reach of children.

2. General recommendations:



The open dishwasher door can only support the weight of the loaded rack when pulled out. Do not rest objects on the open door or sit or stand on it: **the appliance may topple over!**



Do not use solvents inside the dishwasher: **risk of explosion!**



Only use detergents, rinse aids and regeneration salts specially recommended for use in domestic dishwashers.

- Before cleaning or carrying out maintenance, switch off the appliance and turn off the water tap.
- If a fault occurs, switch off the appliance and turn off the water tap.

- If necessary, the power cable may be replaced with one the same obtained from our After-Sales Service. The power cable must only be replaced by a qualified technician.
- On completion of the programme switch off the dishwasher and turn off the water tap.

3. For appliances with water stop system:

The water inlet hose and plastic casing contain electrical components. Do not therefore cut the hose or immerse the plastic casing in water. If the hose is damaged switch off the appliance immediately.

EC Declaration of conformity

This appliance has been designed, constructed and distributed in compliance with the safety requirements of EC Directives:

- 73/23/EC
- 89/336/EC
- 93/68/EC

Load capacity: 12 place settings.

CONNECTIONS



Do not use the dishwasher if it has been damaged in transit. Consult your local retailer or our After-Sales Service.

(Refer to the separate installation instructions booklet)

Water inlet and drain:

- Observe any special regulations issued by your local Water Board.
- Make sure the inlet and drain hoses are kink-free and are not crushed.
- If the hose length is not sufficient, please contact your local dealer or our After-Sales Service.
- The inlet hose must be securely screwed on to the water tap to prevent leaks.
- The inlet water temperature varies according to the model installed: inlet hose marked "25° C Max": maximum temperature 25° C. All other models: maximum temperature 60° C.
- When installing the appliance, make sure the drain water discharges correctly (if necessary, remove the plug from the sink spigot).
- Fix the drain hose to the spigot with a clamp to prevent it from coming off during operation.
- For appliances with water-stop system only: if the water connections are made correctly, the water-stop system safeguards your home against damage caused by flooding.

Electrical connection:

- Closely adhere to local Electricity Board regulations.
- Voltage information is shown on the rating plate mounted inside the door on the right hand side.
- The appliance must be earthed as prescribed by law.
- Do not use extension leads or multiple adapters.
- Before carrying out maintenance, disconnect the mains plug.
- The power cable must only be replaced by a qualified technician.
- **For Austria:** if the apparatus is series connected to a fault current switch, this must be sensitive to the pulsating current.



HOW TO FILL THE SALT CONTAINER

From a water hardness category of 1-2 (average), before using the dishwasher, fill the salt container with regeneration salt (to find out the hardness level of water in your area, contact your local Water Board or check the last bill you received).

If the water hardness level does not correspond to position 3 on the selector (setting on delivery) or if the water hardness level changes:

Turn the selector to the correct position.

Set the water hardness by turning the selector (if fitted) inside the door (top left) using a screwdriver. Use the table below to set the dial to the correct setting:

| Hardness category | German degrees °dH | French degrees °fH | Position of selector |
|-------------------|--------------------|--------------------|----------------------|
| 1 soft | 0 - 5 | 0 - 9 | 0 |
| 1 - 2 average | 6 - 10 | 10 - 18 | 1 |
| 2 average | 11 - 15 | 19 - 27 | 2 |
| 3 medium-hard | 16 - 21 | 28 - 37 | 3 |
| 4 hard | 22 - 28 | 38 - 50 | 4 |
| 4 very hard | 29 - 35 | 51 - 63 | 5 |
| 4 extremely hard | 36 - 60 | 64 - 107 | 6 |

If the water hardness level falls within category 1 (soft), no salt is required.

How to fill the salt container



Warning: only use regeneration salts for use in domestic dishwashers!




Do not fill the salt container with unsuitable substances, such as detergent, as this will cause irreparable damage to the water softener system.

1. Remove the lower rack.
2. Unscrew the cap by turning it counter-clockwise.
3. When first using the dishwasher: fill the salt container to the rim with water.
4. Fill the salt container to the rim with salt (using the filler provided) (when filling for the first time use min. 1.5 kg and max. 2 kg) and stir with a spoon handle.
5. Screw the cap back on by turning it clockwise.
6. Fit the lower rack.
7. After filling the regeneration salt container, **immediately** start a wash program (the Prewash program alone is not sufficient), so as to eliminate any residual saline solution straight away.



 
Check the salt level regularly.

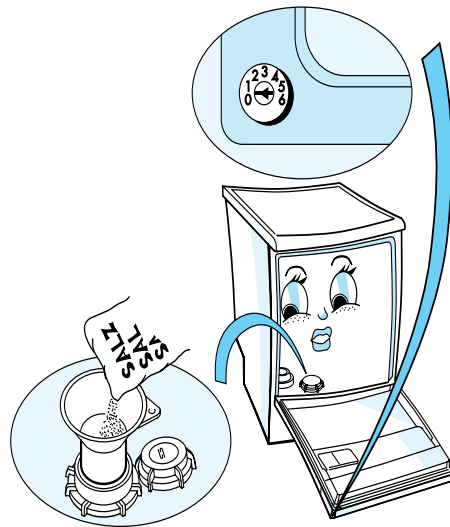

Salt level indicator

The dishwasher is equipped with an electric or visual salt level indicator (depending on the model installed).

Electric indicator:

The salt level indicator lamp  on the control panel lights up when the salt container is empty.

Visual indicator:

The float is clearly visible in the cap window when the salt container is full.




The float lowers and is no longer visible when the salt container is empty.




HOW TO FILL THE RINSE AID DISPENSER

The rinse aid facilitates drying and prevents the formation of unsightly spots and streaks on crockery. Before using the dishwasher for the first time, fill the rinse aid dispenser.

How to fill the rinse aid dispenser:

 Only use rinse aids recommended for use in domestic dishwashers

1. Press button **A** to open the cover (see drawing).
2. Fill the dispenser with rinse aid up to the dashed line "max" (about 100 ml.).

 Immediately wipe away any rinse aid spilt accidentally.
This prevents the formation of excess suds which may spoil washing results.

3. Replace the cover.
Thereafter, regularly check the rinse aid level

How to adjust the rinse aid dosage regulator:


Factory setting: position 4.


If you are not satisfied with washing or drying results, change the rinse aid dosage setting.

1. Press button **A** to open the cover (see drawing).
2. If crockery is prone to whitish streaks, reduce the dosage by turning the dial to a lower setting (1-3) using a coin or the like.
If crockery is not perfectly dry, increase the dosage by turning the dial to a higher setting (5-6).
3. Close the cover again.


Rinse aid level indicator:


Visual indicator:

light = add rinse aid  .


 
dark = sufficient rinse aid  .

Additional electric indicator (if provided):

The indicator lamp  on the control panel lights up when more rinse aid needs to be added.

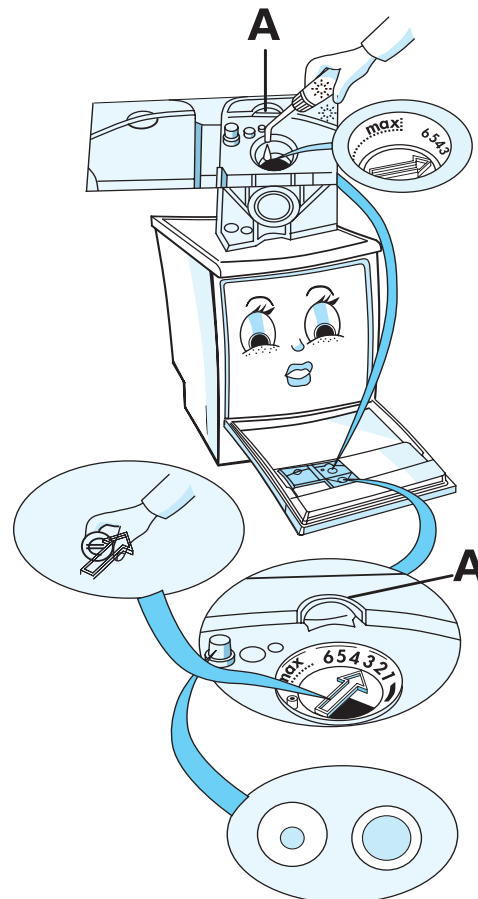

HOW TO FILL THE DETERGENT DISPENSER


A small compartment  and a large compartment  are provided for the detergent.


The use of detergent in excess of the recommended dosage may cause pollution. The recommended dosage varies for different brands.

If you use detergents in pellet form, follow the manufacturer's directions for use.

"New generation" detergents contain enzymes that give better washing results when Bio programmes are used. However, these programmes are also suitable for all other dishwasher detergents.

 

How to fill the detergent dispenser:

 Only use detergents recommended for use in domestic dishwashers.

 Only fill the detergent dispenser prior to starting a wash programme.

1. Press button **A** to open the cover.
2. How to fill the Detergent Dispenser.

For programmes with pre-rinse:


- Pour 2/3 of the recommended dosage into the large compartment .
- Pour the remaining 1/3 into the small compartment .

For programmes without pre-rinse:


Pour the entire recommended dosage into the large compartment. If the recommended dosage on the detergent pack is over 45 ml (maximum capacity of the large compartment), pour the remaining detergent into the small compartment.

For programmes with additional "Half load" function selected (if provided): Use a smaller quantity of detergent.


3. Close the cover.

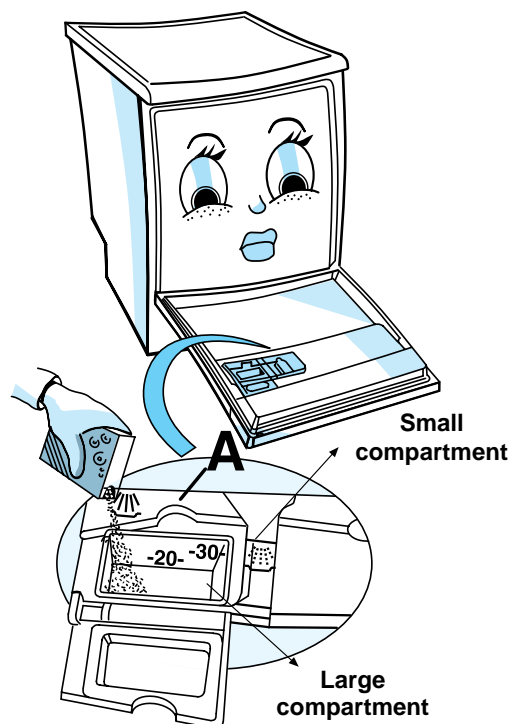


CARE AND MAINTENANCE


 Before cleaning or carrying out maintenance, switch off the appliance and turn off the water tap.

Cleaning the outside of the appliance:

 To clean the outside of the appliance, use a neutral detergent and a damp cloth.


 Do not use abrasive detergents.

Cleaning the inside of the dishwasher:

 Regularly wipe the door seal and inside of the door with a damp cloth to remove any food residues.

Upper spray arm:


1. Slacken the fixing nut (A) (by turning it counter-clockwise) and detach the spray arm (B) by pulling it down.
2. Rinse the nozzles.
3. Remount the spray arm by aligning it with the rotary mounting and insert it.
4. Tighten the fixing nut by turning it clockwise. Make sure the nut is fully tightened (it should click).

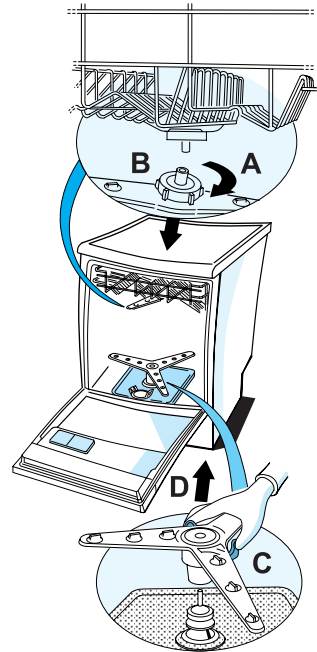

Make sure the spray arm rotates freely.

Lower spray arm:

1. Press the two levers which fix the spray arm inwards (C), and detach by pulling it up (D).
2. Rinse the nozzles.
3. Remount the spray arm by aligning it with the rotor pin and insert it.
4. Push the spray arm down firmly until it is fixed in place.
5. Make sure the two levers are correctly inserted (they should click).

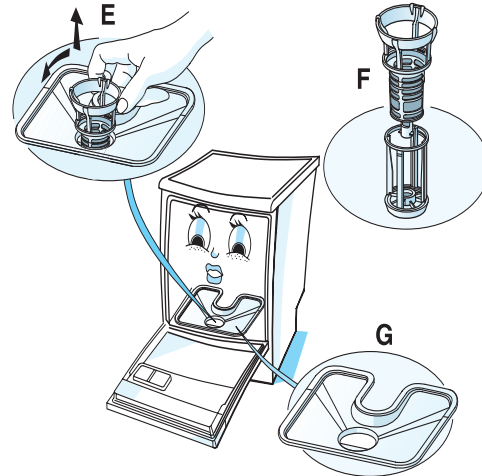

Make sure the spray arm rotates freely.

Cleaning the filters:

1. Fully unscrew the wide-mesh central filter by turning it counter-clockwise and extract it (E).
2. Fully unscrew the fine-mesh filter and extract it from the wide-mesh central filter (F) (pay due attention to the holes in the bottom of the filter).
3. Remove the large filter (G).
4. Clean all filters regularly under running water, and check that no impurities are left inside the dishwasher.

5. Reassemble:

Insert the fine-mesh filter in the wide-mesh central filter. (pay due attention to the holes in the bottom of the filter).

Insert the filter unit and fix it by turning it clockwise. Make sure that the filters have been inserted correctly.

The filter unit must be correctly assembled to ensure good wash results.