


Toaster HL5885/5
Grille-pain HL5885/5



PHILIPS



HL5885/5

ENGLISH 4

FRANÇAIS 12

Important

- ▶ Read these directions for use carefully before using the appliance and save them for future reference.
- ▶ Use the appliance only for its intended purpose as described in this manual.
- ▶ Check if the voltage indicated on the bottom of the appliance corresponds to the mains voltage in your home before you connect the appliance.
- ▶ Connect the appliance to an earthed wall socket.
- ▶ Position the appliance in such a way that: - the mains cord does not hang over the edge of the table or countertop; - it is standing on a flat surface with sufficient free space around it; - it is out of the reach of children
- ▶ Never operate the appliance on a non-heat-resistant or flammable surface.
- ▶ Do not place the appliance on or near a hot ring of a gas cooker, a hot element of an electric cooker or a heated oven.
- ▶ Bread may burn. Do not use the toaster near or below curtains or other combustible materials.
- ▶ Make sure that the mains cord is not too close to and particularly not in contact with the hot surface of the appliance.
- ▶ Do not use foods with coatings or fillings that may start to drip when heated up. Accumulation of food particles or juices in the toaster can cause an unhealthy situation and can lead to malfunctioning and even burning of the appliance.

- ▶ Do not insert foil-covered or oversized foods into the toaster.
- ▶ Never let the appliance operate unattended.
- ▶ Avoid touching the slots of the toaster, as they become very hot.
- ▶ Do not put your fingers in the slots of the toaster.
- ▶ Unplug the appliance immediately after use.
- ▶ Always clean the appliance after use. Unplug the appliance and let it cool down before you start cleaning it.
- ▶ Never immerse the toaster in water. You can clean it by wiping it with a moist cloth.
- ▶ Prevent water or other liquids from running into the appliance.
- ▶ Clean out accumulated crumbs frequently to avoid the risk of fire or malfunctioning of the toaster.
- ▶ Never insert sharp or abrasive objects into the slots, as this will cause damage.
- ▶ Do not use the appliance if the mains cord is damaged or after the appliance has been dropped or damaged in any way. If damage is suspected, the appliance is to be examined by Philips or by a service centre authorised by Philips, as special tools and/or parts are required.
- ▶ Do not use accessories that are not recommended by the manufacturer.

Before you start using the appliance

- 1** Remove any stickers and wipe the body of the toaster with a moist cloth.

- 2** Make sure that the toasting lever is in raised position when you put the plug in the wall socket.
- 3** Let the toaster complete the first toasting cycle without slices of bread in it at the highest toasting setting to preheat the new elements and to burn away any dust that may have accumulated in the toaster during storage. Let the toasting cycle take place in a ventilated room to prevent any unpleasant smells produced by appliance from accumulating in the room.

Using the appliance



- 1** Select the desired browning setting (1-7) by means of the Electronic Browning Control. The required setting depends on the thickness and moisture content of the bread.



- 2** After having selected the desired browning setting, place the bread in the slots and press the toasting lever down until it locks.

NB: the toasting lever will not lock in downward position when the Electronic Browning Control is in position 'O' (OFF). This will prevent the appliance from being accidentally switched on if children should pull at the lever.



- 3** When the bread has reached the selected browning degree, the slices will pop up automatically and are ready for removal

from the slots. If the slices are difficult to remove safely, you can lift the Safety-Lift toasting lever a little further. This will raise the bread carriage another 16 mm to allow you to safely remove small pieces of toast.

- 4 If the toast gets stuck in the slots, the automatic safety cut-out will switch the heating elements off after the bread has reached the desired browning degree.

Unplug the appliance and wait until the toaster has cooled down before removing slices that have got stuck in the toaster.

- 5 Remove the plug from the wall socket.

- 6 Let the appliance cool down, roll up the mains cord and store the appliance.



DO NOT WRAP THE MAINS CORD AROUND THE BODY OF THE APPLIANCE DURING OR AFTER USE.

Toasting bagels

- 1 Cut the bagels in half, lengthwise.
- 2 Insert the halved pieces into the toaster with the sides to be toasted facing the heater in the center.
- 3 Select the degree of browning.



4 Move the lever downwards to switch on.

5 Press the "Bagel"-button.

To toast only one side of frozen slices, move the lever downwards and press the "Bagel" and "Defrost"-button.

Cancel button



1 When the toasting cycle has been completed, the bread carriage will be raised. If you wish to interrupt the toasting process, simply press the Cancel button.

Defrost button

The Defrost function allows you to defrost and toast slices of bread in one go. This results in a slightly longer toasting cycle.

1 Insert one or more slices of bread into the toaster. Make sure that the slices do not overlap and that the bread carriage is in raised position.


2 Set the browning control to the desired position:

- Setting 1-2: for toasting frozen slices of bread and thinner frozen items such as pancakes.
- Setting 3-4: for toasting frozen pastries, frozen waffles, (thin) French toast.

- Setting 5-6: thicker frozen items such as hand-cut bread and thick French bread.

3 Press the toasting lever down until it locks.

4 Press the Defrost button

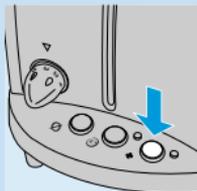

When the defrosting and toasting cycle has been completed, the toaster will raise the bread. If you wish to interrupt the defrosting and toasting process before it is finished, simply press the Cancel button.

Unplug the appliance after use.

Tips.

- In order to achieve a uniform browning result, we advise you to wait at least 30 seconds between toasting cycles to allow the browning control to automatically reset itself.
- Stale bread toasts more rapidly than fresh bread. When toasting stale bread, select a lower browning setting than you would normally use.
- When toasting two slices, it is recommended to use slices that are the same size and that are equally fresh.
- When toasting a single slice of bread, set the browning control to a lower setting than you would normally use. The toaster will heat the entire toasting chamber, even when you have inserted only a single slice. By selecting a lower browning setting, you will prevent the slice from being over toasted.

Cleaning

Switch the toaster off, remove the plug from the wall socket and let the toaster cool down before you start cleaning it.

Wipe the outside of the toaster with a moist cloth and dry it with another cloth or a paper towel.

DO NOT USE ABRASIVES TO CLEAN THE TOASTER.

To avoid damage to the heating elements, do not use any pointed or sharp objects to clean the inside of the toaster.



- 1** Crumbs will accumulate in the crumb tray and could catch fire if the crumb tray is not emptied periodically. When the toaster has cooled down completely, tap the sides of the toaster lightly to dislodge any crumbs caught in the toasting chamber and pull out the crumb tray.

Empty the tray and push it back into the toaster.

DO NOT HOLD THE APPLIANCE UPSIDE DOWN TO REMOVE THE CRUMBS.

Information & service

If you need information or if you have a problem, please visit the Philips Web site at www.philips.com or contact the Philips Customer Care Centre in your country (you will find its phone number in the worldwide guarantee leaflet). If there is no Customer Care Centre in your country, turn to your local Philips dealer or contact the Service Department of Philips Domestic Appliances and Personal Care BV.

Important

- ▶ Lisez attentivement le mode d'emploi en regardant les illustrations avant d'utiliser l'appareil.
- ▶ Le grille-pain est destiné à un usage domestique uniquement comme il est décrit dans ce mode d'emploi.
- ▶ Avant de brancher l'appareil, vérifiez que la tension indiquée au dos de l'appareil correspond à la tension du réseau.
- ▶ Branchez l'appareil sur une prise murale équipée d'une mise à la terre.
- ▶ Placez l'appareil de telle manière que: - le cordon d'alimentation ne pende pas du plan de travail; - l'appareil soit placé sur une surface plate, stable et avec suffisamment d'espace autour; - hors de portée des enfants.
- ▶ L'appareil doit être utilisé sur une surface résistante à la chaleur.
- ▶ Ne placez pas l'appareil sur ou près d'un brûleur à gaz, près d'une plaque chauffante de cuisinière ou près d'un four.
- ▶ Attention: Le pain peut brûler. N'utilisez donc jamais le grille-pain près ou au-dessous de rideaux ou autres matériaux combustibles.
- ▶ Assurez-vous que le cordon d'alimentation n'est pas près ou en contact avec les parties chauffantes de l'appareil.
- ▶ N'utilisez pas de la nourriture avec son emballage ou qui contient du liquide ou du jus qui pourrait s'écouler en chauffant. L'accumulation des miettes ou de jus dans le grille-pain peut provoquer une situation dangereuse ou des dommages, voire même brûler.

- ▶ N'introduisez pas de la nourriture avec du papier en aluminium ou des quantités de nourriture trop grandes .
- ▶ Ne laissez jamais l'appareil sans surveillance pendant l'utilisation.
- ▶ Eviter de toucher les fentes car elles deviennent très chaudes.
- ▶ N'introduisez pas vos doigts dans les fentes du grille-pain.
- ▶ Débranchez l'appareil immédiatement après utilisation.
- ▶ Nettoyez toujours l'appareil après chaque utilisation. Débranchez l'appareil et laissez-le refroidir avant de commencer à le nettoyer.
- ▶ N'immergez jamais le grille-pain dans l'eau. Essuyez-le avec un chiffon humide.
- ▶ Evitez tout contact de l'appareil avec de l'eau ou tout autre liquide.
- ▶ Retirez toujours les miettes pour éviter tout risque de défaillance ou qu'elles ne s'enflamment.
- ▶ N'insérez jamais d'objets aigus ou abrasifs dans les fentes car cela pourrait causer des dommages irréversibles.
- ▶ N'utilisez pas l'appareil si le cordon d'alimentation ou le grille-pain lui-même ont été endommagés. Consultez votre revendeur ou un Centre Service Agréé Philips, car des outils spéciaux et/ou des composants sont nécessaires.
- ▶ N'utilisez pas des accessoires qui ne sont pas recommandés par le fabricant.

Avant de commencer l'utilisation de l'appareil

- 1** Retirez tout autocollant et essuyez le corps de l'appareil avec un chiffon humide.
- 2** Assurez-vous que le levier est en position levée quand vous insérez la fiche dans la prise de courant.
- 3** Laissez l'appareil terminer le premier cycle de grillage sans introduire des tranches de pain, sur le niveau le plus élevé de grillage et permettre ainsi de brûler la poussière accumulée dans le grille-pain pendant le stockage. L'appareil doit être utilisé dans un local aéré pour éviter les accumulations d'odeurs ou de fumée.

Mode d'emploi



- 1** Sélectionnez la position de grillage souhaitée (1-7) à l'aide de la Fontion Electronique de Brunissage. Le réglage nécessaire dépend de l'épaisseur et de l'humidité du contenu du pain.



- 2** Après avoir sélectionné le niveau de brunissage souhaité, introduisez la tranche de pain dans les fentes et abaissez le levier jusqu'au verrouillage.

NB: le levier ne se verrouille pas si la Fontion Electronique de Brunissage est en position "0" (Arrêt). Ainsi l'appareil ne peut pas être mis en marche accidentellement par les enfants.



3 Lorsque les tranches de pain sont prêtes, elles remontent automatiquement et alors vous pouvez les retirer. Si nécessaire, vous pouvez faire remonter légèrement le levier Safety-Lift. Le chariot remonte de 16 mm en plus et peut faciliter le retrait des petites tranches de pain.

4 Si une tranche reste coincée entre les fentes, l'appareil coupe automatiquement le fonctionnement des résistances chauffantes quand le pain atteint le niveau de brunissage souhaité.

Débranchez l'appareil et attendez qu'il refroidisse avant de retirer délicatement les tranches de pain coincées dans le grille-pain.

5 Débranchez l'appareil.

6 Laissez l'appareil refroidir, enroulez le cordon d'alimentation et rangez l'appareil.



N'ENROULEZ PAS LE CORDON D'ALIMENTATION AUTOUR DU CORPS DE L'APPAREIL PENDANT OU APRES USAGE.

Faire griller des croissants

1 Coupez les croissants en deux dans le sens de la longueur.

2 Mettez les deux moitiés dans le grille-pain, la face à griller contre la grille située au milieu du grille-pain..



- 3** Sélectionnez le niveau de brunissage.
- 4** Abaissez le levier pour mettre en marche l'appareil.
- 5** Appuyez sur le bouton "Bagel" (Croissant).

Pour griller les tranches congelées sur une seule face, abaissez le levier et puis appuyez sur les boutons "Bagel" (Croissant) et "Defrost" (Décongélation).

Bouton Stop



- 1** Lorsque le cycle de grillage est terminé, le chariot porte-pain remontera. Si vous voulez interrompre le cycle de grillage, appuyez sur le bouton Stop.

Bouton Décongélation

La fonction Décongélation vous permet de décongeler et de griller des tranches de pains en une seule fois. Le cycle de grillage sera ainsi plus long.

- 1** Insérez une ou deux tranches de pain dans le grille-pain. Assurez-vous que les tranches ne se recouvrent pas et que le chariot porte-pain soit en position élevée.
- 2** Sélectionnez la position de grillage souhaitée:

- Réglage 1-2: pour griller des tranches de pain et des tartines minces congelées
- Réglage 3-4: pour griller des petits pains congelés, gaufres congelées, baguettes.
- Réglages 5-6: pour des aliments congelés plus épais comme les croissants épais, du pain de campagne coupé à la main.

3 Abaissez le levier jusqu'au verrouillage.

4 Appuyez sur le bouton Décongélation



Lorsque le cycle de décongélation et de grillage est terminé, le pain remonte automatiquement. Vous pouvez interrompre le cycle de décongélation et grillage en appuyant sur le bouton Stop.

Débranchez l'appareil après utilisation.

Conseils.

- Pour obtenir des résultats de brunissage uniformes, il est conseillé d'attendre au moins 30 secondes entre deux cycles de grillage.
- Le pain rassis grille plus rapidement que le pain frais. Quand vous grillez du pain rassis, sélectionnez un niveau de brunissage inférieur à celui que vous utiliseriez normalement.
- Quand vous grillez deux tranches de pain, il est recommandé d'utiliser des tranches de la même dimension et fraîcheur.
- Quand vous grillez une seule tranche de pain, réglez le bouton de brunissage sur une position inférieure à celle que vous utiliseriez

normalement. Le grille-pain rechauffe la chambre entière du grille-pain, même si vous avez introduit une seule tranche. En sélectionnant un niveau de brunissage inférieur, vous évitez que la tranche soit brûlée.

Nettoyage

Arrêtez l'appareil, retirez la fiche de la prise murale et laissez le grille-pain refroidir avant de commencer de le nettoyer.

Essayez l'extérieur du grille-pain avec un chiffon humide et séchez-le avec un autre chiffon ou tissu.

N'UTILISEZ PAS D' ABRASIFS POUR NETTOYER LE GRILLE-PAIN.

N'utilisez pas des objets aigus ou pointus pour nettoyer l'intérieur de l'appareil et pour éviter d'endommager les éléments chauffants.



- 1** Les miettes s'accumulent dans le tiroir ramasse-miettes et peuvent s'enflammer si vous ne videz pas périodiquement le tiroir. Laissez le grille-pain refroidir et puis secouez-le légèrement pour retirer toutes les miettes coincées dans la chambre de grillage.

Videz le tiroir ramasse-miettes et remettez-le dans l'appareil.

NE RETOURNEZ PAS L'APPAREIL POUR RETIRER LES MIETTES.

Information et service

Pour plus d'informations, visitez notre Philips Web site : www.philips.com ou veuillez contacter le Service Consommateurs Philips de votre pays (vous trouverez le numéro de téléphone dans le dépliant sur la garantie internationale). S'il n'y a aucun Service Consommateurs Philips dans votre pays, contactez votre distributeur ou le Service Department of Philips Domestic Appliances and Personal Care BV.

