

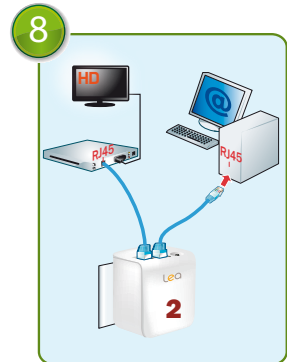
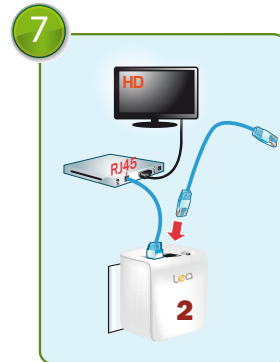
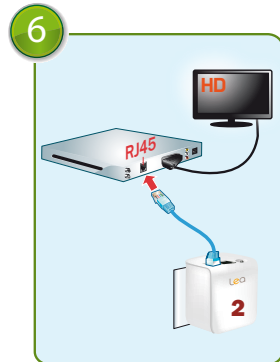
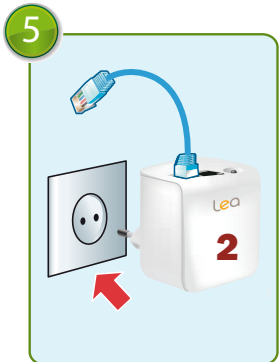
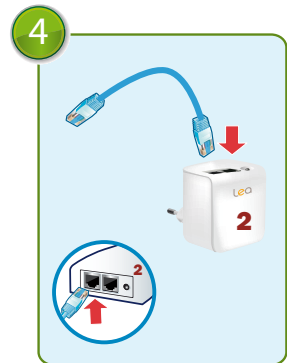
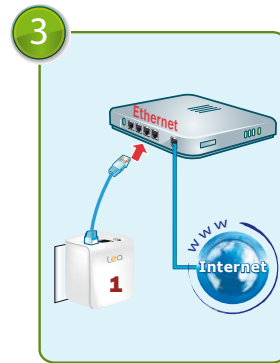
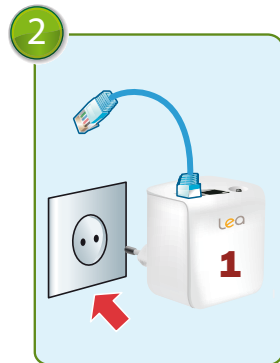
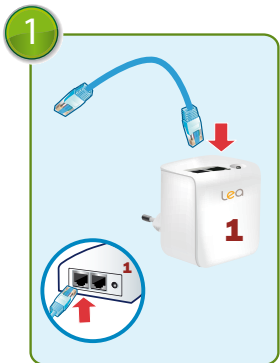
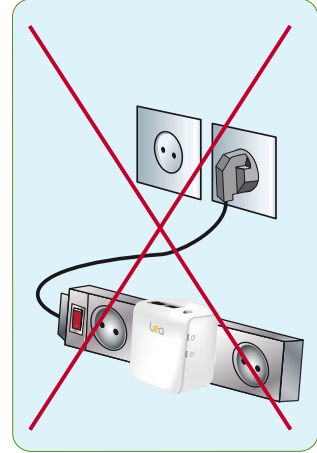
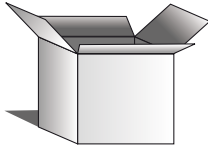


Lea

Installation NetPlug200 Nano

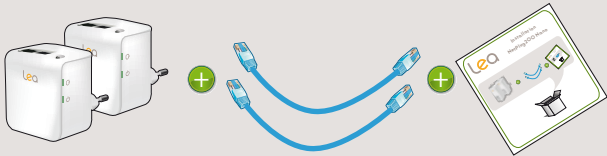

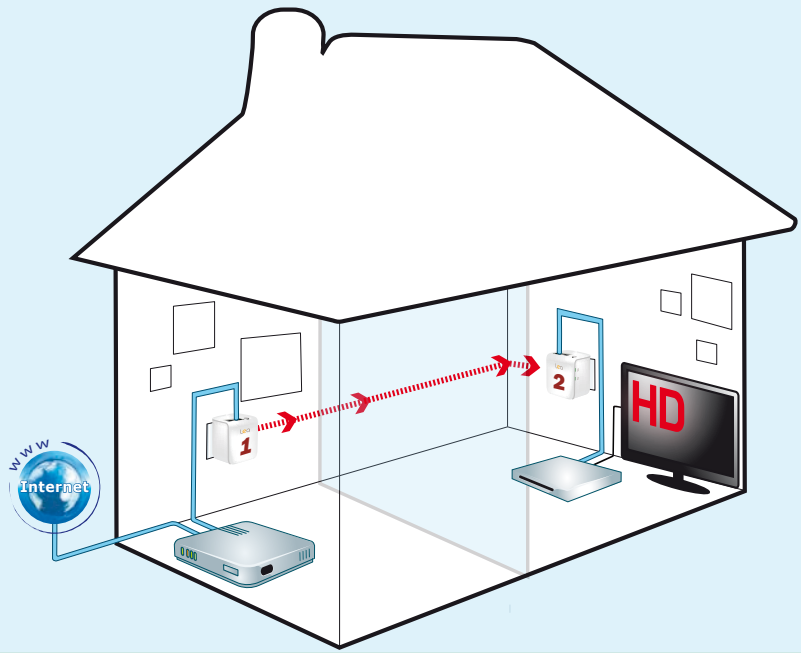

PowerLine
On/Off

