



Montaggio asta snodata (G 0467)




Installation of articulated barrier (G 0467)

Montage barre articulée (G 0467)


Montage der Gelenk-Schrankenstange (G 0467)

Montaje barra articulada (G 0467)

Vista cordino-morsetto-staffa
View cord-champ-bracketed
Vue corde-borne-étrier
Seitenansicht (Zugseil-Klemme-Bügel)
Vista cuerda-borne-soporte

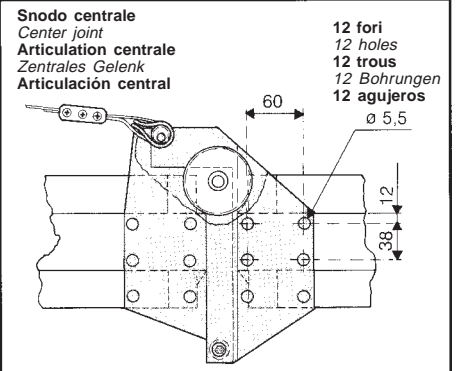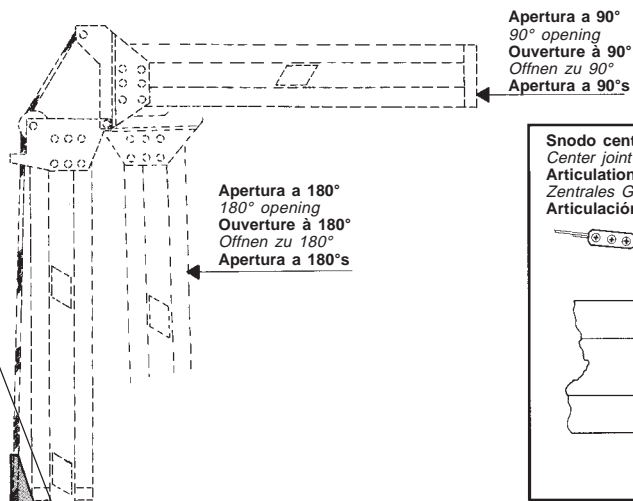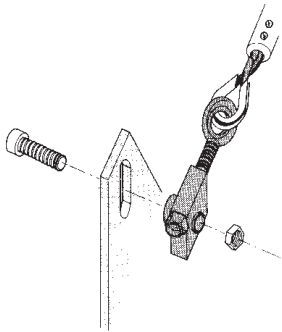

Foro per 180°
Hole for 180°
Trou pour 180°
Bohrung zur 180°
Agujero para 180°

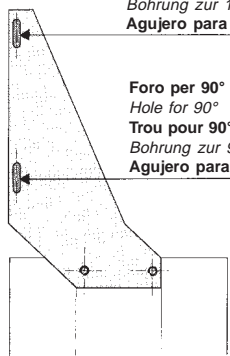

Foro per 90°
Hole for 90°
Trou pour 90°
Bohrung zur 90°
Agujero para 90°

