

KENWOOD


Listen to the Future

Steering Wheel Remote Control Adaptor



CAW-LR7080

Landrover Discovery 11/89-10/95



www.kenwood-europe.com

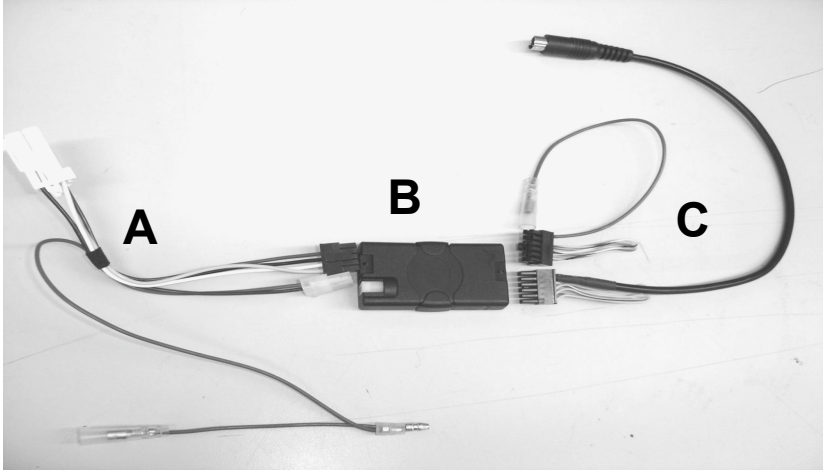


1

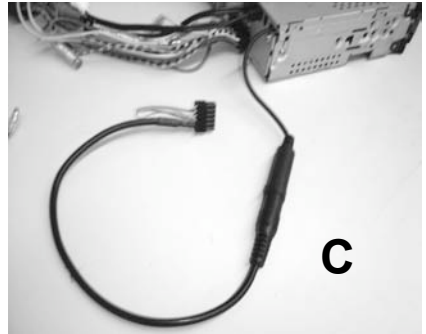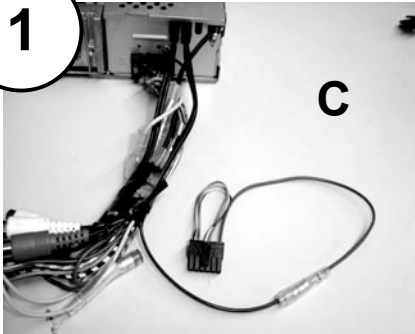

2

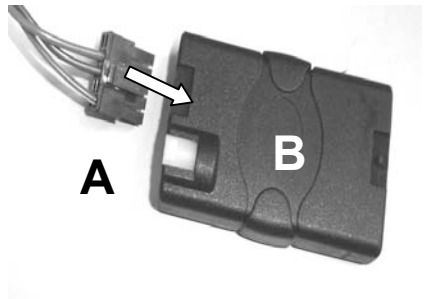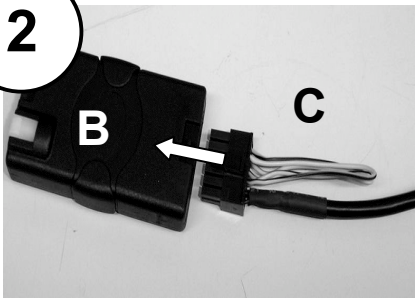


3

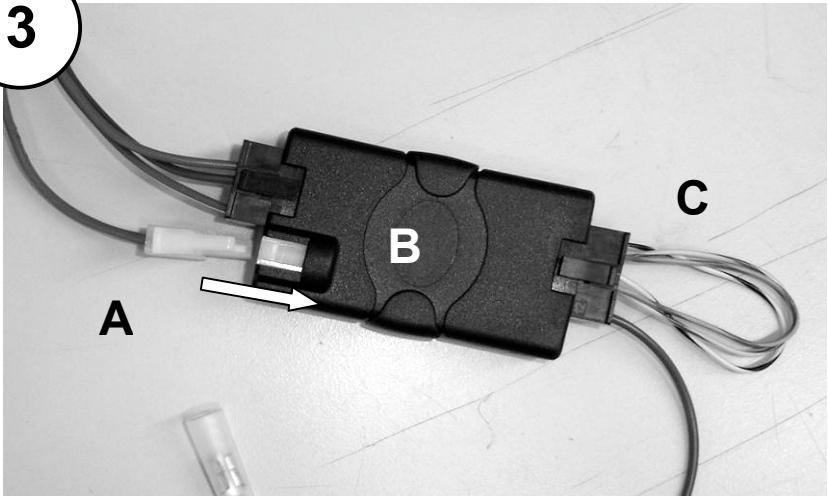


4

Connect the power lead from Harness A (A(1) Below) into the Yellow (Permanent Power) lead of the Kenwood Harness. Connect the white connector (A(2)) to the vehicle harness.

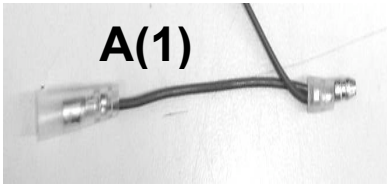

A(1)

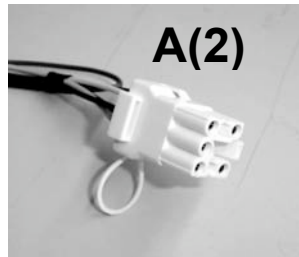

A(2)

Vehicle Function	Click	Hold
Vol+	Vol+	-
Vol-	Vol-	-
LMU	Source	
-	Seek up	Preset up

*Functions Given are a general guide, exact functionality may vary with Kenwood Model/Vehicle